

SGDH-□


# Sigma-II servo drive

**The ideal servo family for motion control.  
Fast response, high speed, and high accuracy.**


- Online autotuning with 10 levels of rigidity
- Peak torque 300% of nominal during 3 seconds
- Automatic motor recognition
- Analogue control for speed and torque
- Pulse train control for positioning
- Optional units offer network connectivity and flexible system architecture
- Smooth operation
- Oscilloscope available via software tool
- Windows based configuration and commissioning software

## Ratings


- 230 VAC Single-phase 30 W to 1.5 kW (4.77 Nm)
- 400 VAC Three-phase 450 W to 55 kW (350 Nm)

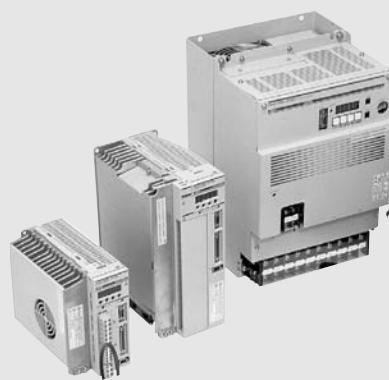


## System configuration

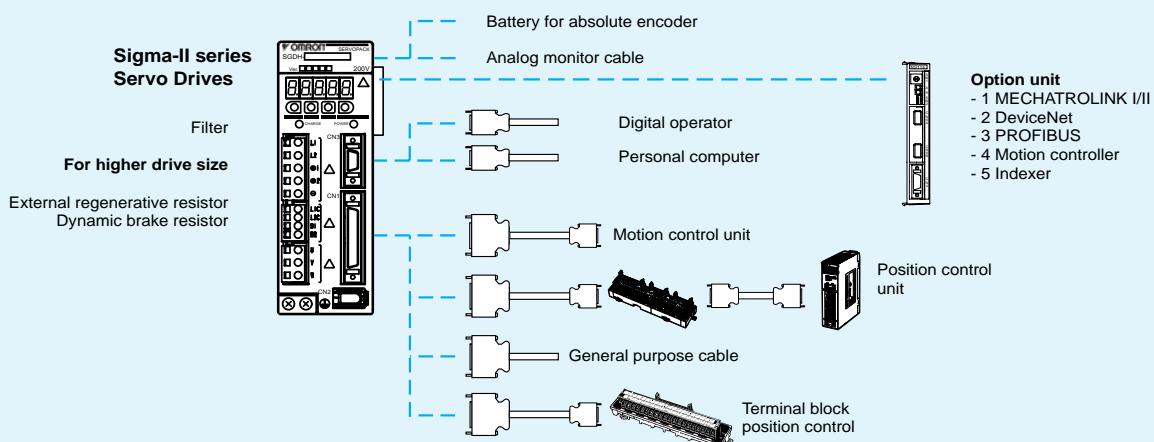

(Refer to chapter Sigma-II rotary motors)

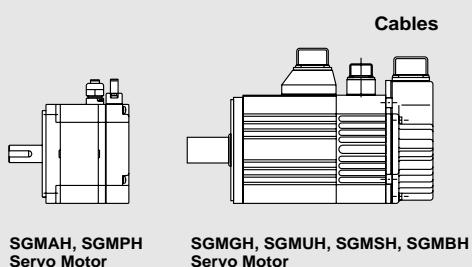

(Refer to chapter Sigma-II linear motors)

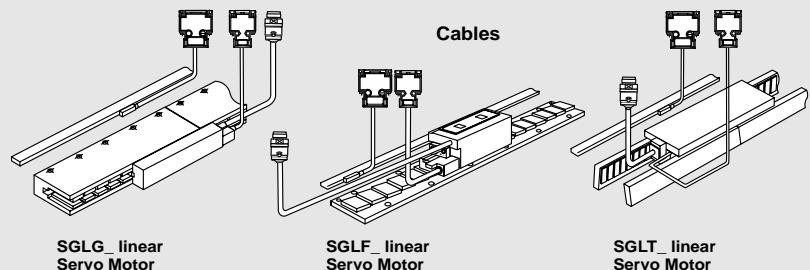


## Servo motor supported

Servo motor			
Family	Voltage	Models rated torque	Remarks
SGMAH (3000 min <sup>-1</sup> ) 	230 V	0.0955 Nm to 2.39 Nm	Refer to the Sigma-II rotary motors chapter for details
	400 V	0.955 Nm to 2.07 Nm	
SGMPH (3000 min <sup>-1</sup> ) 	230 V	0.318 Nm to 4.77 Nm	Refer to the Sigma-II rotary motors chapter for details
	400 V	0.637 Nm to 4.77 Nm	
SGMGH (1500 min <sup>-1</sup> ) 	400 V	2.84 Nm to 95.4 Nm	Refer to the Sigma-II Rrotary motors chapter for details
SGMSH (3000 min <sup>-1</sup> ) 	400 V	3.18 Nm to 15.8 Nm	Refer to the Sigma-II Rrotary motors chapter for details
SGMUH (6000 min <sup>-1</sup> ) 	400 V	1.59 Nm to 6.3 Nm	Refer to the Sigma-II rotary motors chapter for details
SGMBH (1500 min <sup>-1</sup> ) 	400 V	140 Nm to 350 Nm	Refer to the Sigma-II rotary motors chapter for details
SGLGW Linear motors 	230 V	12.5 N to 325 N	Refer to the Sigma linear motors chapter for details
SGLFW Linear motors 	230 V	25 N to 560 N	Refer to the Sigma linear motors chapter for details
	400 V	80 N to 2250 N	
SGLTW Linear motors 	400 V	300 N to 2000 N	Refer to the Sigma linear motors chapter for details

## Type designation

### Servo drive

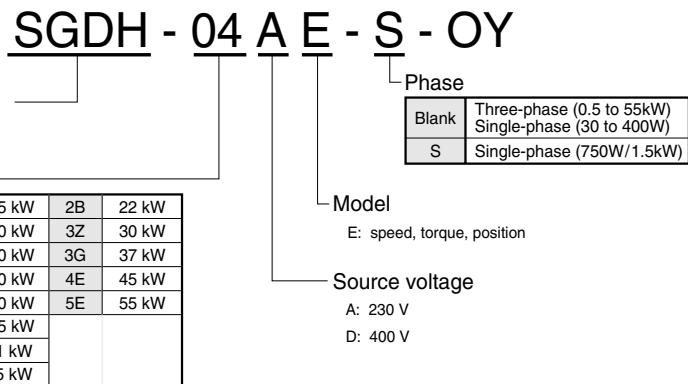

A3	30 W	15	1.5 kW	2B	22 kW
A5	50 W	20	2.0 kW	3Z	30 kW
01	100 W	30	3.0 kW	3G	37 kW
02	200 W	50	5.0 kW	4E	45 kW
04	400 W	60	6.0 kW	5E	55 kW
05	500 W	75	7.5 kW		
08	750 W	1A	11 kW		
10	1.0 kW	1E	15 kW		

## Servo drive specifications

### Single-phase, 230 V

Servo drive type	SGDH-□	A3AE-OY	A5AE-OY	01AE-OY	02AE-OY	04AE-OY	08AE-S-OY	15AE-S-OY
Applicable servo motor	SGMAH-□	A3A□	A5A□	01A□	02A□	04A□	08A□	-
	SGMPH-□	-	-	01A□	02A□	04A□	08A□	15A□
Basic specifications	Max. applicable motor capacity W	30	50	100	200	400	750	1500
	Continuous output current Arms	0.44	0.64	0.91	2.1	2.8	5.7	11.6
	Max. output current Arms	1.3	2.0	2.8	6.5	8.5	13.9	28
	Input power Main circuit	For single-phase, 200 to 230 VAC + 10 to -15%					220 to 230 VAC	
	Supply Control circuit	For single-phase, 200 to 230 VAC + 10 to -15%					+10 to -15% (50/60 Hz)	
	Control method	Single phase full-wave rectification / IGBT / PWM / sine-wave current drive method						
	Feedback	Serial encoder (incremental/absolute value)						
	Conditions Usage/storage temperature	0 to +55 °C / -20 to 85 °C						
	Usage/storage humidity	90%RH or less (non-condensing)						
	Altitude	1000m or less above sea level						
	Vibration/shock resistance	4.9 m/s <sup>2</sup> / 19.6 m/s <sup>2</sup>						
	Configuration	Base mounted						
	Approx. weight Kg	0.8			1.1	1.7	3.8	

### Three-phase, 400 V (up to 15 kW)

Servo drive type	SGDH-□	05DE-OY	10DE-OY	15DE-OY	20DE-OY	30DE-OY	50DE-OY	60DE-OY	75DE-OY	1ADE-OY	1EDE-OY
Applicable servo motor	SGMGH-□	05D□	09D□	13D□	20D□	30D□	44D□	55D□	75D□	1AD□	1ED□
	SGMSH-□	-	10D□	15D□	20D□	30D□	40D□/50D□	-	-	-	-
	SGMUH-□	-	10D□	15D□	-	30D□	40D□	-	-	-	-
Basic specifications	Max. applicable motor capacity kW	0.45	1.0	1.5	2.0	3.0	5.0	6.0	7.5	11	15
	Continuous output current Arms	1.9	3.5	5.4	8.4	11.9	16.5	20.8	25.4	28.1	37.2
	Max. output current Arms	5.5	8.5	14	20	28	40.5	55	65	70	85
	Input power Main circuit	For three-phase, 380 to 480 VAC + 10 to -15% (50/60Hz)									
	Supply Control circuit	24 VDC+ 15%									
	Control method	Three phase full-wave rectification / IGBT / PWM / sine-wave current drive method									
	Feedback	Serial encoder (incremental/absolute)									
	Conditions Usage/storage temperature	0 to +55 °C / -20 to +85 °C									
	Usage/storage humidity	90%RH or less (non-condensing)									
	Altitude	1000 m or less above sea level									
	Vibration/shock resistance	4.9 m/s <sup>2</sup> / 19.6 m/s <sup>2</sup>									
	Configuration	Base mounted									
	Approx. weight Kg	2.8		3.8		5.5	13.5	22			

### Three-phase, 400 V (from 22 kW to 55 kW)

Servo drive type	SGDH-□	2BDE	3ZDE	3GDE	4EDE	5EDE
Applicable servo motor	SGMBH-□	2BD□A	3ZD□A	3GD□A	4ED□A	5ED□A
Basic specifications	Max. applicable motor capacity kW	22	30	37	45	55
	Continuous output current Arms	58	80	100	127	150
	Max. output current Arms	120	170	210	260	310
	Input power Main circuit	For three-phase, 380 to 480 VAC + 10 to -15% (50/60 Hz)				
	Supply Control circuit	24 VDC+ 15%				
	Control method	Three phase full-wave rectification / IGBT / PWM / sine-wave current drive method				
	Feedback	Serial encoder (incremental/absolute)				
	Conditions Usage/storage temperature	0 to +55 °C / -20 to +85 °C				
	Usage/storage humidity	90%RH or less (non-condensing)				
	Altitude	1000 m or less above sea level				
	Vibration/shock resistance	4.9 m/s <sup>2</sup> / 19.6 m/s <sup>2</sup>				
	Configuration	Base mounted				
	Approx. weight Kg	40		60	65	

### General specifications

Speed/torque control mode Performance	Speed control range	1:5000
	Speed variance	Load variance During 0 to 100% load ±0.01% max. (at rated speed)
	Voltage variance	Rated voltage ±10%: 0% (at rated speed)
	Temperature variance	25 ±25 °C: ±0.1% max (at rated speed)
Frequency characteristics	400 Hz (at J <sub>L</sub> = J <sub>M</sub> up to 15 kW drives), 100 Hz (at J <sub>L</sub> = J <sub>M</sub> from 22 kW to 55 kW drives)	
Torque control accuracy (reproducibility)	±2%	
Soft start time setting	0 to 10 s (acceleration, deceleration can each be set.)	
Speed/input signal	Speed reference input	Reference voltage ±6 VDC (forward motor rotation if positive reference) at rated speed: set at delivery Variable setting range: ±2 to ±10 VDC at rated speed/ max. input voltage: ±12 V
	Input impedance	Approx. 14 kΩ
	Circuit time constant	Approx. 47 µs
Torque reference input	Reference voltage	±3 VDC (forward rotation if positive reference) at rated speed: set at delivery Variable setting range ±1 to ±10 VDC at rated torque reference
	Input impedance	Approx. 14 kΩ
	Circuit time constant	Approx. 47 µs

Position control mode Input signal	Bias setting	0 to 450 min <sup>-1</sup> (setting resolution: 1 min <sup>-1</sup> )
	Feed forward compensation	0 to 100% (setting resolution: 1%)
	Position completed width setting	0 to 250 command units (setting resolution: 1 command unit)
Command pulse	Input pulse type	Sign + pulse train, 90° phase displacement 2-phase pulse (A-phase+ B-phase) or CCW/CW pulse train
	Input pulse form	Line driver (+5 V level), open collector (-5 V or +12 level)
	Input pulse frequency	0 to 500 Kpps (200 Kpps max. at open collector)
Control signal		Clear signal (input pulse is same as reference pulse)
I/O signal	Position signal output	A-phase, B.phase, C-phase, (S-phase): line driver output S-phase is for absolute encoder only.
	Sequence input signal	Servo ON, P control (or control mode switching, zero clamp, command pulse inhibit), forward/reverse run prohibit, alarm reset, forward/reverse current limit (or internal speed switching)
	Sequence output signal	Servo alarm, alarm codes (3-bit output): CN1 output terminal is fixed It is possible to output three types of signal form incl.: positioning complete (speed agree), motor rotation, servo ready, current limit, speed limit, brake release, warning, NEAR, and zero point pulse signal
Integrated functions	Communications	Interface Digital operator (hand- held type), RS-422 port for PCs, etc. (RS-232C ports under some conditions) 1:N communications N may equal up to 14 when an RS-422A port is used Axis address setting Set by user setting Functions Status display, user constant setting monitor display, alarm traceback display, JOG run/autotuning operations, and graphing functions for speed/torque command signal, etc
	Automatic load inertia detection	Automatic motor parameter setting. One parameter rigidity setting.
	Dynamic brake (DB)	Operates during main power OFF, servo alarm, servo OFF or overtravel
	Regenerative processing	Internal resistor included in models from 500 W to 5 kW. Regenerative resistor externally mounted (option).
	Overtravel (OT) prevention function	DB stop, deceleration stop or coast to stop during P-OT, N-OT operation
	Encoder divider function	Optional division possible
	Electronic gearing	0,01 < A/B < 100
	Internal speed setting function	3 speeds may be set internally
	Protective functions	Overcurrent, overvoltage, insufficient voltage, overload, main circuit sensor error, heatsink overheat, power phase loss, overflow, overspeed, encoder error, runaway, CPU error, parameter error, etc.
	Analog monitor functions for supervision	Integrates analog monitor connectors for supervision of the speed and torque reference signals, etc.
	Display functions	CHARGE, POWER, 7-segments LEDx5 (integrated digital operator function)
	Others	Reverse connection, zero search, automatic motor discrimination function, and DC reactor connection terminal for high frequency power suppression function (except: 6 to 15 kW)

## I/O specifications

### I/O signals (CN1) - input signals

Pin No.	Signal name	Function	
40	Common /P-CON	/S-ON Servo ON: Turns ON the servo motor when the gate block in the inverter is released.	
41		Function selected by parameter. Proportional control reference	
		Switches the speed control loop from PI (proportional/integral) to P (proportional) control when ON.	
		Direction reference	
		With the internal set speed selected: switch the rotation direction.	
		Control mode switching Position ↔ speed Position ↔ torque Torque ↔ speed Enables control mode switching	
		Zero-clamp reference	
		Speed control with zero-clamp function: reference speed is zero when ON.	
42	P-OT N-OT	Reference pulse block	
43		Position control with reference pulse stop: stops reference pulse input when ON.	
45		Forward run prohibited	
46		Overtravel prohibited: Stops servo motor when movable part travels beyond the allowable range of motion.	
47		Reverse run prohibited	
44		/P-CL /N-CL	
47		Function selected by parameter.	
48		Forward external torque limit ON Reverse external torque limit ON	
49	/ALM-RST +24VIN	Current limit function enabled when ON.	
50		Internal speed switching	
51		With the internal set speed selected: switches the internal speed settings.	
52		Alarm reset: releases the servo alarm state.	
53		Control power supply input for sequence signals: users must provide the +24 V power supply. Allowable voltage fluctuation range: 11 to 25 V	
54		SEN	
55		Initial data request signal when using an absolute encoder.	
56		BAT (+) BAT (-)	
57	Speed Torque	Connecting pin for the absolute encoder backup battery. Do not connect when a battery is connected to the host controller.	
58		V-REF	
59		Speed reference input: ±2 to ±10 V/rated motor speed (input gain can be modified using a parameter.)	
60		T-REF	
61		Torque reference input: ±1 to ±10 V/rated motor torque (input gain can be modified using a parameter.)	
62		Position	
63		PULS /PULS SIGN /SIGN	Reference pulse input for line driver only Input mode is set from the following pulses: Sign + pulse string CCW/CW pulse Two-phase pulse (90° phase differential)
64		CLR /CLR	Positional error pulse clear input: clears the positional error pulse during position control.
65	PL1 PL2 PL3	+12 V pull-up power is supplied when PULS, SIGN, and CLR reference signals are open-collector outputs (+12 V power supply is built into the SERVOPACK).	

**Note:** 1. Pin numbers in parentheses () indicate signal grounds.

2. The functions allocated to /S-ON, /P-CON, P-OT, N-OT, /ALM-RST, /P-CL, and /N-CL input signals can be changed by using the parameters.
3. The voltage input range for speed and torque references is a maximum of ±12 V.

## I/O signals (CN1) - output signals

Pin No.	Signal Name	Function	
31 32	Common	ALM+ ALM-	Servo alarm: Turns OFF when an error is detected.
27 28		/TGON+ /TGON-	Detection during servo motor rotation: detects when the servo motor is rotating at a speed higher than the motor speed setting. Detection speed can be set by using the parameters.
29 30		/S-RDY+ /S-RDY-	Servo ready: ON if there is no servo alarm when the control/main circuit power supply is turned ON.
33 (1) 34		PAO /PAO	Phase-A signal Converted two-phase pulse (phases A and B) encoder output Signal and zero-point pulse (phase C) signal: RS-422 or the equivalent
35 36		PBO /PBO	Phase-B signal (proper line receiver is SN75175 manufactured by Texas Instruments or the equivalent corresponding to MC3486.)
19 20		PCO /PCO	Phase-C signal
48 49		PSO /PSO	Phase-S signal With an absolute encoder: outputs serial data corresponding to the number of revolutions (RS-422 or the equivalent)
37 38 39 (1)		ALO1 ALO2 ALO3	Alarm code output: Outputs 3-bit alarm codes. Open-collector: 30 V and 20 mA rating maximum
Shell		FG	Connected to frame ground if the shield wire of the I/O signal cable is connected to the connector shell.
25 26	Speed	/V-CMP+ /V-CMP-	Speed coincidence (output in speed control mode): detects whether the motor speed is within the setting range and if it matches the reference speed value.
25 26	Position	/COIN+ /COIN-	Positioning completed (output in position control mode): turns ON when the number of positional error pulses reaches the value set. The setting is the number of positional error pulses set in reference units (input pulse units defined by the electronic gear).
-	Reserved	/CLT /VLT /BK /WARN /NEAR	Reserved terminals The functions allocated to /TGON, /S-RDY, and /V-CMP (/COIN) can be changed by using the parameters. /CLT, /VLT, /BK, /WARN, and /NEAR signals can also be changed.
16 17 23 24 50		-	Terminals not used Do not connect relays to these terminals.

**Note:** 1. Pin numbers in parentheses () indicate signal grounds.

2. The functions allocated to /TGON, /S-RDY, and /V-CMP (/COIN) can be changed by using the parameters. /CLT, /VLT, /BK, /WARN, and /NEAR signals can also be changed.

## Terminal specifications (all drives)

Symbol	Name	Function		
L1, L2 or L1, L2, L3 or L1/R, L2/S, L3/T	Main circuit AC input terminal	AC power input terminals for the main circuit		
U	Servo motor connection terminal	Red	Terminals for outputs to the servo motor.	
V		White		
W		Blue		
L1C, L2C	Control power input terminal	AC power input terminals for the control circuit.		
⏚	Frame ground	Ground terminal. Ground to a maximum of 100 Ω. (class 3)		
B1, B2 or B1, B2, B3	Main circuit DC output terminal	Up to 5 kW: From 5.5 kW to 55 kW:	Connect an external regenerative resistor if regenerative energy is high. There is no internal regenerative resistor. Be sure to connect an external regenerative resistor unit.	
⊕1, ⊕2	DC reactor connection terminal for suppressing power supply harmonic waves	Normally, short ⊕1 and ⊕2. If a countermeasure against power supply harmonic waves is needed, connect a DC reactor between ⊕1 and ⊕2.		
⊕	Main circuit DC output terminal (positive)	Normally, not connected. This terminal exists on the servo drives with a capacity of 6.0 kW or higher only.		
⊖	Main circuit DC output terminal (negative)	Normally, not connected.		

## Terminal specifications (from 22 kW to 55 kW)


Symbol	Name	Function
DC24P, DC24N	Control power supply input terminal	24 VDC
DU, DV, DW	DB resistor unit, DB contactor connection terminal	Connects DB resistor unit or DB contactor.
DBON, DB24	DB resistor unit connection terminal	For 37 to 55 kW, connects to DBON and DB24 terminals or DB resistor unit.
480 V, 460 V, 440 V, 400 V, 380 V, 0 V	Control power Supply input Terminal	Connect to the terminal whose voltage is close to the power supply voltage.

## Encoder connector (CN2)

Pin No.	Signal Name	Function
1	E5V	Encoder power supply + 5 V
2	E0V	Encoder power supply ground
3	BAT+	Battery + (used only with absolute encoder)
4	BAT-	Battery - (used only with absolute encoder)
5	S+	Encoder serial signal input
6	S-	Encoder serial signal input


## Operation

### Operating functions

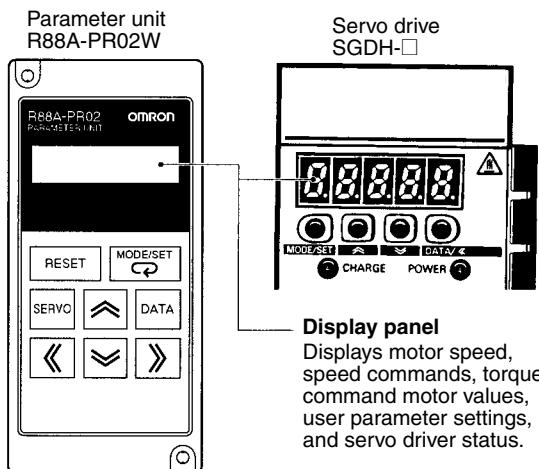


### Changing modes

To change modes, press the MODE/SET key.

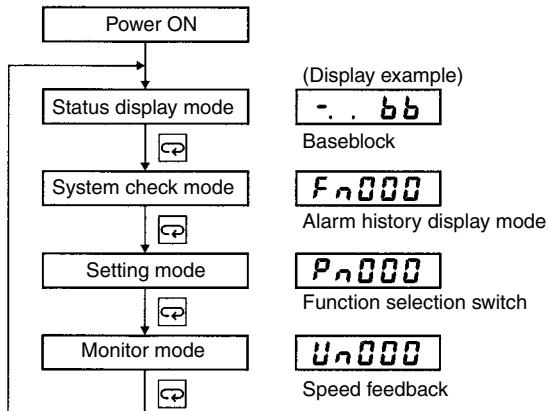

### Status display mode

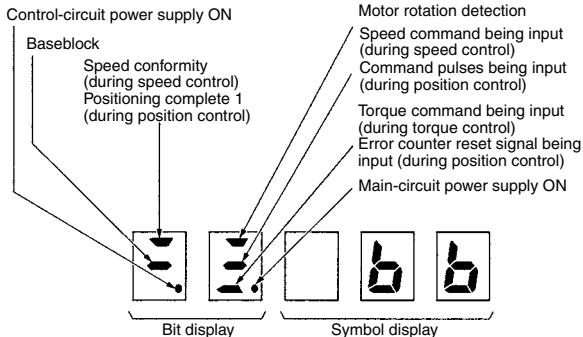


Symbol	Status
<i>bb</i>	Baseblock (motor OFF)
<i>fn</i>	Operating
<i>Pn</i>	Forward rotation prohibited (forward overtravel)
<i>un</i>	Reverse rotation prohibited (reverse overtravel)
<i>R02</i>	Alarm display

### Unit keys

R88A-PR02W	SGDH-□	Function
RESET		Resets an alarm.
MODE/SET		Switches between status display mode, system check mode, setting mode, and monitor mode. Used as a data setting key while in setting mode.
SERVO		Turns the servo ON or OFF while jog operations are being performed.
DATA		Switches between parameter display and data display, and records data.
		Increments parameter settings. Used as a forward rotation start key during jog operation.
		Decrements parameter settings. Used as a reverse rotation start key during jog operation.
		Selects the digit whose setting is to be changed. When selected, the digit flashes.


### Mode details

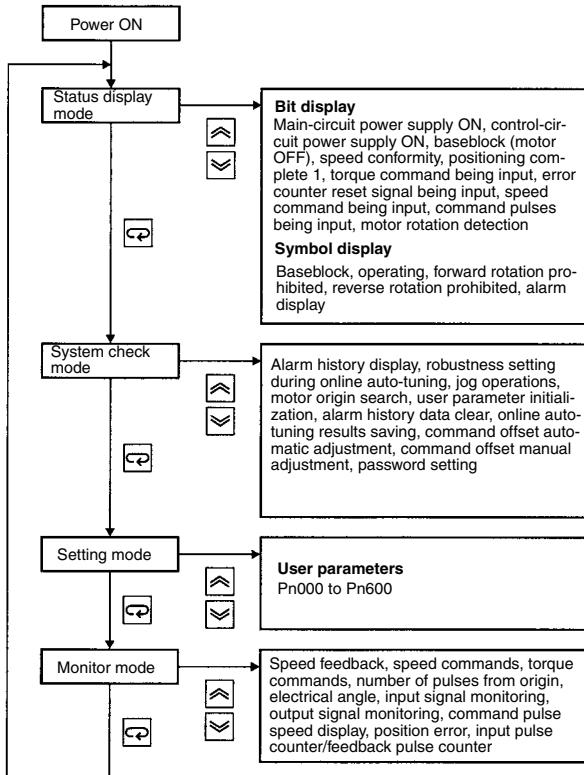


## Dimensions

### Servo drives


**SGDH-A3AE-OY to -02AE-OY (230 V, 30 to 200 W)**

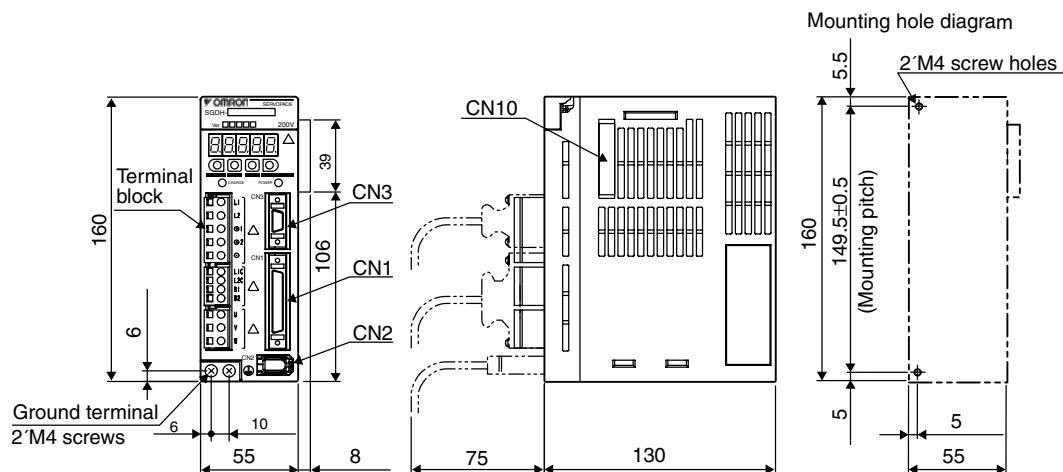


**SGDH-04AE-OY (230 V, 400 W)**

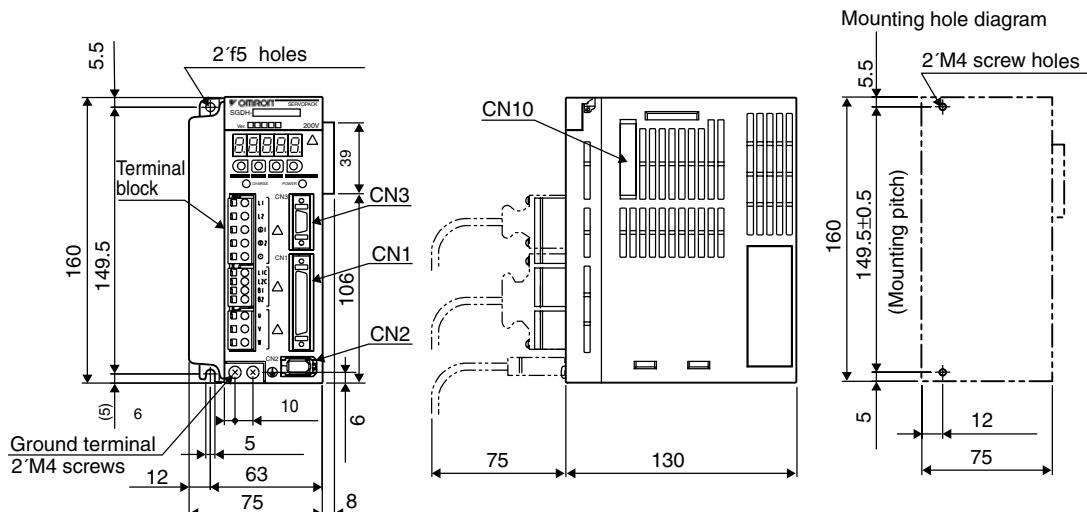

**SGDH-08AE-S-OY (230 V, 750 W)**

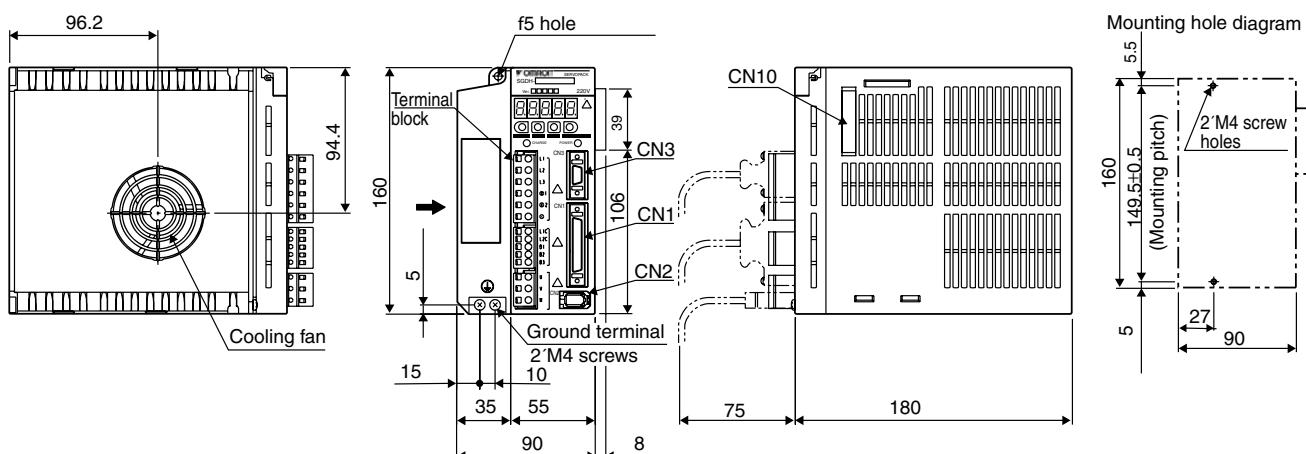





## SGDH-05DE-OY to -15DE-OY (400 V, 0.5 to 1.5 kW)




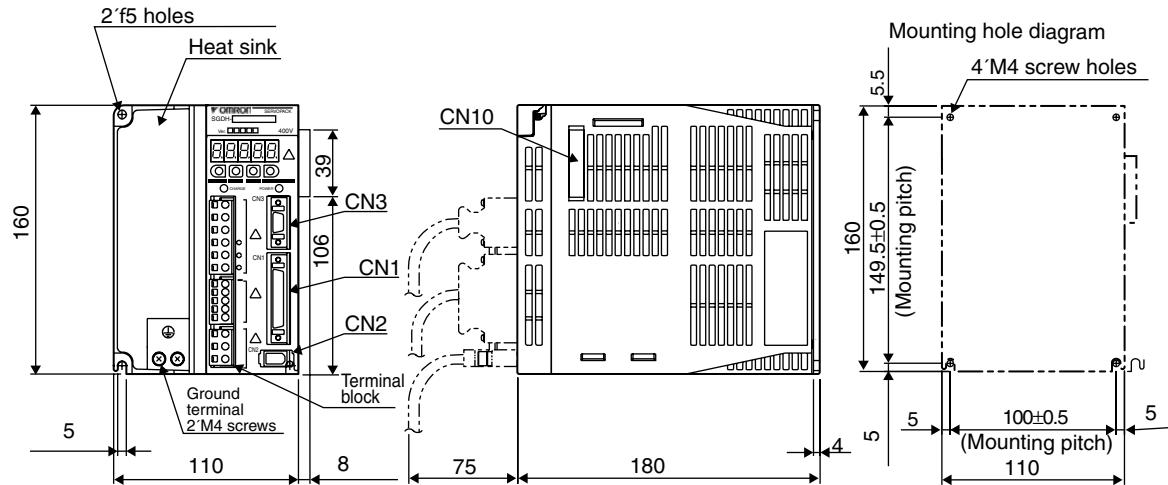


## SGDH-15AE-S (230 V, 1.5 kW)



## SGDH-20/30DE-OY (400 V, 2/3 kW)

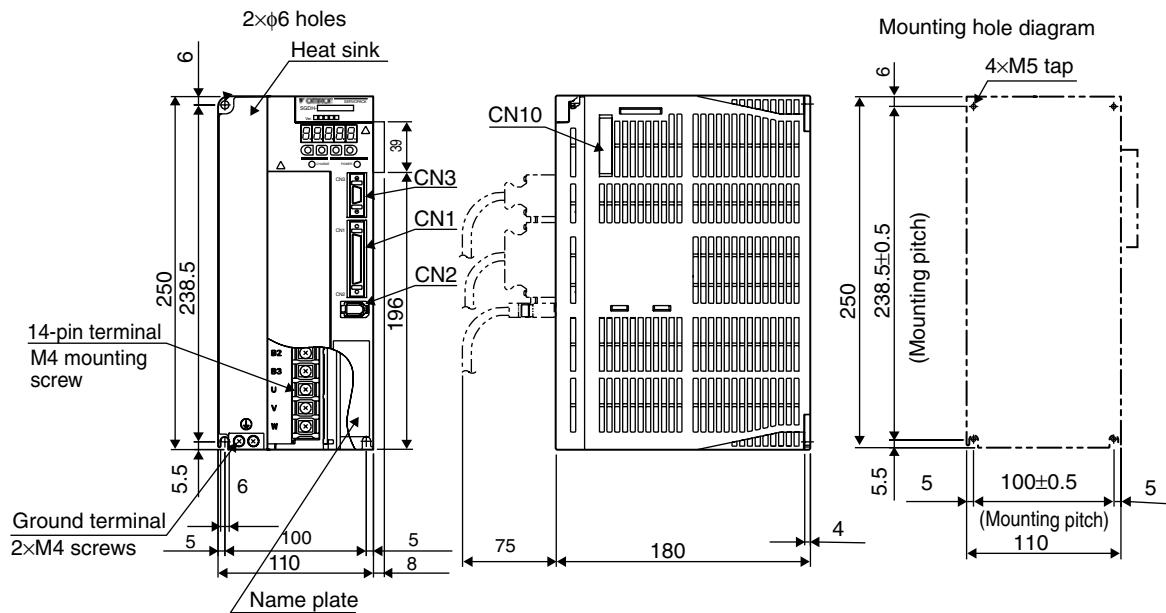

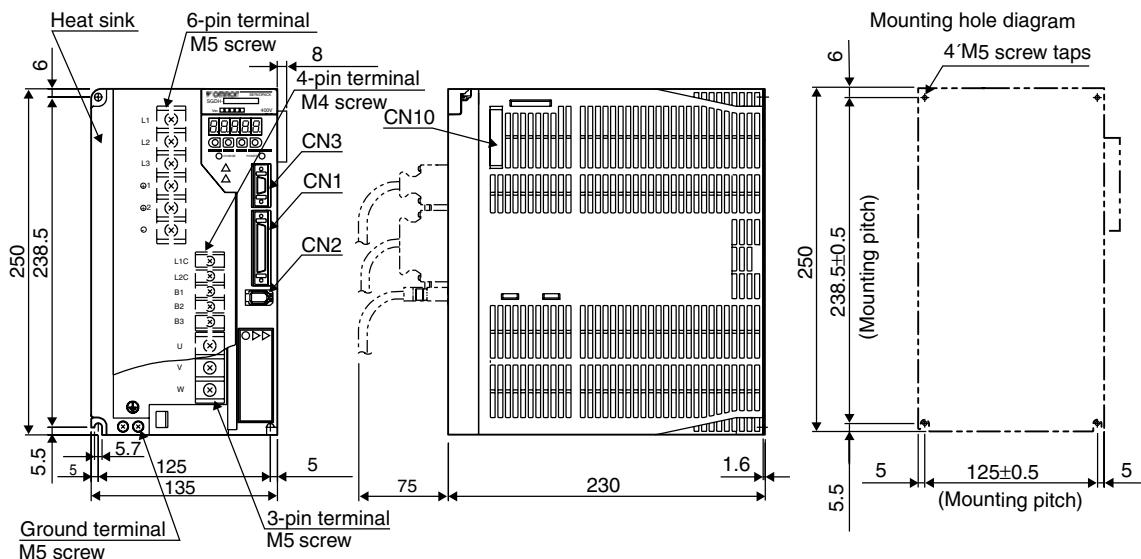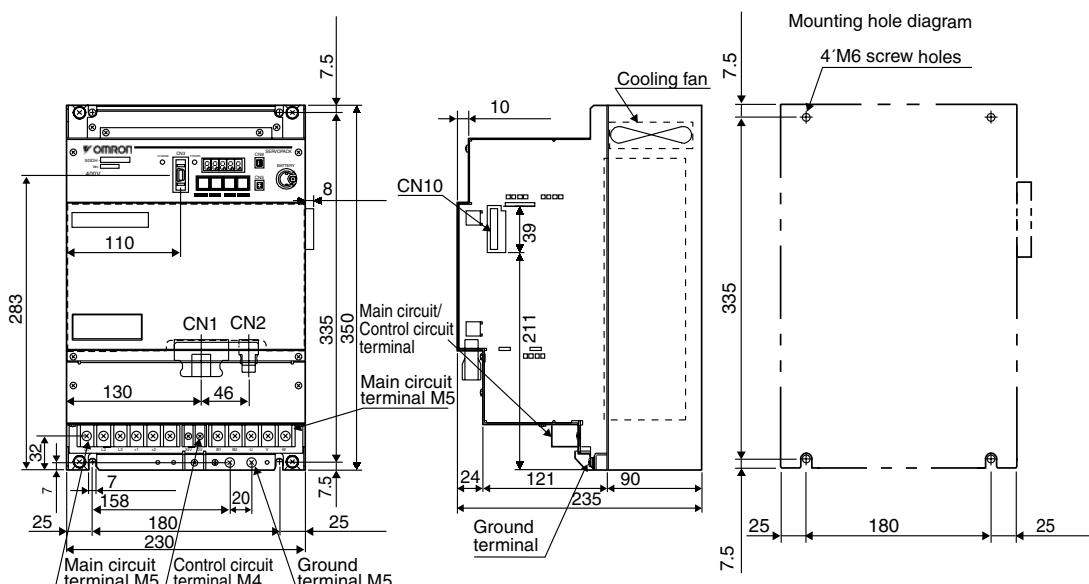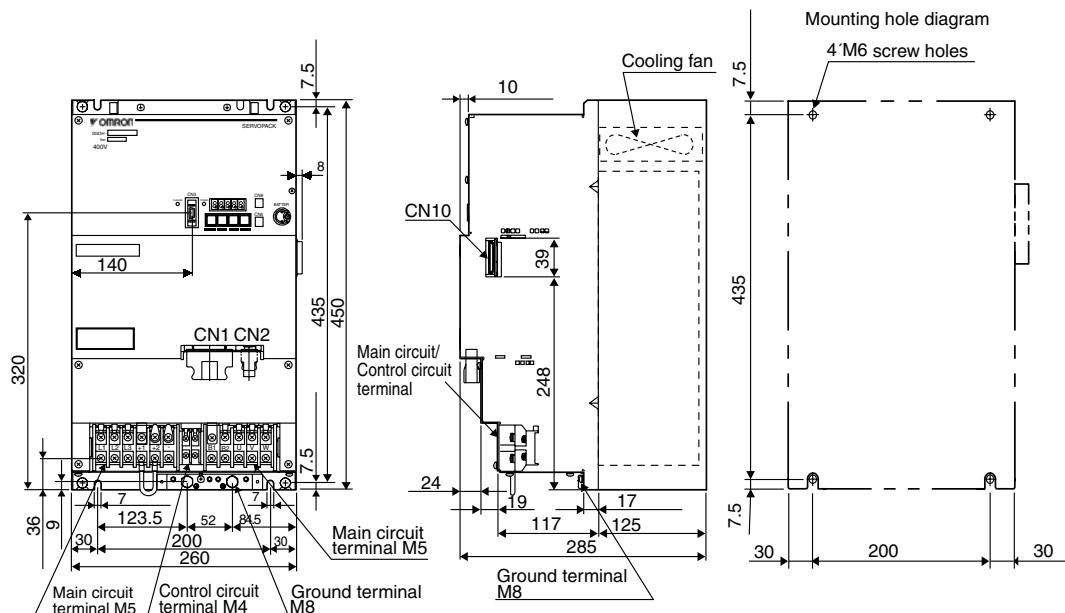**SGDH-50DE-OY (400 V, 5 kW)****SGDH-60/75DE-OY (400 V, 6/7.5 kW)****SGDH-1A/1EDE-OY (400 V, 11/15 kW)**

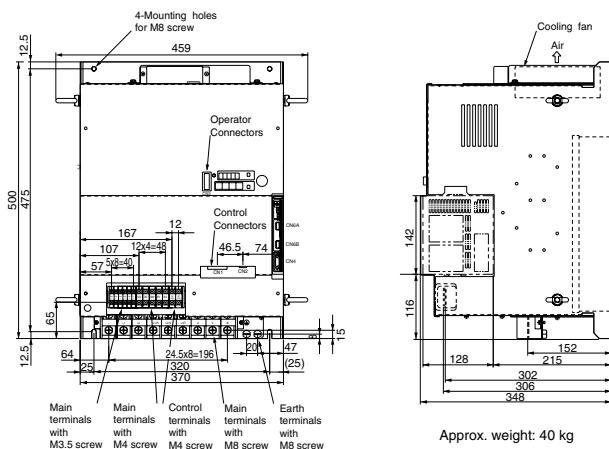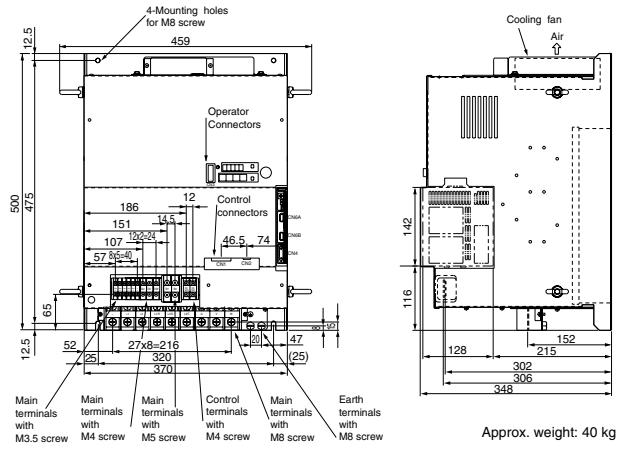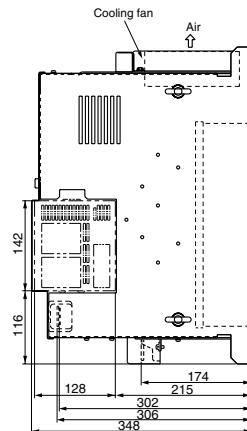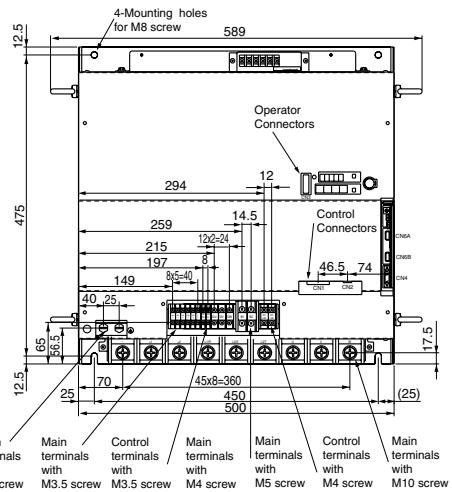**SGDH-2BDE (400 V, 22 kW)****SGDH-3ZDE (400 V, 30 kW)****SGDH-3GDE (400 V, 37 kW)**


Approx. weight: 60 kg

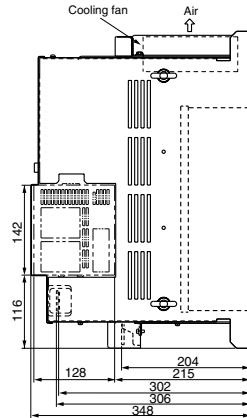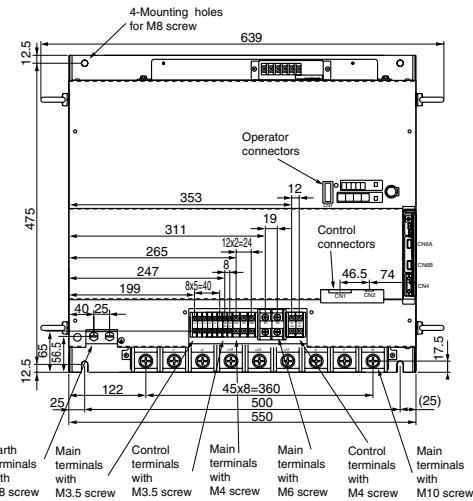**SGDH-4EDE / -5EDE (400 V, 45/55 kW)**

Approx. weight: 65 kg


## Filters

### R88A-FIW104-SE

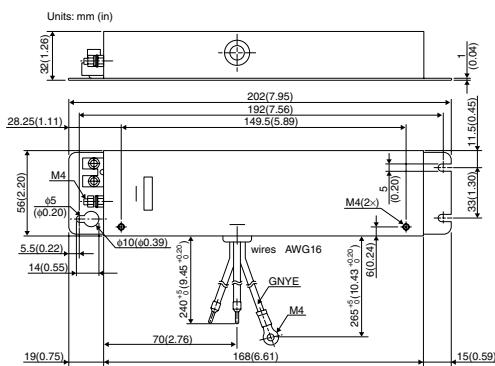


### R88A-FIW107-SE, R88A-FIW115-SE

Model	R88A-FIW107-SE	R88A-FIW115-SE
Dimensions in mm	A 75 B 240 <sup>5</sup> C 50 D 12 E 1	90 300 <sup>5</sup> 60 15 1.2

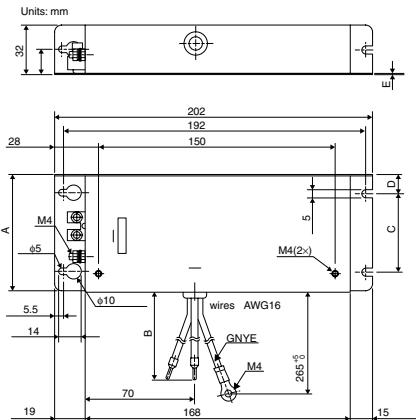


### R88A-FIW125-SE

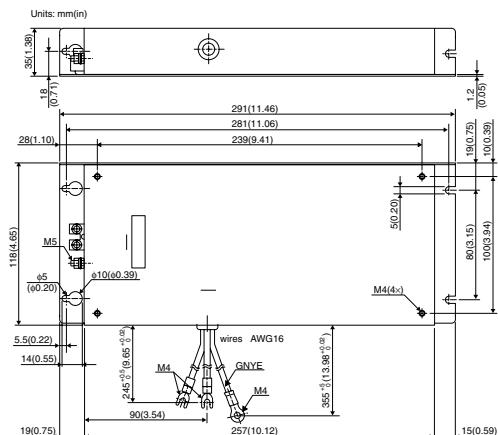


### R88A-FIW4006-SE, R88A-FIW4010-SE


Model	R88A-FIW4006-SE	R88A-FIW4010-SE
Dimensions in mm (in)	A 32 (1.26) B 16 (0.63) C 202 (7.95) D 192 (7.56) E 150 (5.91) F 300 (11.81) G 70 (2.76) H 168 (6.61)	35 (1.38) 18 (0.71) 291 (11.46) 281 (11.06) 239 (9.41) 270 (10.63) 90 (3.54) 257 (10.12)

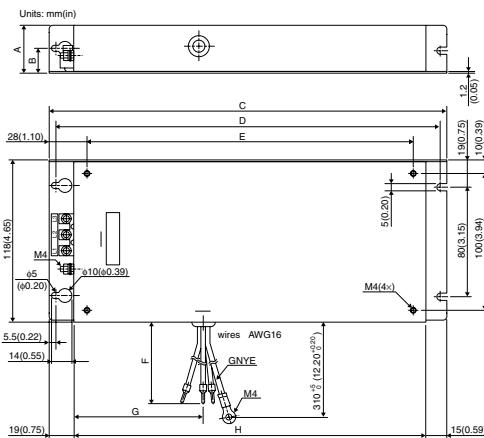

### R88A-FIW4020-SE

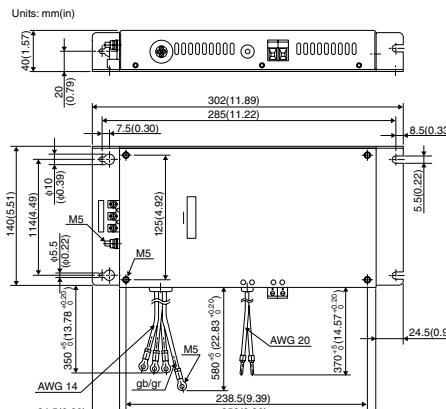


### R88A-FIW4030-SE

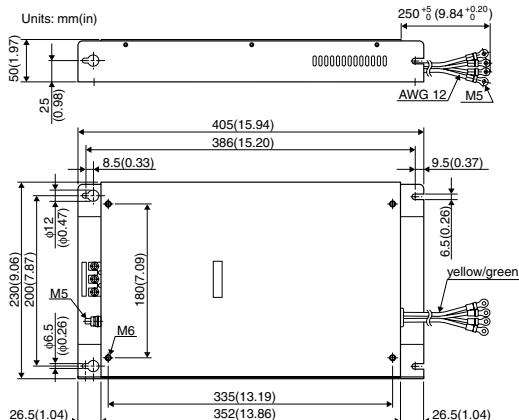


## Filters

R88A-FIW4055-SE

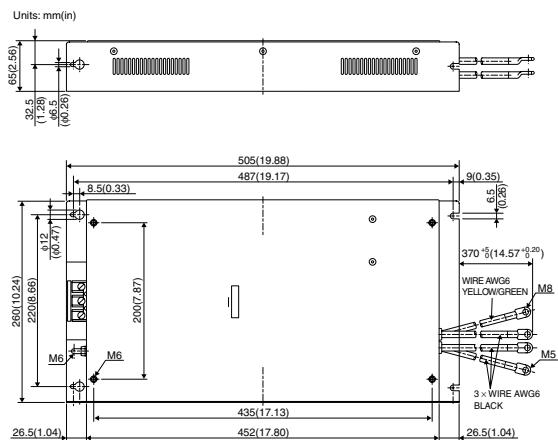


FN258-180-07

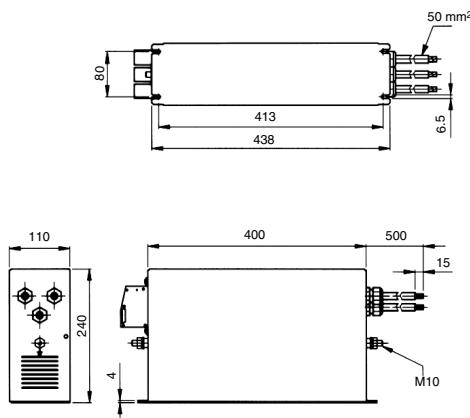


## **Regenerative resistor units**

<b>Model</b>	<b>W</b>	<b>H</b>	<b>D</b>	<b>M1</b>	<b>M2</b>	<b>Approx. weight kg</b>
JUSP-RA18	220	350	92	180	335	4
JUSP-RA19	300	350	95	250	335	7
JUSP-RA12	259	500	348	200	485	14
JUSP-RA13	259	500	348	200	485	14
JUSP-RA14	484	500	348	425	485	20
JUSP-RA15	484	500	348	425	485	21.5
JUSP-RA16	484	500	348	425	485	23.5

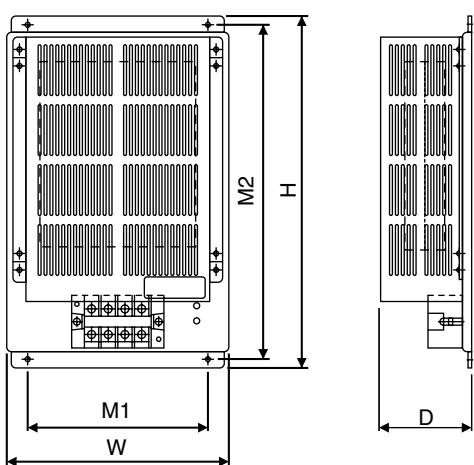


FN359-250-99

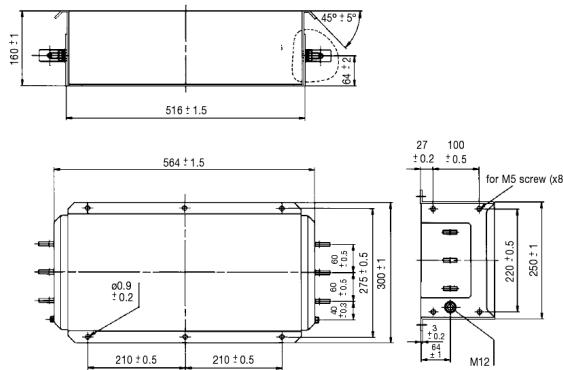


## Digital operator

JUSP-OP02A-2

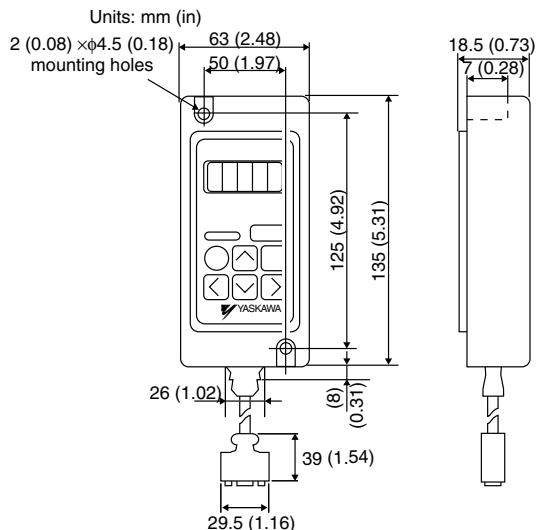


## **DB resistor units**

<b>Model</b>	<b>H</b>	<b>M2</b>	<b>Approx. weight kg</b>
JUSP-DB03	400	385	5
JUSP-DB04	400	385	6
JUSP-DB05	400	385	6
JUSP-DB06	490	475	7

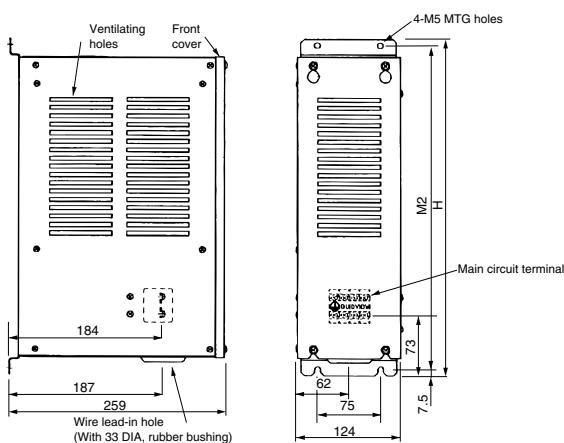

## Installation

### Single-phase, 230 VAC

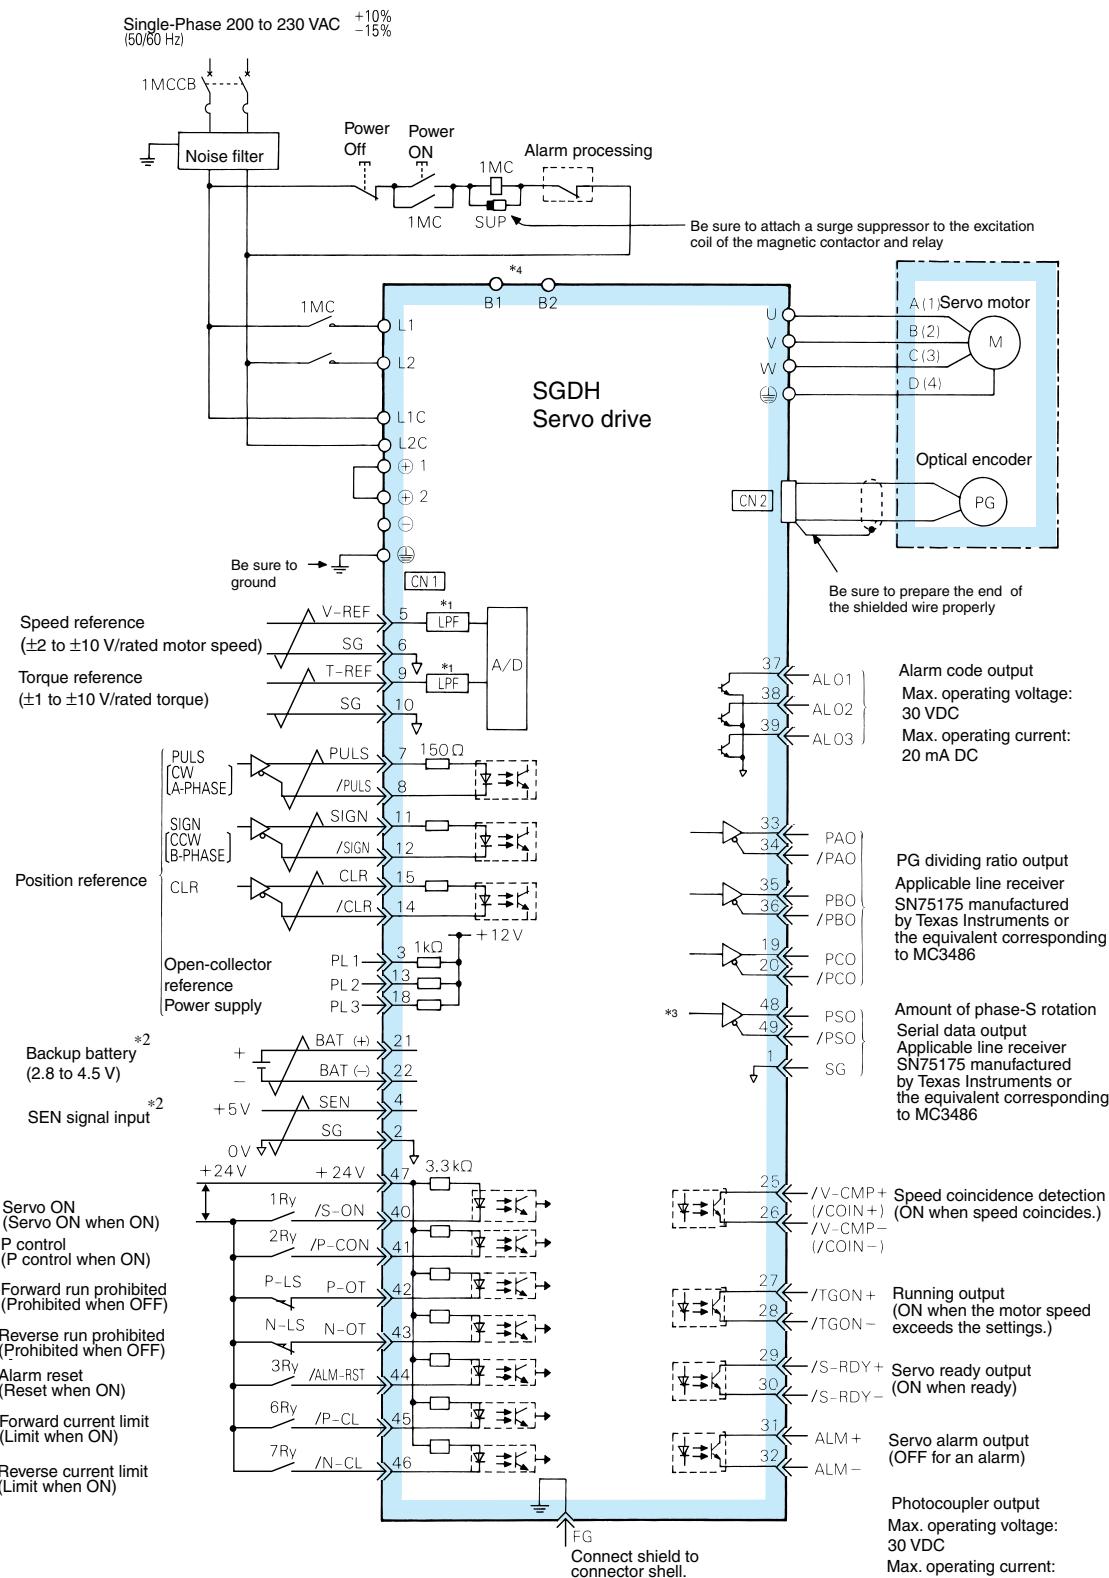

\*1 The time constant for the primary filter is 47  $\mu$ s.

\*2 Connect when using an absolute encoder.


\*3 Used only with an absolute encoder.

\*4 Regenerative resistor can be connected between B1 and B2.


\*5 For types SGDH-08AE-S-OY and SGDH-15AE-S-OY, voltage is 220 to 230 VAC ( $+10\%$  to  $-15\%$ ).

\*6 TI stands for Texas Instruments Inc.

## Three-phase, 400 VAC (up to 15 kW)

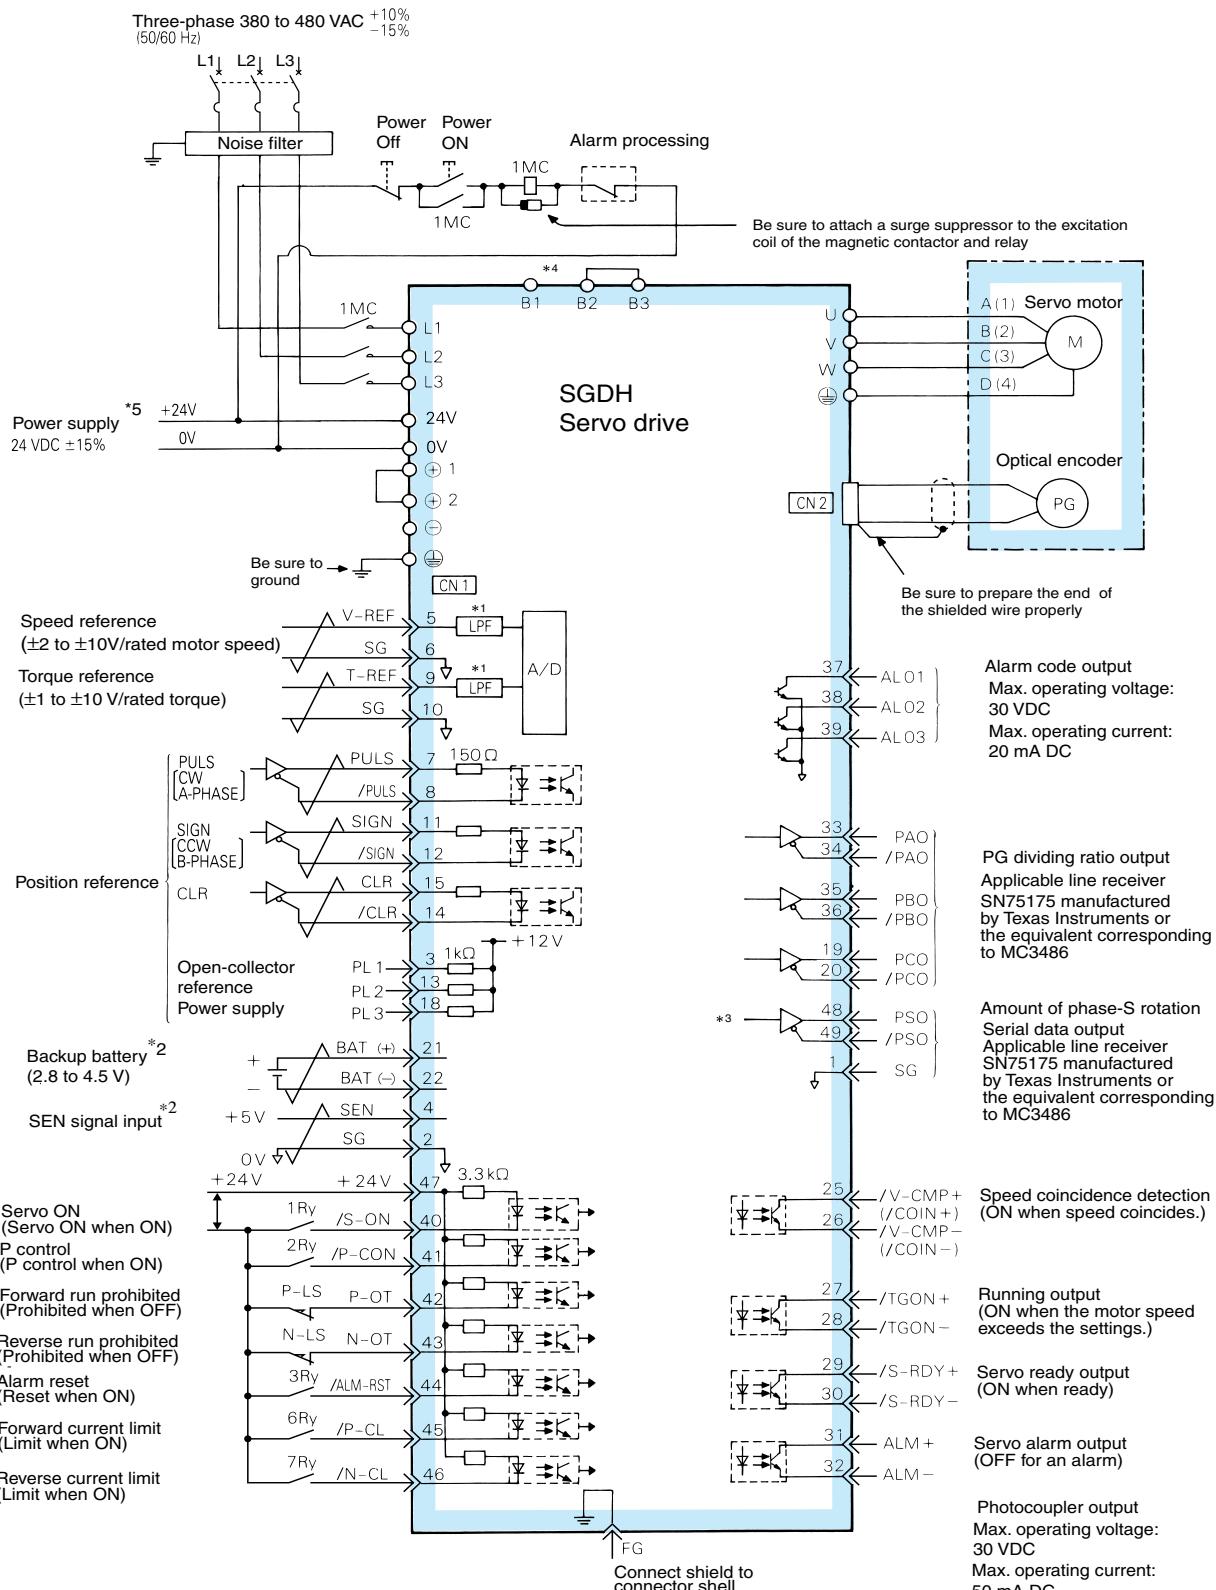

## Three-phase, 400 VAC (from 22 kW to 55 kW)

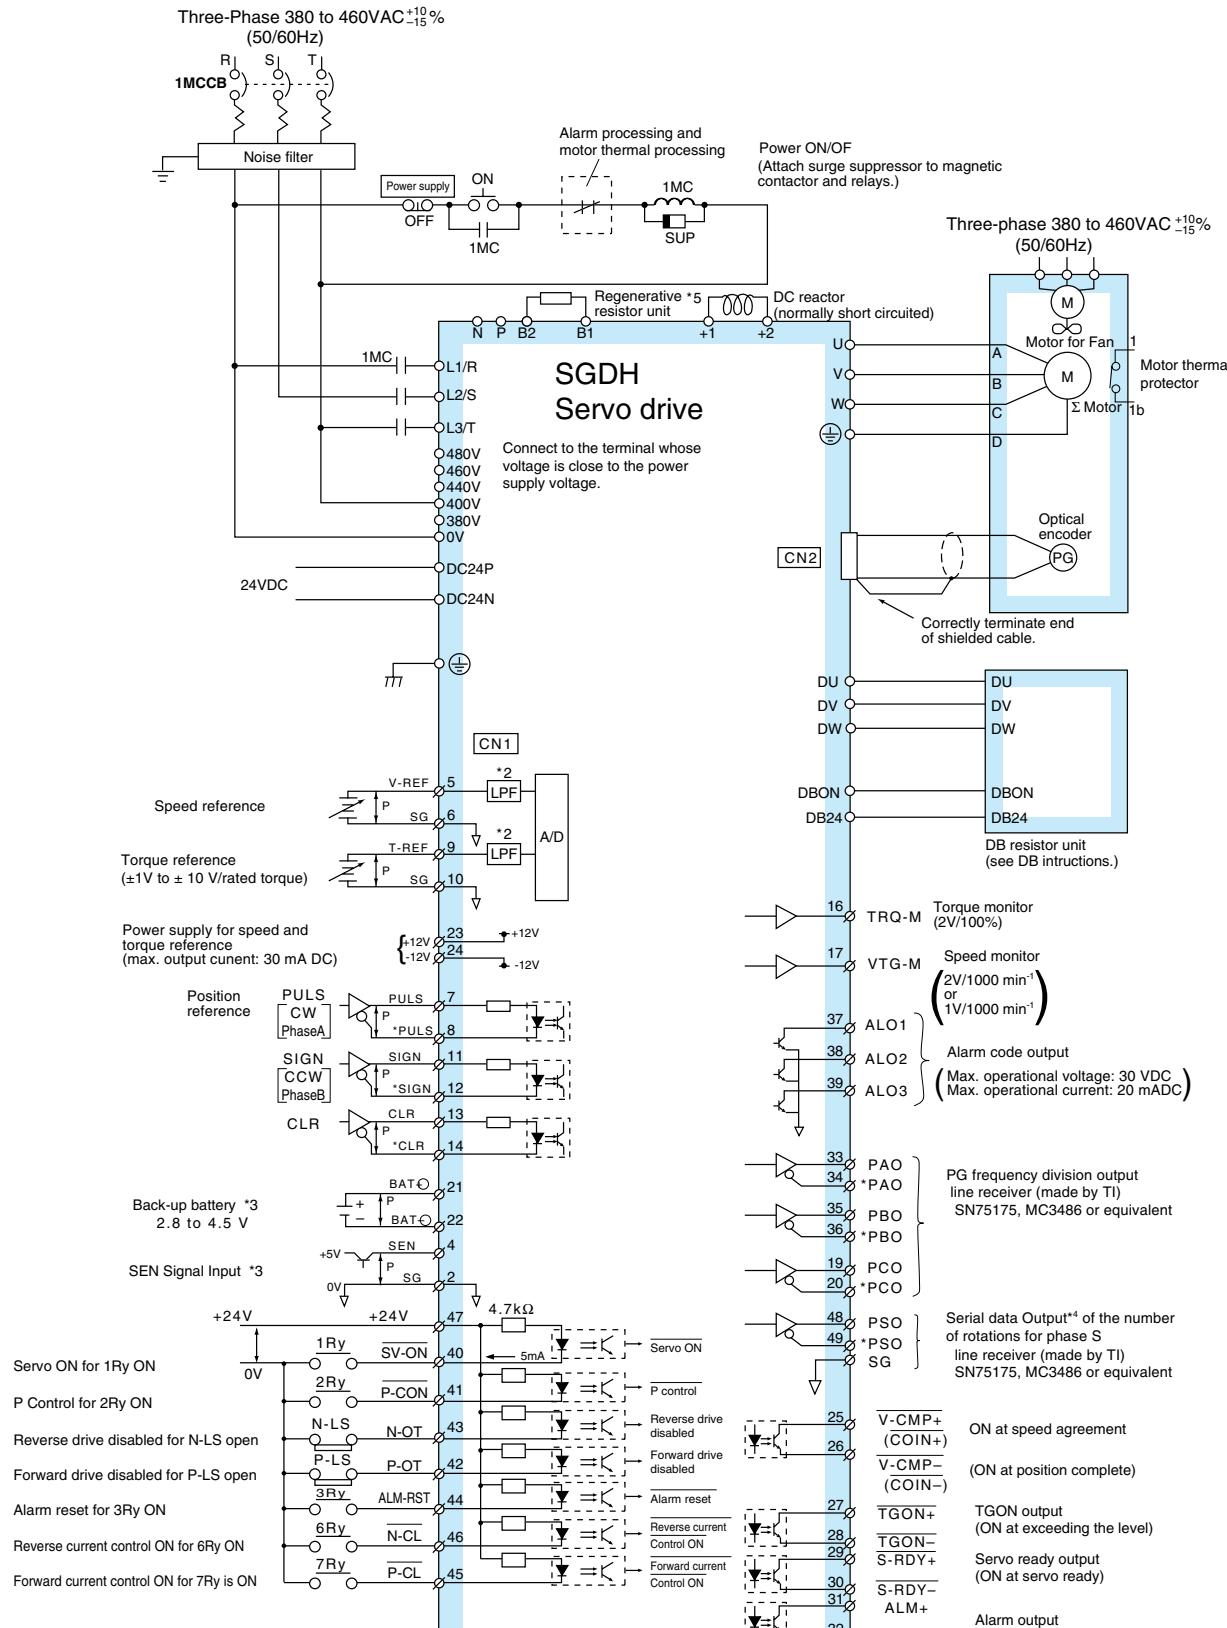

\*1 TP represents twisted pair cable.

\*2 Constant number at primary filter is 47μs.


\*3 Connects when using absolute encoder.

\*4 Effective when using 12-bit absolute encoder.


\*5 Regenerative resistor unit (option) should be mounted externally.

\*6 TI stands for Texas Instruments Inc.

## Ordering information

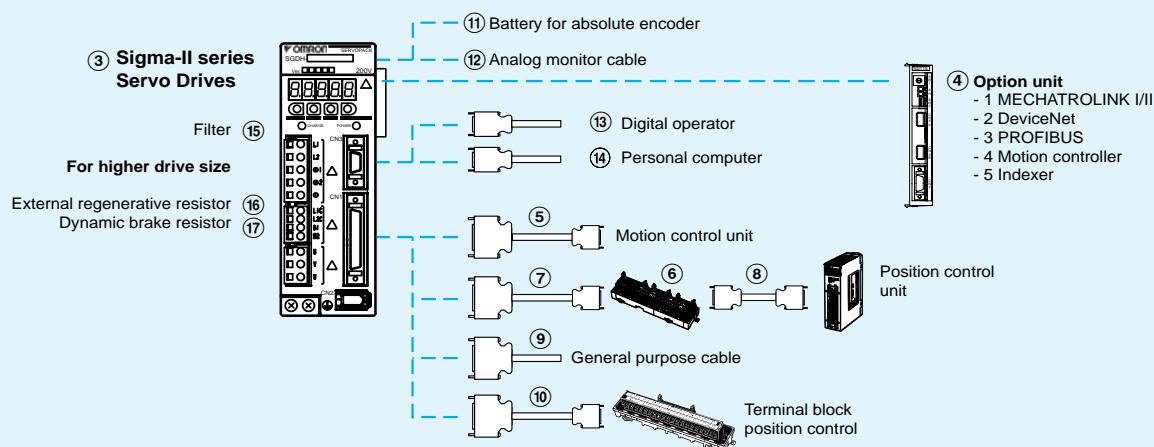

(Refer to chapter Sigma-II rotary motors)

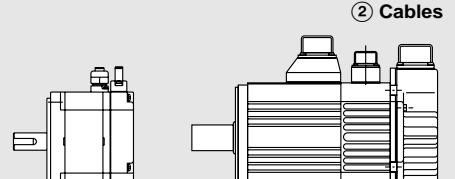

Note: The symbols ①②③④⑤... show the recommended sequence to select the components in a Sigma-II servo system

## Servo motors, power &amp; encoder cables

Note: ①② Refer to the servo motors chapter for detailed motor specifications and selection

## Servo drives

Symbol	Specifications	Model	Compatible rotary servo motors ①	Compatible linear motors ①
③	1 phase 200 VAC	30 W SGDH-A3AE-OY	SGMAH-A3A□	-
		50 W SGDH-A5AE-OY	SGMAH-A5D□	SGLGW-30A050□
		100 W SGDH-01AE-OY	SGMAH-01A□, SGMPH-01A□	SGLGW-30A080□, SGLGW-40A140□
		200 W SGDH-02AE-OY	SGMAH-02A□, SGMPH-02A□	SGLFW-20A□, SGLFW-35A120□, SGLGW-40A253A□, SGLGW-60A140□
		400 W SGDH-04AE-OY	SGMAH-04A□, SGMPH-04A□	SGLGW-40A365A□, SGLGW-60A253A□
		750 W SGDH-08AE-S-OY	SGMAH-08A□, SGMPH-08A□	SGLFW-35A230□, SGLFW-50A200□, SGLGW-60A365A□
		1500 W SGDH-15AE-S-OY	SGMPH-15A□	SGLFW-50A380□, SGLFW-1ZA200□, SGLGW-90A200A□
	3 phase 400 VAC	0.5 kW SGDH-05DE-OY	SGMGH-05D□, SGMAH-03D□, SGMPH-02D□/04D□	SGLFW-35D□
		1.0 kW SGDH-10DE-OY	SGMGH-09D□, SGMSH/UH-10D□, SGMAH-07D□, SGMPH-08D□	SGLFW-50D200□, SGLTW-35D170□, SGLTW-50D170□
		1.5 kW SGDH-15DE-OY	SGMGH-13D□, SGMSH/UH-15D□, SGMPH-15D□	SGLFW-50D380□, SGLFW-1ZD200□
		2 kW SGDH-20DE-OY	SGMGH-20D□, SGMSH-20D□	SGLFW-1ED380□, SGLTW-35D320□, SGLTW-50D320□
		3 kW SGDH-30DE-OY	SGMGH-30D□, SGMSH/UH-30D□	SGLFW-1ZD380□, SGLFW-1ED560□, SGLTW-40D400□
		5 kW SGDH-50DE-OY	SGMGH-44D□, SGMSH/UH-40D□, SGMSH-50D□	SGLTW-40D60□, SGLTW-80D400□
		6 kW SGDH-60DE-OY	SGMGH-55D□	-
		7.5 kW SGDH-75DE-OY	SGMGH-75D□	SGLTW-80D600□
		11 kW SGDH-1ADE-OY	SGMGH-1AD□	-
		15 kW SGDH-1EDE-OY	SGMGH-1ED□	-
		22 kW SGDH-2BDE	SGMBH-2BD□	-
		30 kW SGDH-3ZDE	SGMBH-3ZD□	-
		37 kW SGDH-3GDE	SGMBH-3GD□	-
		45 kW SGDH-4EDE	SGMBH-4ED□	-
		55 kW SGDH-5EDE	SGMBH-5ED□	-

## Option units (for CN10)

Symbol	Name	Model
(4)	1.5 axis advanced motion controller with host link interface	R88A-MCW151-E
	1.5 axis advanced motion controller with DeviceNet interface	R88A-MCW151-DRT-E
	MECHATROLINK-I interface unit	JUSP-NS100
	MECHATROLINK-II interface unit	JUSP-NS115
	DeviceNet interface unit with positioning functionality	JUSP-NS300
	PROFIBUS-DP interface unit with positioning functionality	JUSP-NS500
	Indexer unit. Versatile point-to-point positioning	JUSP-NS600

Note: (4) Refer to the servo drive option unit chapter for detailed specifications and selection

## Control cables (for CN1)

Symbol	Description	Connect to		Model	
(5)	Control cable (1 axis)	Motion control units CS1W-MC221 CS1W-MC421 C200H-MC221	1 m 2 m 3 m 5 m	R88A-CPW001M1 R88A-CPW002M1 R88A-CPW003M1 R88A-CPW005M1	
	Control cable (2 axis)	Motion control units CS1W-MC221 CS1W-MC421 C200H-MC221	1 m 2 m 3 m 5 m	R88A-CPW001M2 R88A-CPW002M2 R88A-CPW003M2 R88A-CPW005M2	
	Terminal block (4 axes)	Motion control unit C200HW-MC402-E	-	R88A-TC04-E	
	Servo drive connecting cable (1 axis)		1 m	R88A-CMUK001J3-E2	
	PLC unit control cables (4 axes)		1 m	R88A-CMX001S-E	
			1 m	R88A-CMX001J1-E	
(6)	Servo relay unit	CS1W-NC1□3, CJ1W-NC1□3, or C200HW-NC113 Position control unit		XW2B-20J6-1B (1 axis)	
		CS1W-NC2□3/4□3, CJ1W-NC2□3/4□3, or C200HW-NC213/413 position control unit		XW2B-40J6-2B (2 axes)	
		CQM1H-PLB21 CQM1-CPU43		XW2B-20J6-3B (1 axis)	
		CJ1M-CPU22/23		XW2B-20J6-8A (1 axis) XW2B-40J6-9A (2 axes)	
(7)	Cable to servo drive	Servo relay units XW2B-□0J6-□B	1 m	XW2Z-100J-B4	
			2 m	XW2Z-200J-B4	
(8)	Position control unit connecting cable	C200H-NC112	0.5 m 1 m	XW2Z-050J-A1 XW2Z-100J-A1	
		C200H-NC211	0.5 m 1 m	XW2Z-050J-A2 XW2Z-100J-A2	
		CQM1-CPU43-V1 and CQM1H-PLB21	0.5 m	XW2Z-050J-A3	
			1 m	XW2Z-100J-A3	
		CS1W-NC113 and C200HW-NC113	0.5 m	XW2Z-050J-A6	
			1 m	XW2Z-100J-A6	
		CS1W-NC213/413 and C200HW-NC213/413	0.5 m	XW2Z-050J-A7	
			1 m	XW2Z-100J-A7	
		CS1W-NC133	0.5 m	XW2Z-050J-A10	
			1 m	XW2Z-100J-A10	
		CS1W-NC233/433	0.5 m	XW2Z-050J-A11	
			1 m	XW2Z-100J-A11	
		CJ1W-NC113	0.5 m	XW2Z-050J-A14	
			1 m	XW2Z-100J-A14	
		CJ1W-NC213/413	0.5 m	XW2Z-050J-A15	
			1 m	XW2Z-100J-A15	
		CJ1W-NC133	0.5 m	XW2Z-050J-A18	
			1 m	XW2Z-100J-A18	
		CJ1W-NC233/433	0.5 m	XW2Z-050J-A19	
			1 m	XW2Z-100J-A19	
		CJ1M-CPU22/23	0.5 m	XW2Z-050J-A27	
			1 m	XW2Z-100J-A27	
(9)	Control cable	For general purpose controllers	1 m	R88A-CPW001S or JZSP-CKI01-1	
			2 m	R88A-CPW002S or JZSP-CKI01-1	
(10)	Relay terminal block cable	General purpose controller	1 m	R88A-CTW001N	
			2 m	R88A-CTW002N	
	Relay terminal block		-	XW2B-50G5	

**Battery backup for absolute encoder (for CN8)**

Symbol	Name	Model
(11)	Battery for 30 W to 5 kW drives	JZSP-BA01
	Battery for 6 kW to 15 kW drives	JZSP-BA01-1

**Cable (for CN5)**

Symbol	Name	Model
(12)	Analog monitor cable	R88A-CMW001S or DE9404559

**Filters**

Symbol	Applicable servo drive	Filter model	Rated current	Rated voltage
(15)	SGDH-A3AE-OY, SGDH-A5AE-OY, SGDH-01AE-OY, SGDH-02AE-OY	R88A-FIW104-SE	4 A	250 VAC single-phase
	SGDH-04AE-OY	R88A-FIW107-SE	7 A	
	SGDH-08AE-S-OY	R88A-FIW115-SE	15 A	
	SGDH-15AE-S-OY	R88A-FIW125-SE	25 A	
	SGDH-05DE-OY, SGDH-10DE-OY, SGDH-15DE-OY	R88A-FIW4006-SE	6 A	400 VAC three-phase
	SGDH-20DE-OY, SGDH-30DE-OY	R88A-FIW4010-SE	10 A	
	SGDH-50DE-OY	R88A-FIW4020-SE	20 A	
	SGDH-60DE-OY, SGDH-75DE-OY	R88A-FIW4030-SE	30 A	
	SGDH-1ADE-OY, SGDH-1EDE-OY	R88A-FIW4055-SE	55 A	
	SGDH-2BDE, SGDH-3ZDE, SGDH-3GDE	FN258-180-07	180 A	
	SGDH-4EDE, SGDH-5EDE	FN359-250-99	250 A	

**External regenerative resistor**

Symbol	Applicable servo drive	Regenerative resistor unit model	Specifications
(16)	SGDH-60DE-OY to -75DE-OY	JUSP-RA18	18 Ω, 880 W
	SGDH-1ADE-OY to -1EDE-OY	JUSP-RA19	14.25 Ω, 1760 W
	SGDH-2BDE	JUSP-RA12	9 Ω, 3600 W
	SGDH-3ZDE	JUSP-RA13	6.7 Ω, 3600 W
	SGDH-3GDE	JUSP-RA14	5 Ω, 4800 W
	SGDH-4EDE	JUSP-RA15	4 Ω, 6000 W
	SGDH-5EDE	JUSP-RA16	3.8 Ω, 7200 W

**DB resistor units**

Symbol	Servo drive model	Regenerative resistor unit model	Specifications. Star wiring
(17)	SGDH-2BDE, SGDH-3ZDE	JUSP-DB03	180 W, 0.8 Ω
	SGDH-3GDE	JUSP-DB04	180 W, 0.8 Ω
	SGDH-4EDE	JUSP-DB05	180 W, 0.8 Ω
	SGDH-5EDE	JUSP-DB06	300 W, 0.8 Ω

**Connectors**

Specification	Model
Control I/O connector (for CN1)	R88A-CNU11C or JZSP-CK19
Sigma-II drive encoder connector (for CN2)	JZSP-CMP9-1
Communications connector (for CN3)	R7A-CNA01R
Hypertac power connector IP67 (for 200 V motors SGMAH-PH-□□A□□□□D-OY)	SPOC-06K-FSDN169
Hypertac power connector IP67 (for 400 V motors SGMAH-PH-□□D□□□□D-OY)	LPRA-06B-FRBN170
Hypertac encoder connector IP67 (for motors SGMAH-PH-□□□□□□D-OY)	SPOC-17H-FRON169
Military power connector IP67 (for 400 V motors SGMGH-(05/10/13)D□, SGMSH-(10/15/20)D□, SGMUH-(10/15)D□) (for SGMBH-□ fan)	MS3108E18-10S
Military power connector IP67 (for 400 V motors SGMGH-(20/30/44)D□, SGMSH-(30/40/50)D□, SGMUH-(30/40)D□)	MS3108E22-22S
Military power connector IP67 (for 400 V motors SGMGH-(55/75/1A/1E)D□)	MS3108E32-17S
Military brake connector IP67 (for 400 V servo motors SGMGH-□, SGMSH-□, SGMUH-□)	MS3108E10SL-3S
Military encoder connector IP67 (for motors SGMGH-□, SGMSH-□, SGMUH-□, SGMBH-□)	MS3108E20-29S

**Computer software**

Specifications	Model
Configuration and monitoring software tool for servo drives and inverters. (CX-drive version 1.11 or higher)	CX-drive
Complete OMRON software package including CX-drive. (CX-One version 1.1 or higher)	CX-One

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.