


# OMRON

## Smart Sensor

Vision Sensor with built-in LCD monitor

ZFX-C10

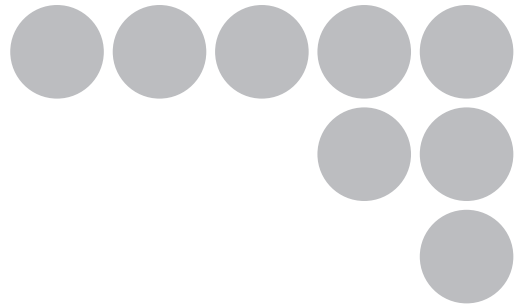

## User's Manual



Cat. No. Z251-E1-04

# Introduction

---


Thank you for purchasing the ZFX-C.

This manual provides information regarding functions, performance and operating methods that are required for using the ZFX-C.

When using the ZFX-C, be sure to observe the following:


- The ZFX-C must be operated by personnel knowledgeable in electrical engineering.
- To ensure correct use, please read this manual thoroughly to deepen your understanding of the product.
- Please keep this manual in a safe place so that it can be referred to whenever necessary.

## Manuals Provided with this Product

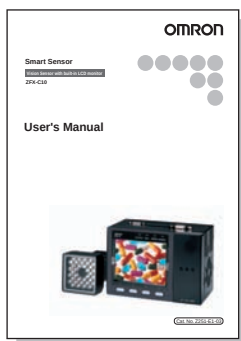

### User's Manual (this document)

This manual describes basic operations, such as installation and connections, and information on settings and specifications to ensure safe and correct use of this product.

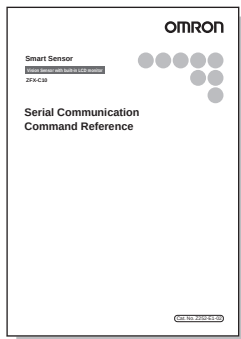

### Serial Communication Command Reference

This manual provides reference information for when this product performs communications with an external device, such as a PC or a programmable controller, via the serial interface.

# User's Manual

APPLICATION CONSIDERATIONS  
(Please Read)

BEFORE USE

1

BASIC OPERATIONS

2

SETTING THE MEASUREMENT  
CONDITIONS

3

FUNCTIONS USED DURING OPERA-  
TION

4

ADDITIONAL FUNCTIONS

5

PARALLEL INTERFACE

6

APPENDICES

7

Smart Sensor

Vision Sensor with built-in LCD monitor  
ZFX-C10

## **READ AND UNDERSTAND THIS DOCUMENT**

Please read and understand this document before using the products. Please consult your OMRON representative if you have any questions or comments.

## **WARRANTY**

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

## **LIMITATIONS OF LIABILITY**

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

## **SUITABILITY FOR USE**

THE PRODUCTS CONTAINED IN THIS DOCUMENT ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES.

Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.

- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

## **PERFORMANCE DATA**

Performance data given in this document is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

## **CHANGE IN SPECIFICATIONS**

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

## **DIMENSIONS AND WEIGHTS**

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

## **ERRORS AND OMISSIONS**

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

## **PROGRAMMABLE PRODUCTS**

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

## **COPYRIGHT AND COPY PERMISSION**

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

## Meanings of Signal Words

The following signal words are used in this manual.

### **WARNING**

Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.

## Meanings of Alert Symbols

The following alert symbols are used in this manual

|                                                                                   |                                                                       |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------|
|  | Indicates general prohibitions for which there is no specific symbol. |
|  | Indicates the possibility of laser radiation.                         |
|  | Indicates the possibility of explosion under specific conditions.     |

### **WARNING**

This product is not designed or rated for ensuring safety of persons.  
Do not use it for such purposes.



The camera with lighting emits visible light, which may adversely affect the eyes in rare instances.  
Do not look directly into the light emitted from the Camera. When the subject is a specular reflective object, protect your eyes from reflected light.



A lithium battery is built into the Controller and may occasionally combust, explode, or burn if not treated properly.  
Dispose of the Controller as industrial waste, and never disassemble, apply pressure that would deform, heat to 100 °C or higher, or incinerate the Controller.



## Precautions for Safe Use

The following points are important to ensure safety, so make sure that they are strictly observed.

### 1.Installation Environment

- Do not use the product in environments where it can be exposed to inflammable/explosive gas.
- To secure the safety of operation and maintenance, do not install the product close to high-voltage devices and power devices.
- Install the product in such a way that its ventilation holes are not blocked.
- Tighten mounting screws at the torque specified in this manual.

### 2.Power Supply and Wiring

- The voltage and AC power supply must be within the rated range (24 VDC  $\pm$ 10%).
- Reverse connection of the power supply is not allowed.
- Use the power supply within the rated load.
- High-voltage lines and power lines must be wired separately from this product. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.
- Use the product within the power supply voltage specified in this manual.
- Use a DC power supply with safety measures against high-voltage spikes (safety extra low-voltage circuits on the secondary side).
- Tighten mounting screws at the torque specified in this manual.

### 3.Regulations and Standards

- EN61326-1
- Electromagnetic environment : Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)
- The following condition is applied to the immunity test of this product.  
: If the level of disturbance of the video is such that characters on the monitor are readable, the test is a pass.

#### ● Notice for Korea Radio Law

A 급 기기 (업무용 방송통신기자재)  
이 기기는 업무용 ( A 급 ) 전자파적합기기로서 판매자  
또는 사용자는 이 점을 주의하시기 바라며 , 가정외의  
지역에서 사용하는 것을 목적으로 합니다.

### 4.Other

- Do not use this product in safety circuits associated with nuclear power and human life.
- Do not disassemble, repair, modify, deform by pressure, or incinerate this product.
- Dispose of this product as industrial waste.
- Connect the exclusive devices (Camera, Controller, Strobe Controller, Cable). The product might break down or malfunction if you use a part not included in the exclusive products.
- Should you notice any abnormalities, immediately stop use, turn OFF the power supply, and contact your OMRON representative.

## Precautions for Correct Use

Observe the following precautions to prevent failure to operate, malfunctions, or undesirable effects on product performance.

### 1. Installation Site

Do not install this product in locations subjected to the following conditions:

- Ambient temperature outside the rating
- Rapid temperature fluctuations (causing condensation)
- Relative humidity outside the range of 35 to 85%
- Direct vibration or shock
- Reflection of intense light (such as other laser beams, electric arc-welding machines, or ultra-violet light)
- Direct sunlight or near heaters
- Strong magnetic or electric field

Also, do not install this product in locations subjected to the following conditions to ensure its protective performance as described in the specifications:

- Presence of corrosive or flammable gases
- Presence of dust, salt, or iron particles
- Water, oil, or chemical fumes or spray, or mist atmospheres

### 2. Power Supply and Wiring

- When using a commercially available switching regulator, make sure that the FG terminal is grounded.
- If surge currents are present in the power lines, connect surge absorbers that suit the operating environment.
- Before turning ON the power after the product is connected, make sure that the power supply voltage is correct, there are no incorrect connections (e.g. load short-circuit) and the load current is appropriate. Incorrect wiring may result in breakdown of the product.
- Before connecting/disconnecting cables, make sure that the product is turned OFF. The product may break down if it is connected/disconnected while the power is ON.
- For cables, use only the exclusive products specified in this manual.

 p.14, p.15

- Use only combinations of the Camera, Controller and Strobe Controller specified in this manual. Using other combinations may cause malfunction or damage.
- Do not turn the power OFF in the following instances. Doing so will damage data that is in the process of being saved.
  - While data is being saved on the Controller
  - While data is being saved on the SD card
- The LCD panel has been made using precision technology, and sometimes a few pixels are missing in the panel. This is due to the structure of the LCD panel, and is not a malfunction.
- Do not remove the base from the Camera.

### 3. Maintenance and Inspection

Do not use thinner, benzene, acetone or kerosene to clean the Camera and Controller. If large dust particles adhere to the Camera, use a blower brush (used to clean camera lenses) to blow them off. Do not use breath from your mouth to blow the dust off. To remove dust particles from the Camera, wipe gently with a soft cloth (for cleaning lenses) moistened with a small amount of alcohol. Do not use excessive force to wipe off dust particles. Scratches to the Camera might cause error.

### 4. Ventilation Film

- Do not peel of the ventilation film or prod it with a sharp-pointed object. This might impair its protective structure.
- Do not cover the ventilation film. Doing so might cause the Camera's front panel to cloud.



### 5.Optional Lighting Connector

When the optional lighting is not connected, be sure to attach the connector cap. Otherwise, its protective structure might be impaired.

### 6.Camera's Connector Cap

When using only one camera, attach the connector cap to cameras that are not in use.

### 7.Communication with a Host Device

Before communicating with a host device, make sure that the product has started up.

Also, clear the receive buffers on the device in use or perform other measures since undetermined signals might be output from the host interface when this product is started up.

## Editor's Note

### ■ Meaning of Symbols

Menu items that are displayed on the Controller's LCD screen, and windows, dialog boxes and other GUI elements displayed on the PC are indicated enclosed by brackets "[ ]".

### ■ Visual Aids

#### Important

Indicates points that are important to achieve the full product performance, such as operational precautions.

#### Note

Indicates application procedures.



Indicates pages where related information can be found.

# CONTENTS

## 1.BEFORE USE

|                                                   |           |
|---------------------------------------------------|-----------|
| <b>ZFX-C</b> .....                                | <b>14</b> |
| System Configuration .....                        | 14        |
| Part Names and Functions .....                    | 16        |
| <b>Mounting and Connecting Devices</b> .....      | <b>19</b> |
| Installing Cameras .....                          | 19        |
| Installing the Controller .....                   | 25        |
| Connecting Devices .....                          | 28        |
| <b>Overview of Settings and Measurement</b> ..... | <b>31</b> |
| Operation Modes .....                             | 31        |
| Outline of MENU mode .....                        | 32        |
| Measurement Items and Banks .....                 | 33        |
| Initializing Controller Settings .....            | 35        |
| Saving Setup Data .....                           | 36        |

## 2.BASIC OPERATIONS

|                                                                                   |           |
|-----------------------------------------------------------------------------------|-----------|
| <b>Inspection Setup and Measurement</b> .....                                     | <b>38</b> |
| Setting Measurement Conditions - MENU Mode .....                                  | 38        |
| Checking the Measurement Status - ADJ Mode .....                                  | 42        |
| Starting Measurement - RUN Mode .....                                             | 42        |
| <b>Troubleshooting</b> .....                                                      | <b>43</b> |
| Clear Images Cannot be Obtained .....                                             | 43        |
| Measurement Target Cannot be Measured Accurately Due to Movement .....            | 43        |
| To Output Measurement Values to a PC or PLC .....                                 | 44        |
| To Output Position Information of Measurement Targets as Actual Coordinates ..... | 44        |

## 3.SETTING THE MEASUREMENT CONDITIONS

|                                                |            |
|------------------------------------------------|------------|
| <b>Setting Measurement Items</b> .....         | <b>46</b>  |
| Shape Inspection .....                         | 46         |
| Pattern Search .....                           | 46         |
| Sensitive Search .....                         | 51         |
| Size Inspection .....                          | 55         |
| Area .....                                     | 55         |
| Edge Inspection .....                          | 59         |
| Position .....                                 | 59         |
| Width .....                                    | 64         |
| Count .....                                    | 68         |
| Angle .....                                    | 71         |
| Bright/Color Inspection .....                  | 75         |
| Bright .....                                   | 75         |
| HUE .....                                      | 77         |
| Inspection by Individual Application .....     | 80         |
| Defect .....                                   | 80         |
| Image Adjustment .....                         | 84         |
| <b>Cameras/Lighting</b> .....                  | <b>88</b>  |
| Shutter Speed .....                            | 88         |
| Gain Setting .....                             | 88         |
| Partial Function Settings .....                | 89         |
| Image Rate .....                               | 90         |
| Light Control (Recipe Functions) .....         | 91         |
| Calibration .....                              | 92         |
| <b>Registering Images</b> .....                | <b>97</b>  |
| <b>Position Correction</b> .....               | <b>98</b>  |
| <b>Additional Functions</b> .....              | <b>100</b> |
| Calculation .....                              | 100        |
| Setting Reflection of Individual Results ..... | 103        |

## 4.FUNCTIONS USED DURING OPERATION

|                                                            |            |
|------------------------------------------------------------|------------|
| <b>Monitoring the Measurement Status - RUN Mode</b> .....  | <b>106</b> |
| Displaying Measurement Information .....                   | 106        |
| Switching the Image Display Method .....                   | 108        |
| <b>Checking/Adjusting the Measurement - ADJ Mode</b> ..... | <b>109</b> |
| Checking Measurement Status .....                          | 109        |
| Switching the Image Display Method .....                   | 111        |
| Using a Saved Image to Perform Re-measurement .....        | 111        |
| Adjusting Measurement Conditions .....                     | 112        |

## 5.ADDITIONAL FUNCTIONS

|                                                               |            |
|---------------------------------------------------------------|------------|
| <b>Bank Settings</b> .....                                    | <b>114</b> |
| Bank Data Operations .....                                    | 115        |
| Bank Group Operations .....                                   | 115        |
| <b>System Settings</b> .....                                  | <b>116</b> |
| Camera Specifications .....                                   | 116        |
| Communication Setup .....                                     | 116        |
| Output Settings .....                                         | 120        |
| Display Settings .....                                        | 122        |
| Operation Settings .....                                      | 124        |
| Measurement Control Conditions .....                          | 126        |
| Operation Conditions during Startup .....                     | 127        |
| Setting/Changing the Display Language .....                   | 127        |
| Setting/Changing the Date .....                               | 128        |
| Clearing Saved Images .....                                   | 128        |
| <b>Tools</b> .....                                            | <b>129</b> |
| Saving/Loading Data .....                                     | 129        |
| SD Card Operations .....                                      | 130        |
| Checking Density Distribution (Profile) .....                 | 130        |
| Checking the Communication Status with External Devices ..... | 131        |
| Displaying the Controller Information .....                   | 132        |

## 6.PARALLEL INTERFACE

|                                                |            |
|------------------------------------------------|------------|
| <b>Connection</b> .....                        | <b>134</b> |
| Parallel Connector Specifications .....        | 134        |
| <b>Internal Specifications</b> .....           | <b>138</b> |
| <b>Signal I/O</b> .....                        | <b>140</b> |
| Input Signal .....                             | 140        |
| Output Signal .....                            | 141        |
| <b>Timing Charts</b> .....                     | <b>145</b> |
| Measurement (Handshaking OFF) .....            | 145        |
| Measurement (Handshaking ON) .....             | 148        |
| Commands Other than for Measurement .....      | 149        |
| Signal Operation in terms of Measurement ..... | 150        |

# 7.APPENDICES

|                                                          |            |
|----------------------------------------------------------|------------|
| <b>Error Messages and Corrective Actions</b> .....       | <b>154</b> |
| <b>List of Available Functions for Each Camera</b> ..... | <b>155</b> |
| <b>AUTO Setting</b> .....                                | <b>156</b> |
| AUTO Setting of Measurement Items .....                  | 156        |
| AUTO Setting in Individual Adjustment Screens .....      | 157        |
| <b>Specifications and External Dimensions</b> .....      | <b>158</b> |
| Camera .....                                             | 158        |
| Controller .....                                         | 164        |
| Accessories & Options .....                              | 166        |
| <b>LED Safety</b> .....                                  | <b>175</b> |
| <b>Basic Knowledge for Operation</b> .....               | <b>176</b> |
| <b>Menu List</b> .....                                   | <b>180</b> |
| <b>INDEX</b> .....                                       | <b>183</b> |
| <b>How Color Images are Processed</b> .....              | <b>189</b> |
| Color Filter .....                                       | 190        |
| Color Pickup .....                                       | 192        |
| Hue, Saturation and Brightness Value .....               | 194        |
| <b>Version Upgrade Information</b> .....                 | <b>195</b> |
| <b>Revision History</b> .....                            | <b>196</b> |

# BEFORE USE

---

|                                             |           |
|---------------------------------------------|-----------|
| <b>ZFX-C</b>                                | <b>14</b> |
| System Configuration                        | 14        |
| Part Names and Functions                    | 16        |
| <b>Mounting and Connecting Devices</b>      | <b>19</b> |
| Installing Cameras                          | 19        |
| Installing the Controller                   | 25        |
| Connecting Devices                          | 28        |
| <b>Overview of Settings and Measurement</b> | <b>31</b> |
| Operation Modes                             | 31        |
| Outline of MENU mode                        | 32        |
| Measurement Items and Banks                 | 33        |
| Initializing Controller Settings            | 35        |
| Saving Setup Data                           | 36        |


# ZFX-C

The ZFX-C is a series of vision sensors that senses objects by their “surfaces.” Objects captured by a camera can be checked on the built-in 3.5-inch LCD monitor.

## System Configuration

Basically, the ZFX-C is configured by the Controller and the camera.

Other external devices can be selected to be used in combination with the ZFX-C according to the user's specific requirements.

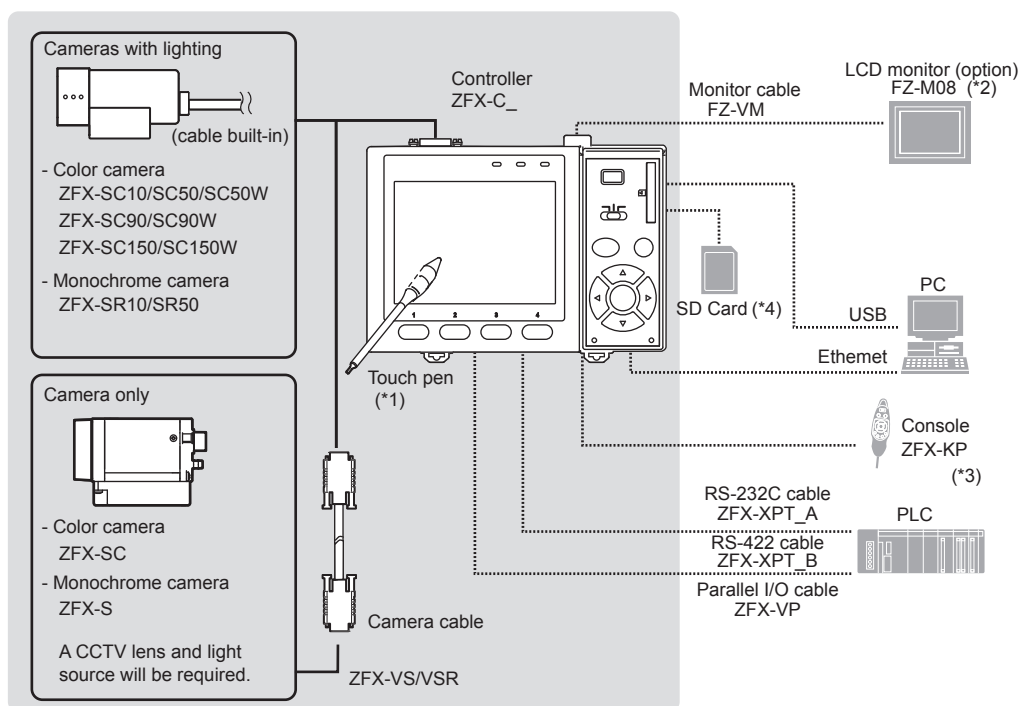

\*1: The Touch Pen (ZFX-TP) is supplied with the Controller.

\*2: The same image as in the Controller's LCD monitor can be displayed in the LCD monitor (option).

\*3: The console can be used instead of the Controller's keys and menu buttons.

\*4: Conforms to the SD Card "Physical layer specifications 1.01."


File format: FAT16




## Options

### Extension cable for connecting cameras and the Controller

Cameras with lighting

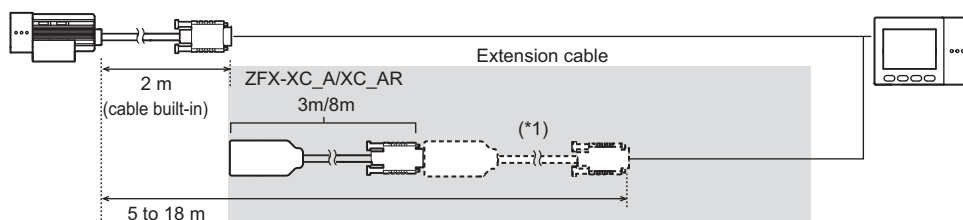

Camera only

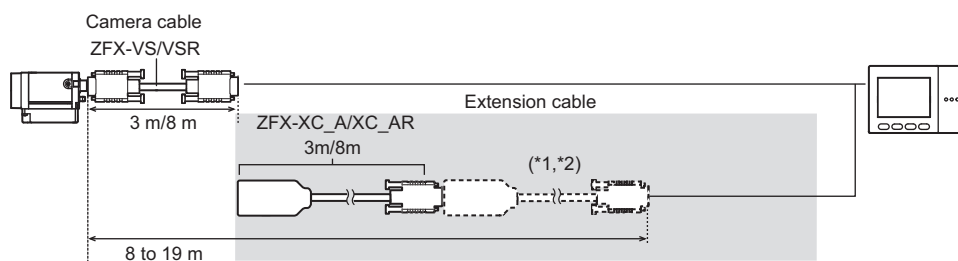

\*1: Up to two ZFX-XC\_A/XC-AR can be connected between the camera cable and the Controller.

\*2: Two ZFX-XC8A cannot be connected to each other when used with ZFX-VS (8 m.)

### Optional lighting

The following optional lighting can be connected to ZFX-SC50/SC50W/SC90/SC90W.


- Bar lighting ZFV-LTL01
- Bar double-lighting ZFV-LTL02
- Bar low-angle lighting ZFV-LTL04
- Light Source for Through-beam Lighting ZFV-LTF01

# Part Names and Functions


## Cameras

### Cameras with lighting


**ZFX-SC10/SR10/SR50**

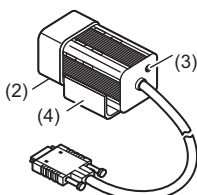


**ZFX-SC50/SC50W**

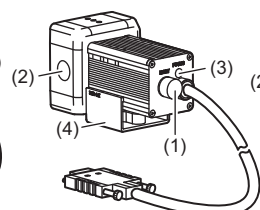

**ZFX-SC90/SC90W**

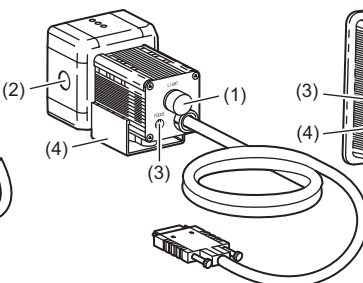


**ZFX-SC150/SC150W**

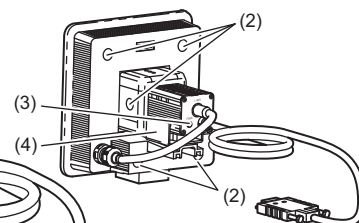


### Camera only (C-mount type)

**ZFX-S/SC**

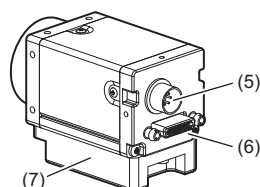

| Name.                          | Description                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1)Optional lighting connector | <p>This connector is used to connect an optional lighting. (ZFX-SC50/SC50W/ SC90/SC90W)</p> <p><b>Important</b></p> <p>When no optional lighting is used, make sure that the connector is covered with the cap. If not, water-resistant performance will be deteriorated.</p>                                                                                                                         |
| (2)Ventilation film            | <p>This film prevents the front panel from condensation.</p> <p><b>Important</b></p> <ul style="list-style-type: none"> <li>Do not peel off or probe the ventilation film with a sharp-pointed object. If you do that the protective structure rating may no longer be satisfied.</li> <li>Do not cover the ventilation film rating. Doing so might cause the front panel to be condensed.</li> </ul> |
| (3)Focus adjustment control    | <p>This control is used for adjusting the focus of the image.</p>                                                                                                                                                                                                                                                                                                                                     |
| (4)Mounting fixture            | <p>This mounting fixture is used for fastening the camera when installing it. The mounting fixture can be installed on all of the four mounting surfaces.</p>                                                                                                                                                                                                                                         |
| (5)Lighting connector          | <p>This connector is used to connect external lighting (Strobe Controller: 3Z4S-LT MLEK-C100E1TSX).</p>                                                                                                                                                                                                                                                                                               |
| (6)Camera cable connector      | <p>This connector is used for connecting to the Controller via a camera cable (ZFX-VS/VSR).</p>                                                                                                                                                                                                                                                                                                       |
| (7)Camera mounting base        | <p>This camera mounting base is fastened with screws to hold the camera in place. The camera mounting base can be installed on all of the four mounting surfaces.</p>                                                                                                                                                                                                                                 |

## Controller

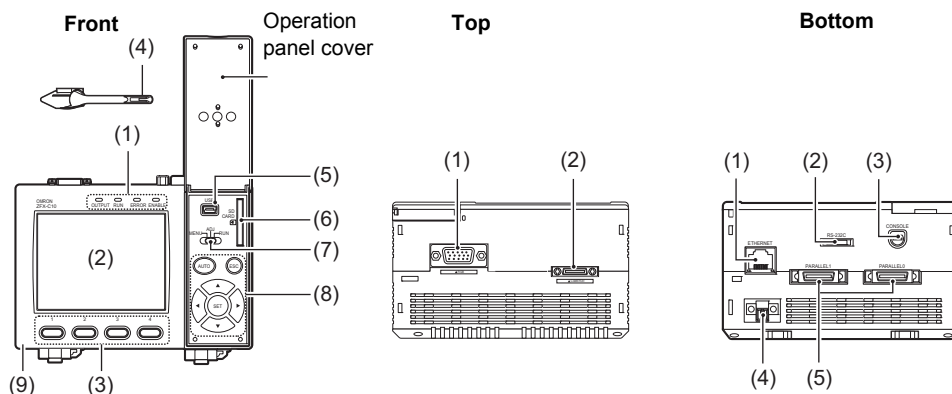

### Front

| Name                           | Function                                                                                                                                                                                                                                                                                                                                                                                                                    |
|--------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1) Indicator                  | <p>"Measuring" indicator (RUN): Lights in green when in the RUN mode.</p> <p>Error indicator (ERROR): Lights in red when an error occurs.</p> <p>Judgment indicator (OUTPUT): Lights in orange when the judgment result is OK or NG according to the setting. (Note)</p> <p>Trigger indicator (ENABLE): Lights in blue when the ZFX-C is ready for the measurement trigger input.</p>                                       |
| (2) LCD monitor/touch panel    | The LCD monitor displays setup menus and images captured from the cameras. Various settings can be made on the touch panel by tapping menu buttons in the LCD monitor using the touch pen.                                                                                                                                                                                                                                  |
| (3) Function keys              | Specific functions are allocated to the Function keys.                                                                                                                                                                                                                                                                                                                                                                      |
| (4) Touch pen                  | The touch pen is used to operate the touch panel. This pen can be attached to the Controller by tying its strap to the strap holder for the touch pen.                                                                                                                                                                                                                                                                      |
| (5) USB port                   | This port is for connecting to a personal computer via a USB cable.                                                                                                                                                                                                                                                                                                                                                         |
| (6) SD card slot               | <p>This slot is for inserting the SD Card.</p> <p>When the SD Card is inserted, the SD mark is displayed at the top right of the screen.</p> <p>Blue SD mark: The SD card is inserted but not being accessed.</p> <p>Red SD mark: The SD card is being accessed.</p>                                                                                                                                                        |
| (7) Mode switch                | <p>This switch selects the operation mode.</p> <p>MENU: Select this mode when setting measurement conditions.</p> <p>ADJ: Select this mode when adjusting setting parameters as necessary referencing the image and values displayed on the LCD monitor during continuous test measurement (measurement without measurement data output to external devices).</p> <p>RUN: Select this mode when performing measurement.</p> |
| (8) Control keys               | These keys are used to perform operations without the use of the touch pen.                                                                                                                                                                                                                                                                                                                                                 |
| (9) Strap holder for touch pen | This holder is for attaching the touch pen.                                                                                                                                                                                                                                                                                                                                                                                 |

Note: The judgment result is output to the OR signal via the parallel interface.

## Top

| Name                  | Function                                                                          |
|-----------------------|-----------------------------------------------------------------------------------|
| (1) Monitor connector | This connector is for connecting to the LCD monitor (option) via a monitor cable. |
| (2) Camera connector  | This connector is for connecting to a camera.                                     |

## Bottom

| Name                      | Function                                                                                                                                                                     |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1) Ethernet port         | This port is for connecting to a personal computer via a 100Base-TX/10Base-T cable.                                                                                          |
| (2) RS-232C/422 connector | This connector is for connecting to a PLC via an RS-232C or an RS-422 cable.  p.14          |
| (3) Console connector     | This port is for connecting to the Console.  p.14                                           |
| (4) Power connector       | This connector is for connecting to the DC power supply.  p.28                            |
| (5) Parallel port         | This port is for connecting to devices such as a PLC using the parallel cable.  p.14, p.134 |

### Important


- Attach the connector caps to connectors that are not in use to prevent dust or dirt from getting inside the connectors and to prevent the Controller from static electricity.

# Mounting and Connecting Devices

## Installing Cameras


### Camera with Lighting

#### Optical chart

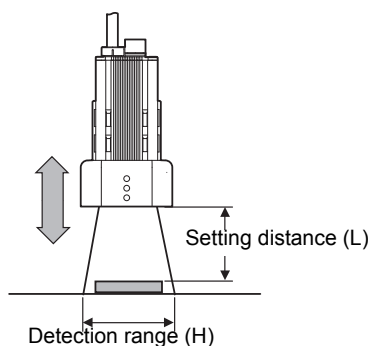


#### ► ZFX-SC10/SR10

Setting distance L (mm)

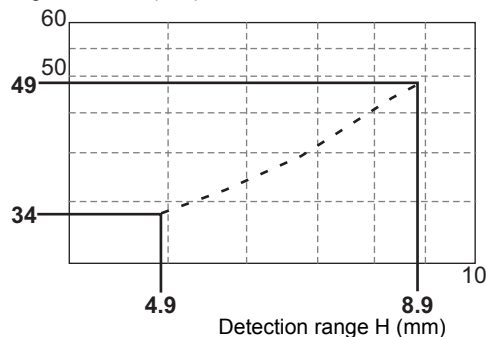


#### ► ZFX-SR50

Setting distance L (mm)

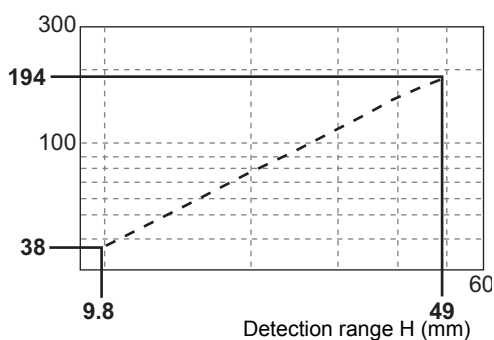


#### ► ZFX-SC50/SC50W

Setting distance L (mm)

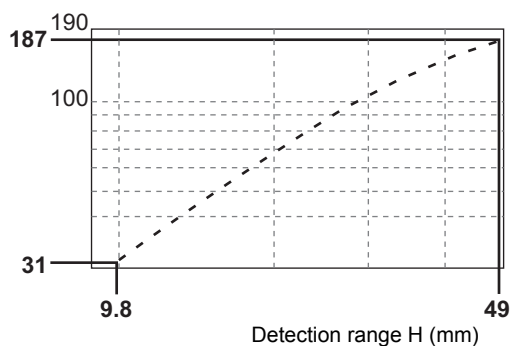


#### ► ZFX-SC90/SC90W

Setting distance L (mm)

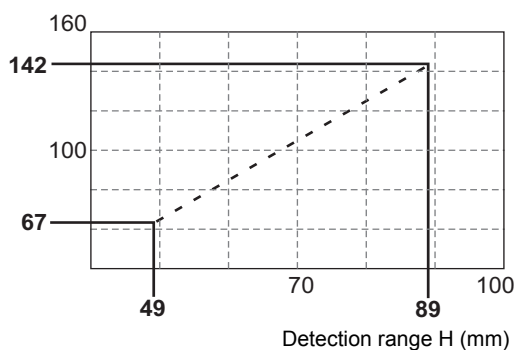

#### ► ZFX-SC150/SC150W

Setting distance L (mm)

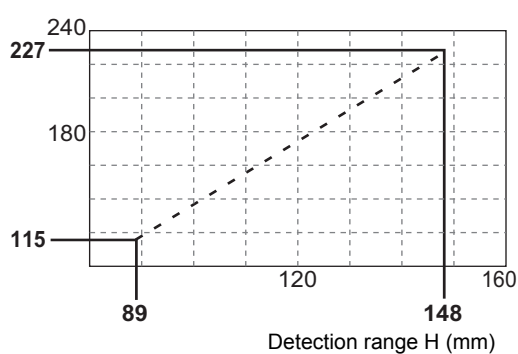


#### Note

- The lens has a fixed focal point. The actual detection range and focal point vary from lens to lens, so adjust the distance to the measurement target after replacing the lens or camera.
- The camera mounting distance listed in the following tables is an approximate value. Mount the Camera so that the distance to the measurement target can be adjusted easily.
- If the object size and detection range are incompatible, use a combination of a camera (without lighting), standard CCTV lens and light source.

 Camera Only p.22

## Installing the mounting fixture

The mounting fixture can be installed on all of the four mounting surfaces.

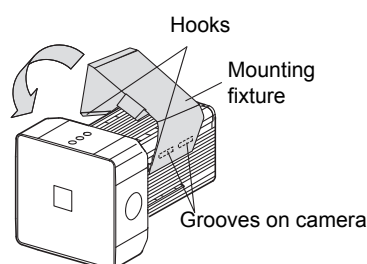

**1** Align the two hooks on one side of the mounting fixture with the two grooves on the camera body.

**2** Push the other hook down until it is snapped into place.  
Make sure that the mounting fixture is firmly fixed on the camera.


**3** Fasten the mounting fixture at the mounting location with screws.

Tightening torque

M4: 1.2 N•m



1/4"-20 UNC: 2.6 N•m

### ► Removal procedure

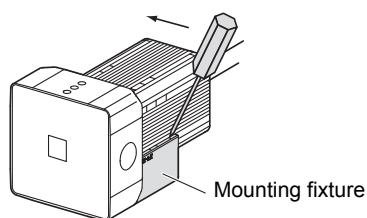

**1** Insert a screwdriver into the gap (one of the two gaps) between the mounting fixture and the camera case, and remove the mounting fixture.

## Adjusting the camera focus

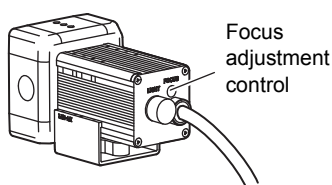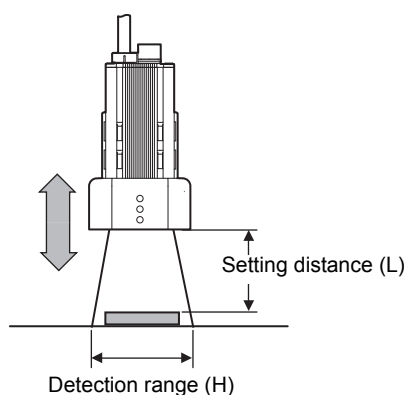

### 1 Adjust the distance between the camera and the measurement target and fasten the camera.

Refer to the optical chart and set the camera in a position so that the area to be checked is within the detection area (LCD monitor).

Optical chart p.19

### 2 Turn the focus adjustment control to the left and right to adjust the focus.

#### Note


First turn the focus adjustment control slightly to the left and right, to make sure that the Focus adjustment control is not at the upper or lower limit positions. Do not exert unnecessary force to turn the control at the upper or lower limit positions as this might damage the control.

(For ZFX-SC90\_/SC150\_, the control stops turning at the nearest position. It turns free at the farthest position.)

## Camera Only

### Optical chart


The values in the following chart are approximations, and the Camera must be adjusted after it is mounted.

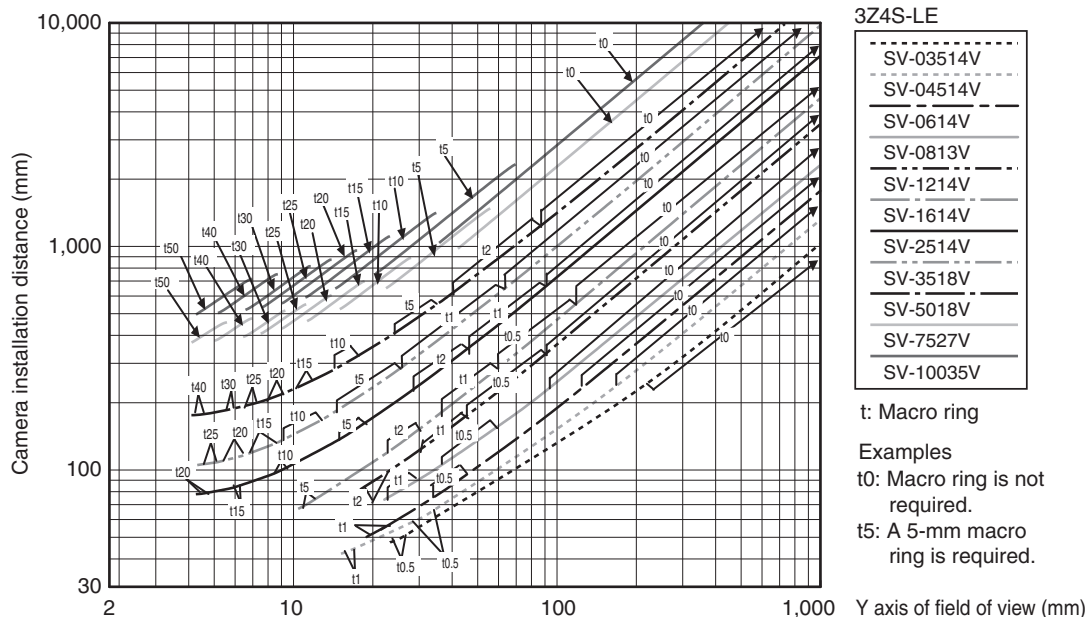

The X axis of the optical chart shows detection range L (mm), and the Y axis shows the camera distance A (mm). The curves on the optical chart show the relationship between the detection range and camera distance for each CCTV lens. The values are significantly different for each lens, so double-check the model of the lens before using the graph. The "t" values indicate the lengths of the Extension Tubes. The value "t0" shows the case where an Extension Tube is not required and the value "t5.0" shows the case where a 5-mm Extension Tube is used.


#### ► Example

When a 3Z4S-LE SV-2514V CCTV Lens is being used and a detection range of 40 mm is required at the measurement target, a camera distance of 300 mm and 2 mm Extension Tube are required.

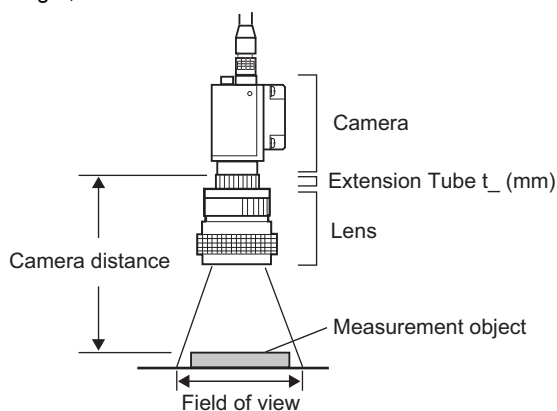




## Lenses and lens diameters

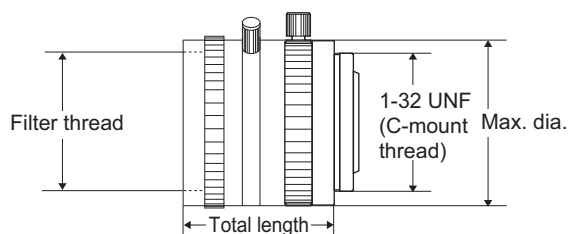

| Lens model        | Focal length | Brightness | Maximum outside diameter | Total length                             | Filter size |
|-------------------|--------------|------------|--------------------------|------------------------------------------|-------------|
| 3Z4S-LE SV-03514V | 3.5mm        | F1.4       | 29.5mm                   | 30.4mm                                   | ---         |
| 3Z4S-LE SV-04514V | 4.5mm        | F1.4       | 29.5mm                   | 29.5mm                                   | ---         |
| 3Z4S-LE SV-0614V  | 6.20 mm      | F1.4       | 29 mm                    | 30.0 mm                                  | M27 P0.5    |
| 3Z4S-LE SV-0813V  | 8.05 mm      | F1.3       | 28 mm                    | 34.0 mm                                  | M25.5 P0.5  |
| 3Z4S-LE SV-1214V  | 12.43 mm     | F1.4       | 29 mm                    | 29.5 mm                                  | M27 P0.5    |
| 3Z4S-LE SV-1614V  | 16.34 mm     | F1.4       | 29 mm                    | 24.0 mm                                  | M27 P0.5    |
| 3Z4S-LE SV-2514V  | 25.17 mm     | F1.4       | 29 mm                    | 24.5 mm                                  | M27 P0.5    |
| 3Z4S-LE SV-3518V  | 34.75 mm     | F1.8       | 29 mm                    | 33.5 mm (WD: ∞) to 37.5 mm (WD: 300 mm)  | M27 P0.5    |
| 3Z4S-LE SV-5018V  | 47.97 mm     | F1.8       | 32 mm                    | 37.0 mm (WD: ∞) to 39.4 mm (WD: 1000 mm) | M30.5 P0.5  |
| 3Z4S-LE SV-7527V  | 76.71 mm     | F2.7       | 32 mm                    | 42.0 mm (WD: ∞) to 44.4 mm (WD: 1000 mm) | M30.5 P0.5  |
| 3Z4S-LE SV-10035V | 95.4 mm      | F3.5       | 32 mm                    | 43.9 mm (WD: ∞) to 46.3 mm (WD: 1000 mm) | M30.5 P0.5  |

## Extension Tubes

One or more Extension Tubes can be inserted between the lens and the Camera to focus the Camera image. Use a combination of one or more of the seven tubes to achieve the required length.

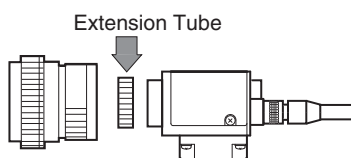


| Model          | Maximum outer diameter | Length                                                                |
|----------------|------------------------|-----------------------------------------------------------------------|
| 3Z4S-LE SV-EXR | 31 dia.                | Set of 7 tubes                                                        |
|                |                        | Length: 40 mm    20 mm    10 mm    5 mm    2 mm    1 mm    0.5 mm<br> |

### Important

- Do not use the 0.5-mm, 1.0-mm and 2.0-mm Extension Tubes attached to each other. Since these Extension Tubes are placed over the threaded section of the Lens or other Extension Tube, the connection may loosen when more than one 0.5-mm, 1.0-mm or 2.0-mm Extension Tube are used together.
- Reinforcement may be required for combinations of Extension Tubes exceeding 30 mm if the Camera is subject to vibration.

## Installing the Camera Mounting Base

The camera mounting base mounted on the bottom of the camera can be installed on all of the four mounting surfaces. To change the mounting surface, remove the three mounting screws (M2 x 6) from the camera.

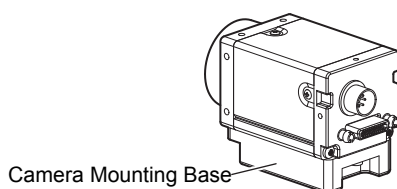


- Tightening torque when fastening the camera mounting base at the mounting location  
 M4: 1.2 N•m  
 1/4"-20 UNC: 2.6 N•m

# Installing the Controller

## Installation Precautions


To improve heat radiation, install the Controller only in the orientation show below.

**Right**




Do not install the Controller in the following orientations.

**Wrong**




**Wrong**




### Important

- Install the Controller so that the distance between the Controller and other devices is at least the dimensions shown in the figure below to improve the ventilation.

When installing Controller only:




When installing the Controller With the Exhaust Unit attached:

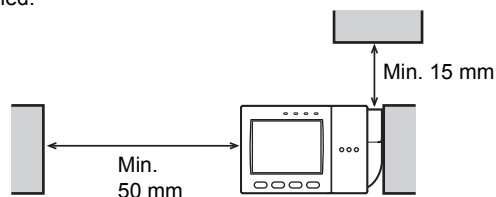

- Keep the ambient temperature less than 50 °C. If the ambient temperature is higher than 50 °C, install a fan forced cooling system or an air conditioner to keep the temperature lower than 50 °C.
- Avoid mounting on a panel, in which high-voltage emitting devices are installed to prevent ZFX-C operation from being affected by noise.
- Allow at least 10 m between the Controller and power lines to keep noise at a low level in the operating environment.


## Installing on the DIN Track

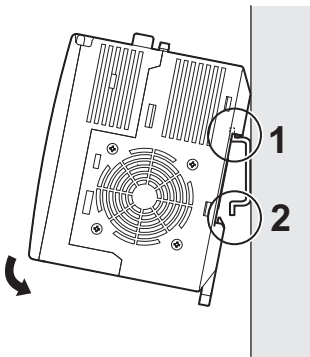


- 1** Hook the Controller's upper hook onto the DIN track.
- 2** Push the Controller down onto the DIN track until its lower hook is snapped into place.

### Important

- Attach the End Plate (sold separately) to both sides of the Controller on the DIN track.
- Attach the Exhaust Unit (supplied) to the Controller when installing other devices adjacently on the same DIN track as the Controller.  p.20

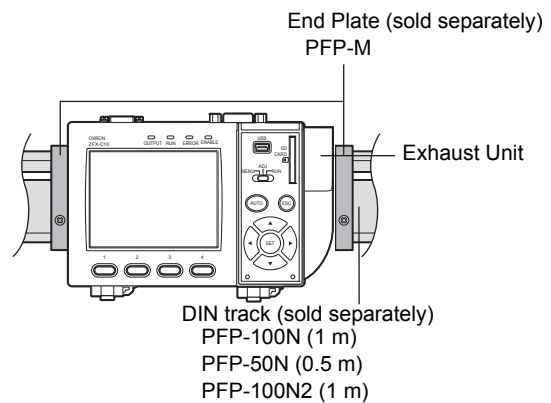


## Removing procedure

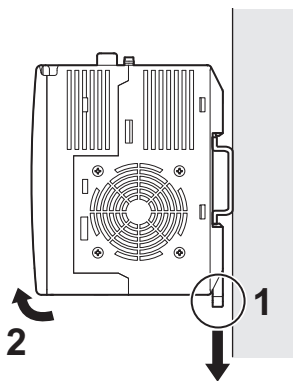


- 1** Pull the Controller's lower hook downwards.
- 2** Lift up the Controller from its bottom to remove it from the DIN track.

## Mounting on a Panel

1 BEFORE USE

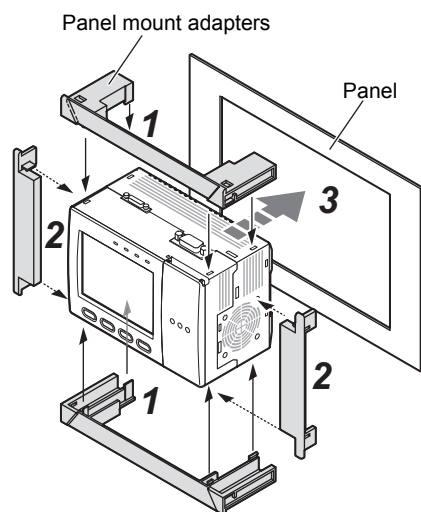

- 1** Install the long Panel Mount Adapters on the four holes on the Controller.
- 2** Install the short Panel Mount Adapters on the two holes on the long Panel Mount Adapter.
- 3** Install the Controller with Mount Adapters attached onto the panel from the front.

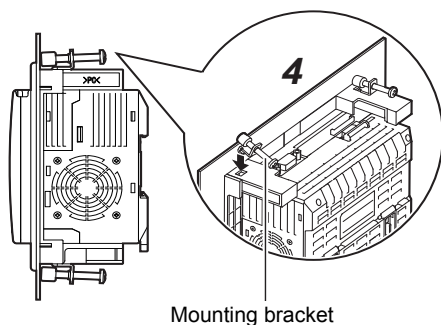

- 4** Hook the hooks of the mounting bracket onto the two holes (two each at top and bottom) of the longer Mount Adapters and tighten the screws.  
Tightening torque: 1.2 N·m.
- 5** Make sure that the Controller is firmly fixed on the panel.

# Connecting Devices


## Connecting the Controller to the Power Supply

Use a power supply that meets the following specifications.

| Item                           | Specification                          |
|--------------------------------|----------------------------------------|
| Power supply voltage           | Approx. 24 VDC (21.6 to 26.4 VDC)      |
| Output current                 | 1.0 A min.                             |
| Recommended power supply       | S8VS-06024 (24 VDC, 2.5 A)             |
| Recommended electric wire size | 0.14 to 1.5 mm <sup>2</sup> (max. 1 m) |

### Important



Use a DC power supply with countermeasures against high voltages (safe extra low-voltage circuits on the secondary side). If the system must meet UL standards, use a UL class II power supply.

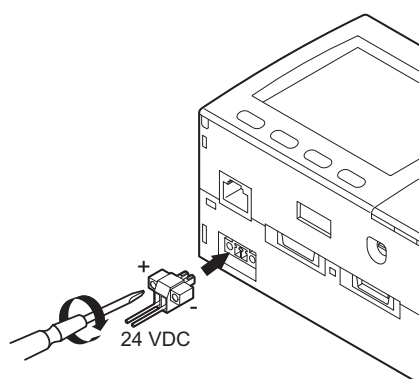

- 1** Loosen the two screws on the top of the Power connector (male) using a flat-blade screwdriver.
- 2** Insert the DC power terminal (wire) into the Power connector (male) and tighten the two screws on the top of the Power connector to fasten the power terminal with the screwdriver.  
Tightening torque: 0.22 to 0.25 N•m.
- 3** Plug the Power connector (male) into the Controller's Power connector (female).
- 4** Tighten the two screws on the left and right of the Power connector (male) with the screwdriver to fasten it.  
Tightening torque: 0.22 to 0.25 N•m.


## Attaching Ferrite Cores

Attach ferrite cores (supplied) to both ends of the camera's cable and the Controller's power cable, respectively.

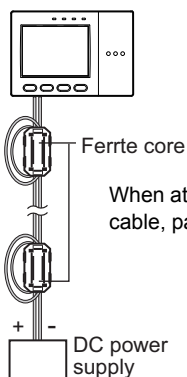

When attaching ferrite cores to the Controller's power cable, pass the cable once through each ferrite core.

## Connecting the Camera to the Controller

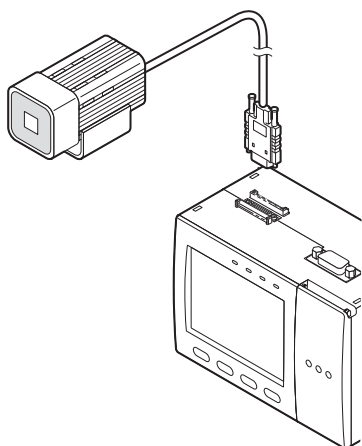

**1** Insert the camera's connector into the Controller's Camera connector.

**2** Tighten the two fastening screws of the Controller's Camera connector.  
Tightening torque: 0.15 N•m.

### Important

- Do not touch the terminals inside the connector.
- Fasten the connector while making sure that it is not subjected to vibration or shock.
- Do not mount the Controller in such a way that a load is steadily applied on the connector, for example, with tension applied to the cables.



To extend the installation distance between cameras and the Controller, see p.15

## Disconnection procedure


Loosen the fastening screws (two locations) to unlock the camera's cable, and then pull the camera's cable connector straight out.

### Important

- Be sure to hold the connector of the camera to disconnect it. Failure to do so may damage the camera's cable.
- Do not touch the terminals inside the connector.


## Connecting the Optional Lighting to the Camera

The optional lighting can be mounted to the rear connector of the camera (ZFX-SC50\_/SC90\_) with a single motion. Since the power is supplied from the camera side, no power supply is required for the optional lighting.

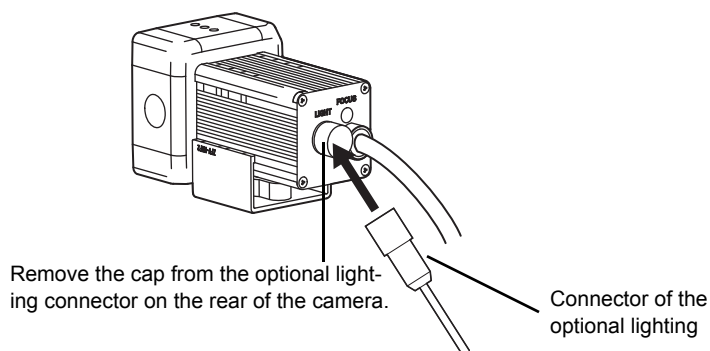

## Attaching the Exhaust Unit to the Controller

Attach the Exhaust Unit (supplied) to the Controller when installing other devices next to the Controller on the same DIN track. The Exhaust Unit also serves as the Touch Pen Holder

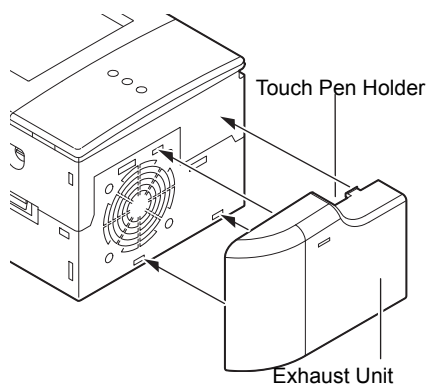


- 1 Attach the Exhaust Unit to the four mounting holes on the Controller.**



# Overview of Settings and Measurement

## Operation Modes

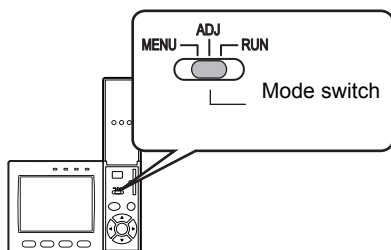

The ZFX-C has the following three modes. Switch to the desired mode before you start operation. To switch the operation mode, use the mode switch.


1 BEFORE USE

| Mode      | Description                                                                                                                                          |                   |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------|
| MENU mode | This mode is for setting the measurement conditions. The easy-to-follow icon-based display allows operations to be performed intuitively.            | <p>Top Screen</p> |
| ADJ mode  | This mode is for checking the measurement status and adjusting conditions. Measurement results are only displayed on the monitor and are not output. | <p>Top Screen</p> |
| RUN mode  | This mode is used for performing actual measurement. Measurement results are displayed on the monitor and output.                                    | <p>Top Screen</p> |

# Outline of MENU mode

The MENU mode is broadly divided into three levels. The icons used for basic setup are displayed in the center.


Use icons other than those in the center whenever required.

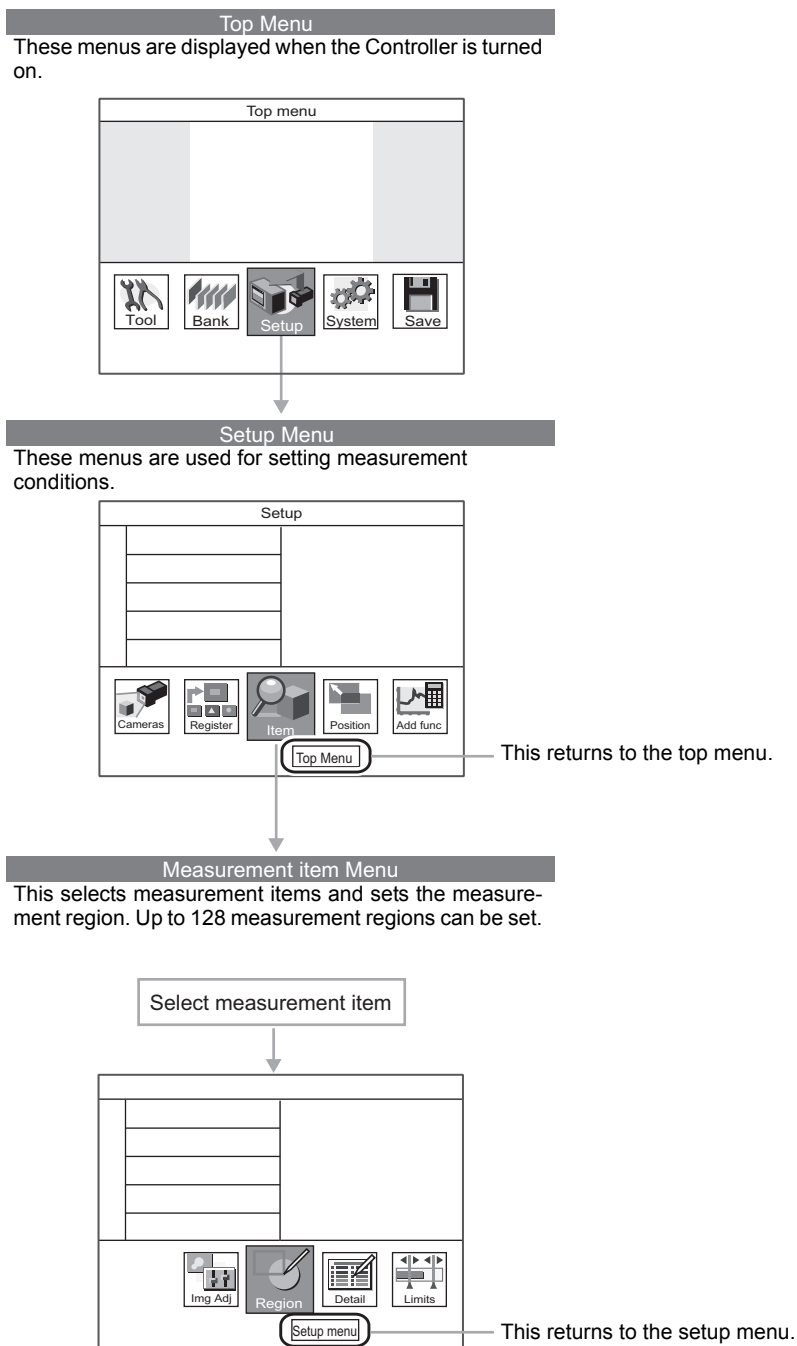

# Measurement Items and Banks


## Measuring Multiple Locations

Up to 32 locations in a single measurement image can be measured. A measurement type is called an "item," and desired measurement types are assigned to items 0 to 31.

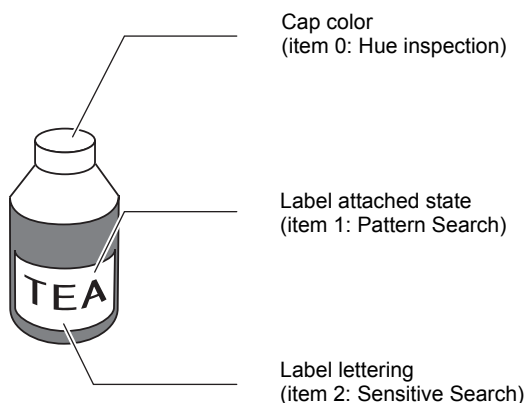


## Data for Change of Device Setup

If you register bank data for each individual product, you can reduce the time required for changing the device setup as all you need to do is to select different bank data to change the measurement conditions.

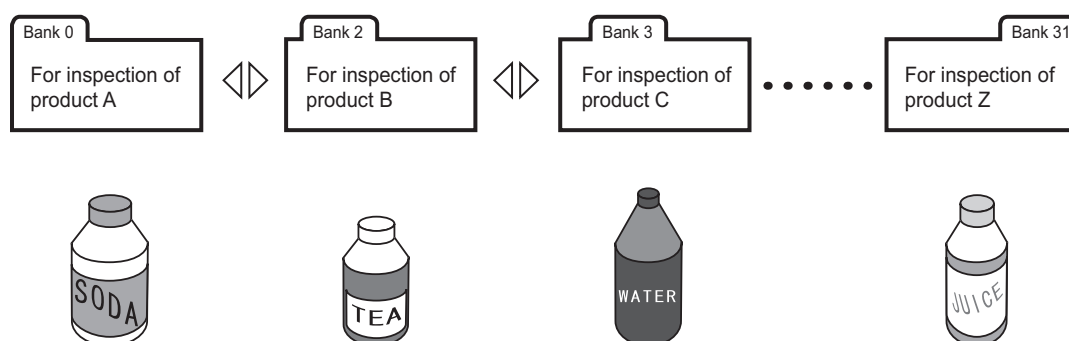

## Relationship between Items and Bank Data

Up to 32 items can be registered to a single bank data. Up to 32 bank data can be set to and saved on the ZFX.

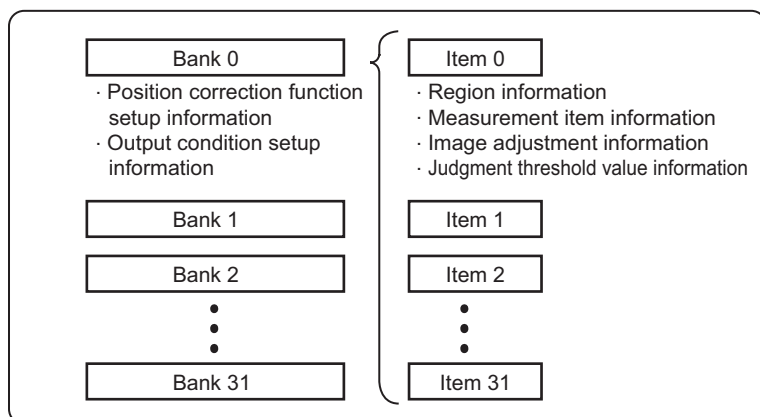

### Note

- If you use the bank group function, you can set up to 1024 banks.



Bank Settings p.114

- Bank and items can be given any name up to 16 characters.


Bank and item names make it easier to recognize which measurement is being performed when multiple items and banks have been set.

# Initializing Controller Settings


## Important

The settings of all banks and system settings (excluding the display language setting) are initialized regardless of the currently selected bank No. To save the settings, back them up to a SD card before performing initialization.


 Saving/Loading Data p.129

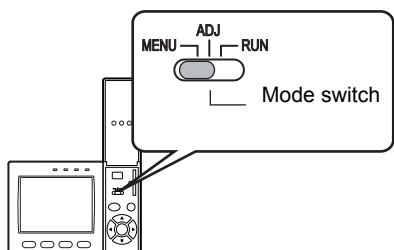

- 1** Switch to the [MENU] mode.  
The top screen is displayed.

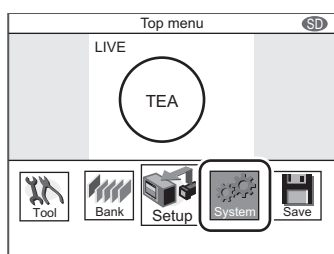

- 2** Select the [System] icon.

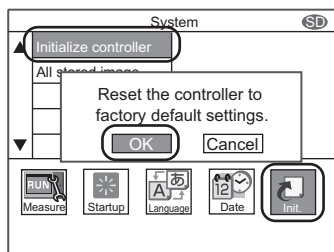


- 3** Select the [Init] icon.
- 4** Select [Initialize controller].
- 5** Select [OK].

# Saving Setup Data


After you have set the measurement conditions, be sure to save the setup data.

## Important


All settings will be deleted if you turn the power OFF without saving the data.

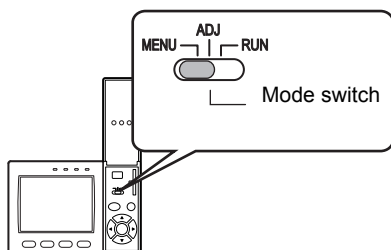

- 1** Switch to the [MENU] mode.  
The top screen is displayed.

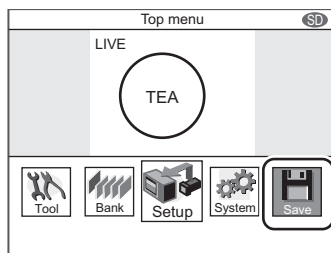

- 2** Select the [Save] icon.



- 3** Select [OK].

## Note

### Data Saved on the Controller

Bank settings and system settings are saved internally on the Controller. Image data is not saved on the Controller. Save image data on the SD card.

### When Using the Bank Group Function



Bank data that is set to bank group 0 is saved internally on the Controller. When the bank data of bank groups 1 to 31 is saved, the bank data on the SD card is overwritten with the bank data of bank groups 1 to 31.

# BASIC OPERATIONS

|                                                                             |           |
|-----------------------------------------------------------------------------|-----------|
| <b>Inspection Setup and Measurement</b>                                     | <b>38</b> |
| Setting Measurement Conditions - MENU Mode                                  | 38        |
| Checking the Measurement Status - ADJ Mode                                  | 42        |
| Starting Measurement - RUN Mode                                             | 42        |
| <b>Troubleshooting</b>                                                      | <b>43</b> |
| Clear Images Cannot be Obtained                                             | 43        |
| Measurement Target Cannot be Measured Accurately Due to Movement            | 43        |
| To Output Measurement Values to a PC or PLC                                 | 44        |
| To Output Position Information of Measurement Targets as Actual Coordinates | 44        |

# Inspection Setup and Measurement

The following describes the flow of basic setup using, as an example, inspection of whether different types of objects are mixed in.

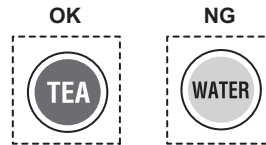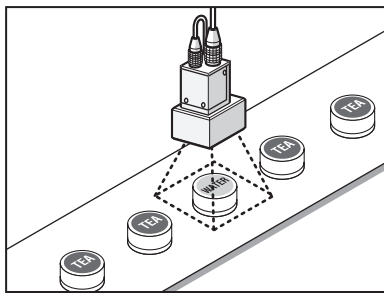


## Setting Measurement Conditions - MENU Mode

On the ZFX, a 3-step operation completes basic inspection setup.

### step1

Selecting measurement items

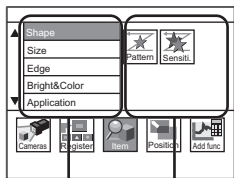


Measurement type group

Measurement items

### step2


Setting measurement regions

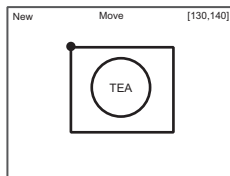

Enclose the desired measurement area.

### step3


Executing automatic setting

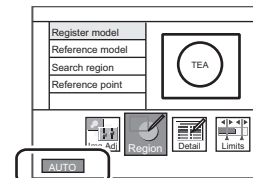


The optimum measurement conditions are automatically set just by selecting [AUTO]. Measurement conditions can also be checked and changed.




## step 1 Selecting measurement items

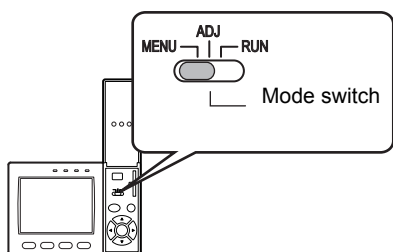

- 1 **Switch to the MENU mode.**  
The top screen is displayed.

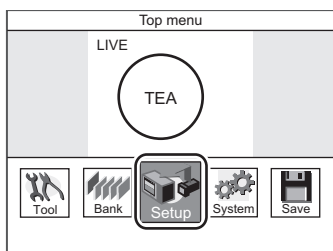

- 2 **Select the [Setup] icon.**

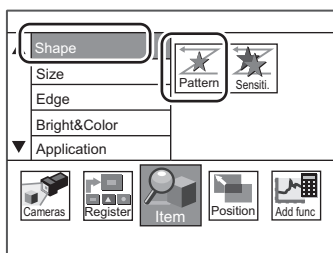


- 3 **Select [Shape].**

- 4 **Select the [Pattern] icon.**


### Note

For details on types of measurement items, see "Setting Measurement Conditions" in Chapter 3.


## step 2 Setting measurement regions

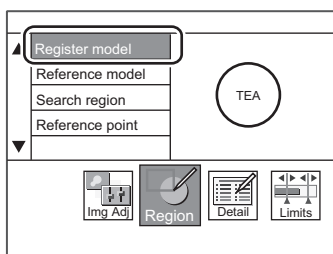

**1** Select [Register model].

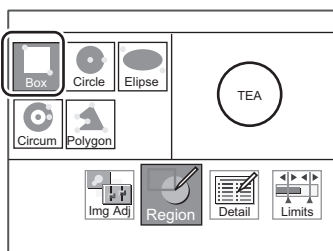

**2** Select [Box].

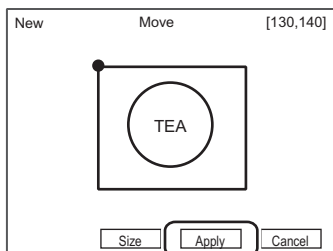

**3** Enclose the desired measurement area.

First, move the region. Next, select [Size] and apply the size.


### Note

The location of the region can be changed or the region resized by the amount of drag movement if you drag anywhere on screen. (The drag start position need not be the line of the region.) To set a region on top of [Cancel] or other buttons at the bottom of the screen, drag somewhere else on screen.

Setting the Region p.178

**4** Select [Apply].

## step 3 Executing automatic setting

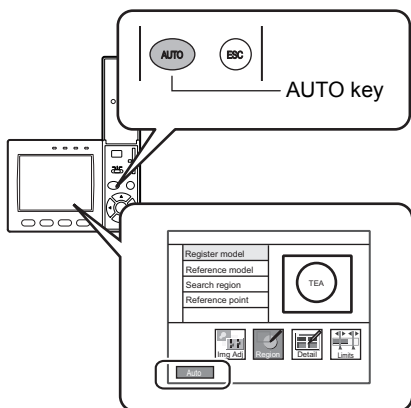

- 1 Either press the **AUTO** key on the controller or select **[AUTO]** on screen.

### Note

When the automatic setting is executed, the following parameters are set to their optimum values.


- Img Adj (filter setup)
- Limits (Differs according to measurement item.)
- Detail (Differs according to measurement item.)

Automatically made settings can be checked in each of the setup screens.

AUTO Setting p.156

# Checking the Measurement Status - ADJ Mode

Check whether or not measurement can be performed accurately under the conditions you have set, and adjust threshold values. Measurement results are only displayed on screen and are not output to external devices.

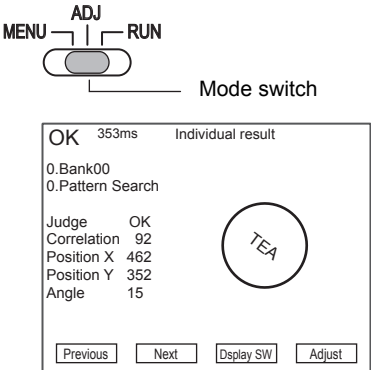

## 1 Select the ADJ mode.

The results of continuous measurement are displayed on screen. Make sure that measurement can be performed accurately and stably.

# Starting Measurement - RUN Mode

When you have checked the measurement conditions you have set, use the RUN mode to perform measurement. In the RUN mode, measurement results are also output to external devices.



## 1 Select the RUN mode.

## 2 Input the trigger.

Measurement is executed.

Input the trigger using the SET and UP keys.

**Note**

### Switching display content

In the RUN mode, you can switch the display content to check various information.



Displaying Measurement Information p.106

### Important

After you have set the measurement conditions, be sure to save the setup data. All settings will be deleted if you turn the power OFF without saving the data.



Saving Setup Data p.36

# Troubleshooting

## Clear Images Cannot be Obtained

Measurement sometimes cannot be performed successfully (e.g. measurement image is dark or contrast is low) depending on the characteristics of the measurement target. Sharp images can be obtained by applying filtering, or performing correction and adjustment to remedy the trouble.


| Trouble       | Remedy                                                                                                                                                                                                                                                           | Reference   |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|
| Poor lighting | The recipe method light control settings can be used. You can set the lighting just by selecting the image that meets your specific requirements from the thumbnails of images automatically taken under different lighting patterns.                            | p.91        |
| Low contrast  | You can apply filters, such as "Sharpen", to the image to enhance the boundaries between shadow and highlight areas.                                                                                                                                             | p.86        |
| Uneven image  | <ul style="list-style-type: none"> <li>You can apply filters, such as "Smooth", to the image to smooth out unevenness in the image.</li> <li>White parts of the image can be corrected to be reproduced appropriately by adjusting the white balance.</li> </ul> | p.86, p.116 |
| Dark image    | You can raise the camera's sensitivity or lengthen the shutter time to make the image brighter.                                                                                                                                                                  | p.88, p.91  |

## Measurement Target Cannot be Measured Accurately Due to Movement

When the measurement target is moving (e.g. its position or orientation are not fixed), it moves out of the preset measurement region, which prevents accurate measurement. The ZFX-C is provided with a "position shift correction function" that corrects the position shift of measurement regions such as this before performing measurement. The position shift correction function enables measurement targets whose position or orientation is not fixed to be measured accurately.


 Position Correction p.98

When setting the measurement region (reference image)

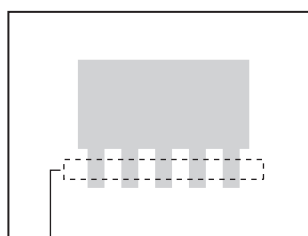


Measurement region

When the measurement target moves out of position

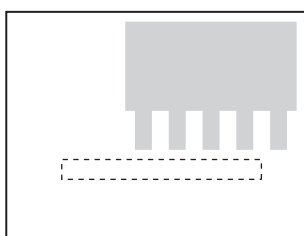

The position of the measurement target is measured after the measurement region is shifted by the amount of position shift.

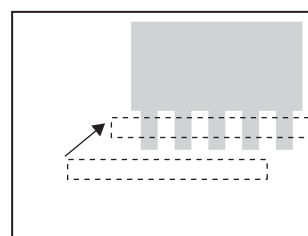

## To Output Measurement Values to a PC or PLC

Measurement values and judgment results can be output to a personal computer, PLC or other external device. Set the items to output and the output destination.

The following data can be output.

| Output Item               | Output Destination                    |
|---------------------------|---------------------------------------|
| Data (measurement values) | Serial interface (RS-232/RS-422, USB) |
|                           | Parallel interface                    |
|                           | SD card                               |
| Judgment                  | Parallel interface                    |



- Setting Output Content p.120
- Assigning the Data Output Destination p.121

## To Output Position Information of Measurement Targets as Actual Coordinates

As the controller default, measurement values are output in pixel units and camera coordinates. You can convert measurement results in pixels to actual dimensions ( $\mu\text{m}$  or  $\text{mm}$ ) or actual coordinates for output by enabling the calibration function.



Calibration p.92

# SETTING THE MEASUREMENT CONDITIONS


|                                          |            |
|------------------------------------------|------------|
| <b>Setting Measurement Items</b>         | <b>46</b>  |
| Shape Inspection                         | 46         |
| Pattern Search                           | 46         |
| Sensitive Search                         | 51         |
| Size Inspection                          | 55         |
| Area                                     | 55         |
| Edge Inspection                          | 59         |
| Position                                 | 59         |
| Width                                    | 64         |
| Count                                    | 68         |
| Angle                                    | 71         |
| Bright/Color Inspection                  | 75         |
| Bright                                   | 75         |
| HUE                                      | 77         |
| Inspection by Individual Application     | 80         |
| Defect                                   | 80         |
| Image Adjustment                         | 84         |
| <b>Cameras/Lighting</b>                  | <b>88</b>  |
| Shutter Speed                            | 88         |
| Gain Setting                             | 88         |
| Partial Function Settings                | 89         |
| Image Rate                               | 90         |
| Light Control (Recipe Functions)         | 91         |
| Calibration                              | 92         |
| <b>Registering Images</b>                | <b>97</b>  |
| <b>Position Correction</b>               | <b>98</b>  |
| <b>Additional Functions</b>              | <b>100</b> |
| Calculation                              | 100        |
| Setting Reflection of Individual Results | 103        |

# Setting Measurement Items

## Shape Inspection

### Pattern Search

Register an image pattern in beforehand as a model, and search for parts that most resemble an already registered model. The correlation indicating how much parts resemble each other, the position of the measurement target, and their angle can be output. Use this function to check for whether different-type products are mixed in, or to calculate the position of the measurement target.

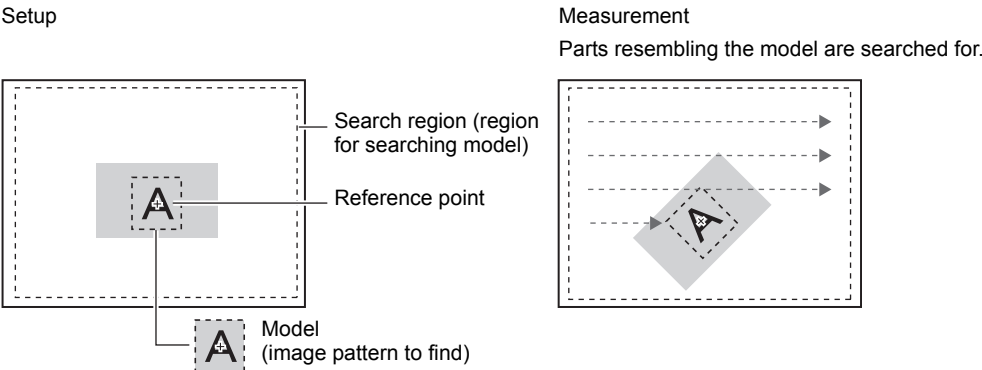

### Region settings

This function sets the region to be registered as the model and the region to search for the model.

► MENU mode - [Setup] - [Item] - [Region]


| Item            | Description                                                                                                                                                                     |
|-----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Register model  | This function registers the image pattern to find as the model.<br> Setting the Region p.178 |
| Reference model | The image that is registered as the model can be referenced.                                                                                                                    |
| Search region   | Set the region in which to search for the model.                                                                                                                                |
| Reference point | Set the coordinates of which part of the model are to be output. The default is the center position of the model.                                                               |



## Threshold

This function sets the judgment conditions.

### ► MENU mode - [Setup] - [Item] - [Limits]
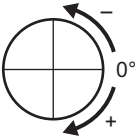
| Setup Item                                                      | Description                                                                                                                                                                                                                                       |
|-----------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Correlation                                                     | Sets the range of the correlation to be judged as OK.<br>Range: 0 to 100                                                                                                                                                                          |
| Position XY                                                     | Sets the range of movement in the X- and Y- axes of the measurement target to be judged as OK.<br>Range: -9999.999 to 9999.999<br>(When calibration is OFF, the range of movement for positions X and Y are 0 to 640 and 0 to 480, respectively.) |
| Angle                                                           | Sets the range of rotation angle to be judged as OK.<br>Range: -180 to 180<br><br>                                                                               |
| Search point<br>(enabled only when Verification is set to [ON]) | Sets the number of search candidates to be judged as OK.<br>Range: 0 to 99                                                                                                                                                                        |

## Image adjustment (if necessary)

The following items can be changed and set to the image of the measurement target.

### ► MENU mode - [Setup] - [Item] - [Img Adj]

| Item         | Description                                                                                                                   |
|--------------|-------------------------------------------------------------------------------------------------------------------------------|
| Color filter |  For details, see "Image Adjustment". p.84 |
| Filtering    |                                                                                                                               |
| BGS* level   |                                                                                                                               |

\*BGS: Background Suppression

## Detailed settings (if necessary)

When measurement is not stable, adjust the detailed conditions.



### ► MENU mode - [Setup] - [Item] - [Detail]

| Setup Item       | Setting value                                       | Description                                                                                                                                                                                                                                                                                   |
|------------------|-----------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Search mode      | Hi-speed                                            | The search is performed at high speed.                                                                                                                                                                                                                                                        |
|                  | Normal (default value)                              | The search is performed in the normal mode for both speed and precision.                                                                                                                                                                                                                      |
|                  | Precision                                           | The position is calculated at high precision in sub-pixel units (units smaller than pixels).                                                                                                                                                                                                  |
| Rotation range   | 0 to 180°<br>(default value: 0)                     | Sets in which angle range the model (rotated in degree units) is to be created. The smaller the skipping angle that is set, the higher the precision becomes, however, the longer the processing time becomes.                                                                                |
| Skipping angle   | 1, 2, 3, 5, 10, 15, 20, 30°<br>(default value: 10°) | <b>Important</b><br>When the rotation range and skipping angle have been changed, register the model again.                                                                                                                                                                                   |
| Interpolation    | OFF (default value)                                 | Calculates the angle in skipping angle units.                                                                                                                                                                                                                                                 |
|                  | ON                                                  | The angle is calculated as a numerical value down to three digits past the decimal point based on the value obtained in skipping angle units. Note, however, that the processing time increases. This function is enabled only when the search mode is the normal mode or the precision mode. |
| Verification     | OFF (default value)                                 | The search is performed in detail near a candidate point having the highest correlation value.                                                                                                                                                                                                |
|                  | ON                                                  | The search is performed in detail near all candidate points. Select [ON] when the model cannot be searched for stably.                                                                                                                                                                        |
| Candidate level  | 0 to 100<br>(default value: 60)                     | Sets the level at which the model is searched for during a rough search. Images having a correlation value at the candidate level or more are taken to the candidate points in the Verification. Set a lower level when the model cannot be searched for stably.                              |
| Calibration      | OFF (default value)                                 | Measurement results are output using the camera's coordinate values.                                                                                                                                                                                                                          |
|                  | ON                                                  | Measurement results are output using the coordinate value converted by the calibration function.                                                                                                                                                                                              |
| Coordinates mode | Normal (default value)                              | The position information of the input image coordinate system itself is output.                                                                                                                                                                                                               |
|                  | Pos. correction                                     | When position shift correction is set, the position information is output using the coordinate system corrected to the original state when the coordinate system was registered.                                                                                                              |


 Coordinates mode p.63

**Note****Verification and Candidate level**

A rough search is performed inside the search region to find the candidate point.

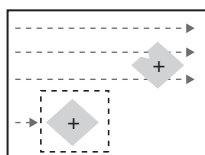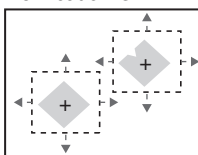**Verification ON**

A detailed search is performed at images near all candidate points.

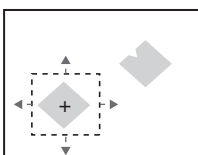**Verification OFF**


A detailed search is performed at images near the candidate point having the highest correlation.

**Search Rotation Range**


Models in the range set by Rotation range are created based on the registered model.

Example: When Rotation range is  $15^\circ$  and Skipping angle is  $5^\circ$

Registered model

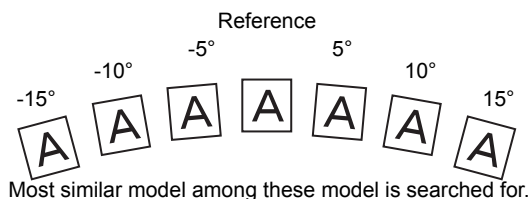**Setting the Candidate level**

The candidate level can be set while checking which part is to be detected as the candidate point. The search takes longer when there are many candidate points. Adjust the candidate level, if necessary.

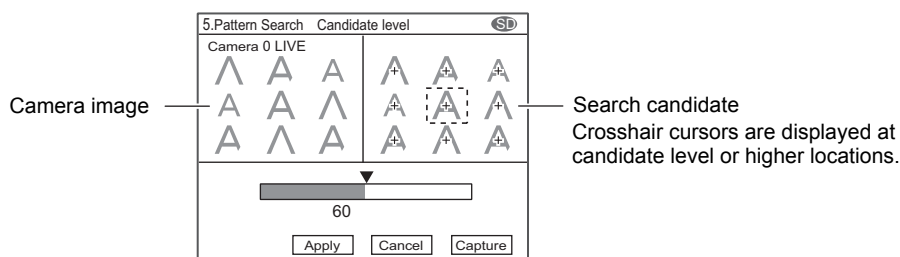

## Possible output results


The following values can be output when expressions are set.

| Item                 | Description                                                                                                             | Message                     |
|----------------------|-------------------------------------------------------------------------------------------------------------------------|-----------------------------|
| Judgment result      | The judgment result is output. (0:OK, -1:NG, -2: not measured)                                                          | Judge (JG)                  |
| Correlation          | The degree of match between the measurement image and model image are output as a correlation value. (0 to 100)         | Correlation (CR)            |
| Measurement position | The X, Y coordinates of the position where the model was found are output. (-9999.999 to 9999.999)                      | Position X, Y (X, Y)        |
| Measurement angle    | The rotation angle of the model that was found is output. (-180 to 180)                                                 | Angle (TH)                  |
| Search number        | The number of searches that have a correlation value at the correlation lower limit value or above is output. (0 to 99) | Search count (N)            |
| Reference position   | The X, Y coordinates when the model was registered are output. (-9999.999 to 9999.999)                                  | Reference X, Y (SX, SY)     |
| Reference angle      | The angle when the model was registered is output. (-180 to 180)                                                        | Ref. angle (ST)             |
| Position difference  | The position difference obtained by "measurement position - reference position" is output. (-9999.999 to 9999.999)      | Position dif. X, Y (DX, DY) |
| Angle difference     | The angle difference obtained by "measurement position - reference position" is output. (-180 to 180)                   | Angle dif. (DT)             |


### Note

#### Reference position/angle, position difference/angle difference

Reference position = position of model when model is registered  
 Reference angle = angle of model when model is registered

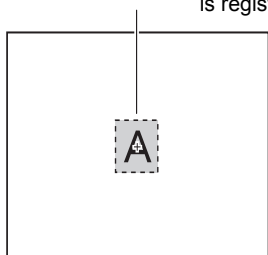


Measurement position = position of model found by measurement  
 Measurement angle = angle of model found by measurement

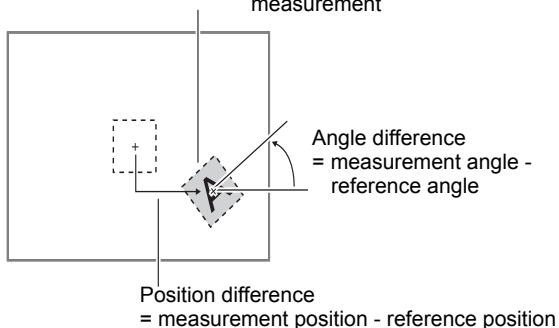

## Sensitive Search


Use this item to detect minute differences. Models are automatically subdivided to check the degree of match in detail. The correlation indicating how much parts resemble each other and the position of the measurement target can be output. The correlation and position information of the model having the lowest degree of match of the subdivided models is output.

### Setup

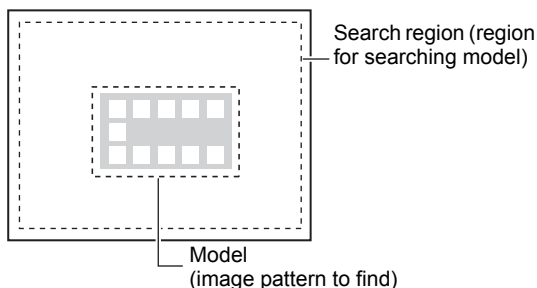

### Measurement

Parts resembling the model are searched, and the degree of match is checked in detail by subdivided models. When subdivided models are a solid color, the solid color rate also can be inspected.

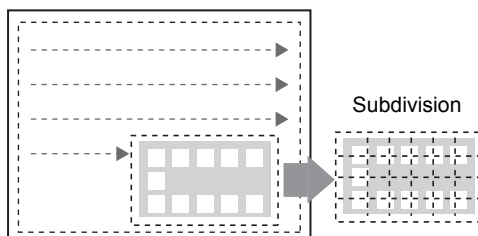

### Note

#### Comparison with pattern search

Example: Passed product



Different type




Reversed



#### < Distribution of Measurement Results >

In a pattern search, a difference in correlation values does not appear, making correlation values difficult to distinguish as there are small differences.

In a Sensitive search, even small differences can be distinguished.

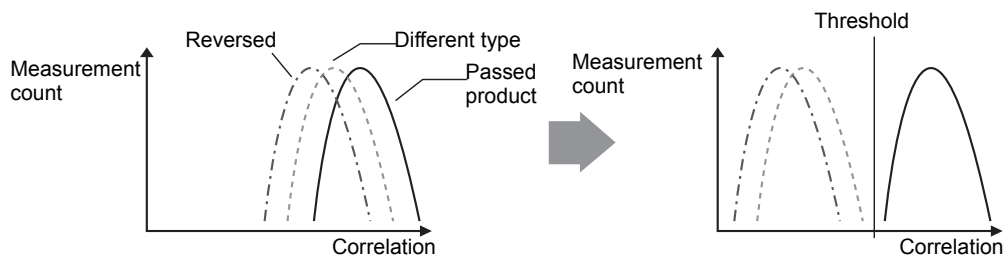

## Region settings

This function sets the region to be registered as the model and the region to search for the model.

### ► MENU mode - [Setup] - [Item] - [Region]

| Item            | Description                                                                                                                                                                   |
|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Register model  | This function registers the image pattern to find as the model.<br> Setting the Region p.178 |
| Reference model | The image that is registered as the model can be referenced.                                                                                                                  |
| Search region   | Sets the region in which to search for the model.                                                                                                                             |

## Threshold

This function sets the judgment conditions.

### ► MENU mode - [Setup] - [Item] - [Limits]

| Setup Item       | Description                                                                                                                                                                                                                                       |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Correlation      | Sets the range of the correlation to be judged as OK.<br>Range: 0 to 100                                                                                                                                                                          |
| Position XY      | Sets the range of movement in the X- and Y- axes of the measurement target to be judged as OK.<br>Range: -9999.999 to 9999.999<br>(When calibration is OFF, the range of movement for positions X and Y are 0 to 640 and 0 to 480, respectively.) |
| Solid color rate | Sets the range of solid color to be judged as OK.<br>Range: 0 to 100                                                                                                                                                                              |
| Angle            | Sets the range of rotation angle to be judged as OK.<br>Range: -180 to 180<br> +/- direction of angle p.47                                                     |

## Image adjustment (if necessary)

The following items can be changed and set to the image of the measurement target.

### ► MENU mode - [Setup] - [Item] - [Img Adj]

| Item         | Description                                                                                                                   |
|--------------|-------------------------------------------------------------------------------------------------------------------------------|
| Color filter |  For details, see "Image Adjustment". p.84 |
| Filtering    |                                                                                                                               |
| BGS level    |                                                                                                                               |

## Detailed settings (if necessary)

When measurement is not stable, adjust the detailed conditions.

### ► MENU mode - [Setup] - [Item] - [Detail]

| Setup Item        | Setting value                                       | Description                                                                                                                                                                                                                                                                                      |
|-------------------|-----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Search mode       | Hi-speed                                            | Matching is performed at high speed.<br>Use this mode to shorten the processing time.                                                                                                                                                                                                            |
|                   | Normal                                              | The search is performed in the normal mode for both speed and precision.<br>Use this mode to measure large text or roughly drawn pictures.                                                                                                                                                       |
|                   | Precision (default value)                           | Positioning is performed at high precision followed by matching.<br>Use this mode to measure fine text or detailed patterns.                                                                                                                                                                     |
| Sensitivity       | Low                                                 | The model is subdivided into nine models of up to three divisions in each of the horizontal and vertical directions and then measured.                                                                                                                                                           |
|                   | Middle (default value)                              | The model is subdivided into 25 models of up to five divisions in each of the horizontal and vertical directions and then measured.                                                                                                                                                              |
|                   | High                                                | The model is subdivided into 100 models of up to ten divisions in each of the horizontal and vertical directions and then measured.                                                                                                                                                              |
| Rotation range    | 0 to 180° (default value: 0)                        | Sets in which angle range the model (rotated in degree units) is to be created. The smaller the skipping angle that is set, the higher the precision becomes, however, the longer the processing time becomes.                                                                                   |
| Skipping angle    | 1, 2, 3, 5, 6, 10, 15, 20, 30° (default value: 10°) |                                                                                                                                                                                                                                                                                                  |
| Interpolation     | OFF (default value)                                 | Calculates the angle in skipping angle units.                                                                                                                                                                                                                                                    |
|                   | ON                                                  | The angle is calculated as a numerical value down to three digits past the decimal point based on the value obtained in skipping angle units. Note, however, that the processing time increases.<br>This function is enabled only when the search mode is the normal mode or the precision mode. |
| Verification      | OFF (default value)                                 | The search is performed in detail near a candidate point having the highest correlation value.                                                                                                                                                                                                   |
|                   | ON                                                  | The search is performed in detail near all candidate points. Select [ON] when the model cannot be searched for stably.                                                                                                                                                                           |
| Candidate level   | 0 to 100<br>(default value: 60)                     | Sets the level at which the model is searched for during a rough search. Images having a correlation value at the candidate level or more are taken to the candidate points in the Verification. Set a lower level when the model cannot be searched for stably.                                 |
| Solid color check | OFF (default value)                                 | Select [ON] when inspecting sections of solid color on subdivided models.                                                                                                                                                                                                                        |
|                   | ON                                                  |                                                                                                                                                                                                                                                                                                  |
| Calibration       | OFF (default value)                                 | Measurement results are output using the camera's coordinate values.                                                                                                                                                                                                                             |
|                   | ON                                                  | Measurement results are output using the coordinate value converted by the calibration function.                                                                                                                                                                                                 |
| Coordinates mode  | Normal (default value)                              | The position information of the input image coordinate system itself is output.                                                                                                                                                                                                                  |
|                   | Pos. correction                                     | When position shift correction is set, the position information is output using the coordinate system corrected to the original state when the coordinate system was registered.                                                                                                                 |



- Verification and Candidate level p.49
- Search Rotation Range p.49
- Verification and Candidate level p.49
- Coordinates mode p.63

**Note**

The minimum size of subdivided models is 32 x 32 pixels.

**Important**

When the sensitivity, rotation range, and skipping angle have been changed, register the model again.

**Possible output results**

The following values can be output when expressions are set.

| Item                 | Description                                                                                                                                                                                                                                 | Message                  |
|----------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------|
| Judgment result      | The judgment result is output. (0:OK, -1:NG, -2: not measured)                                                                                                                                                                              | Judge (JG)               |
| Correlation          | The degree of match between the measurement image and model image are output as a correlation value. The correlation and position information of the model having the lowest degree of match of the subdivided models is output. (0 to 100) | Correlation (CR)         |
| Measurement position | The X, Y coordinates of the location having the lowest correlation value, as a result of having calculated the correlation value in detail by subdivided models, are output. (-9999.999 to 9999.999)                                        | Position X, Y<br>(X, Y)  |
| Solid color rate     | The rate that the model is a solid color is output. The higher the solid color rate, the higher the value increases. (0 to 100)                                                                                                             | Solid color rate<br>(SC) |
| Measurement angle    | The rotation angle of the model that was found is output. (-180 to 180)                                                                                                                                                                     | Angle (TH)               |




# Size Inspection

## Area


The area, gravity and angle of the desired color can be measured. This allows you to inspect the size of the measurement target, and detect positions and stance.

### Setup

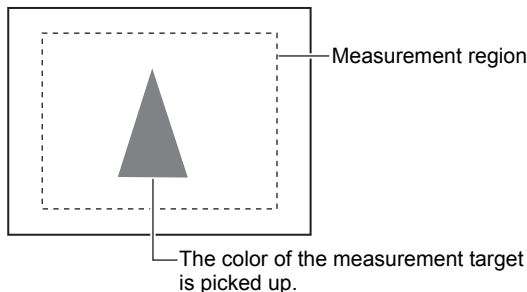

### Measurement

Only the picked up color is judged to be the measurement target.

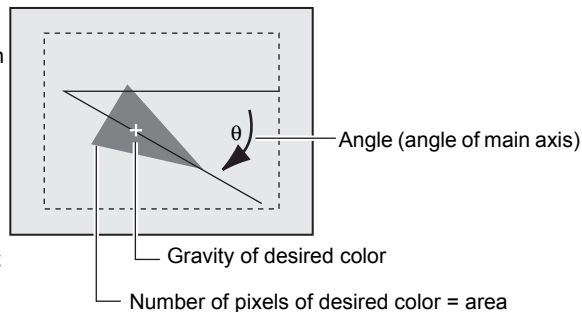

### Note

When a color camera is connected, up to four colors can be specified as the color to be measured.

When a monochrome camera is connected to the Controller, black-and-white images are binarized. White pixels are targeted in measurement.

## Image adjustment

This function picks up the color to be measured.

### ► MENU mode - [Setup] - [Item] - [Img Adj]

| Item                | Description                                                                                                                                                                                                        |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Color Pickup/Binary |  For details, see "Image Adjustment". p.84<br>(Filtering and BGS level can be used only when a monochrome camera is connected.) |
| Filtering           |                                                                                                                                                                                                                    |
| BGS level           |                                                                                                                                                                                                                    |

## Region settings

This function sets the measurement region.


### ► MENU mode - [Setup] - [Item] - [Region]

| Item                   | Description                                                                                                                                                                                                                                                                                             |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement region     | <p>This function sets the region to be measured.</p> <p> Setting the Region p.178</p>                                                                                                                                  |
| Reference registration | <p>When the measurement region is set, measurement is executed on the display image, and the result of execution is registered as the reference value. To re-register only reference values, you can use this function to re-register only reference values based on the image currently on screen.</p> |

## Threshold

This function sets the judgment conditions.



### ► MENU mode - [Setup] - [Item] - [Limits]
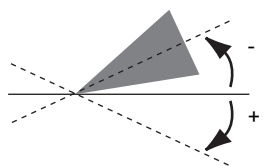
| Setup Item | Description                                                                                                                                                                                                                                                      |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Area       | <p>Sets the range of the area to be judged as OK.</p> <p>Range: 0 to 9999999.999</p> <p>(When calibration is OFF, the range becomes 0 to 307200.)</p>                                                                                                            |
| Gravity XY | <p>Sets the range of movement in the X- and Y- axes of the measurement target to be judged as OK.</p> <p>Range: -9999.999 to 9999.999</p> <p>(When calibration is OFF, the range of movement for positions X and Y are 0 to 608 and 0 to 464, respectively.)</p> |
| Axis angle | <p>Sets the rotating range of the measurement target to be judged as OK.</p> <p>Range: -90.0 to 90.0</p>                                                                     |

## Detailed settings (if necessary)

When measurement is not stable, adjust the detailed conditions.

### ► MENU mode - [Setup] - [Item] - [Detail]
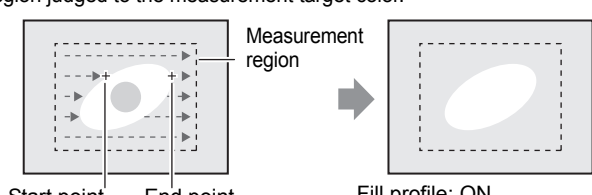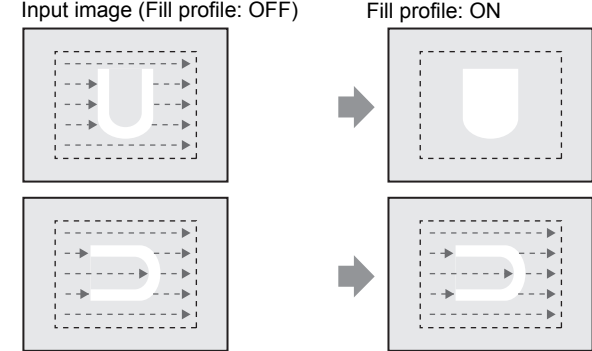
| Setup Item         | Setting value          | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |    |             |                     |                                                                      |  |    |                                                                                                  |                  |                        |                                                                                 |                 |                                                                                                                                                                                  |
|--------------------|------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|-------------|---------------------|----------------------------------------------------------------------|--|----|--------------------------------------------------------------------------------------------------|------------------|------------------------|---------------------------------------------------------------------------------|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measure axis angle | OFF (default value)    | Sets whether or not to measure the axis angle. When [ON] is selected, the processing time increases proportionately to the time it takes to measure the axis angle.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |    |             |                     |                                                                      |  |    |                                                                                                  |                  |                        |                                                                                 |                 |                                                                                                                                                                                  |
|                    | ON                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |    |             |                     |                                                                      |  |    |                                                                                                  |                  |                        |                                                                                 |                 |                                                                                                                                                                                  |
| Fill profile       | OFF (default value)    | To measure the outer periphery of the measurement target, set this item to [ON]. When this item is set to [ON], measurement is performed with all of the area between the start point (colors outside of measurement target → measurement target color) and the end point (measurement target color → colors outside of measurement target) inside the measurement region judged to the measurement target color. <div></div> <p>Start point      End point      Measurement region      Fill profile: ON</p> <p><b>When the measurement target color overlaps the measurement region</b></p> <p>Input image (Fill profile: OFF)      Fill profile: ON</p>  <p>Pixels that are measurement target color are not recognized as the start point as pixels that are colors outside of measurement target are next scanned.</p> <p><b>When measuring the measurement target with unevenness</b></p> <p>The measurement result changes according to the direction in which the measurement target is fed.</p> <p>Input image (Fill profile: OFF)      Fill profile: ON</p>  <tr><td>ON</td></tr> <tr><td>Calibration</td><td>OFF (default value)</td><td>Measurement results are output using the camera's coordinate values.</td></tr> <tr><td></td><td>ON</td><td>Measurement results are output using the coordinate value converted by the calibration function.</td></tr> <tr><td rowspan="2">Coordinates mode</td><td>Normal (default value)</td><td>The position information of the input image coordinate system itself is output.</td></tr> <tr><td>Pos. correction</td><td>When position shift correction is set, the position information is output using the coordinate system corrected to the original state when the coordinate system was registered.</td></tr> | ON | Calibration | OFF (default value) | Measurement results are output using the camera's coordinate values. |  | ON | Measurement results are output using the coordinate value converted by the calibration function. | Coordinates mode | Normal (default value) | The position information of the input image coordinate system itself is output. | Pos. correction | When position shift correction is set, the position information is output using the coordinate system corrected to the original state when the coordinate system was registered. |
|                    | ON                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |    |             |                     |                                                                      |  |    |                                                                                                  |                  |                        |                                                                                 |                 |                                                                                                                                                                                  |
| Calibration        | OFF (default value)    | Measurement results are output using the camera's coordinate values.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |    |             |                     |                                                                      |  |    |                                                                                                  |                  |                        |                                                                                 |                 |                                                                                                                                                                                  |
|                    | ON                     | Measurement results are output using the coordinate value converted by the calibration function.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |    |             |                     |                                                                      |  |    |                                                                                                  |                  |                        |                                                                                 |                 |                                                                                                                                                                                  |
| Coordinates mode   | Normal (default value) | The position information of the input image coordinate system itself is output.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |    |             |                     |                                                                      |  |    |                                                                                                  |                  |                        |                                                                                 |                 |                                                                                                                                                                                  |
|                    | Pos. correction        | When position shift correction is set, the position information is output using the coordinate system corrected to the original state when the coordinate system was registered.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |    |             |                     |                                                                      |  |    |                                                                                                  |                  |                        |                                                                                 |                 |                                                                                                                                                                                  |

 Coordinates mode p.63

## Possible output results

The following values can be output when expressions are set.

| Item                  | Description                                                                                                    | Message                        |
|-----------------------|----------------------------------------------------------------------------------------------------------------|--------------------------------|
| Judgment result       | The judgment result is output. (0:OK, -1:NG, -2: not measured)                                                 | Judge (JG)                     |
| Area                  | The area of the measurement target color is output.<br>(0 to 9999999.999)                                      | Area (AR)                      |
| Gravity position      | The X, Y coordinates of the gravity of the measurement target color are output. (-9999.999 to 9999.999)        | Gravity X, Y<br>(X, Y)         |
| Axis angle            | The angle of the measurement target color is output.<br>(-90.0 to 90.0)                                        | Axis angle (TH)                |
| Reference area        | The area when the measurement region is set is output.<br>(0 to 9999999.999)                                   | Ref. area (SA)                 |
| Reference position    | The X, Y coordinates of the gravity when the measurement region is set are output. (-9999.999 to 9999.999)     | Reference X, Y<br>(SX, SY)     |
| Reference axis angle  | The angle when the measurement region is set is output.<br>(-90.0 to 90.0)                                     | Ref. axis angle<br>(ST)        |
| Area difference       | The area difference obtained by "measurement value - reference value" is output. (-9999999.999 to 9999999.999) | Area dif. (DA)                 |
| Position difference   | The position difference obtained by "gravity position - reference position" is output. (-9999.999 to 9999.999) | Position dif. X, Y<br>(DX, DY) |
| Axis angle difference | The axis angle difference obtained by "measurement value - reference value" is output. (-180.0 to 180.0)       | Axis angle dif.<br>(DT)        |



Reference position and Position difference p.50


# Edge Inspection

## Position

This item uses the changes in brightness in a region to detect edge(s). Use this item to calculate the coordinates of the edge(s) of a measurement target.


### Setup

To acquire the X coordinate of the edge

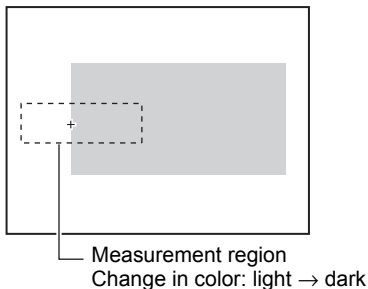

### Measurement

The edge is searched in the region according to the preset direction and change in color.

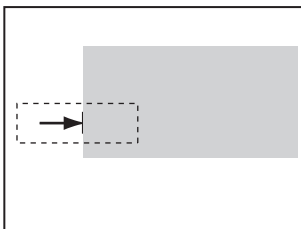

## Region settings

This function sets the measurement region.


### ► MENU mode - [Setup] - [Item] - [Region]

| Item                   | Description                                                                                                                                                                                                                                                                                      |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement region     | This function sets the region to be measured.<br> Setting the Region p.178                                                                                                                                    |
| Reference registration | When the measurement region is set, measurement is executed on the display image, and the result of execution is registered as the reference value. To re-register only reference values, you can use this function to re-register only reference values based on the image currently on screen. |

### Note

#### Edge search direction

The edge is searched from the start point towards the end point of the region.

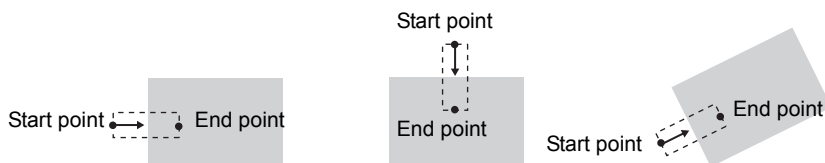

## Threshold

This function sets the judgment conditions.

### ► MENU mode - [Setup] - [Item] - [Limits]

| Setup Item  | Description                                                                                                                                                                                                                                       |
|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Position XY | Sets the range of movement in the X- and Y- axes of the measurement target to be judged as OK.<br>Range: -9999.999 to 9999.999<br>(When calibration is OFF, the range of movement for positions X and Y are 0 to 640 and 0 to 480, respectively.) |

## Image adjustment (if necessary)

The following items can be changed and set to the image of the measurement target.

### ► MENU mode - [Setup] - [Item] - [Img Adj]

| Item                | Description                                                                                                                                                                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Color filter        |  For details, see "Image Adjustment". p.84<br>Selects which of Color filter or Color Pickup is to be used at [Detail] - [Color mode].<br>The default is use of Color filter. |
| Color Pickup/Binary |                                                                                                                                                                                                                                                               |
| Filtering           |                                                                                                                                                                                                                                                               |
| BGS level           |                                                                                                                                                                                                                                                               |

## Detailed settings (if necessary)

When measurement is not stable, adjust the detailed conditions. By the automatic setting, the edge search color is automatically set.

### ► MENU mode - [Setup] - [Item] - [Detail]


| Setup Item       | Setting value                | Description                                                                                                                                                                                                                                                                     |
|------------------|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement mode | Average (default value)      | Sets the method for calculating the position of the edge(s).                                                                                                                                                                                                                    |
|                  | Peak                         |                                                                                                                                                                                                                                                                                 |
|                  | Bottom                       |                                                                                                                                                                                                                                                                                 |
| Color mode       | Filter mode (default value)  | Color filter processing improves the contrast of images so that edges are detected.                                                                                                                                                                                             |
|                  | Pickup mode                  | Specify the color to measure to find the edge of that color.                                                                                                                                                                                                                    |
| Split size       | 1 to 99 (default value: 1)   | Sets the calculation width when the peak/bottom positions are to be calculated. The peak or bottom is calculated after the measurement region is split up by the calculation width to find the edge(s).                                                                         |
| Color            | Light → Dark (default value) | Selects the density change direction of the edge(s) to be detected.                                                                                                                                                                                                             |
|                  | Dark → Light                 |                                                                                                                                                                                                                                                                                 |
| Edge level       | 0 to 100 (default value: 50) | Sets the level of density change to be judged as an edge.                                                                                                                                                                                                                       |
| Noise level      | 0 to 255 (default value: 20) | Sets the level to be judged as noise.<br>When the difference between the minimum and maximum density values in the density region is at the noise level or lower, it is judged that there are no edges. Set a higher value when noise causes an edge to be detected by mistake. |
| Noise width      | 0 to 255 (default value: 0)  | Sets the width to be judged as noise.<br>Set a higher value when noise causes an edge to be detected by mistake.                                                                                                                                                                |
| Calibration      | OFF (default value)          | Measurement results are output using the camera's coordinate values.                                                                                                                                                                                                            |
|                  | ON                           | Measurement results are output using the coordinate value converted by the calibration function.                                                                                                                                                                                |
| Coordinates mode | Normal (default value)       | The position information of the input image coordinate system itself is output.                                                                                                                                                                                                 |
|                  | Pos. correction              | When position shift correction is set, the position information is output using the coordinate system corrected to the original state when the coordinate system was registered.                                                                                                |

## Note

### Measurement mode


Sets the method for calculating the position of the edge(s).

The side far from the start point of the measurement region is the peak, and the side near the start point is the bottom.

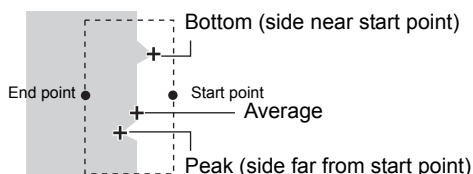

### Split size


The inside of the measurement region is divided into smaller areas to search for the edge(s), and the peak/bottom/average are calculated. This calculated width is then set.

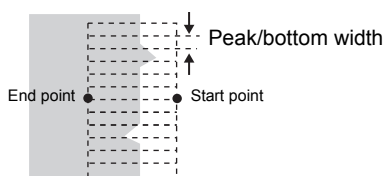

### Edge level

Edges are detected as follows:

1. The density distribution of the entire measurement region is calculated.
2. The maximum value is taken to 100% from the minimum density value.
3. Places where the density of the edge level changes are detected as edges.

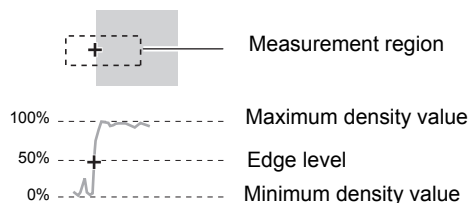


### Noise level

The minimum and maximum density values in the edge detection region are calculated, and it is judged that there are no edges when the difference between these values is at the noise level or lower. Normally, this setting may be left at its default value of 20. However, set a higher value when noise causes an edge to be detected by mistake.

(in region)


Maximum density value - minimum density value < noise level → Judged as "no edge" → Measurement result NG

Maximum density value - minimum density value ≥ Noise level → Judged as "edge" → Taken to be measurement target

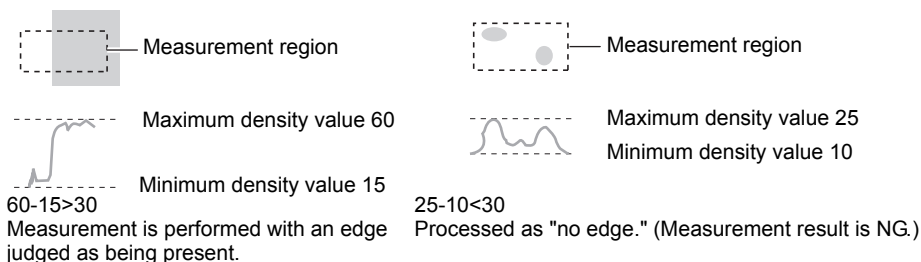

### Noise width

When the density distribution reaches or falls below the edge level again within the range of the noise width from the initial edge detection position, the detected point is regarded as noise. Normally, this setting may be left at its default value of 0. However, set a higher value when noise causes an edge to be detected by mistake.

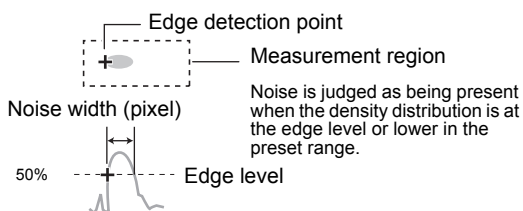




**Note**

### Coordinates mode

Sets correction of the output coordinate system at output of the position information to ON/OFF.

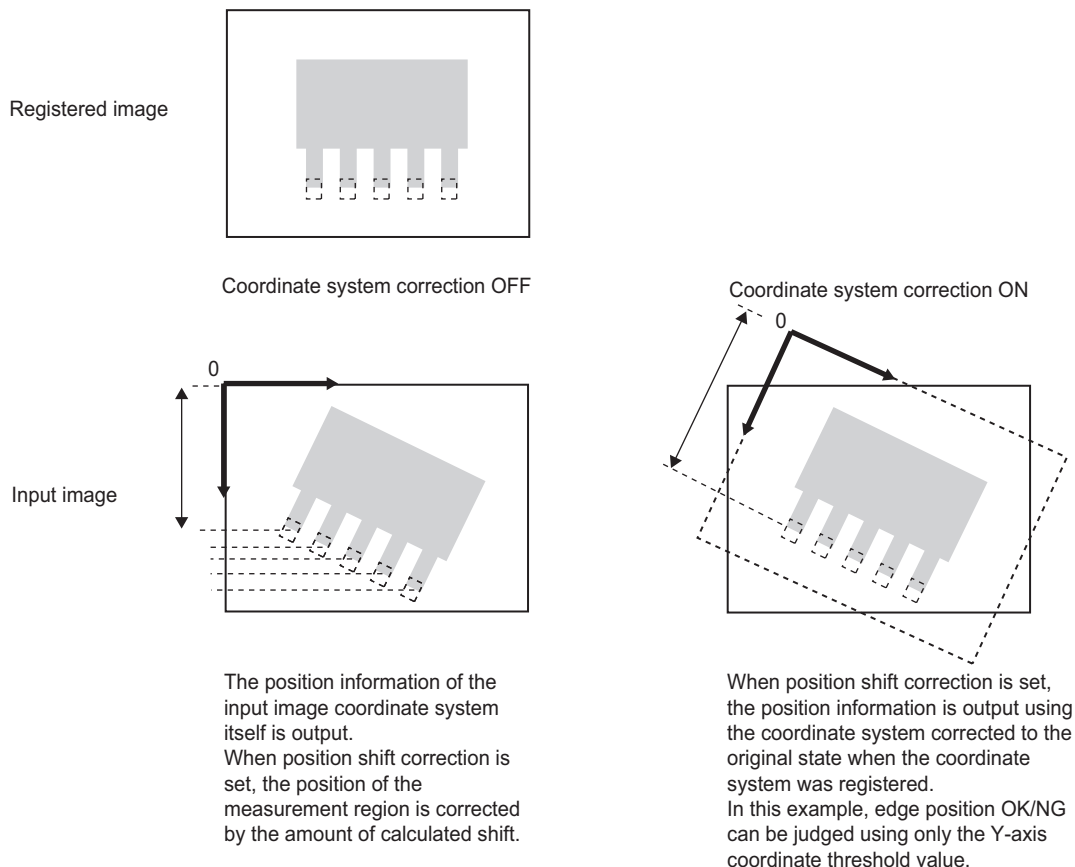

### Possible output results

The following values can be output when expressions are set.

| Item                | Description                                                                                                      | Message                     |
|---------------------|------------------------------------------------------------------------------------------------------------------|-----------------------------|
| Judgment result     | The judgment result is output. (0:OK, -1:NG, -2: not measured)                                                   | Judge (JG)                  |
| Edge position       | The X, Y coordinates of the edge position are output. (-9999.999 to 9999.999)                                    | Position X, Y (X, Y)        |
| Reference position  | The X, Y coordinates of the edge position when the measurement region is set are output. (-9999.999 to 9999.999) | Reference X, Y (SX, SY)     |
| Position difference | The difference obtained by "measurement position - reference position" is output. (-9999.999 to 9999.999)        | Position dif. X, Y (DX, DY) |




For details on reference position, position difference p.50

## Width

This item uses the changes in brightness in a region to detect edge(s). Two edges are found in a single measurement region, and the distance between these edges is output as a dimension.

### Setup

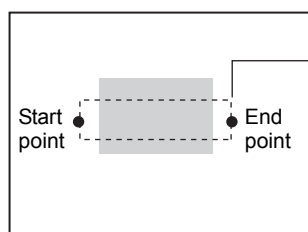


Measurement region

### Measurement

Two edges are searched in the region.

Edge 1 is searched from the start point towards the end point. Edge 2 is searched from the end point towards the start point.

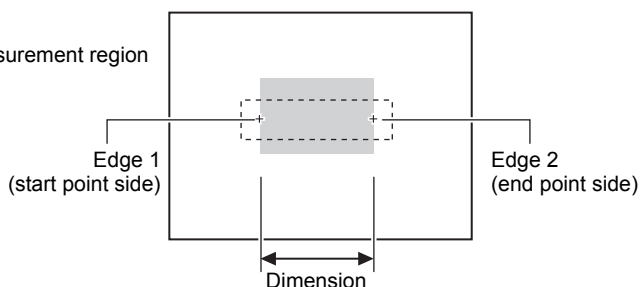

## Region settings

This function sets the measurement region.

### ► MENU mode - [Setup] - [Item] - [Region]

| Item                   | Description                                                                                                                                                                                                                                                                                      |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement region     | This function sets the region to be measured.<br> Setting the Region p.178                                                                                                                                    |
| Reference registration | When the measurement region is set, measurement is executed on the display image, and the result of execution is registered as the reference value. To re-register only reference values, you can use this function to re-register only reference values based on the image currently on screen. |

## Threshold

This function sets the judgment conditions.

### ► MENU mode - [Setup] - [Item] - [Limits]

| Setup Item                         | Description                                                                                                                                                                                                             |
|------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Width                              | Sets the range of the edge width to be judged as OK.<br>Range: 0 to 9999.999<br>(When calibration is OFF, the range becomes 0 to 800.)                                                                                  |
| Position X1, Y1<br>Position X2, Y2 | Sets the range of movement in the X- and Y- axes to be judged as OK.<br>Range: -9999.999 to 9999.999<br>(When calibration is OFF, the range of movement for positions X and Y are 0 to 640 and 0 to 480, respectively.) |

## Image adjustment (if necessary)

The following items can be changed and set to the image of the measurement target.

### ► MENU mode - [Setup] - [Item] - [Img Adj]

| Item                | Description                                                                                                                                                                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Color filter        |  For details, see "Image Adjustment". p.84<br>Selects which of Color filter or Color Pickup is to be used at [Detail] - [Color mode].<br>The default is use of Color filter. |
| Color Pickup/Binary |                                                                                                                                                                                                                                                               |
| Filtering           |                                                                                                                                                                                                                                                               |
| BGS level           |                                                                                                                                                                                                                                                               |

## Detailed settings (if necessary)

When measurement is not stable, adjust the detailed conditions. By the automatic setting, the edge search color is automatically set.

### ► MENU mode - [Setup] - [Item] - [Detail]

| Setup Item       | Setting value                | Description                                                                                                                                                                                                                                                                     |
|------------------|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement mode | Average (default value)      | Sets the method for calculating the edge width.                                                                                                                                                                                                                                 |
|                  | Maximum                      |                                                                                                                                                                                                                                                                                 |
|                  | Minimum                      |                                                                                                                                                                                                                                                                                 |
| Color mode       | Filter mode (default value)  | Color filter processing improves the contrast of images so that edges are detected.                                                                                                                                                                                             |
|                  | Pickup mode                  | Specify the color to measure to find the edge of that color.                                                                                                                                                                                                                    |
| Split size       | 1 to 99 (default value: 1)   | Sets the calculation width when the Maximum/Minimum widths are to be calculated. The Maximum or Minimum is calculated after the measurement region is split up by the calculation width to find the edge(s).                                                                    |
| Color 1/2        | Light → Dark (default value) | Selects the density change direction of the edge(s) to be detected.                                                                                                                                                                                                             |
|                  | Dark → Light                 |                                                                                                                                                                                                                                                                                 |
| Edge level 1/2   | 0 to 100 (default value: 50) | Sets the level of density change to be judged as an edge.                                                                                                                                                                                                                       |
| Noise level 1/2  | 0 to 255 (default value: 20) | Sets the level to be judged as noise.<br>When the difference between the minimum and maximum density values in the density region is at the noise level or lower, it is judged that there are no edges. Set a higher value when noise causes an edge to be detected by mistake. |
| Noise width 1/2  | 0 to 255 (default value: 0)  | Sets the width to be judged as noise.<br>Set a higher value when noise causes an edge to be detected by mistake.                                                                                                                                                                |
| Calibration      | OFF (default value)          | Measurement results are output using the camera's coordinate values.                                                                                                                                                                                                            |
|                  | ON                           | Measurement results are output using the coordinate value converted by the calibration function.                                                                                                                                                                                |


| Setup Item       | Setting value          | Description                                                                                                                                                                      |
|------------------|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Coordinates mode | Normal (default value) | The position information of the input image coordinate system itself is output.                                                                                                  |
|                  | Pos. correction        | When position shift correction is set, the position information is output using the coordinate system corrected to the original state when the coordinate system was registered. |

- Split size, Edge level, Noise level, Noise width p.62
- Coordinates mode p.63

#### Note

#### Measurement mode

When Maximum and Minimum are selected, the measurement region is split up into small regions by Split size to calculate the edge width. The maximum value or the minimum value is output. When Average is selected, the average of the entire measurement region is calculated.

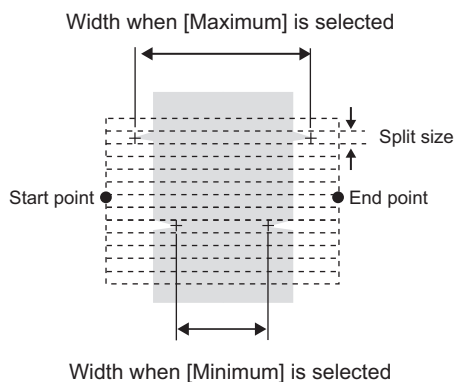

## Possible output results

The following values can be output when expressions are set.

| Item                        | Description                                                                                                                                                                                                                   | Message                                                             |
|-----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------|
| Judgment result             | The judgment result is output. (0:OK, -1:NG, -2: not measured)                                                                                                                                                                | Judge (JG)                                                          |
| Edge width                  | The measured edge width is output. (0 to 9999.999)                                                                                                                                                                            | Width (WD)                                                          |
| Edge position 1/2           | <p>The X, Y coordinates of the edge position are output. (-9999.999 to 9999.999)</p> <p><b>Important</b></p> <p>The start point side of the region becomes Position X1/Y1, and the end point side becomes Position X2/Y2.</p> | <p>Position</p> <p>X1, Y1, X2, Y2<br/>(X1, Y1, X2, Y2)</p>          |
| Reference edge width        | The edge width when the measurement region is set is output. (0 to 9999.999)                                                                                                                                                  | Reference width (SW)                                                |
| Reference edge position 1/2 | The X, Y coordinates of the edge position when the measurement region is set are output. (-9999.999 to 9999.999)                                                                                                              | <p>Reference</p> <p>X1, Y1, X2, Y2<br/>(SX1, SY1, SX2, SY2)</p>     |
| Width difference            | The width difference obtained by "measurement value - reference value" is output. (-9999.999 to 9999.999)                                                                                                                     | Width dif. (DW)                                                     |
| Position difference 1/2     | The difference obtained by "measurement position - reference position" is output. (-9999.999 to 9999.999)                                                                                                                     | <p>Position dif.</p> <p>X1, Y1, X2, Y2<br/>(DX1, DY1, DX2, DY2)</p> |




Position Difference p.50


## Count

This item uses the changes in brightness in a region to detect edge(s). This item finds the edges of a specified color (dark/light) in a single measurement region, and outputs the number, width and pitch of the edges.

### Setup

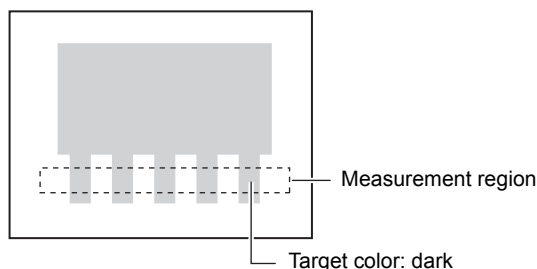

### Measurement

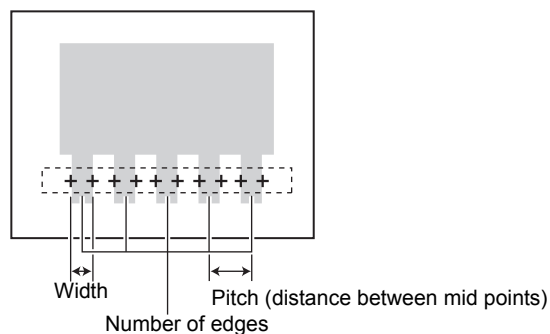

## Region settings

This function sets the measurement region.

### ► MENU mode - [Setup] - [Item] - [Region]

| Item                   | Description                                                                                                                                                                                                                                                                                             |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement region     | <p>This function sets the region to be measured.</p> <p> Setting the Region p.178</p>                                                                                                                                |
| Reference registration | <p>When the measurement region is set, measurement is executed on the display image, and the result of execution is registered as the reference value. To re-register only reference values, you can use this function to re-register only reference values based on the image currently on screen.</p> |

## Threshold

This function sets the judgment conditions.

### ► MENU mode - [Setup] - [Item] - [Limits]

| Setup Item      | Description                                                                                                                            |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------|
| Number of edges | Sets the range of the number of edges to be judged as OK.<br>Range: 0 to 255                                                           |
| Average pitch   | Sets the range of the edge pitch to be judged as OK.<br>Range: 0 to 9999.999<br>(When calibration is OFF, the range becomes 0 to 640.) |
| Average width   | Sets the range of the edge width to be judged as OK.<br>Range: 0 to 9999.999<br>(When calibration is OFF, the range becomes 0 to 640.) |

## Image adjustment (if necessary)

The following items can be changed and set to the image of the measurement target.

### ► MENU mode - [Setup] - [Item] - [Img Adj]

| Item                | Description                                                                                                                                                                                                                                                    |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Color filter        |  For details, see "Image Adjustment". p.84<br>Selects which of Color filter or Color Pickup is to be used at [Detail] - [Color mode].<br>The default is use of Color filter. |
| Color Pickup/Binary |                                                                                                                                                                                                                                                                |
| Filtering           |                                                                                                                                                                                                                                                                |
| BGS level           |                                                                                                                                                                                                                                                                |

## Detailed settings (if necessary)

When measurement is not stable, adjust the detailed conditions.

### ► MENU mode - [Setup] - [Item] - [Detail]

| Setup Item       | Setting value               | Description                                                                                                                                                                     |
|------------------|-----------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement mode | Normal (default value)      | Selects this item in the case of measurement targets whose pin width and pitch are at least two pixels.                                                                         |
|                  | Fine                        | Selects this item to stably measure widths narrower than normal and the number of gaps.                                                                                         |
| Color mode       | Filter mode (default value) | Color filter processing improves the contrast of images so that edges are detected.                                                                                             |
|                  | Pickup mode                 | Specify the color to measure to find the edge of that color.                                                                                                                    |
| Target color     | Light (default value)       | Selects the target color to be counted as the number of edges. When a color camera is in use, the picked-up color is targeted for counting when this setting is set to [Light]. |
|                  | Dark                        |                                                                                                                                                                                 |

| Setup Item  | Setting value                   | Description                                                                                                                                                                                                                                                                     |
|-------------|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Edge level  | 0 to 100<br>(default value: 50) | Sets the level of density change to be judged as an edge.                                                                                                                                                                                                                       |
| Noise level | 0 to 255<br>(default value: 20) | Sets the level to be judged as noise.<br>When the difference between the minimum and maximum density values in the density region is at the noise level or lower, it is judged that there are no edges. Set a higher value when noise causes an edge to be detected by mistake. |
| Noise width | 0 to 255<br>(default value: 0)  | Sets the width to be judged as noise.<br>Set a higher value when noise causes an edge to be detected by mistake.                                                                                                                                                                |
| Calibration | OFF (default value)             | Measurement results are output using the camera's coordinate values.                                                                                                                                                                                                            |
|             | ON                              | Measurement results are output using the coordinate value converted by the calibration function.                                                                                                                                                                                |




Noise level, Noise width p.62

#### Note

#### Edge level

With the count function, the edge is detected by derivative distribution.

1. The amount of change in directions light → dark and dark → light is calculated.
2. The place where the amount of change exceeds the edge level is detected as the edge.

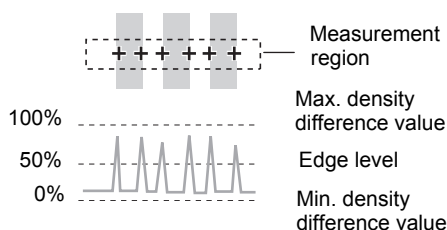

## Possible output results

The following values can be output when expressions are set.


| Item            | Description                                                    | Message             |
|-----------------|----------------------------------------------------------------|---------------------|
| Judgment result | The judgment result is output. (0:OK, -1:NG, -2: not measured) | Judge (JG)          |
| Number of edges | The number of detected edges is output. (0 to 255)             | Number of edges (N) |
| Average pitch   | The average detected pitch is output. (0 to 9999.999)          | Average pitch (P)   |
| Minimum pitch   | The minimum detected pitch is output. (0 to 9999.999)          | Min. pitch (PL)     |
| Maximum pitch   | The maximum detected pitch is output. (0 to 9999.999)          | Max. pitch (PH)     |
| Average width   | The average detected edge width is output. (0 to 9999.999)     | Average width (W)   |
| Minimum width   | The minimum detected edge width is output. (0 to 9999.999)     | Min. width (WL)     |
| Maximum width   | The maximum detected edge width is output. (0 to 9999.999)     | Max. width (WH)     |



## Angle

This item uses the changes in brightness in a region to detect edge(s). This item finds the edges of a specified color (black/white) in two measurement regions, and outputs the angle between 2 points.


### Setup

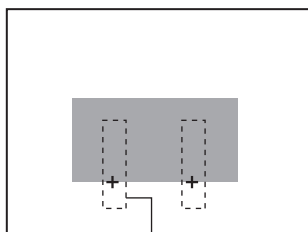

Measurement region  
Change in color: light → dark

### Measurement

The edge is searched in the region according to the preset direction and change in color. The inclination of the straight line made by joining 2 points is calculated.

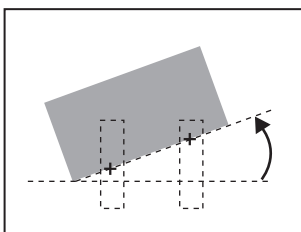

## Region settings

This function sets the measurement region.

### ► MENU mode - [Setup] - [Item] - [Region]


| Item                   | Description                                                                                                                                                                                                                                                                                             |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement region     | <p>This function sets the region to be measured. With edge angle, set 2 measurement regions since 2 edges are calculated.</p> <p> Setting the Region p.178</p>                                                       |
| Reference registration | <p>When the measurement region is set, measurement is executed on the display image, and the result of execution is registered as the reference value. To re-register only reference values, you can use this function to re-register only reference values based on the image currently on screen.</p> |

 Edge search direction p.59

## Threshold

This function sets the judgment conditions.

### ► MENU mode - [Setup] - [Item] - [Limits]
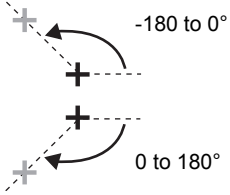
| Setup Item   | Description                                                                                                                                                                                                                                                                                                                                                                                             |
|--------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Angle        | <p>Sets the angle range of the measurement target to be judged as OK.<br/>           Range: -180.00 to 180.00<br/>           The angle calculated by edge angle is calculated as follows according to the positional relationship between the 2 edge positions.</p> <p>⊕ : Edge position 1    ⊕ : Edge position 2</p>  |
| Position 1XY | <p>Sets the range of movement in the X- and Y- axes of measurement region 1 of the measurement target to be judged as OK.<br/>           Range: -9999.999 to 9999.999<br/>           (When calibration is OFF, the range of movement for positions X and Y are 0 to 640 and 0 to 480, respectively.)</p>                                                                                                |
| Position 2XY | <p>Sets the range of movement in the X- and Y- axes of measurement region 2 of the measurement target to be judged as OK.<br/>           Range: -9999.999 to 9999.999<br/>           (When calibration is OFF, the range of movement for positions X and Y are 0 to 640 and 0 to 480, respectively.)</p>                                                                                                |

## Image adjustment (if necessary)

The following items can be changed and set to the image of the measurement target.

### ► MENU mode - [Setup] - [Item] - [Img Adj]

| Item                | Description                                                                                                                                                                                                                                                  |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Color filter        |  For details, see "Image Adjustment." p.84<br>Selects which of Color filter or Color Pickup is to be used at [Detail] - [Color mode]. The default is use of Color filter. |
| Color Pickup/Binary |                                                                                                                                                                                                                                                              |
| Filtering           |                                                                                                                                                                                                                                                              |
| BGS level           |                                                                                                                                                                                                                                                              |

## Detailed settings (if necessary)

When measurement is not stable, adjust the detailed conditions. By the automatic setting, the edge search color is automatically set.

### ► MENU mode - [Setup] - [Item] - [Detail]

| Setup Item           | Setting value                | Description                                                                                                                                                                                                                                                                     |
|----------------------|------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Color mode           | Color filter (default value) | Color filter processing improves the contrast of images so that edges are detected.                                                                                                                                                                                             |
|                      | Color pickup                 | Specify the color to be measured to find the edge of that color.                                                                                                                                                                                                                |
| Measurement mode 1/2 | Average (default value)      | Sets the edge position calculation method.                                                                                                                                                                                                                                      |
|                      | Peak                         |                                                                                                                                                                                                                                                                                 |
|                      | Bottom                       |                                                                                                                                                                                                                                                                                 |
| Split size 1/2       | 1 to 99 (default value: 1)   | Sets the calculation width when the peak/bottom positions are to be calculated. The peak or bottom is calculated after the measurement region is split up by the calculation width to find the edge(s).                                                                         |
| Color 1/2            | Light → Dark (default value) | Selects the density change direction of the edge(s) to be detected.                                                                                                                                                                                                             |
|                      | Dark → Light                 |                                                                                                                                                                                                                                                                                 |
| Edge level 1/2       | 0 to 100 (default value: 50) | Sets the level of density change to be judged as an edge.                                                                                                                                                                                                                       |
| Noise level 1/2      | 0 to 255 (default value: 20) | Sets the level to be judged as noise.<br>When the difference between the minimum and maximum density values in the density region is at the noise level or lower, it is judged that there are no edges. Set a higher value when noise causes an edge to be detected by mistake. |
| Noise width 1/2      | 0 to 255 (default value: 0)  | Sets the width to be judged as noise.<br>Set a higher value when noise causes an edge to be detected by mistake.                                                                                                                                                                |
| Calibration          | OFF (default value)          | Measurement results are output using the camera's coordinate values.                                                                                                                                                                                                            |
|                      | ON                           | Measurement results are output using the coordinate value converted by the calibration function.                                                                                                                                                                                |
| Coordinates mode     | Normal (default value)       | The position information of the input image coordinate system itself is output.                                                                                                                                                                                                 |
|                      | Pos. correction              | When position shift correction is set, the position information is output using the coordinate system corrected to the original state when the coordinate system was registered.                                                                                                |



- Measurement mode, Split size, Edge level, Noise level, Noise width p.62
- Coordinates mode p.63

## Possible output results

The following values can be output when expressions are set.

| Item                | Description                                                                                                      | Message                        |
|---------------------|------------------------------------------------------------------------------------------------------------------|--------------------------------|
| Judgment result     | The judgment result is output. (0: OK, -1: NG, -2: not measured)                                                 | Judge (JG)                     |
| Edge angle          | The measured angle is output. (-180 to 180)                                                                      | Angle (TH)                     |
| Edge position       | The X, Y coordinates of the edge position are output. (-9999.999 to 9999.999)                                    | Position X, Y<br>(X, Y)        |
| Reference angle     | The angle when the measurement region is set is output. (-180 to 180)                                            | Ref. angle (ST)                |
| Reference position  | The X, Y coordinates of the edge position when the measurement region is set are output. (-9999.999 to 9999.999) | Reference X, Y<br>(SX, SY)     |
| Angle difference    | The difference obtained by "measurement angle - reference angle " is output. (-360 to 360)                       | Angle dif. (DT)                |
| Position difference | The difference obtained by "measurement position - reference position" is output. (-9999.999 to 9999.999)        | Position dif. X, Y<br>(DX, DY) |




'For details on reference position, position difference p.50

# Bright/Color Inspection

## Bright


Use this item to measure the brightness of measurement targets. The density average and density deviation (brightness fluctuations) are output. Change in brightness can be used to inspect whether or not parts are present.

Setup

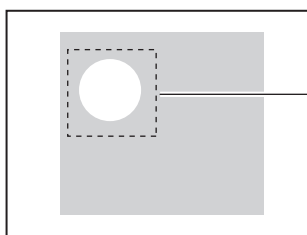

Measurement region

Measurement

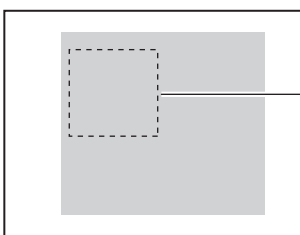

Density average,  
density deviation

## Region settings

This function sets the measurement region.

### ► MENU mode - [Setup] - [Item] - [Region]

| Setup Item             | Description                                                                                                                                                                                                                                                                                      |
|------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement region     | This function sets the region to be measured.<br> Setting the Region p.178                                                                                                                                    |
| Reference registration | When the measurement region is set, measurement is executed on the display image, and the result of execution is registered as the reference value. To re-register only reference values, you can use this function to re-register only reference values based on the image currently on screen. |

## Threshold

This function sets the judgment conditions.

### ► MENU mode - [Setup] - [Item] - [Limits]

| Setup Item        | Description                                                                      |
|-------------------|----------------------------------------------------------------------------------|
| Density average   | Sets the range of the density average to be judged as OK.<br>Range: 0 to 255.0   |
| Density deviation | Sets the range of the density deviation to be judged as OK.<br>Range: 0 to 127.0 |

## Image adjustment (if necessary)

The following items can be changed and set to the image of the measurement target.

### ► MENU mode - [Setup] - [Item] - [Img Adj]

| Item         | Description                                                                                                                 |
|--------------|-----------------------------------------------------------------------------------------------------------------------------|
| Color filter |  For details, see "Image Adjustment". p.84 |
| Filtering    |                                                                                                                             |
| BGS level    |                                                                                                                             |

## Possible output results

The following values can be output when expressions are set.

| Item                         | Description                                                                              | Message                |
|------------------------------|------------------------------------------------------------------------------------------|------------------------|
| Judgment result              | The judgment result is output. (0:OK, -1:NG, -2: not measured)                           | Judge (JG)             |
| Density average              | The average of the density inside the measurement region is output. (0 to 255.0)         | Density average (AV)   |
| Density deviation            | The brightness fluctuations in the measurement region are output. (0 to 127.0)           | Density deviation (DV) |
| Reference density average    | The density average when the measurement region is set is output. (0 to 255.0)           | Ref. average (SA)      |
| Reference density deviation  | The density deviation when the measurement region is set is output. (0 to 127.0)         | Ref. deviation (SD)    |
| Density average difference   | The difference obtained by "measurement value - reference value" is output. (0 to 255.0) | Average dif. (DA)      |
| Density deviation difference | The difference obtained by "measurement value - reference value" is output. (0 to 127.0) | Deviation dif. (DD)    |


## HUE

Use this item to measure the color of measurement targets. This item can be used to measure whether or not different-colored products are mixed in, for example. Average hue, saturation and brightness value, and respective deviations (fluctuations) can be output.

### Important


This function cannot be used when a monochrome camera is connected.

Setup

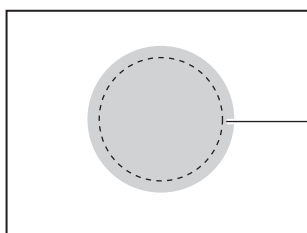

Measurement region

Measurement

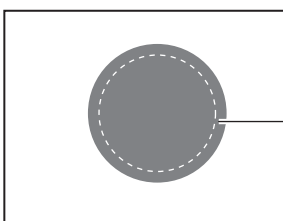

Hue, saturation,  
brightness value

## Region settings

This function sets the measurement region.

### ► MENU mode - [Setup] - [Item] - [Region]

| Setup Item             | Description                                                                                                                                                                                                                                                                                             |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement region     | <p>This function sets the region to be measured.</p> <p> Setting the Region p.178</p>                                                                                                                                |
| Reference registration | <p>When the measurement region is set, measurement is executed on the display image, and the result of execution is registered as the reference value. To re-register only reference values, you can use this function to re-register only reference values based on the image currently on screen.</p> |

## Threshold

This function sets the judgment conditions.

### Note

- The color can be distinguished more precisely as threshold values can be set to each of hue, saturation and value. Alternatively, if you set wide allowable saturation and value ranges, color can be distinguished more stably by hue without being influenced by fluctuating lighting conditions.

### ► MENU mode - [Setup] - [Item] - [Limits]

| Setup Item           | Description                                                                      |
|----------------------|----------------------------------------------------------------------------------|
| Hue average          | Sets the range of hues to be judged as OK.<br>Range: 0 to 360.0                  |
| Saturation average   | Sets the range of saturations to be judged as OK.<br>Range: 0 to 100.0           |
| Value average        | Sets the range of values to be judged as OK.<br>Range: 0 to 100.0                |
| Hue deviation        | Sets the range of hue fluctuation to be judged as OK.<br>Range: 0 to 180.0       |
| Saturation deviation | Sets the range of saturation fluctuation to be judged as OK.<br>Range: 0 to 50.0 |
| Value deviation      | Sets the range of value fluctuation to be judged as OK.<br>Range: 0 to 50.0      |

## Detailed settings (if necessary)

When measurement is not stable, adjust the detailed conditions.

### ► MENU mode - [Setup] - [Item] - [Detail]

| Setup Item | Setting value      | Description                                                                                    |
|------------|--------------------|------------------------------------------------------------------------------------------------|
| Deviation  | OFF                | Selects whether or not the deviation values of hue, saturation and value are to be calculated. |
|            | ON (default value) |                                                                                                |



## Possible output results

The following values can be output when expressions are set.

| Item                            | Description                                                                                                      | Message                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------|------------------------|
| Judgment result                 | The judgment result is output. (0:OK, -1:NG, -2: not measured)                                                   | Judge (JG)             |
| Hue                             | The hue average is output. (0 to 360.0)                                                                          | H average (H)          |
| Saturation                      | The saturation average is output. (0 to 100.0)                                                                   | S average (S)          |
| Value                           | The value average is output. (0 to 100.0)                                                                        | V average (V)          |
| Hue deviation                   | The hue fluctuation is output. (0 to 180.0)                                                                      | H deviation (HD)       |
| Saturation deviation            | The saturation fluctuation is output. (0 to 50.0)                                                                | S deviation (SD)       |
| Value deviation                 | The value fluctuation is output. (0 to 50.0)                                                                     | V deviation (VD)       |
| Reference hue                   | The hue when the measurement region is set is output. (0 to 360.0)                                               | Ref. H average (SH)    |
| Reference saturation            | The saturation when the measurement region is set is output. (0 to 100.0)                                        | Ref. S average (SS)    |
| Reference value                 | The value when the measurement region is set is output. (0 to 100.0)                                             | Ref. V average (SV)    |
| Hue difference                  | The hue difference obtained by "measurement value - reference value" is output. (-360.0 to 360.0)                | H average dif. (DH)    |
| Saturation difference           | The saturation difference obtained by "measurement value - reference value" is output. (-100.0 to 100.0)         | S average dif. (DS)    |
| Value difference                | The value difference obtained by "measurement value - reference value" is output. (-100.0 to 100.0)              | V average dif. (DV)    |
| Reference hue deviation         | The hue fluctuation when the measurement region is set is output. (0 to 180.0)                                   | Ref. H deviation (SHD) |
| Reference saturation deviation  | The saturation fluctuation when the measurement region is set is output. (0 to 50.0)                             | Ref. S deviation (SSD) |
| Reference value deviation       | The value fluctuation when the measurement region is set is output. (0 to 50.0)                                  | Ref. V deviation (SVD) |
| Hue deviation difference        | The hue deviation difference obtained by "measurement value - reference value" is output. (-180.0 to 180.0)      | H deviation dif. (DH)  |
| Saturation deviation difference | The saturation deviation difference obtained by "measurement value - reference value" is output. (-50.0 to 50.0) | S deviation dif. (DSD) |
| Value deviation difference      | The value deviation difference obtained by "measurement value - reference value" is output. (-50.0 to 50.0)      | V deviation dif. (DVD) |
| Hue maximum/minimum             | The hue maximum/minimum values are output. (0 to 360.0)                                                          | Max. H/Min. H (HH, LH) |
| Saturation maximum/minimum      | The saturation maximum/minimum values are output. (0 to 100.0)                                                   | Max. S/Min. S (HS, LS) |
| Value maximum/minimum           | The value maximum/minimum values are output. (0 to 100.0)                                                        | Max. V/Min. V (HV, LV) |




Nos. indicating hue, saturation and value p.194

# Inspection by Individual Application

## Defect

Use this item to detect dirt, scratching, chipping, burrs, and other defects on plain measurement targets. The extent of the defects at locations having the highest number of defects and their positions are output. The number of locations where the extent of defects equals or exceeds the noise level also are output.


### Setup

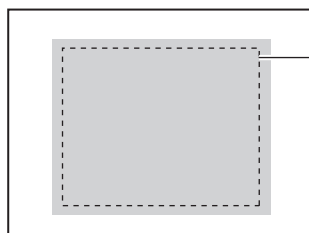

Measurement region


### Measurement

The measurement region is automatically subdivided into smaller sections to detect for changes in their respective brightness (density). The density difference with the surrounding area is collected, parts having a large difference are judged to be a defect, and the position information and extent of the defects of the locations having the highest number of defects are output.

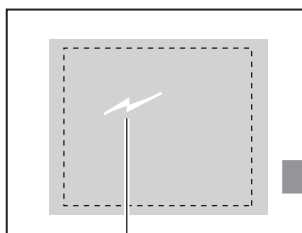


Scratch

### Subdivision

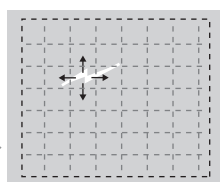


Chipping and burrs on the outer periphery also can be detected.

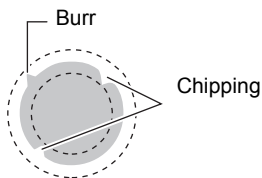

### Note

### Number of Defects


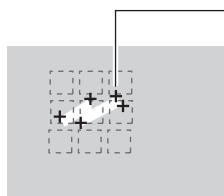


The extent of the defects is calculated in subdivided regions, and regions at or exceeding the defect threshold are output as the number of defects.

## Region settings

Set the measurement region.

### ► MENU mode - [Setup] - [Item] - [Region]

| Item                   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Measurement Region     | <p>This function sets the region to be measured.</p> <p> Setting the Region p.178</p> <p>Inspection is classified into the following four inspections for each region setup.</p> <ul style="list-style-type: none"> <li>• Line<br/>Select this item to inspect measurement targets for chipping, burrs and other defects. The shape that can be drawn is one straight line.</li> </ul> <p> Measurement Region</p> <ul style="list-style-type: none"> <li>• Circum/Arc<br/>Select this item to inspect round measurement targets for chipping, burrs and other defects. The shape that can be drawn is one circumference or arc.</li> </ul> <p> Measurement region</p> <ul style="list-style-type: none"> <li>• Area<br/>Select this item to inspect the entire measurement target for scratches and dirt. A combination of up to five shapes (rectangles, ellipses, circles, polygons).</li> </ul> <p> Measurement region</p> |
| Reference registration | <p>When the measurement region is set, measurement is executed on the display image, and the result of execution is registered as the reference value. To re-register only reference values, you can use this function to re-register only reference values based on the image currently on screen.</p>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

## Threshold

This function sets the judgment conditions.

### ► MENU mode - [Setup] - [Item] - [Limits]

| Setup Item        | Description                                                                |
|-------------------|----------------------------------------------------------------------------|
| Defect            | Sets the defect judgment value to be judged as OK.<br>Range: 0 to 255      |
| Density           | Sets the density range to be judged as OK.<br>Range: 0 to 255              |
| Number of defects | Sets the range of number of defects to be judged as OK.<br>Range: 0 to 255 |

## Image adjustment (if necessary)

The following items can be changed and set to the image of the measurement target.


### ► MENU mode - [Setup] - [Item] - [Img Adj]

| Item         | Description                                                                                                                 |
|--------------|-----------------------------------------------------------------------------------------------------------------------------|
| Color filter |  For details, see "Image Adjustment". p.84 |
| Filtering    |                                                                                                                             |
| BGS level    |                                                                                                                             |

## Detailed settings (if necessary)

When measurement is not stable, adjust the detailed conditions.

### ► MENU mode - [Setup] - [Item] - [Detail]
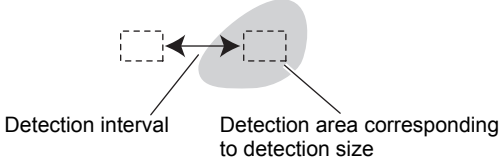
| Setup Item         | Setting value                   | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|--------------------|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Detection size     | 4 to 64 (default value: 8)      | Creates a small detection area corresponding to the detection size inside the measurement region.                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| Detection interval | 4 to 64 (default value: 8)      | <p>The average density is calculated for each detection area. The average density of the detection area is then compared with the surrounding average density, and the defect position is detected by how much the average density differs with the surrounding area. The difference with the average density that was the largest is output as the defect value.</p>  <p>Detection interval      Detection area corresponding to detection size</p> |
| Noise level        | 0 to 255<br>(default value: 60) | Places having a defect value lower than the noise level are removed as the noise component, while places having a defect value higher than the noise level are counted as defect positions.                                                                                                                                                                                                                                                                                                                                              |
| Calibration        | OFF (default value)             | Measurement results are output using the camera's coordinate values.                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|                    | ON                              | Measurement results are output using the coordinate value converted by the calibration function.                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| Coordinates mode   | Normal (default value)          | The position information of the input image coordinate system itself is output.                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|                    | Pos. correction                 | When position shift correction is set, the position information is output using the coordinate system corrected to the original state when the coordinate system was registered.                                                                                                                                                                                                                                                                                                                                                         |


 Coordinates mode p.63

**Note** Guidelines for setting detection size and detection interval

**• Detection size**

Determine the detection size roughly according to the size of the defect to be detected.

Setting a smaller detection size results in stronger detection sensitivity, while setting a larger detection size results in weaker detection sensitivity.

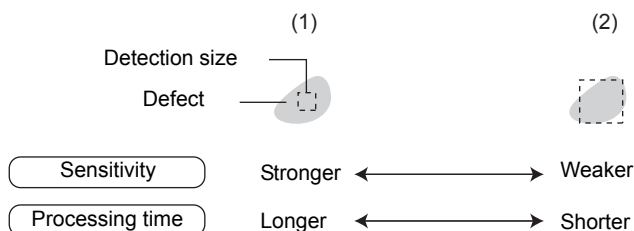

When a larger detection size is set, the difference with elements that are not defects decreases as the density of elements other than defects also is included in the calculation at (2). In other words, the more background that is included in the detection area, the weaker the detection sensitivity becomes.

**• Detection interval**

Determine the detection interval roughly according to the size of the defect and the detection size.

The larger the detection interval that is set, the shorter the processing time becomes.

When the detection area is greater than the defect, set a smaller detection interval.



When the defect is greater than the detection area, set a slightly larger detection interval.

When a small detection interval is set, elements overlapping the edge of the defect also are included in the comparison, and so the defect value decreases, which results in less stable detection of the defect.



## Possible output results

The following values can be output when expressions are set.

| Item                | Description                                                                                                          | Message                     |
|---------------------|----------------------------------------------------------------------------------------------------------------------|-----------------------------|
| Judgment result     | The judgment result is output. (0:OK, -1:NG, -2: not measured)                                                       | Judge (JG)                  |
| Defect              | Measured extent of defects is output. (0 to 255)                                                                     | Defect (F)                  |
| Maximum density     | The maximum density value inside the measurement region is output. (0 to 255)                                        | Max. density (GH)           |
| Minimum density     | The minimum density value inside the measurement region is output. (0 to 255)                                        | Min. density (GL)           |
| Number of defects   | The number of defects having an extent of defects at or exceeding the judgment condition is output. (0 to 255)       | Number of defects (N)       |
| Defect position     | The X, Y coordinates of the defect position are output. (-9999.999 to 9999.999)                                      | Position X, Y (X, Y)        |
| Reference position  | The X, Y coordinates of the defect position when the measurement region is drawn are output. (-9999.999 to 9999.999) | Reference X, Y (SX, SY)     |
| Position difference | The difference obtained by "measurement position - reference position" is output. (-9999.999 to 9999.999)            | Position dif. X, Y (DX, DY) |

For details on reference position, position difference p.50

# Image Adjustment

This section describes the functions for apply filters, etc. to process images captured from the camera so that they can be easier-to-measure. Items that can be set differ according to the measurement item and type of camera. Only available items are displayed.

## Color Filter

The contrast of images can be improved by passing images through color filters. This function can be set only when a color camera is connected to the Controller. When a color filter setting is changed, a new image processed by the color filter is displayed on the right side of the monitor. Set the color filter while monitoring the image on screen.

**Note**

**AUTO Setting p.156**

When AUTO is set for measurement items that support use of color filters, the optimum color filter is automatically set.



Color Filter p.190

### ► MENU mode - [Setup] - [Item] - [Img Adj] - [Color filter]

| Item          | Description                                                                                                                                                                                                                                                                                                                                                                                |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Select filter | The color filter can be selected as desired. (Red, Blue, Green, Yellow, Cyan, Magenta, Gray, Custom)<br>When [Custom filter] is selected, any color in the color bar can be set to the filter.                                                                                                                                                                                             |
| Auto function | Sets whether or not to perform automatic selection of color filter processing when the automatic setting is executed.<br>On: The current image is analyzed to automatically select the optimum color filter each time that the automatic setting is executed.<br>Off: The currently selected color filter is fixed, and is not cleared and held even if the automatic setting is executed. |

## Color Pickup/Binary

This function picks up the color to be measured.

### When a color camera is connected to the Controller

#### ► MENU mode - [Setup] - [Item] - [Img Adj] - [Color Pickup]

| Item         | Description                                                                                                                                                                                                                                                                                                                                                                                   |
|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Region       | When an area containing a color to be measured is specified, and [AUTO] is selected, up to four colors are automatically picked up in order of the color having the largest area.                                                                                                                                                                                                             |
| Pickup Color | If the appropriate image is not obtained by automatic color pick up, the three parameters hue, saturation and brightness can be fine-adjusted for each candidate color.<br>When [Auto function] is set to [OFF], the color pick up is not updated when the automatic setting is next executed.<br>To exclude a specific color from the measurement target, set [Enable/Disable] to [Disable]. |

 Color Pickup, p.192

### When a monochrome camera is connected to the Controller

#### ► MENU mode - [Setup] - [Item] - [Img Adj] - [Binary]

| Item         | Description                                                                                                                                                                                                                                              |
|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Binary level | Sets the level for converting contone images made up of 256 tones captured from a camera to binarized images. As white pixels are targeted in measurement, the binary level is adjusted so that the measurement target is transformed into white pixels. |
| Reverse      | Reverses the black and white of binary images.<br>After the image is inverted, the area converted to white pixels is the measurement target.                                                                                                             |

## Pre-processing

This function processes images captured from the camera so that they can be easier-to-measure. Eight filtering options are available so that you can set filtering different for each of position correction and actual measurement.

When you move the cursor, a filtered image of the image at the cursor position is displayed on the right side of the monitor. Set the filter while monitoring the image on screen.

### ► MENU mode - [Setup] - [Item] - [Img Adj] - [Filtering]

| Filtering           | Target Image                                                            | Description of Filtering                                             |
|---------------------|-------------------------------------------------------------------------|----------------------------------------------------------------------|
| OFF (default value) | -                                                                       | -                                                                    |
| Smooth              | Measurement targets containing slightly unevenness                      | Creates a cloudy effect to soften the unevenness.                    |
| Erosion             | Black measurement targets containing white noise                        | Reduces the white component to eliminate the noise.                  |
| Dilation            | White measurement targets containing black noise                        | Spreads the white component to eliminate the black noise.            |
| Median              | Measurement targets containing slightly unevenness                      | Softens the unevenness while keeping the image contour intact.       |
| Sharpen             | Measurement targets containing fuzzy areas (fluctuating lighting, etc.) | Enhances the border lines between light and dark areas in the image. |
| V Edge              | Images that are difficult to pick up due to poor contrast               | Picks up the vertical border lines (contrast) in the image.          |
| H Edge              | Images that are difficult to pick up due to poor contrast               | Picks up the horizontal border lines (contrast) in the image.        |
| All Edge            | Images that are difficult to pick up due to poor contrast               | Picks up all border lines (contrast) in the image.                   |

#### Note Filter Strength

The filter strength can be selected when applying the filtering options to images. Each selection of the [5x5 filter]/[3x3 filter] in the filtering setup screen toggles the filter strength.




## Background Suppression

This function removes unwanted background from the images to exclude them from the measurement target. Setting the BGS level converts images at the lower limit value or below to density 0 and images at the upper limit or above to density 255 so that only an image of density within the range lower limit value to upper limit value is extended and turned into a measurement target having 0 to 255 tones. When you move the cursor, an image of the image at the cursor position is displayed at the cursor position with unwanted background removed. Set the BGS level while monitoring the image on screen.

Example: Set the lower limit value to 100 and upper limit value to 220

Image before background is removed    Image with background removed

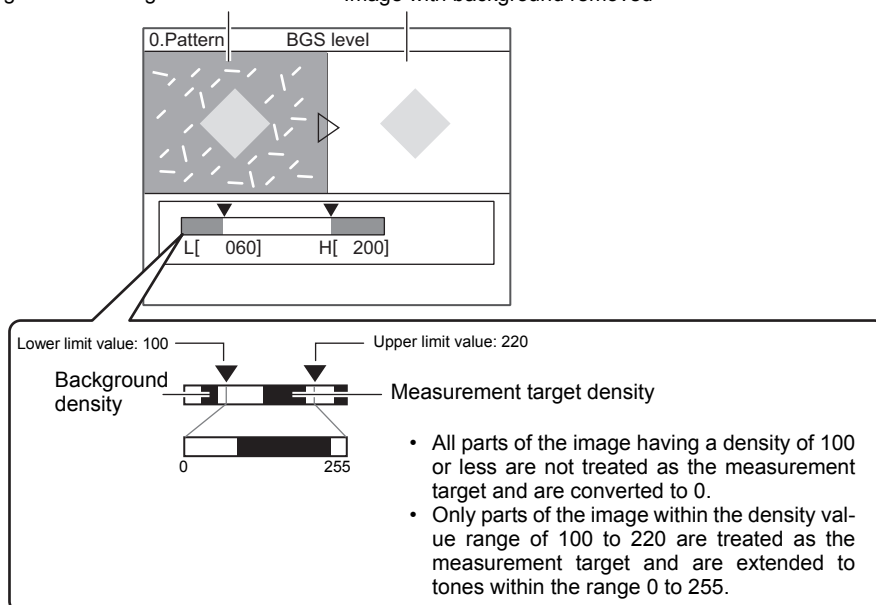

► MENU mode - [Setup] - [Item] - [Img Adj] - [BGS level]

# Cameras/Lighting

Set the camera and lighting operating conditions for capturing images and measuring measurement targets in an optimum state.

## Shutter Speed

Set the shutter speed to match the speed of movement of the measurement target and the lighting environment.

The type of camera that is connected is automatically recognized, and only shutter speeds that can be set are displayed.

 List of Available Functions for Each Camera p.155

### ► MENU mode - [Setup] - [Cameras] - [Shutter Speed]

| Setting value      | Description                                                                                                                                                                        |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1/170 to 1/20000 s | Fixes the shutter speed to the desired value. Only available candidate shutter speeds are displayed. The candidates differ with the camera that is connected and setup conditions. |

#### **Note** Guidelines for setting shutter speed

Shutter speed characteristics are as follows. Select the appropriate shutter speed to suit your inspection requirements.

| Shutter Speed | Speed of Movement of Measurement Target |
|---------------|-----------------------------------------|
| 1/170 s       | Slow                                    |
| •             | •                                       |
| 1/20000 s     | Fast                                    |

## Gain Setting

The sensor's gain (sensitivity) can be adjusted if bright images cannot be obtained just by the Shutter Speed and Light Control settings.

### ► MENU mode - [Setup] - [Cameras] - [Gain]

| Setting value       | Description                                                                                                                                                         |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| x 1.0, x 1.5, x 2.0 | Sets the gain factor.<br>x 1.0: The gain factor is not changed. (default value)<br>x 1.5: The gain factor is set to 1.5X.<br>x 2.0: The gain factor is set to 2.0X. |

#### **Note** Guidelines for setting gain

Increasing the gains results in a brighter image, however, the noise component contained in the image also becomes more conspicuous. Select the appropriate gain factor to suit your inspection requirements.

| Gain  | Image  | Image Quality              |
|-------|--------|----------------------------|
| x 1.0 | Dark   | Good (little noise)        |
| •     | ↑ ↓    | ↑ ↓                        |
| x 2.0 | Bright | Coarse (conspicuous noise) |

## Partial Function Settings

Set the image capture area.

Limiting the image capture area in this way speeds up processing.

The items that can be selected by this function change according to the camera connected to the Controller and shutter speed conditions.


 List of Available Functions for Each Camera p.155

### Important

When the partial function setting is changed, the size of the input image also changes. When the partial function setting has been changed, set the measurement conditions including the model conditions of measurement items and position shift compensation again.

### ► MENU mode - [Setup] - [Cameras] - [Partial Function]


Each selection of [Size] switches the image capture area in the following order:

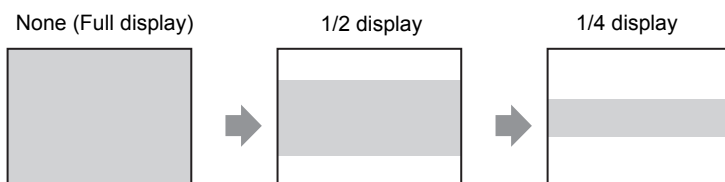

### Note

#### Adjustment of Image Capture Area

When 1/2 display or 1/4 display is displayed, the capture area can be adjusted up and down.

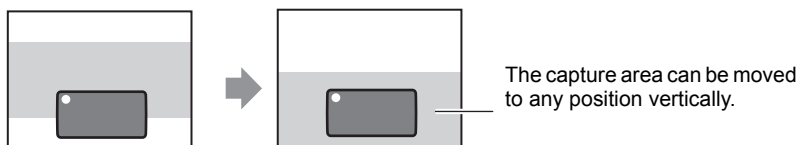

# Image Rate

Set the Image Rate mode for capturing images. Setting a faster image rate increases the processing speed, though precision becomes worse.



The items that can be selected by this function change according to the camera connected to the Controller and shutter speed conditions.

 List of Available Functions for Each Camera p.155

## Important

When the Image Rate mode is changed, the size of the input image also changes. When the partial function setting has been changed, set the measurement conditions including the model conditions of measurement items and position shift compensation again.

### ► MENU mode - [Setup] - [Cameras] - [Image Rate]
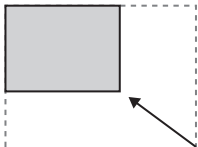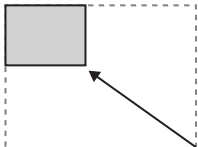
| Setting value      | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|--------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Fine               | The image is captured at normal size. (default value)                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| Normal, High speed | <p>The image is captured and then compressed.</p> <div>  <p>Normal: 2 pixels each in the horizontal and vertical directions are compressed to 1 pixel when they are captured.</p> </div> <div>  <p>High speed: 4 pixels each in the horizontal and vertical directions are compressed to 1 pixel when they are captured.</p> </div> |

# Light Control (Recipe Functions)

This recipe type function enables you to determine the lighting just by selecting the image that meets your specific requirements from the thumbnails of images automatically captured under different illumination patterns. This allows the number of man-hours taken to finalize the lighting conditions to be greatly reduced. The amount of emitted light can also be fine-adjusted after the illumination pattern is selected from the recipe.

This item is displayed only when a camera that supports this function is connected to the Controller.


 List of Available Functions for Each Camera p.155

## Note

When adjusting optional lighting connected to the ZFX-SR\_\_/\_SC\_\_ or adjusting the lighting intensity of the ZFX-SC150, only ON/OFF control is available. The recipe function and intensity cannot be adjusted.

Place the camera with lighting at the specified distance, adjust the focus and perform the following.

### ► MENU mode - [Setup] - [Cameras] - [Light Control]

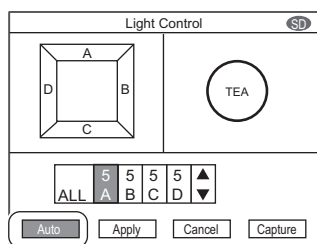


## 1 Select the [AUTO] button.


An image obtained by altering the illumination pattern is captured.

## Note

The amount of emitted light of each block (A onwards) is adjusted as the illumination pattern. The shutter speed is not changed.

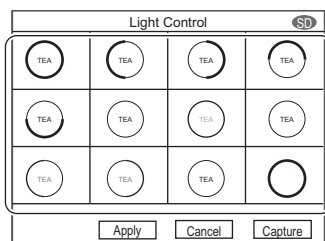

## 2 Select the image that meets your specific requirements from the thumbnails displayed on screen.

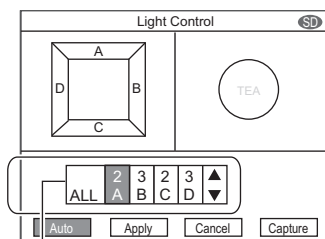


Amount of emitted light

## 3 The lighting conditions of the selected image are displayed. Fine-adjust these conditions as required.

## Note

### How blocks are displayed

Example: When the ZFX-SR\_\_/\_SC\_\_ is connected

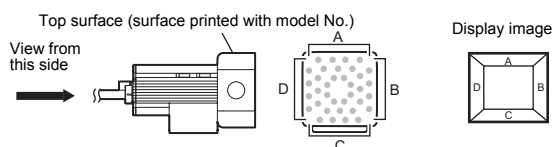

- The number of division blocks differs according to the camera.
- The larger the number for the amount of emitted light, the brighter the image becomes. 0 indicates that illumination is off.


# Calibration

This function converts measurement values from pixels to actual dimensions for output. By setting the relationship between camera coordinates and actual coordinates, measurement results expressed in pixels can be converted to actual dimensions and output.


## Note

To enable the calibration function, set [Calibration] in the Detail setup screen for each measurement item to [ON]. When [Calibration] is still [OFF] (default value), measurement values are output using camera coordinates and not the actual dimensions.

Pixel units can be converted to actual dimensions and output.

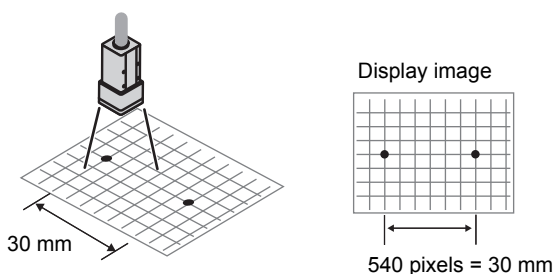


Both the origin and the coordinate system can be corrected.

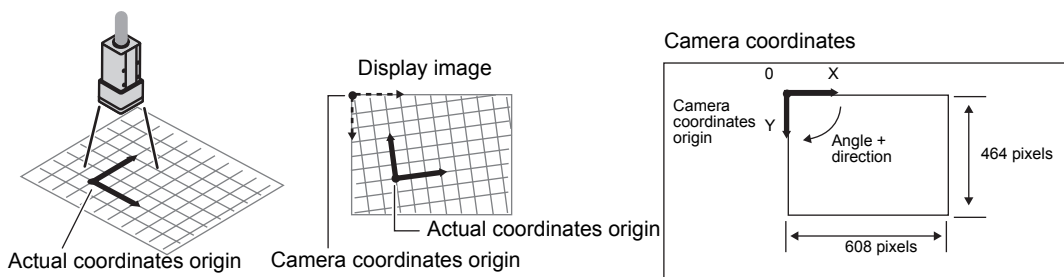

Three calibration setup options are available: "Sampling input", "Specifying point" and "Parameter Input".

## Setting Calibration by Sampling Input

With this method, calibration is set based on the measurement results. First, a pre-registered model is measured to find its position (in sub-pixel units). When the actual coordinates of the position that was found is input, the calibration data is automatically calculated.

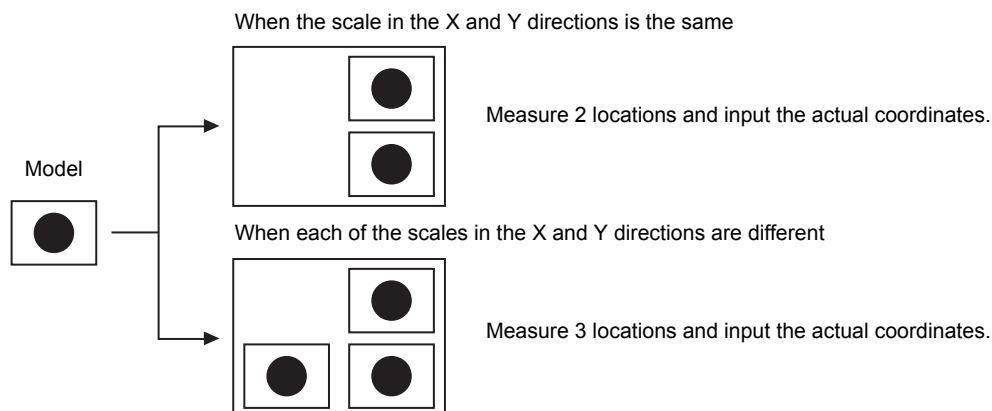

### Setup method

#### Image adjustment

The image adjustment function can be set for calibration measurement.

#### ► MENU mode - [Setup] - [Cameras] - [Calibration] - [Sampling input] - [Img Adj]

| Item         | Description                               |
|--------------|-------------------------------------------|
| Color filter | For details, see "Image Adjustment". p.84 |
| Filtering    |                                           |
| BGS level    |                                           |

#### Registering the model

Register the model to be used for calibration.

#### ► MENU mode - [Setup] - [Cameras] - [Calibration] - [Sampling input] - [Region]


| Item          | Description                                       |
|---------------|---------------------------------------------------|
| Region        | Registers the model to be used for calibration.   |
| Search region | Sets the region in which to search for the model. |

## Executing a search


Perform an actual search, and input the actual coordinates of the location where the model was found.

Before performing an actual search, register the model to be used in the search at [Region].

► **MENU mode - [Setup] - [Cameras] - [Calibration] - [Sampling input] - [Sampling]**

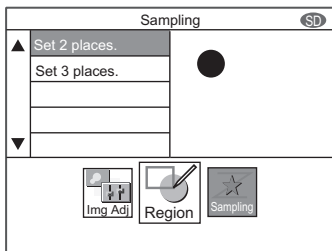


**1** Select either [Set 2 places.] or [Set 3 places.].

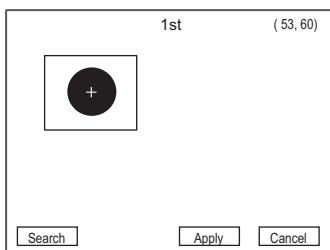


**2** Place the measurement target and select [search].

The search is executed, and a frame and crosshair cursor are displayed at the location where the model was found.

**3** Select [Apply].

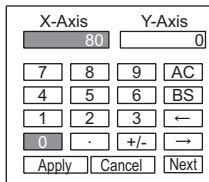

**4** Input the actual coordinates of the 1st point.

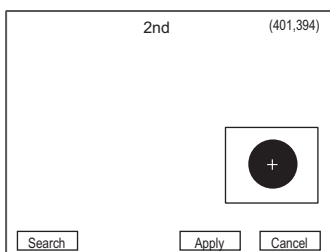

**5** Move the measurement target to the 2nd point and select [Search].

**6** Select [Apply].

**7** Input the actual coordinates of the 2nd point.

When sampling 3 points, repeat steps 4 to 6.



## Setting Calibration by Specifying Points


With this method, calibration is set by specifying desired points (in pixel units). When the actual coordinates of a specified position are input, the calibration data is automatically calculated.

When the scale in the X and Y directions is the same



Specify 2 locations and input the actual coordinates.


When each of the scales in the X and Y directions are different

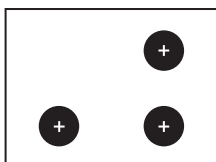


Specify 3 locations and input the actual coordinates.

### Setup method


► MENU mode - [Setup] - [Cameras] - [Calibration] - [Specifying point]

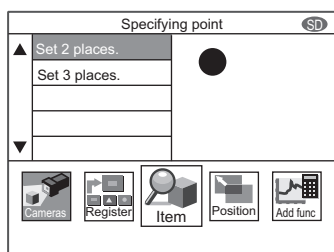


**1** Place the measurement target at the 1st point, and select either [Set 2 places.] or [Set 3 places.].

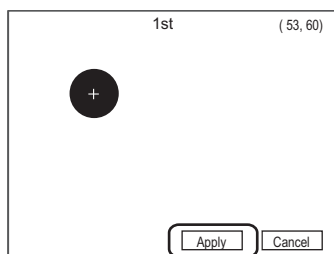

**2** Move the crosshair cursor to the 1st point, and select [Apply].

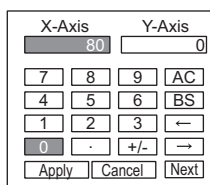

**3** Input the actual coordinates of the 1st point.

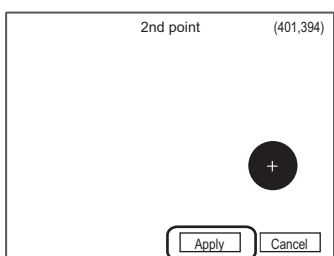

**4** Move the crosshair cursor to the 2nd point, and select [Apply].

**5** Input the actual coordinates of the 2nd point.  
When specifying 3 points, repeat steps 4 to 5.

## Setting Calibration by Parameter Input


With this method, calibration is set based by directly inputting numerical values. When the origin and coordinate system of the actual coordinates, and pixel magnification are input, the calibration data is calculated.

### ► MENU mode - [Setup] - [Cameras] - [Calibration] - [Parameter Input]

| Setting value | Description                                                                               |
|---------------|-------------------------------------------------------------------------------------------|
| Origin        | Specify where the origin of the actual coordinates is to be set.<br><br>                  |
| Magnification | Sets how much of the actual dimensions one pixel is to be equivalent to. (0.010 to 9.999) |

#### Note

The coordinate system used for expressing the actual coordinates is the left-handed coordinate system. The plus direction of the angle is as follows depending on the origin setting.

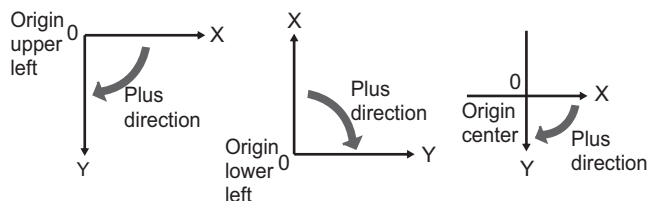

# Registering Images

This function is for making a series of settings using the same image. Two images can be registered in the Controller's internal memory, and called up so that they can be used for use in setup.

The following three types of images can be registered:

- Live images from a camera connected to the Controller
- Measurement images saved on the Controller
- Images saved on SD card


The following operation is not required when making setups using live images. Also, registered image data is cleared when the Controller is turned OFF. To retain image data, save them on SD card.

## Selecting operation

### ► MENU mode - [Setup] - [Register] - [Image 0/1]

| Setting value   | Description                                                                                                                                                                                                                                                                                                                |
|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Register image  | Selects the image to be registered.<br>Live image: Registers the image captured from camera.<br>Stored image: Registers the stored measurement image.<br>Image in SD card: Registers the image saved in SD card.                                                                                                           |
| Save to SD card | Saves the registered image on SD card.<br>The folder "IMAGE" is automatically created on SD card, and is saved using the following folder names. One image file each can be saved, and the image file is overwritten when the registered image is next saved on SD card.<br>Image 0: REGIMG00.BYR<br>Image 1: REGIMG01.BYR |
| Delete image    | Deletes the registered image.                                                                                                                                                                                                                                                                                              |

## Using registered images

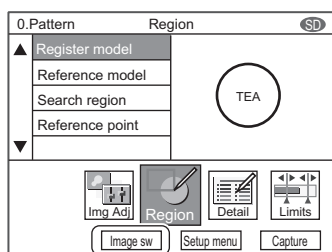

The following settings can be made to registered images:

- Image adjustment
- Region settings

Switch between live images and registered images by selecting [Image sw] that is displayed in each of the above menu hierarchies.

# Position Correction

This function is used when the position or orientation of the measurement target is not fixed. If you use this function, the amount of the shift from the reference position is calculated, and the position of the measurement region is corrected before measurement is performed.


## Important

After using an image for setting position correction, save the image to SD card.

 Registering Images p.97

When adjusting by position correction, use a saved image. If you use an image different from the one that was initially set to perform adjustments, position correction might not be set correctly.

To perform adjustments with a different image, repeat the settings for measurement items, too.

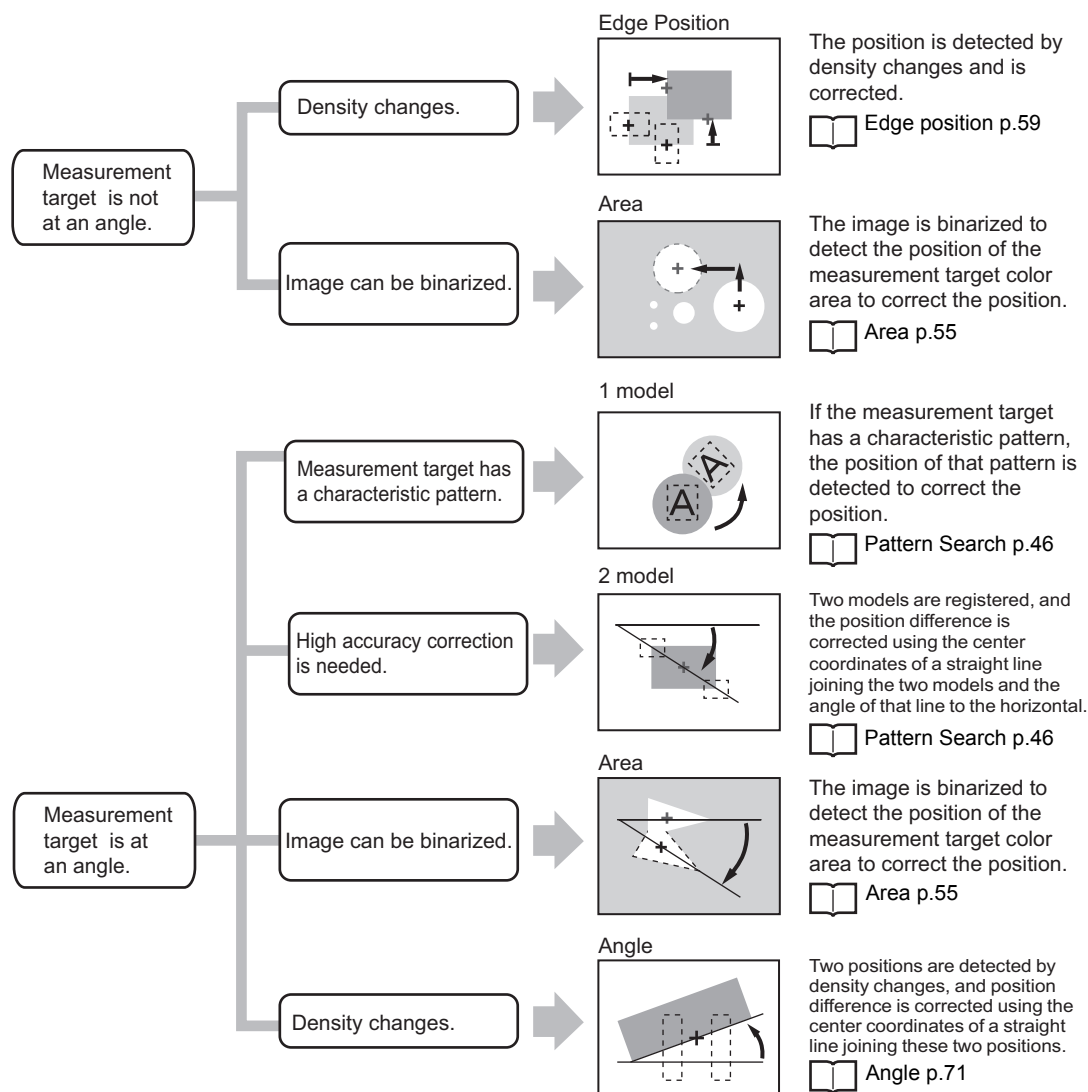

**Note**

- This section describes guidelines for selecting position correction items. The setup parameters for each item are the same as those for the measurement items. For details, see those items.
- Normally, a single position correction is sufficient. However, to ensure reliable correction of positions or to shorten the processing time, correct the position in 2 stages. [Position0] is the correction performed for the 1st position correction, and [Position1] is the correction performed for the 2nd position correction.

The direction in which shift can be corrected automatically turns [ON] according to the preset position correction method. Change the setting for directions to exclude from position correction to [OFF].

► **MENU mode - [Setup] - [Position] - [Position0/1] - [Correction setting]**

| Setting value       | Description                                                                                                                   |
|---------------------|-------------------------------------------------------------------------------------------------------------------------------|
| X correction        | Correct shift in the X direction.                                                                                             |
| Y correction        | Correct shift in the Y direction.                                                                                             |
| $\theta$ correction | Corrects shift in the rotary direction. Items not supported in correction of shift in the rotary direction are not displayed. |

# Additional Functions

## Calculation

The ZFX-C can output two types of data (measurement values and judgment values) to external devices. Output content is set as calculation expressions.

### Measurement values/judgment

The measurement values and judgments of each region can be output. As the output content can be set as an expression, calculations can be made with the measurement values of other regions. Up to 32 expressions can be set.

#### ► MENU mode - [Setup] - [Add func] - [Calculation] - [Data] or [Judge]

| Setting value | Description                                                                                                                  |
|---------------|------------------------------------------------------------------------------------------------------------------------------|
| Data          | The measurement value is output.<br>Up to 32 expressions, 0 to 31, can be set.                                               |
| Judgment      | The judgment is output.<br>Up to 32 expressions, 0 to 31, can be set.<br>Judgment conditions can be set for each expression. |

#### Note

Select the output destination at [System] - [Output].



p.120

### Variables

Calculation expressions that are not output to external devices can be set. These expressions are called "variables". You can set frequently used expressions or part of long expressions that cannot fit into the maximum number of digits of calculation expressions, and you can reference variables from other calculation expressions. Up to 32 expressions can be set.

#### ► MENU mode - [Setup] - [Add func] - [Calculation] - [Variables]

| Setting value | Description                                                                                       |
|---------------|---------------------------------------------------------------------------------------------------|
| Variables     | Up to 32 expressions, 0 to 31, can be set.<br>Judgment conditions can be set for each expression. |

## Setup Parameters

### Item No.

Item Nos. are displayed as follows.

Measurement items I000 to I031

Position correction P0  Region No. (0/1)  
Position correction repeat No. (0/1)

The parameters that can be set to expressions differ according to the measurement item.

 "Possible output results" from measurement items

### List of functions

The following describes the functions that are available for expressions.


#### General functions

| Function | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ABS      | Calculates the absolute value.<br>ABS (argument)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| MOD      | Calculates the remainder obtained by dividing the dividend by the ordinal.<br>MOD (dividend, ordinal)<br>If the numerical value to be handled is a real number when calculating the remainder, numbers past the decimal point of the real number are rounded to the nearest whole number before calculation of the remainder is executed. The result is the remainder of division of the integer.<br>Example: MOD(13,4)... Result: 1 (remainder obtained by dividing 13 by 4)<br>MOD (25.68,6.99)... Result: 1 (remainder obtained by dividing 26 by 7) |
| MAX      | The largest value of the four arguments is returned.<br>MAX (argument 1, argument 2, argument 3, argument 4)                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| MIN      | The smallest value of the four arguments is returned.<br>MIN (argument 1, argument 2, argument 3, argument 4)                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| SQRT     | Calculates the square root.<br>When the argument is a minus number, "0" is returned as the calculation result to indicate that the judgment result is an NG.<br>SQRT (argument)                                                                                                                                                                                                                                                                                                                                                                         |
| AVE      | Calculates the average.<br>AVE (Up to 4 arguments can be set.)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
| IMAX     | The index (0 to 15) having the largest value of the maximum of 16 arguments is returned.<br>IMAX (argument 1, argument 2, argument 3, and so forth to argument 16)<br>Example: IMAX (10,54,25) ..... Result: 1<br>IMAX (-20,-54, -1) ... Result: 2                                                                                                                                                                                                                                                                                                      |
| IMIN     | The index (0 to 15) having the smallest value of the maximum of 16 arguments is returned.<br>IMIN (argument 1, argument 2, argument 3, and so forth to argument 16)<br>Example: IMIN (10,54,25) ..... Result: 0<br>IMIN (-20,-54, -1) .... Result: 1                                                                                                                                                                                                                                                                                                    |

## Trigonometric functions

| Function | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SIN      | Calculates the sine. The result is returned in the range -1 to 1.<br>Specify the angle in the numerical expression in degrees.<br>SIN (numerical expression)                                                                                                                                                                                                                                                                                                                                                         |
| COS      | Calculates the cosine. The result is returned in the range -1 to 1.<br>Specify the angle in the numerical expression in degrees.<br>COS (numerical expression)                                                                                                                                                                                                                                                                                                                                                       |
| ATAN     | <p>Calculates the arc tangent of the Y-axis and X-axis components.<br/>The result is returned as a radian in the range <math>-\pi</math> to <math>\pi</math>.<br/>ATAN (Y-axis component, X-axis component)</p> <p>Example: To calculate the angle formed between a horizontal line and a straight line joining the gravities of items 0 and 1<br/>ATAN (I001.Y-I000.Y, I001.X-I000.X)</p> <p>When both of the two arguments are 0, 0 is returned as the calculation result to indicate that the judgment is NG.</p> |

## Geometrical functions
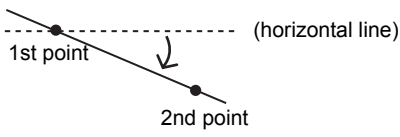
| Function | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ANGL     | <p>Calculates the angle formed by a straight line connecting two points (gravity and center of model).<br/>The angle is calculated with respect to the horizontal line. The result is returned in the range -180 to 180.<br/>ANGL (Y-axis component, X-axis component)</p> <p>Example: To calculate the angle formed by a straight line joining the gravities of items 0 and 1<br/>ANGL (I001.Y-I000.Y, I001.X-I000.X)</p>  <p>When both of the two arguments are 0, 0 is returned as the calculation result to indicate that the judgment is NG.</p> |
| DIST     | <p>Calculates the distance between two points (gravity and center of model).<br/>DIST (X-axis coordinate of 1st point, Y-axis coordinate of 1st point, X-axis coordinate of 2nd point, Y-axis coordinate of 2nd point)</p> <p>Example: To calculate the distance between the gravities of items 0 and 1<br/>DIST (I000.X, I000.Y, I001.X, I001.Y)</p> <p>The following calculation is performed internally:</p> $\sqrt{(I001.X-I000.X)^2 + (I001.Y-I000.Y)^2}$                                                                                                                                                                           |



## Logic functions

| Function | Description                                                                                                                                                                                    |
|----------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AND      | Calculates the logical product.<br>When either of the arguments is "0", "0" is returned as the calculation result, and "-1" is returned for the other argument.<br>AND (argument1, argument 2) |
| OR       | Calculates the logical sum.<br>When both of the arguments is "0", "0" is returned as the calculation result, and "-1" is returned for the other argument.<br>OR (argument1, argument 2)        |
| NOT      | Calculates the logical NOT.<br>NOT (argument1, argument 2)                                                                                                                                     |

## List of operators

The following describes the arithmetic operators that are available for expressions.

| Operator | Description of Operation |
|----------|--------------------------|
| +        | Addition                 |
| -        | Subtraction              |
| *        | Multiplication           |
| /        | Division of real numbers |

## Setting Reflection of Individual Results

You can select which item results are to be reflected in the overall judgment that is output to the OR signal of the parallel interface.

### Note

The overall judgment result can be checked in the RUN mode or ADJ mode.

### ► MENU mode - [Setup] - [Add func] - [OR setting]

| Setting value            | Description                                                                                                                       |
|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Measurement item         | Sets measurement items to be included in the overall judgment to [ON].<br>Range: ON (default value), OFF                          |
| Position correction item | Sets position correction items to be included in the overall judgment to [ON].<br>Range: ON (default value), OFF                  |
| Calc./variable           | Sets whether or not include the results of [Calculation/Variable] in the overall judgment.<br>Range: ON (default value), OFF      |
| Calc./judge              | Sets whether or not include the results of [Calculation/Judgment] in the overall judgment.<br>Range: ON (default value), OFF      |
| Calc./alarm              | Sets whether or not to include the [Calculation/Logging Monitor] alarm in the overall judgment.<br>Range: ON, OFF (default value) |

MEMO

# FUNCTIONS USED DURING OPERATION


|                                                      |            |
|------------------------------------------------------|------------|
| <b>Monitoring the Measurement Status - RUN Mode</b>  | <b>106</b> |
| Displaying Measurement Information                   | 106        |
| Switching the Image Display Method                   | 108        |
| <b>Checking/Adjusting the Measurement - ADJ Mode</b> | <b>109</b> |
| Checking Measurement Status                          | 109        |
| Switching the Image Display Method                   | 111        |
| Using a Saved Image to Perform Re-measurement        | 111        |
| Adjusting Measurement Conditions                     | 112        |

# Monitoring the Measurement Status - RUN Mode

## Displaying Measurement Information


Measurement information is displayed on the LCD screen. You can switch the screen to display different measurement information according to your specific application. To switch the screen display, either select [Display SW] or press the F3 key.

### Individual results

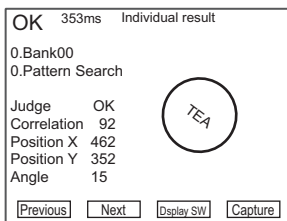


Results are displayed individually for each measurement item.

### All results/Region

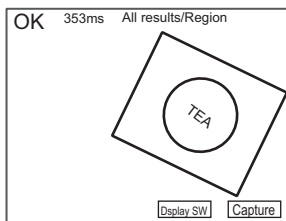

The entire measurement region is displayed.


### All results/Judge

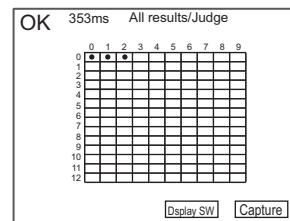

All measurement results are displayed as a list.


Horizontal axis: Smallest digit of item No.  
Vertical axis: Upper two digits of item No.  
Green circle: OK  
Red circle: NG

### Position correction

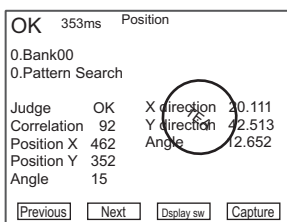


The position correction result is displayed.

### Variables list

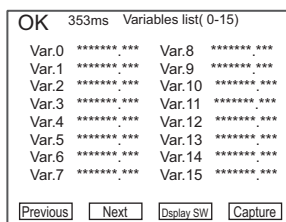


The variable results are displayed as a list.

### Data list

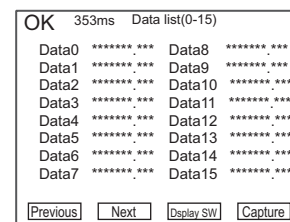

The data results are displayed as a list.

### Judgments list

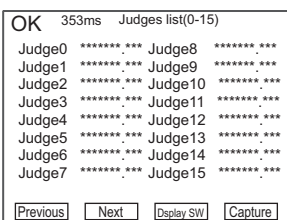


The judgment results are displayed as a list.

### Note

Input the trigger using the SET and UP keys.

## Menu Buttons

Select the menu buttons displayed on the LCD screen by the touch pen or function keys. The functions that are assigned to buttons differ according to the screen.

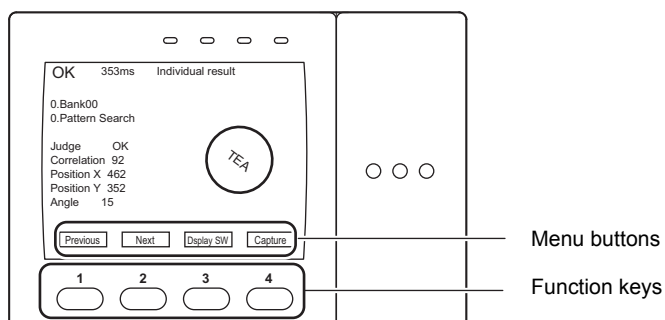

| Screen              | F1       | F2   | F3                  | F4      |
|---------------------|----------|------|---------------------|---------|
| Individual results  | Previous | Next | Display switch (sw) | Capture |
| All results/Region  | -        | -    | Display switch (sw) | Capture |
| All results/Judge   | -        | -    | Display switch (sw) | Capture |
| Position correction | Previous | Next | Display switch (sw) | Capture |
| Variables list      | Previous | Next | Display switch (sw) | Capture |
| Data list           | Previous | Next | Display switch (sw) | Capture |
| Judgment list       | Previous | Next | Display switch (sw) | Capture |


### Menu button functions

| Function Name       | Description                                                                                                                                                   |
|---------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Previous            | Individual results/Position correction: The previous measurement item results are displayed.<br>Variables/Data/Judgment list: The previous page is displayed. |
| Next                | Individual results/Position correction: The next measurement item results are displayed.<br>Variables/Data/Judgment list: The next page is displayed.         |
| Display switch (SW) | Switches the content of the measurement information that is displayed.                                                                                        |
| Capture             | Captures the display screen and saves it on SD card.                                                                                                          |


# Switching the Image Display Method

In the Individual results display or Position correction display, you can hide or reduce the size of images that are displayed simultaneously with measurement information. Each press of the ↑ UP key/↓ DOWN key switches the image display as follows:


Full display

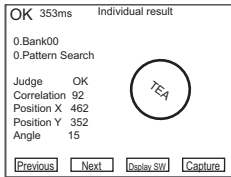

1/4 display

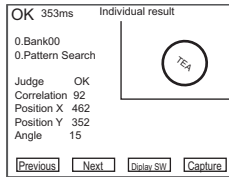

No image

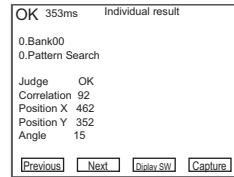

The 1/4 display is available only for the individual results display and position correction display.

In the "Variables list," "Data list" or "Judgments list" display, each press of the ↑ UP key/↓ DOWN key toggles display/hide of the camera image.

No image


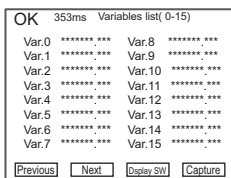


Image display

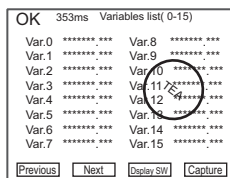


# Checking/Adjusting the Measurement - ADJ Mode

## Checking Measurement Status

Display the image currently being measured and measurement results on the LCD screen while performing continuous measurement. (In the ADJ mode, trigger input is not accepted.) Saved images can also be displayed.


To switch the screen display, either select [Display SW] or press the F3 key.

### Individual results

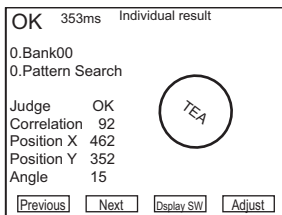


Results are displayed individually for each measurement item.

### All results/Region

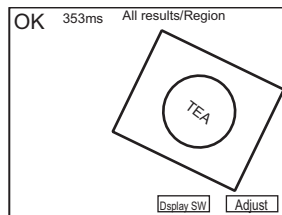

The entire measurement region is displayed.

### All results/Judge

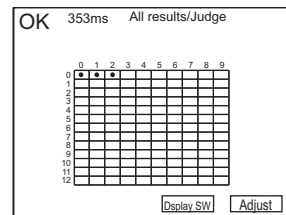


All measurement results are displayed as a list.

Horizontal axis: Smallest digit of item No.  
Vertical axis: Upper two digits of item No.  
Green circle: OK  
Red circle: NG


4 FUNCTIONS USED DURING OPERATION

### Position correction

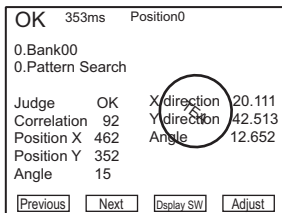


The position correction result is displayed.

### Variables list

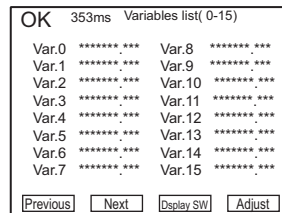


The variable results are displayed as a list.

### Data list

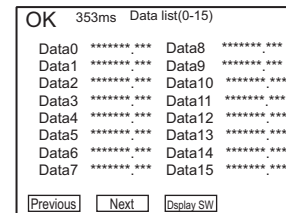


The data results are displayed as a list.

### Judgments list

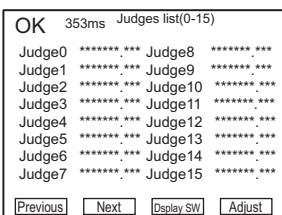

The judgment results are displayed as a list.


### Stored image

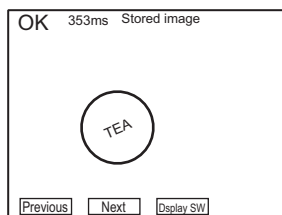

Saved images are displayed.

## Menu Buttons

Select the menu buttons displayed on the LCD screen by the touch pen or function keys. The functions that are assigned to buttons differ according to the screen.

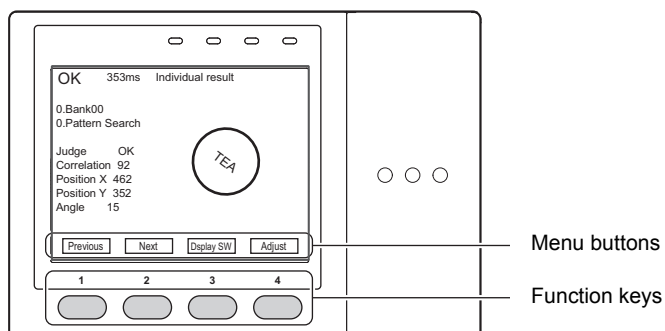

| Screen              | F1       | F2   | F3                  | F4     |
|---------------------|----------|------|---------------------|--------|
| Individual results  | Previous | Next | Display switch (sw) | Adjust |
| All results/Region  | -        | -    | Display switch (sw) | Adjust |
| All results/Judge   | -        | -    | Display switch (sw) | Adjust |
| Position correction | Previous | Next | Display switch (sw) | Adjust |
| Variables list      | Previous | Next | Display switch (sw) | Adjust |
| Data list           | Previous | Next | Display switch (sw) | -      |
| Judgments list      | Previous | Next | Display switch (sw) | Adjust |
| Stored image        | Previous | Next | Display switch (sw) | -      |

### Menu button functions

| Function Name       | Description                                                                                                                                                                                                          |
|---------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Previous            | Individual results/Position correction: The previous measurement item results are displayed.<br>Variables/Data/Judgment list: The previous page is displayed.<br>Saved image: The previous saved image is displayed. |
| Next                | Individual results/Position correction: The next measurement item results are displayed.<br>Variables/Data/Judgment list: The next page is displayed.<br>Saved image: The next saved image is displayed.             |
| Display switch (sw) | Switches the content of the measurement information that is displayed.                                                                                                                                               |
| Adjust              | Adjusts the measurement items related parameters.                                                                                                                                                                    |

#### Note Capture function

In the ADJ mode, the capture function is assigned to the AUTO key.




# Switching the Image Display Method


In the Individual results display or Position correction display, you can hide or reduce the size of images that are displayed simultaneously with measurement information. Each press of the ↑ UP key/↓ DOWN key switches the image display as follows:

In the Stored image display, the image display is switched between 1/4 display and full display.

Full display

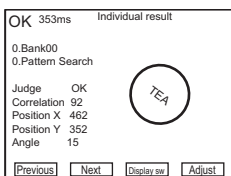


1/4 display

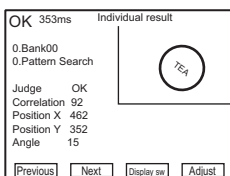

The 1/4 display is available only for the individual results display and position correction display.

No image

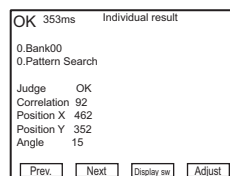

The image is not displayed while a saved image is displayed.

In the "Variables list," "Data list" or "Judgments list" display, each press of the ↑ UP key/↓ DOWN key toggles display/hide of the camera image.

No image


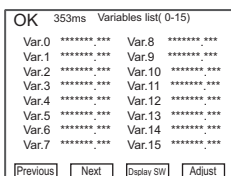


Image display

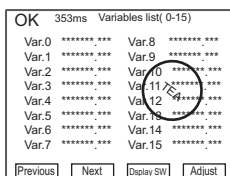

## Using a Saved Image to Perform Re-measurement

Re-measurement can be performed using a measurement image saved in internal memory. Images are saved to internal memory in the RUN mode. If the ← L key/→ R key is pressed in the Individual results display or All results/Region display, the screen switches to the saved image and re-measurement is executed.

### Note

Up to 100 images can be saved. Images that were judged as NG also can be saved.



Measurement Image Save Conditions, p.126

# Adjusting Measurement Conditions

If you switch to the adjustment mode screen, the ADJ mode is still active and you can adjust measurement conditions.

## Adjusting Measurement Item Conditions

Adjusting conditions while monitoring the live image

OK 353ms Individual result

0.Bank00  
0.Pattern Search

Judge OK  
Correlation 92  
Position X 462  
Position Y 352  
Angle 15

TEA

Previous

Next

Display sw

Adjust

Adjusting conditions while monitoring a saved image

OK 353ms Individual result

TEA

Previous

Next

Display sw

Adjust

Adjust Mode

▲ 0.Pattern search  
1.Pattern search  
2.Pattern search  
▼

TEA

Select the target item.

Adjust Mode

▲ Register model  
Reference model  
Search region  
Reference point  
▼

TEA

- Adjusting the measurement region
- Adjusting the image
- Adjusting the threshold value

# ADDITIONAL FUNCTIONS

|                                                         |            |
|---------------------------------------------------------|------------|
| <b>Bank Settings</b>                                    | <b>114</b> |
| Bank Data Operations                                    | 115        |
| Bank Group Operations                                   | 115        |
| <b>System Settings</b>                                  | <b>116</b> |
| Camera Specifications                                   | 116        |
| Communication Setup                                     | 116        |
| Output Settings                                         | 120        |
| Display Settings                                        | 122        |
| Operation Settings                                      | 124        |
| Measurement Control Conditions                          | 126        |
| Operation Conditions during Startup                     | 127        |
| Setting/Changing the Display Language                   | 127        |
| Setting/Changing the Date                               | 128        |
| Clearing Saved Images                                   | 128        |
| <b>Tools</b>                                            | <b>129</b> |
| Saving/Loading Data                                     | 129        |
| SD Card Operations                                      | 130        |
| Checking Density Distribution (Profile)                 | 130        |
| Checking the Communication Status with External Devices | 131        |
| Displaying the Controller Information                   | 132        |



# Bank Settings

The ZFX-C can hold up to 32 sets of settings, which are called a "bank," in internal memory. Bank 0 is displayed as the default bank when the Controller is turned ON. Banks 1 to 31 are also provided in addition to this. The device setup can be changed easily by just switching banks if banks are registered to suit specific conditions and content.

## Note

The number of banks can be increased to 1024 by attaching an SD card (capacity: 256MB). 32 banks are handled as a single group, and up to 32 groups can be set. In other words, this means that 32 bank groups are the same as having set 1024 banks.

In this case, bank group 0 is saved on the Controller's internal flash memory, and bank groups 1 to 31 are saved on the attached SD card.

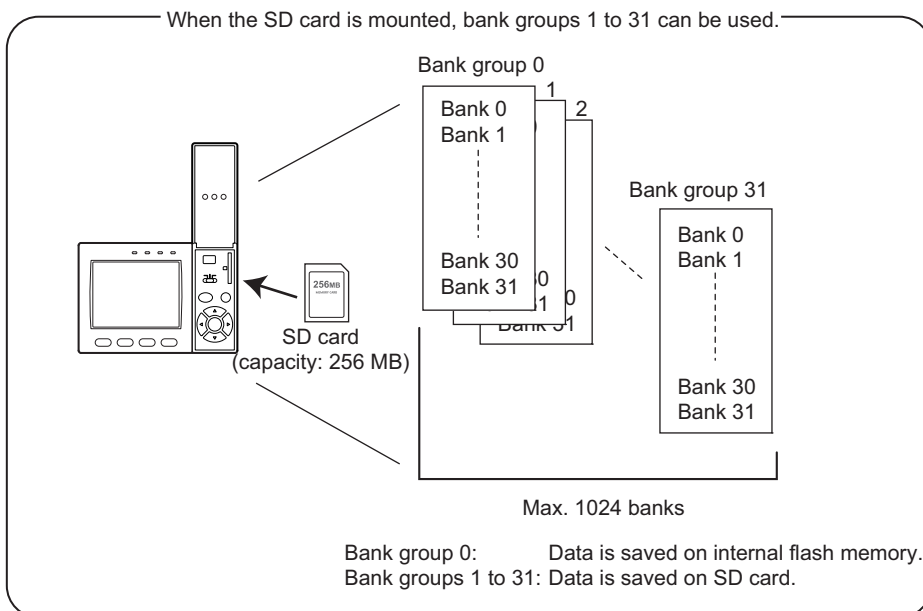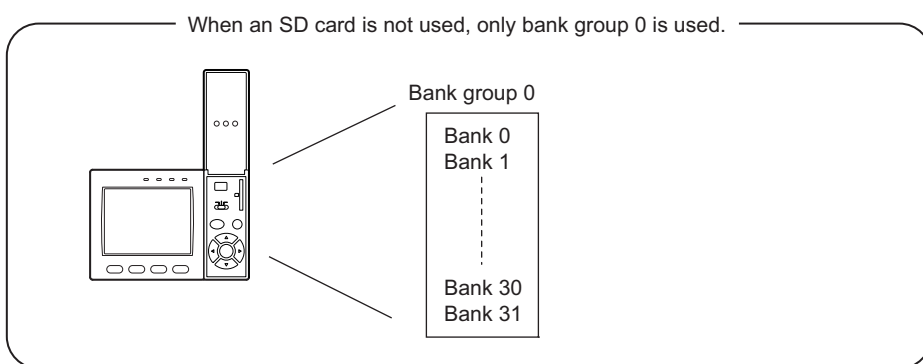

# Bank Data Operations

The following operations can be performed on bank data.

## ► MENU mode - [Bank] - [Bank]

| Setup Item | Description                                                                                                                                                                                                                                                                                                            |
|------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Switch     | Switches the currently selected bank to other banks. Switching of banks can also be instructed by operating the keys on the Controller, or by issuing external signals or serial communication commands.<br>Range: 0 to 31                                                                                             |
| Copy       | Copies already created bank data to other banks.<br>Select [Copy] and the copy destination bank after displaying the copy source No. (default value: Bank0)<br><br><b>Important</b><br>Be sure to save bank data after copying a bank. Data is cleared when the Controller is turned OFF after you just copy the data. |
| Rename     | Specified bank No. can be renamed with any name. (within 16 characters)                                                                                                                                                                                                                                                |
| Erase      | Deletes specified bank data.                                                                                                                                                                                                                                                                                           |

# Bank Group Operations

When the bank group is switched to any group other than 0 and saved, the directory "BANKGRP" is automatically created on the SD card. The data of bank groups is saved to this directory using file names BGR\_0001.BNG to BGR\_0031.BNG.

### Important

When setup data has been changed, save the setup data before switching the bank group. Otherwise, the newly changed setup data is cleared. To automatically save setup data when a bank group is switched, set [Save at switch BG] to ON.

 Saving during Switching of Bank Groups p.125

## ► MENU mode - [Bank] - [Bank Group]

| Setup Item | Description                                                                                                                       |
|------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Switch     | Switches the bank group with the SD card attached. After the bank group is switched, select the target bank No.<br>Range: 0 to 31 |

### Note

Copy/erase/rename can be executed on bank groups also.

# System Settings

## Camera Specifications

Set the basic conditions of the camera connected to the Controller.

### ► MENU mode - [System] - [Camera]

| Setup Item        | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| White balance     | The environment or lighting around the camera sometimes makes images captured from the camera look as if they are color-tinted even if the image is of a white measurement target. The function for correcting the color so that white objects are reproduced correctly in white on screen is called "white balance."<br>Automatically adjusts the white balance while displaying white paper or cloth on screen. This function can be set only when a color camera is connected to the Controller.                                                                                                             |
| Strobe delay time | Set the delay time from input of the TRIG signal up to output of the STGOUT signal.<br>Range: 0 to 60000 $\mu$ s                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
| Strobe polarity   | Sets the output polarity of the STGOUT signal.<br>Range: Positive/Negative<br><br><Positive when signal is in PNP type>      <Negative when signal is in PNP type><br><Negative when signal is in NPN type>      <Positive when signal is in NPN type><br><br><br><br>When strobe polarity is set to "Negative", a delay of about 50 to 100 $\mu$ s occurs from input of the TRIG signal until the STGOUT signal turns Low. When a high-speed shutter is used, use the Controller with the strobe polarity set to "Positive". |
| Strobe width      | Sets the time that the STGOUT signal is output.<br>Range: 0 to 60000 $\mu$ s                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |

## Communication Setup

Set the communication specifications for the Controller matched to the communication specifications of external devices.

### Serial Communication

#### RS-232C/422

Set the basic communication specifications for when communications is performed with external devices on the serial interface. Set the communication specifications to match those of the external devices.

### ► MENU mode - [System] - [Comm] - [RS-232C/422]

| Setup Item  | Setting value                                     |
|-------------|---------------------------------------------------|
| Interface   | RS-232C (default value), RS-422                   |
| Baud rate   | 9600, 19200, 38400 (default value), 57600, 115200 |
| Data length | 7 bit, 8 bits (default value)                     |
| Parity      | None (default value), Even, Odd                   |
| Stop bits   | 1 bit (default value), 2 bits                     |

## Normal

Set the conditions required for performing serial communications in the normal mode.

### ► MENU mode - [System] - [Comm] - [Normal]

| Setup Item | Setting value                 |
|------------|-------------------------------|
| Delimiter  | CR (default value), LF, CR+LF |

## Parallel Communication

### Parallel communication

Set the conditions required for performing parallel communications.

### ► MENU mode - [System] - [Comm] - [Parallel]

| Setup Item    | Description                                                                                                                                                                                                                                                                                                    |
|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Polarity      | Sets the ON condition when the judgment result is output to the DO0 to DO15 and OR signals.<br>NG: ON: Signals turn ON when the judgment is NG. (default value)<br>OK: ON: Signals turn ON when the judgment is OK.                                                                                            |
| Output cycle  | Sets the output cycle for the measurement results. Set a time that is "Gate ON delay + Gate ON time" or more and that is shorter than the measurement cycle.<br>Range: 2.0 to 10000.0 ms (default value: 10.0 ms)                                                                                              |
| Gate ON delay | Sets the time from output of the measurement result to the DO0 to 15 signals until the GATE signal turns ON. This is the time to wait until stable output data can be obtained. Set a value longer than the ON delay/OFF delay time of the external device.<br>Range: 1.0 to 1000.0 ms (default value: 0.0 ms) |
| Gate ON time  | Sets the time that the GATE signal is ON. Set a value that allows the external device to capture the measurement result.<br>Range: 1.0 to 1000.0 ms (default value: 5.0 ms)                                                                                                                                    |
| Handshaking   | Sets the output method for the measurement results.<br>OFF: Measurement results are output asynchronously with external devices. (default value)<br>ON: Measurement results are output synchronously with external devices.                                                                                    |
| Timeout       | Sets the time until the timeout error is output. A timeout error occurs when there is no response from the external device within the preset time.<br>Range: 1.0 to 60.0 s (default value: 10.0 s)                                                                                                             |

## OR signal

Set the output conditions of the OR signal.



### ► MENU mode - [System] - [Comm] - [OR output]

| Setup Item  | Description                                                                                                                                                                                                                                                                                                                                            |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Output mode | <p>Sets the output conditions of the OR signal.</p> <p>One-shot: The OR signal turns ON for the specified time only when the ON condition (Polarity) is satisfied. The OR signal turns OFF when the specified time has elapsed.</p> <p>Level: The ON/OFF status is held until it next changes after the OR signal has been output. (default value)</p> |
| Output time | <p>Sets the time that the OR signal is output as a one-shot signal.</p> <p>Range: 0 to 255 ms (default value: 0 ms)</p>                                                                                                                                                                                                                                |

## ENABLE signal ON range

Set the timing during measurement processing that the ENABLE signal is turned ON.

### ► MENU mode - [System] - [Comm] - [ENABLE range] - [Range]
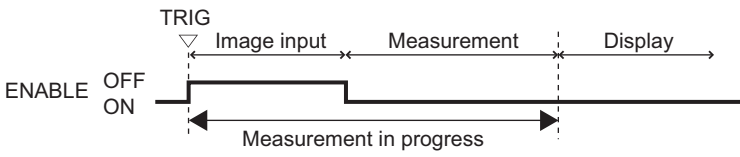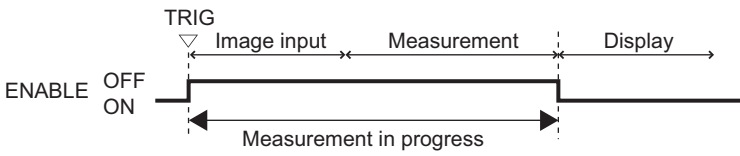
| Setting value | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Input image   | <p>Turns the ENABLE signal ON when image input is complete. This serves as a guideline as to whether it is OK or not to move the measurement target.</p>  <p><b>Important</b></p> <p>When [Input image] is selected, do not input the next command until measurement is complete even if the ENABLE signal is ON. If the next command is input, the measurement currently being executed or the input command will not be executed normally.</p> |
| Measurement   | <p>Turns the ENABLE signal ON when measurement is complete. (default value)</p>                                                                                                                                                                                                                                                                                                                                                                 |



| Setting value | Description                                                                                                                                                      |
|---------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display       | <p>Turns the ENABLE signal ON when display of the measurement result is complete. Processing until end of display is processed as "measurement in progress."</p> |

## ENABLE reverse

Set whether or not to reverse the ON/OFF state of the ENABLE signal.

### ► MENU mode - [System] - [Comm] - [ENABLE output] - [Reverse]

| Setting value | Description                                                                                                                                                                                                  |
|---------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OFF           | The ON/OFF state of the ENABLE signal is not reversed. (default value)                                                                                                                                       |
| ON            | The ON/OFF state of the ENABLE signal is reversed. The ENABLE signal turns ON during processing by the ZFX. The ENABLE signal can be used as a signal for indicating that the ZFX-C is executing processing. |

## Ethernet Communication

Set the communications specifications for performing communications with external devices on an Ethernet connection.

### ► MENU mode - [System] - [Comm] - [Ethernet]

| Setting value | Description                                                                                                                                                                                                                                                                 |
|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Connection    | <p>Sets whether to enable or disable Ethernet communications.</p> <p>ON: Ethernet communications is enabled. (default value)</p> <p>OFF: Ethernet communications is disabled. This shortens the measurement time.</p>                                                       |
| IP address    | <p>Sets the same address (excluding the rightmost address) as the PC that the ZFX-C is connected to.</p> <p>Set a unique address as the rightmost address. Do not set the same address twice in the network. (0.0.0.0 to 255.255.255.255, default value: 192.168.0.250)</p> |
| Subnet mask   | <p>Sets the same subnet mask as the PC that the ZFX-C is connected to. (0.0.0.0 to 255.255.255.255, default value: 255.255.255.0)</p>                                                                                                                                       |

### Important

- Before connecting to an existing LAN, consult with the network administrator to confirm the network settings. If wrong settings are set, the ZFX-C and other devices on the network might no longer function properly.
- The ZFX-C cannot be controlled simultaneously from multiple PCs on the network.
- The network state sometimes causes a delay in data communications with the ZFX-C. If a fast response is required, we recommend performing data communications over a parallel I/O interface.

- The firewall functions of the PC that the ZFX-C is connected to might disturb data communications with the ZFX-C. In this case, disable the firewall on the PC.

## Output Settings

Set the output destination for the measurement results and the various conditions required according to the output destination.

### Output Destination

Set the items that are output as the measurement result and their output destinations. The ZFX-C can output two items, "data" and "judgment," as measurement results.

#### Data output destination

Set the items that are output as the measurement result and their output destinations.

##### ► MENU mode - [System] - [Output] - [Data output]

| Setup Item  | Description                                                                  |
|-------------|------------------------------------------------------------------------------|
| RS-232C/422 | Selects ON to output data on the RS-232C/422 interface. (default value: OFF) |
| Parallel    | Selects ON to output data via the parallel port. (default value: OFF)        |
| SD card     | Selects ON to output data to the SD card. (default value: OFF)               |
| USB         | Selects ON to output data via the USB port. (default value: OFF)             |
| Ethernet    | Selects [ON] to output data on an Ethernet connection. (default value: OFF)  |

#### Judgment output destination

Set the output destination when judgments are to be output as the measurement results.

##### ► MENU mode - [System] - [Output] - [Judgement output]

| Setup Item | Description                                                                |
|------------|----------------------------------------------------------------------------|
| Parallel   | Selects ON to output judgments via the parallel port. (default value: OFF) |

#### Overall Judgment Output

Set whether or not to output the overall judgment.

##### ► MENU mode-[System]-[Output]-[Total jg. output]


| Setup Item | Description                                                                                          |
|------------|------------------------------------------------------------------------------------------------------|
| Parallel   | Selects [OFF] to disable overall judgment on the OR signal of the parallel port. (default value: ON) |





## Display Setting

The items displayed in the measurement screen in the RUN mode and the ADJ mode can be selected.

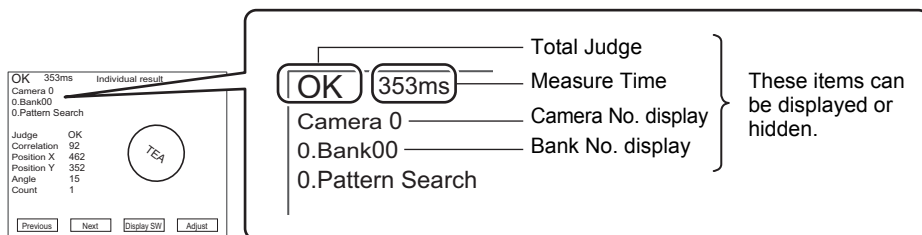


### ► MENU mode - [System] - [Display] - [Display Setting]

| Setup Item         | Description                                                                                                                                    |
|--------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Total Judge        | Sets whether to display or hide the overall judgment.<br>ON: Displays the overall judgment.(default value)<br>OFF: Hides the overall judgment. |
| Measure Time       | Sets whether to display or hide the measurement time.<br>ON: Displays the measurement time.(default value)<br>OFF: Hides the measurement time. |
| Bank No. display   | Sets whether to display or hide the bank No. and bank name.<br>ON: Displays the bank No.(default value)<br>OFF: Hides the bank No.             |
| Camera No. display | Sets whether to display or hide the camera No.<br>ON: Displays the camera No.(default value)<br>OFF: Hides the camera No.                      |

## Designate Colors

Change the color of text displayed in the measurement screen in the RUN mode and the ADJ mode to a desired color.

You can choose from Red, Yellow, Green, Cyan, Blue, Magenta, and White.

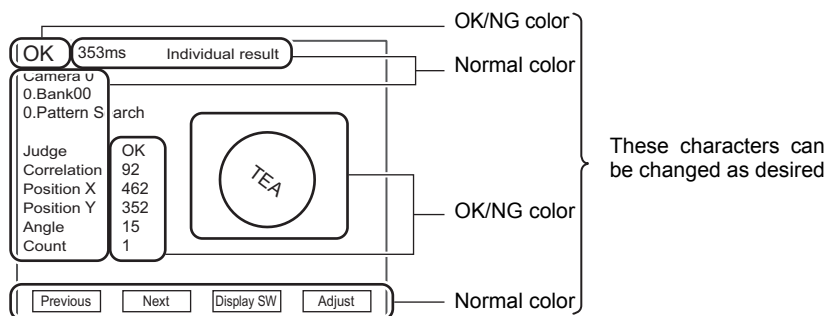

### ► MENU mode - [System] - [Display] - [Designate colors]

| Setup Item   | Description                                                       |
|--------------|-------------------------------------------------------------------|
| Normal color | Changes normal colors to a desired color. (default value: Yellow) |
| OK color     | Changes OK colors to a desired color. (default value: green)      |
| NG color     | Changes NG colors to a desired color. (default value: Red)        |

# Operation Settings

Set and change operation-related functions.

## Display Capture

This function captures the content displayed on the LCD screen and saves it on SD card.

### Note

It takes several seconds to capture displays, during which measurement cannot be executed. To prevent the inability to perform measurement due to erroneous operation, set this function to OFF.

### ► MENU mode - [System] - [Operation] - [Display capture]

| Setting value | Description                                            |
|---------------|--------------------------------------------------------|
| OFF           | Disables the display capture function. (default value) |
| ON            | Enables the display capture function.                  |

### Executing display capture

Displays can be captured when [Capture] is displayed on the LCD screen. Select either the F4 function key or [Capture] on the LCD screen.

### File names

When display capture is executed, the directory "CAPTURE" is automatically created at the root directory on the SD card, and an image file of the currently displayed screen is stored to the CAPTURE directory.

The format of file names is "CAPT\*\*\*.BMP". A running number starting from 000 is automatically assigned to "\*\*\*\*".

## Saving during Switching of Bank Groups

Set whether or not to save setup data when a bank group is switched. If saving of setup data is disabled, the total time taken to switch bank groups can be shortened.

### Important

When setup data is changed at the default setting (saving of setup data set to OFF), be sure to manually save the data before you switch bank groups. Otherwise, the newly changed setup data is cleared.



Saving Setup Data p.36

### ► MENU mode - [System] - [Operation] - [Save at Switch BG]

| Setting value | Description                                                             |
|---------------|-------------------------------------------------------------------------|
| ON            | Saves setup data when a bank group is switched.                         |
| OFF           | Does not save setup data when a bank group is switched. (default value) |

## Password

You can set a password for enabling switching to other modes to prevent erroneous operation.

### Note

If you have forgotten your password, you can confirm it by entering the PASSWORD command via the serial interface.



Serial Communication Command Reference

### ► MENU mode - [System] - [Operation] - [Password] - [MENU/ADJ/RUN mode]

| Setting value | Description                                                   |
|---------------|---------------------------------------------------------------|
| OFF           | No password is set for moving to other modes. (default value) |
| ON            | A password must be input to switch to other modes.            |

### ► MENU mode - [System] - [Operation] - [Password]

| Setting value     | Description        |
|-------------------|--------------------|
| Password settings | Sets the password. |

## Key Lock in RUN Mode

Menu buttons and operation of the touch panel in the RUN mode can be locked to prevent erroneous operation. Note, however, that mode switching is not locked.

### ► MENU mode - [System] - [Operation] - [RUN mode key lock]

| Setting value | Description                               |
|---------------|-------------------------------------------|
| OFF           | The key lock is disabled. (default value) |
| ON            | The key lock is enabled.                  |

# Measurement Control Conditions

Set and change measurement processing-related functions.

## Measurement Image Save Conditions

Sets the conditions for saving measurement images.

### Note

#### Saving measurement images

Up to 100 images can be saved. When the number of saved images exceeds 100, new images are saved by overwriting the oldest image. When the Controller is turned OFF, images saved on the Controller are cleared. Saved images only can also be cleared without turning the Controller OFF.

 p.128

#### ► MENU mode - [System] - [Measure] - [Image storage]

| Setting value | Description                                                            |
|---------------|------------------------------------------------------------------------|
| None          | Measurement images are not saved. (default value)                      |
| Only NG       | Measurement images are saved only when the measurement result is NG.   |
| All           | All measurement images are saved regardless of the measurement result. |

## Saved Image Delete Conditions

Sets the conditions for clearing saved images.

#### ► MENU mode - [System] - [Measure] - [Image deletion]

| Setting value  | Description                                           |
|----------------|-------------------------------------------------------|
| At bank switch | Clears saved image at bank switching. (default value) |
| OFF            | Disables clearing of saved image at bank switching.   |



## Handling the ENABLE Signal

Set how the ENABLE signal is handled.

### Note ENABLE signal

The ENABLE signal is a control signal for indicating that the ZFX-C is ready to accept a measurement trigger or a command from an external device. External devices monitor the ON/OFF timing of this ENABLE signal to input the measurement trigger or commands to the ZFX.

## Operation when the TRIG signal is input during measurement

Next measurement is not executed even if the TRIG signal from an external device is input during measurement. Set whether or not to notify an external device that TRIG signal input was not accepted.

### ► MENU mode - [System] - [Measure] - [Trig in measure]

| Setting value | Description                                                                                                                                                                     |
|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| OFF           | The ERR signal does not turn ON even if the TRIG signal turns ON during measurement.                                                                                            |
| ERR ON        | The ERR signal turns ON when the TRIG signal turns ON during measurement. (default value)<br>The ERR signal turns OFF when the next TRIG signal is input at the correct timing. |

## Operation Conditions during Startup

Set the bank data to be displayed when the Controller is started up.

### ► MENU mode - [System] - [Startup]

| Setup Item         | Description                                                                                                                                                                                                                       |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Startup Bank Group | Sets the bank group No. to be displayed when the Controller is started up. (default value: 0)<br>When bank groups 1 to 31 are selected, start up the Controller with the SD card containing the corresponding bank data attached. |
| Startup Bank       | Sets the bank No. to be displayed when the Controller is started up.<br>Range: 0 to 31 (default value: 0)                                                                                                                         |

## Setting/Changing the Display Language

Set the display language of the LCD screen.

### ► MENU mode - [System] - [Language]

| Setting value | Description                                                   |
|---------------|---------------------------------------------------------------|
| Japanese      | UI text in the LCD screen and menus is displayed in Japanese. |
| English       | UI text in the LCD screen and menus is displayed in English.  |

## Setting/Changing the Date

Set the date and time of the Controller's internal calendar timer.

### ► MENU mode - [System] - [Date]

| Setup Item                             | Description                  |
|----------------------------------------|------------------------------|
| Year, Month, Day, Hour, Minute, Second | Set the date and time units. |

## Clearing Saved Images

Measurement images saved on the Controller can be cleared without turning the Controller OFF.

### ► MENU mode - [System] - [Init.] - [Clear stored images]

## Saving/Loading Data

You can back up setup data and measured image data on SD cards. Alternatively, these backed up data can be loaded to the Controller.

### Data that can be saved/loaded

- System data: Setup data under [System]
- Bank data/bank group data: Setup data under [Setup]
- Image data: Measurement image data saved internally on the Controller  
(proprietary format: color images \*.BYR, black-and-white images \*.GRY)

#### Important


During execution of a save or a load, do not input the RESET signal or turn the power OFF. Doing so might damage the data, or prevent the Controller from functioning normally when it is next started up.

### ► MENU mode - [Tool] - [Backup]

| Setup Item      | Description                                                 |
|-----------------|-------------------------------------------------------------|
| Image data      | Select the target data to perform save/load on.             |
| Bank data       | Save: Saves the target data on the Controller to SD card.   |
| Bank group data | Load: Loads target data saved on SD card to the Controller. |
| System data     |                                                             |

#### Note

### Configuration of directory/files on SD Card

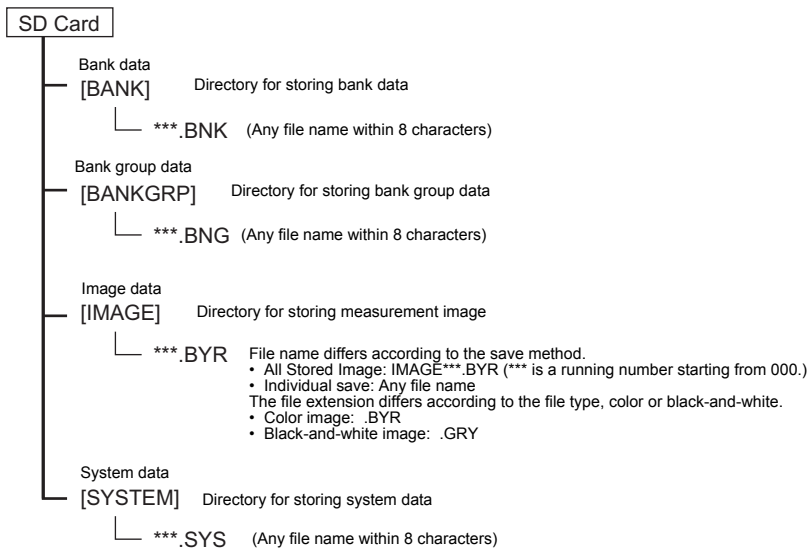

# SD Card Operations

► MENU mode - [Tool] - [SD card]

| Setup Item     | Description                            |
|----------------|----------------------------------------|
| File operation | Deletes or renames files, for example. |

**Note**


The remaining space on the SD card can be checked.

## Checking Density Distribution (Profile)

The graph indicating the density distribution of a single line in the screen is called a "profile." Profiles can be displayed for any horizontal or vertical line.


When a color camera is connected to the Controller, profiles can be displayed using a specified color filter.

► MENU mode - [Tool] - [Profile]

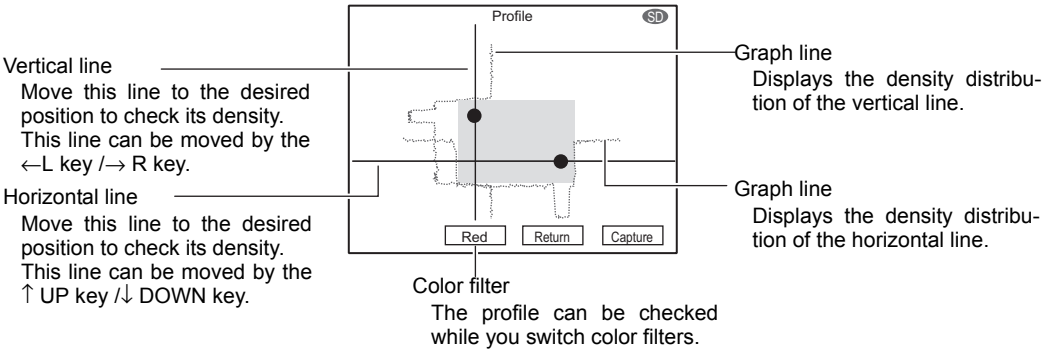

**Note****How to fully utilize the profile function**


- You can check whether or not light is illuminating the measurement target evenly.

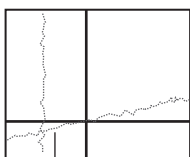

If the graph lines are inclined even though the measurement target illuminated as a uniform color on screen, you can judge that lighting is uneven.

- You can judge the extent of the density difference between the background and desired inspection location.

Example: Defect inspection

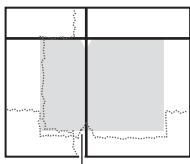


You can monitor depressions on the graph lines to the extent of density differences at certain locations.

## Checking the Communication Status with External Devices

When the Controller is connected to an external device via the RS-232C/422 interface or parallel interface, you can monitor the communication status to verify the normality of the wiring and communication setup.

### RS-232C/422 Communication

Check the communication status of the RS-232C/422 interface.

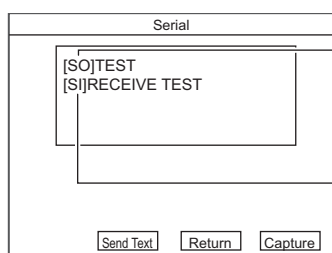

#### Display [SO]

This is the content sent to the external device.

When [Send Text] is selected, a test string is sent to the external device from the ZFX. The test string can be edited.

#### Display [SI]

This is the content received from the external device. When a test string exceeding 16 characters is sent, characters from the 17th character onwards are not displayed.

When the echoback setting is set to [ON], the received content is sent to the external device as it is.

## Monitor conditions


Edit the test string and echoback setting.

### ► MENU mode - [Tool] - [I/O mon.] - [RS-232C/422]

| Setup Item  | Description                                                                                                                                                                                                                                                                            |
|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Monitoring  | The content sent to the external device and content received from the external device are displayed.                                                                                                                                                                                   |
| Test string | Sets the text string (maximum 16 alphanumeric characters) to be sent to the external device.                                                                                                                                                                                           |
| Echoback    | Sets whether or not the content received from an external device is to be returned to that device as it is.<br>ON: The content received from an external device is sent to that device as it is. (default value)<br>OFF: The content received from an external device is not returned. |

## Parallel Communication

You can check the communication status on the parallel interface.

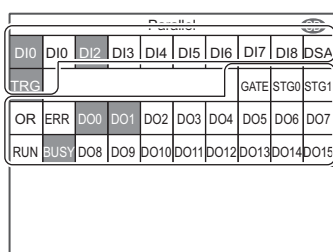

Input signals

A reversed signal indicates that an input from an external device to the ZFX-C is ON.

Output signals

A reversed signal indicates that an output to an external device from the ZFX-C is ON.

You can simulate turning output signals ON/OFF by selecting the signal to be tested on screen.

### ► MENU mode - [Tool] - [I/O mon.] - [Parallel]

## Displaying the Controller Information

Display the Controller's system information. This information allows you to check the version, memory usage, and other information.

### ► MENU mode - [Tool] - [Sys Info]

| Setup Item      | Description                        |
|-----------------|------------------------------------|
| Version         | Displays the Controller's version. |
| Memory capacity | Displays the memory usage.         |

# PARALLEL INTERFACE


|                                          |            |
|------------------------------------------|------------|
| <b>Connection</b>                        | <b>134</b> |
| Parallel Connector Specifications        | 134        |
| <b>Internal Specifications</b>           | <b>138</b> |
| <b>Signal I/O</b>                        | <b>140</b> |
| Input Signal                             | 140        |
| Output Signal                            | 141        |
| <b>Timing Charts</b>                     | <b>145</b> |
| Measurement (Handshaking OFF)            | 145        |
| Measurement (Handshaking ON)             | 148        |
| Commands Other than for Measurement      | 149        |
| Signal Operation in terms of Measurement | 150        |

# Connection

Signals such as measurement triggers can be input to the Controller, and signals such as measurement results can be output from the Controller via its parallel interface. Prepare a parallel I/O cable, and connect it to the Controller's parallel port for using the parallel interface to input commands and output measurement results.

## Parallel Connector Specifications

The Controller has two parallel ports; a standard parallel port and an extended parallel port.

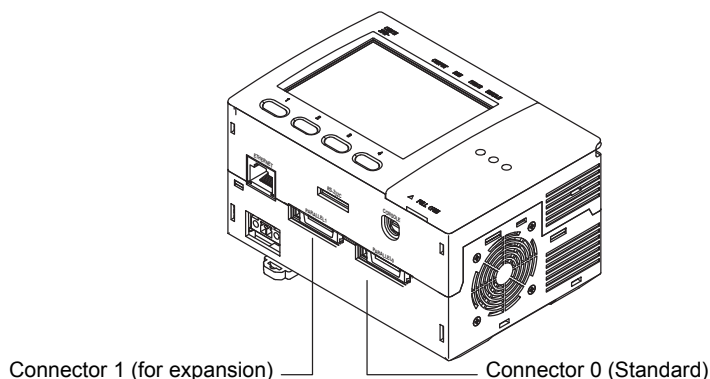


### Important

Before the Controller is turned ON, make sure that connectors 0 and 1 are wired correctly. If these connectors are wired in reverse, the cables or external devices may be damaged.

### Parallel I/O Connector 0 (Standard Parallel Port)

Wire the Terminal Block Adapter (supplied) and plug it into the Controller's parallel I/O connector 0.

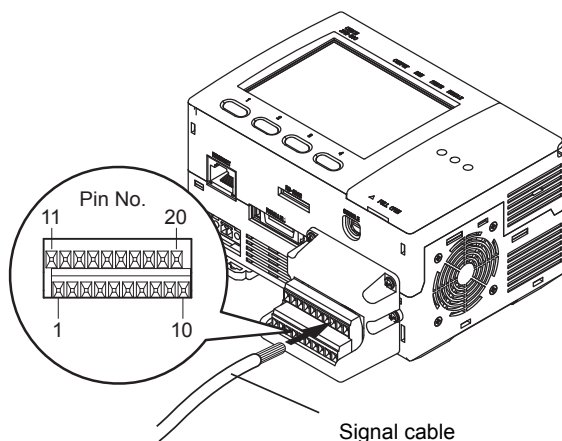

- Cable diameter: 0.14 to 1 mm<sup>2</sup>  
(AWG26 to 16 twisted lead)
- Cable length: 30 m
- Tightening torque for the respective wire:  
0.22 to 0.25 N•m
- Tightening torque for the Terminal Block Adapter: 0.3 N•m
- Terminal block adapter mounting screws:  
M2.6 x 7 screws  
(accessories, 4 p'ces)

### Note

Instead of the Terminal Block Adapter, the parallel I/O cable (ZFX-VP) can be connected to it as well. The wiring of the parallel I/O cable is the same as that of the parallel I/O connector 1.




The pin assignment is as follows. Wire only required pins.

| Pin No. | Signal name | Wire color (ZFX-VP) | Signal direction | Function                                              |
|---------|-------------|---------------------|------------------|-------------------------------------------------------|
| 1       | RESET       | Brown               | Input            | Restarts the ZFX.                                     |
| 2       | TRIG        | Red                 | Input            | Measurement trigger signal input                      |
| 3       | DI0         | Orange              | Input            | Command parameter                                     |
| 4       | DI1         | Yellow              | Input            |                                                       |
| 5       | DI2         | Green               | Input            |                                                       |
| 6       | DI3         | Blue                | Input            |                                                       |
| 7       | DI4         | Purple              | Input            |                                                       |
| 8       | DI5         | Gray                | Input            | Command input                                         |
| 9       | DI6         | White               | Input            |                                                       |
| 10      | DI7         | Black               | Input            |                                                       |
| 11      | DI8         | Brown               | Input            | Parallel command confirmation signal                  |
| 12      | DSA         | Red                 | Input            | Data send request signal input                        |
| 13      | OR          | Orange              | Output           | Overall judgment output                               |
| 14      | ERROR       | Yellow              | Output           | ON when an error occurs                               |
| 15      | RUN         | Green               | Output           | ON while in the RUN mode                              |
| 16      | ENABLE      | Blue                | Output           | ON when measurement trigger signal can be input       |
| 17      | GATE        | Purple              | Output           | ON for the preset output time                         |
| 18      | DO15        | Gray                | Output           | Data output                                           |
| 19      | COMIN       | White               | -                | Common for input signals, STGOUT0 and STGOUT1         |
| 20      | COMOUT      | Black               | -                | Common for OR, ERROR, RUN, ENABLE, GATE, DO15 signals |

## Parallel I/O Connector 1 (Extended Parallel Port)

Hold down the two latch locks on both sides of the connector of the parallel I/O cable (ZFX-VP) to unlock the connector, and connect it to the Controller's parallel I/O connector 1. To lock the connector again, release the latch locks.

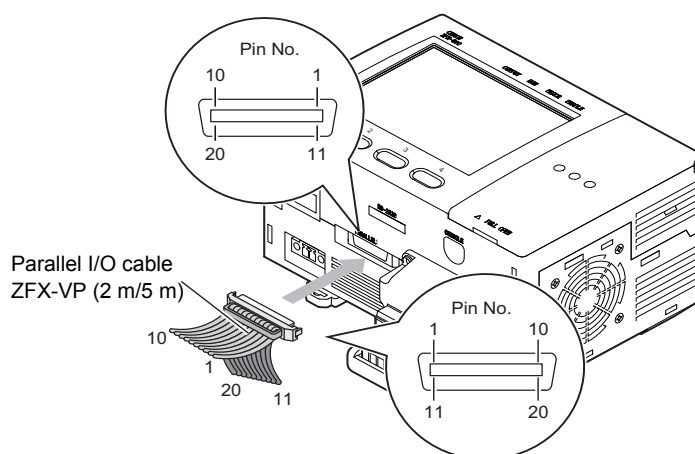

### ► Specification of a parallel I/O cable

| Item                           | Connector                | Flat cable          |
|--------------------------------|--------------------------|---------------------|
| Manufacturer name              | Hirose electric Co. Ltd. | Hitachi Cable, Ltd. |
| Model number                   | FX2B-20SA-1.27R          | UL20012-ST10X28AWG  |
| Electric wire size (thickness) | -                        | 0.89 mm             |
| Total cable width              | -                        | 12.70 mm            |
| Cable length                   | -                        | 2 m/5 m             |



| Pin No. | Signal name | Wire color (ZFX-VP) | Signal direction | Function                                            |
|---------|-------------|---------------------|------------------|-----------------------------------------------------|
| 1       | STGOUT0     | Brown               | Output           | Strobe trigger 0 output                             |
| 2       | (Open)      | Red                 | Output           | (Leave open.)                                       |
| 3       | DO0         | Orange              | Output           | Data output                                         |
| 4       | DO1         | Yellow              | Output           |                                                     |
| 5       | DO2         | Green               | Output           |                                                     |
| 6       | DO3         | Blue                | Output           |                                                     |
| 7       | DO4         | Purple              | Output           |                                                     |
| 8       | DO5         | Gray                | Output           |                                                     |
| 9       | DO6         | White               | Output           |                                                     |
| 10      | DO7         | Black               | Output           |                                                     |
| 11      | DO8         | Brown               | Output           |                                                     |
| 12      | DO9         | Red                 | Output           |                                                     |
| 13      | DO10        | Orange              | Output           |                                                     |
| 14      | DO11        | Yellow              | Output           |                                                     |
| 15      | DO12        | Green               | Output           |                                                     |
| 16      | DO13        | Blue                | Output           |                                                     |
| 17      | DO14        | Purple              | Output           |                                                     |
| 18      | COMOUT      | Gray                | -                | Common for STGOUT0, STGOUT1, and DO0 to DO6 signals |
| 19      | (OPEN)      | White               | -                | (Leave open.)                                       |
| 20      | COMOUT      | Black               | -                | Common for DO7 to DO14 signals                      |

\*1: Use the STGOUT0 signal when you want to connect a strobe device to the ZFX.



# Internal Specifications

## Input Specifications

### ► RESET, DI0 to DI8, and DSA signals
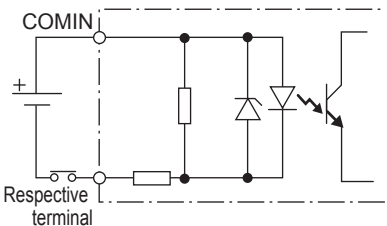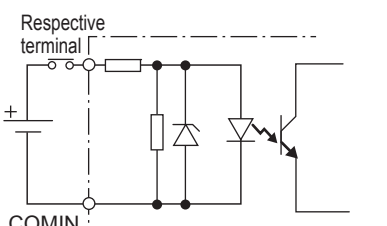
| Mode                     | NPN                                                                               | PNP                                                                                |
|--------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Input voltage            | 12 to 24 VDC $\pm 10\%$                                                           | 12 to 24 VDC $\pm 10\%$                                                            |
| ON current *1            | 5 mA min.                                                                         | 5 mA min.                                                                          |
| ON voltage *1            | 8.8 V min.                                                                        | 8.8 V min.                                                                         |
| OFF current *2           | 0.5 mA max.                                                                       | 0.5 mA max.                                                                        |
| OFF voltage *2           | 1.1 V max.                                                                        | 1.1 V max.                                                                         |
| ON delay                 | 5 ms max.                                                                         | 5 ms max.                                                                          |
| OFF delay                | 0.7 ms max.                                                                       | 0.7 ms max.                                                                        |
| Internal circuit diagram |  |  |

### ► TRIG signal
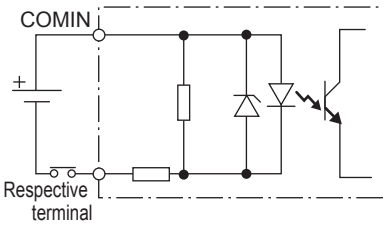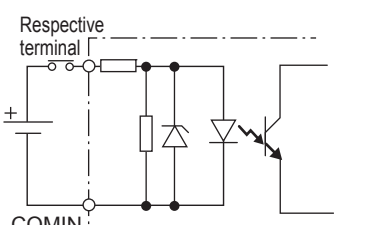
| Mode                     | NPN                                                                                 | PNP                                                                                  |
|--------------------------|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Input voltage            | 12 to 24 VDC $\pm 10\%$                                                             | 12 to 24 VDC $\pm 10\%$                                                              |
| ON current *1            | 5 mA min.                                                                           | 5 mA min.                                                                            |
| ON voltage *1            | 8.8 V min.                                                                          | 8.8 V min.                                                                           |
| OFF current *2           | 0.5 mA max.                                                                         | 0.5 mA max.                                                                          |
| OFF voltage *2           | 0.8 V max.                                                                          | 0.8 V max.                                                                           |
| ON delay                 | 0.1 ms max.                                                                         | 0.1 ms max.                                                                          |
| OFF delay                | 0.1 ms max.                                                                         | 0.1 ms max.                                                                          |
| Internal circuit diagram |  |  |



\*1: The ON current/voltage is the value of the current/voltage that changes the status from OFF to ON. The value of the ON voltage is the potential difference between COM IN and each input terminal.

\*2: The OFF current/voltage is the value of the current/voltage that changes the status from ON to OFF. The value of the OFF voltage is the potential difference between COM IN and each input terminal.



\*3: The ON/OFF delay time for TRIG signal is different from the circuit diagram for RESET, DI0 to DI8, and DSA signals.

## Output Specifications

### ►OR, ERROR, RUN, ENABLE, GATE, DO0 to DO15 signals
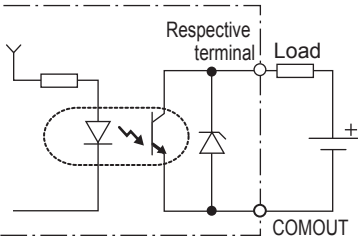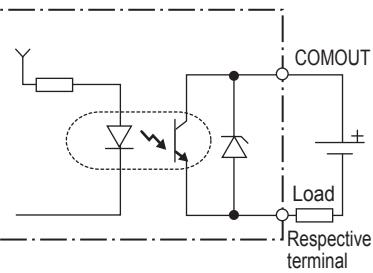
| Mode                     | NPN                                                                               | PNP                                                                                |
|--------------------------|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Output voltage           | 12 to 24 VDC $\pm 10\%$                                                           | 12 to 24 VDC $\pm 10\%$                                                            |
| Load current             | 45 mA max.                                                                        | 45 mA max.                                                                         |
| ON residual voltage      | 2 V max.                                                                          | 2 V max.                                                                           |
| OFF leakage current      | 0.2 mA max.                                                                       | 0.2 mA max.                                                                        |
| Internal circuit diagram |  |  |

### ►STGOUT 0 to 1 signals
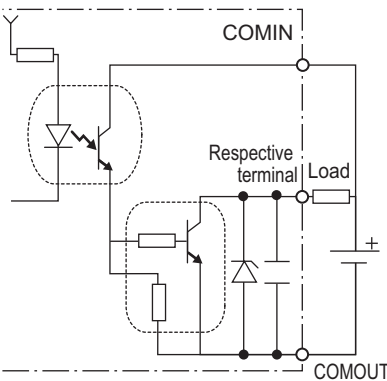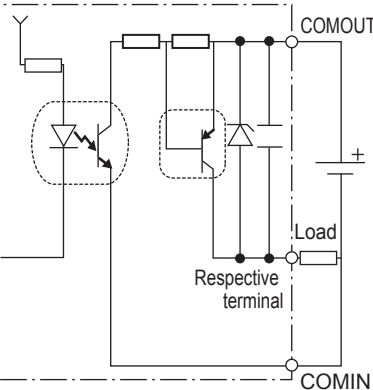
| Mode                     | NPN                                                                                | PNP                                                                                 |
|--------------------------|------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------|
| Output voltage           | 12 to 24 VDC $\pm 10\%$                                                            | 12 to 24 VDC $\pm 10\%$                                                             |
| Load current             | 45 mA max.                                                                         | 45 mA max.                                                                          |
| ON residual voltage      | 2 V max.                                                                           | 2 V max.                                                                            |
| OFF leakage current      | 0.2 mA max.                                                                        | 0.2 mA max.                                                                         |
| Internal circuit diagram |  |  |

#### Important

Connect a load that matches the output specifications. Otherwise, a short-circuit may occur, which will cause the Controller to break down.

# Signal I/O

## Input Signal


The following signals can be input when the ZFX-C is in the RUN mode.

### Measurement Timing Input

A one-time measurement is performed if the TRIG signal is turned ON.

### Command Input

#### Input format

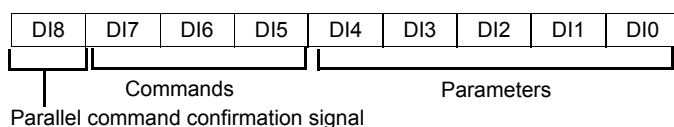

#### Commands

Signals DI0 to DI7 can input the following commands. Allow at least 5 ms after DI0 to DI7 are determined to be ON before turning DI8 ON.

| Command                | Description                                                                  | DI7 | DI6 | DI5 | DI4               | DI3 | DI2 | DI1 | DI0 |
|------------------------|------------------------------------------------------------------------------|-----|-----|-----|-------------------|-----|-----|-----|-----|
| Continuous measurement | Measurements continue while the command is being input.                      | 0   | 0   | 0   | *                 | *   | *   | *   | *   |
| Bank switching         | Switches the bank to measure.                                                | 0   | 1   | 0   | Bank number       |     |     |     |     |
| Bank group switching   | Switches the bank group data.                                                | 1   | 1   | 0   | Bank group number |     |     |     |     |
| Model re-registration  | Registers the model again based on the last measurement image that was read. | 1   | 0   | 0   | Item number       |     |     |     |     |

In the above table, a "0" indicates the signal is OFF, a "1" indicates the signal is ON. A "\*" indicates that the ZFX-C does not read the bit status, so the bit status can be either 0 or 1.


## ► Example

| Command               | Example                            | DI7 | DI6 | DI5 | DI4 | DI3 | DI2 | DI1 | DI0 |
|-----------------------|------------------------------------|-----|-----|-----|-----|-----|-----|-----|-----|
| Bank switching        | Switching to bank 2.               | 0   | 1   | 0   | 0   | 0   | 0   | 1   | 0   |
| Bank group switching  | Switching to bank group 2.         | 1   | 1   | 0   | 0   | 0   | 0   | 1   | 0   |
| Model re-registration | Re-registering the model of item 6 | 1   | 0   | 0   | 0   | 0   | 1   | 1   | 0   |

## Output Signal

Measurement results are output each time a measurement is made. Measurement values and judgment results can be output as the measurement results.

Up to 32 data are output respectively (except for overall judgment result outputs.) They are output for the number of times in the expression set at "Calculation".

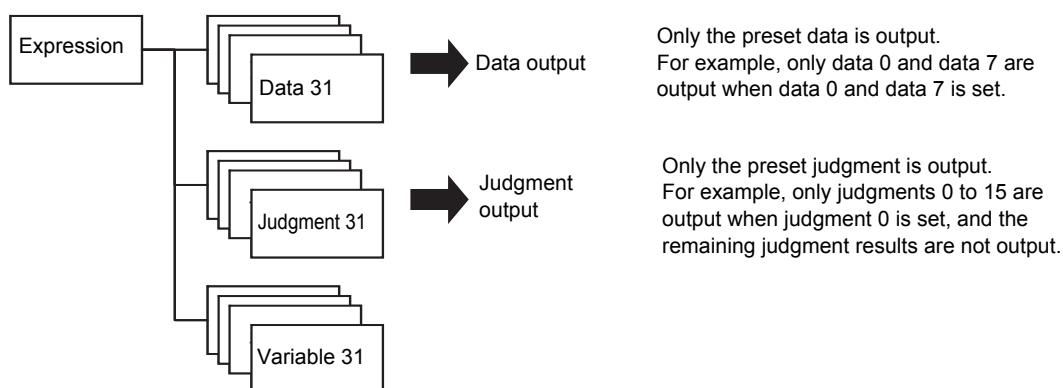

Data is output only when the ZFX-C is in the RUN mode; data is not output when the ZFX-C is in ADJ mode.

p.100

**Note**


After measurements have been made in the RUN mode, the data that is output to the OR and DO signals is retained until new measurements are made in the RUN mode. The status of these output is retained even if the ZFX-C is switched from the RUN mode to another Mode.

### Overall judgment result

 Setting Reflection of Individual Results p.103

- Position correction item
- Measurement item
- Calculation (variable) result
- Calculation (judgment) result

 Calculation p.100

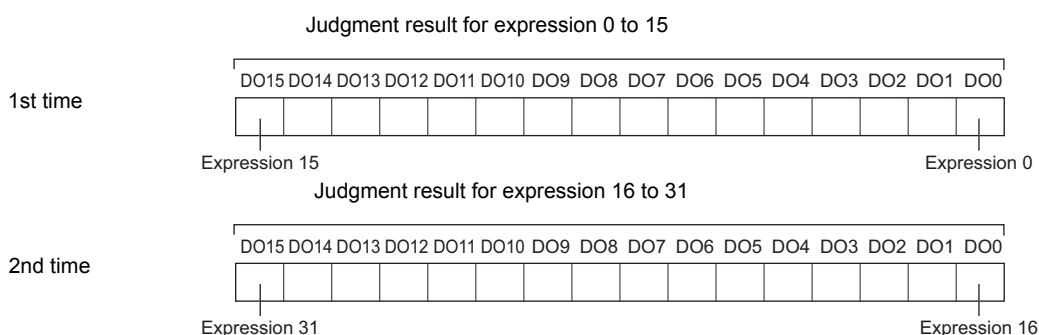

Up to 32 individual judgment results are output. No data is output when the judgment is not set in the Expression.




## Measurement Value Output

The measurement values for expressions that were set in 0 to 31 of [Add func/Calculation/Data] is output before the judgment results output, when "Parallel Output ON" was selected as the data output destination in the [System/Output/Data output] menu.

Only integer values are output. (The real values are rounded to the nearest integer.) Data is output in 2's complement format.

The measurement values for respective expressions are output in 16-bit at a time. When two or more expressions are set, 16-bit measurement values are output sequentially by the number of times equivalent to the set expressions.



### Note

Values in the range -32,768 to 32,767 can be output. A value of -32,768 will be output if the measurement is less than -32,768 and a value of 32,767 will be output if the measurement is greater than 32,767.

## Output example


When measurement value is "+1234"

| DO15 | DO14 | DO13 | DO12 | DO11 | DO10 | DO9 | DO8 | DO7 | DO6 | DO5 | DO4 | DO3 | DO2 | DO1 | DO0 |
|------|------|------|------|------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 0    | 0    | 0    | 0    | 0    | 1    | 0   | 0   | 1   | 1   | 0   | 1   | 0   | 0   | 1   | 0   |

When measurement value is "-1234"

| DO15 | DO14 | DO13 | DO12 | DO11 | DO10 | DO9 | DO8 | DO7 | DO6 | DO5 | DO4 | DO3 | DO2 | DO1 | DO0 |
|------|------|------|------|------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 1    | 1    | 1    | 1    | 1    | 0    | 1   | 1   | 0   | 0   | 1   | 0   | 1   | 1   | 1   | 0   |

## Output timing example

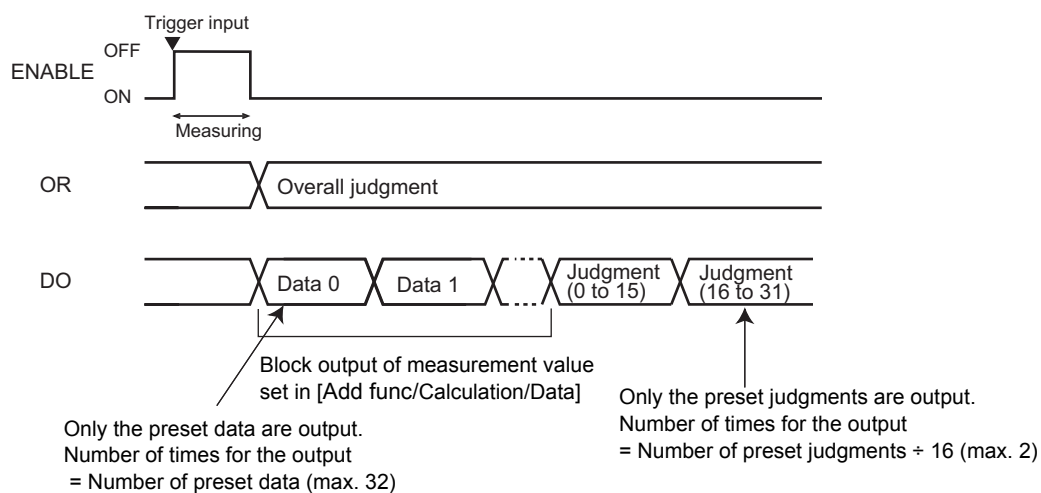


# Timing Charts

## Measurement (Handshaking OFF)

When handshaking is set to OFF, the ZFX-C outputs measurement results to the external device without synchronizing communications. Monitor the ZFX-C's GATE signal from the external device and read the measurement results at the external device while the ZFX-C's GATE signal is ON.

### Trigger Measurement

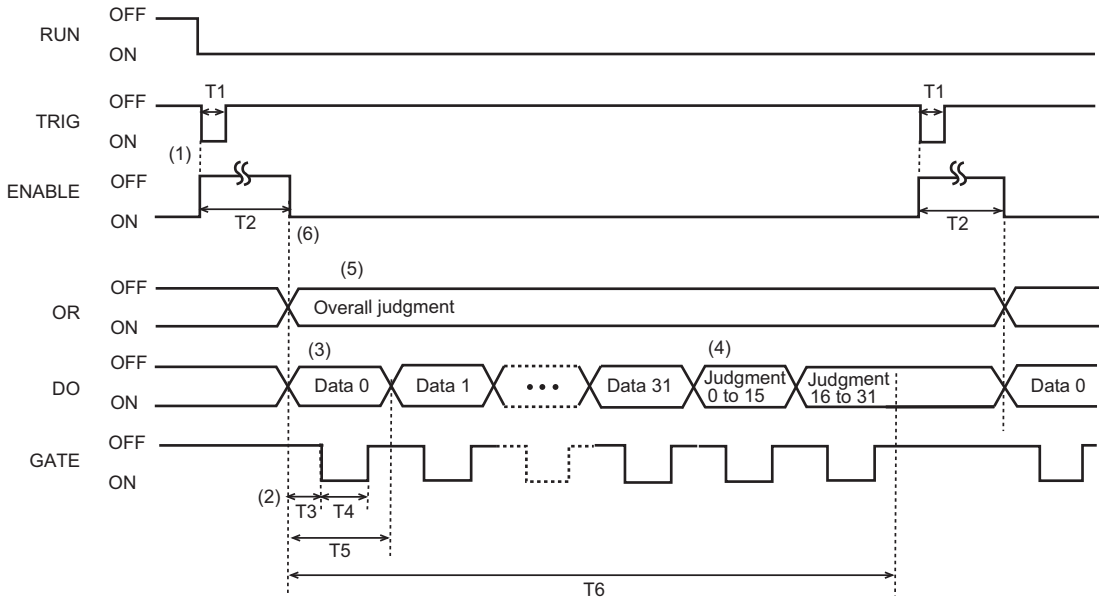


|                           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| T1:<br>Trigger input time | Set to ON for at least 0.5 ms.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| T2:<br>Measurement time   | This time is "image input" + "measurement". This time can be changed to only "image input" or "image input" + "measurement" + "display".                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| T3:<br>Gate ON delay      | This is the time to wait until stable output data can be obtained. This time can be changed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| T4:<br>Gate ON time       | This is the time required for the external device to capture output data from the Controller. This time can be changed.                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| T5:<br>Output cycle       | This is the interval in which the DO signal state changes. This time can be changed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| T6:<br>Total output time  | This time is equivalent to "output cycle (T5) x number of output data items". Input the trigger at an interval longer than this time. When the total output time is longer than T2, non-output data accumulates in the Controller as the next measurement is executed before measurement results are output. When the Controller becomes filled up with this non-output data, data can no longer accumulate in the Controller. When this happens, output of non-output data continues, and the next measurement is no longer possible until queued data has finished accumulating. |

### ► Explanation of operation

- (1) When the measurement trigger (TRIG signal) is input from the external device, measurement is executed once synchronized with the rising edge of the TRIG signal (OFF → ON).
- (2) The GATE signal is used to control the timing at which the external device captures measurement results. Set the Gate ON delay (T3) and Gate ON time (T4) so that  $T3+T4 < T5$ .
- (3) When parallel output is set to "ON" as the data output destination, data is output for the number of times in the expression set at "Calculation (data)" (maximum 32 times). When parallel output is OFF, data is not output.
- (4) When parallel output is set to "ON" as the judgment output destination, judgment is output for the number of times in the expression set at "Calculation (judgment)" (maximum twice). When parallel output is OFF, judgment is not output.
- (5) The overall judgment is output. Overall judgment is NG if there is even one NG for the preset measurement items and judgment results in the expression. In the case of level output, the ON/OFF status of the OR signal does not change until the next output as shown in this example.
- (6) When the timing for turning the ENABLE signal ON is set to "end of image input", a delay occurs until output is started after the ENABLE signal turns ON as measurement is also executed after the ENABLE signal turns ON. Do not input the next trigger until measurement is completed.

## Continuous Measurement

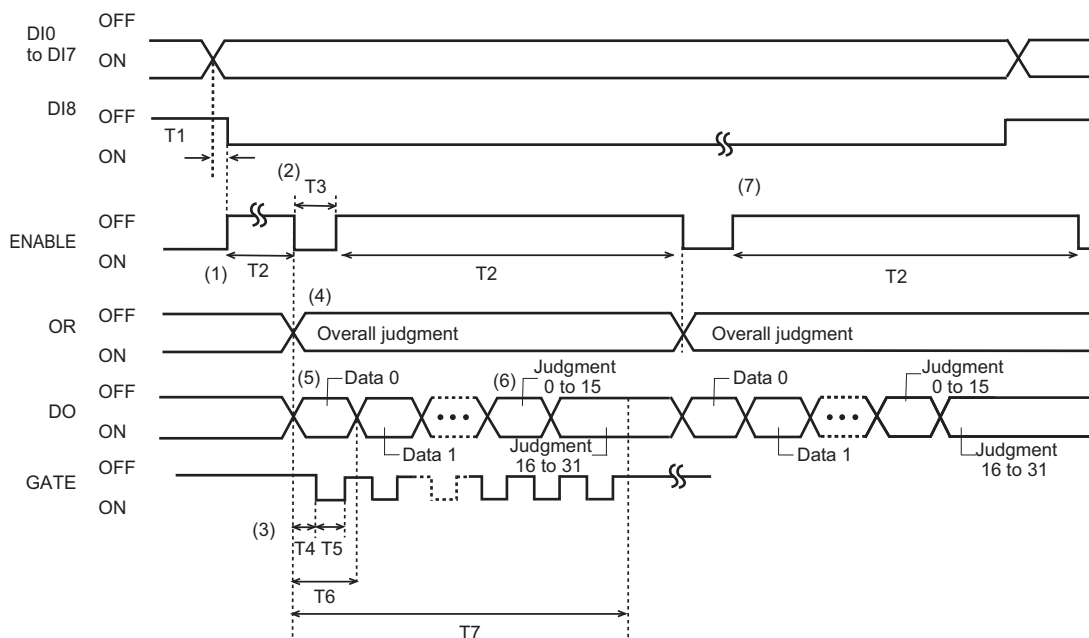

|                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| T1:<br>Execution trigger delay time | This is the delay time until the execution trigger DI8 signal is input after commands are set to DI0 to DI7. Set a delay of at least 5 ms.                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| T2:<br>Measurement time             | This time is "image input" + "measurement". This time can be changed to only "image input" or "image input" + "measurement" + "display".                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
| T3:<br>Measurement interval time    | This time changes according to the ENABLE signal conditions."                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
| T4:<br>Gate ON delay                | This is the time to wait until stable output data can be obtained. This time can be changed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |
| T5:<br>Gate ON time                 | This is the time required for the external device to capture output data from the Controller. This time can be changed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| T6:<br>Output cycle                 | This is the interval in which the DO signal state changes. This time can be changed.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| T7:<br>Total output time            | This time is equivalent to "output cycle (T6) x number of output data items". Set the total output time to be shorter than the measurement time (T2). When the total output time is longer than T2, non-output data accumulates in the Controller as the next measurement is executed before measurement results are output. When the Controller becomes filled up with this non-output data, data can no longer accumulate in the Controller. When this happens, output of non-output data continues, and the next measurement is no longer possible until queued data has finished accumulating. |


#### ► Explanation of operation

- (1) Continuous measurement is started synchronized with the rising edge of the DI8 signal (OFF → ON).
- (2) When the timing for turning the ENABLE signal ON is set to "end of image input", a delay occurs until output is started as measurement is also executed after the ENABLE signal turns ON. The timing of measurement result output (OR, DO) does not change even if the ENABLE signal ON timing is set to "end of image input" or "display end".
- (3) The GATE signal is used to control the timing at which the external device captures measurement results. Set the Gate ON delay (T4) and Gate ON time (T5) so that  $T4+T5 < T6$ .
- (4) The overall judgment is output. Overall judgment is NG if there is even one NG for the preset measurement regions and judgment results in the expression. In the case of level output, the ON/OFF status of the OR signal does not change until the next output as shown in this example.
- (5) When parallel output is set to "ON" as the data output destination, data is output for the number of times in the expression set at "Calculation (data)" (maximum 32 times). When parallel output is OFF, data is not output.
- (6) When parallel output is set to "ON" as the judgment output destination, judgment is output for the number of times in the expression set at "Calculation (judgment)" (maximum twice). When parallel output is OFF, judgment is not output.
- (7) If DI0 to DI7 are in the continuous measurement command execution status and DI8 is ON when measurement processing ends, the next measurement is executed. The next measurement is also executed after display processing is executed when the timing that the ENABLE signal turns ON is set to "display end." When the timing is set to other than "display end," the next measurement is executed as soon as measurement ends.

# Measurement (Handshaking ON)

When handshaking is set to ON, the ZFX-C outputs measurement results to the external device while synchronizing communications. Handshaking is effective when multiple measurement results are output in numerical order and the handshaking function transfers data with more certainty.

## Trigger Measurement

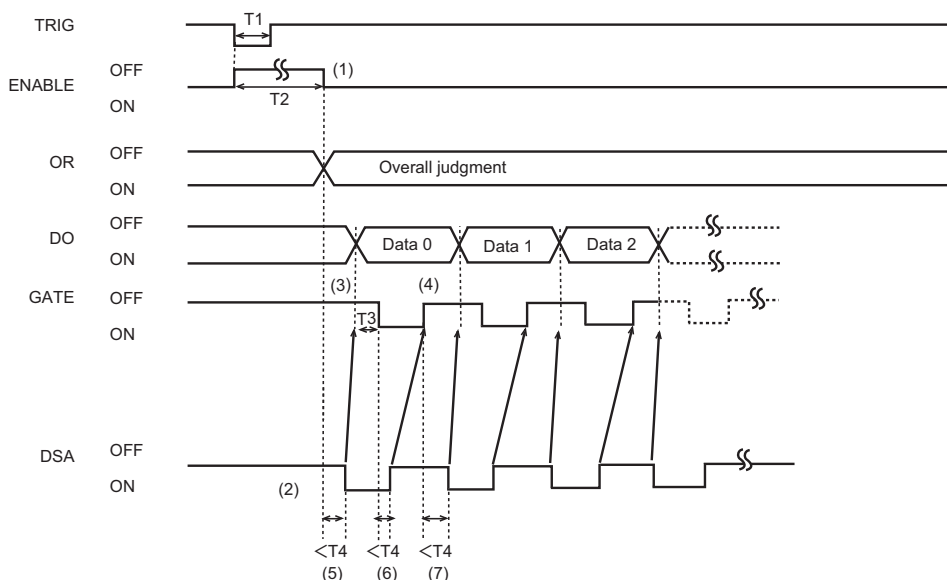


|                           |                                                                                                                                                                                                                                                                                                |
|---------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| T1:<br>Trigger input time | Set to ON for at least 0.5 ms.                                                                                                                                                                                                                                                                 |
| T2:<br>Measurement time   | This time is "image input" + "measurement". This time can be changed to only "image input" or "image input" + "measurement" + "display".                                                                                                                                                       |
| T3:<br>Gate ON time       | This is the time to wait until stable output data can be obtained. This time can be changed.                                                                                                                                                                                                   |
| T4:<br>Timeout time       | This is the time-out time for the following operations. <ul style="list-style-type: none"> <li>• Measurement end → DSA signal ON</li> <li>• GATE signal ON → DSA signal OFF</li> <li>• GATE signal OFF → DSA signal ON</li> </ul> The default time-out time is 10 s. This time can be changed. |

### ► Explanation of operation

- (1) When measurement ends, the ENABLE signal turns ON.
- (2) The DSA signal turns ON by the external device requesting data transmission.
- (3) When the DSA signal turns ON, the DO signal is output.
- (4) When the DSA signal turns OFF, the GATE signal also turns OFF.
- (5) A time-out error occurs if the DSA signal does not turn ON during the preset time-out time after measurement ends.
- (6) A time-out error occurs if the DSA signal does not turn OFF during the preset time-out time after the GATE signal turns ON.
- (7) When multiple data items are being output for a single measurement, a time-out error occurs if the DSA signal does not turn ON with the preset time-out time after the GATE signal turns OFF.

# Commands Other than for Measurement

## Bank switching/Bank group switching/Model re-registration

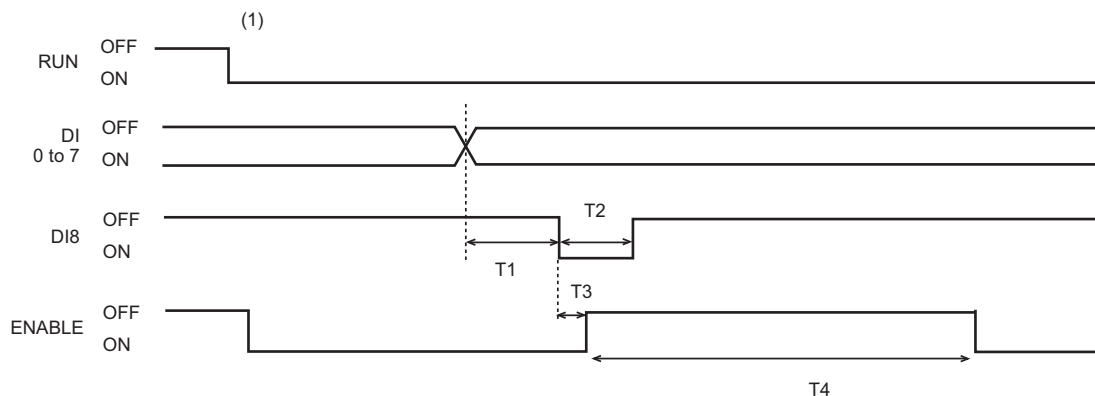


|                                     |                                                                                                                     |
|-------------------------------------|---------------------------------------------------------------------------------------------------------------------|
| T1:<br>Executing trigger delay time | This is the delay time until the execution trigger DI8 is input after commands are set to DI0 to DI7. 5 ms or more. |
| T2:<br>Executing trigger ON time    | 5 ms or more                                                                                                        |
| T3:<br>Execution delay time         | 0.5 ms or less                                                                                                      |
| T4:<br>ENABLE OFF time              | This time varies depending on settings for banks, bank groups, model registration.                                  |

### ► Explanation of operation

(1) The command input is accepted only in the RUN mode.

# Signal Operation in terms of Measurement

## Trigger Input

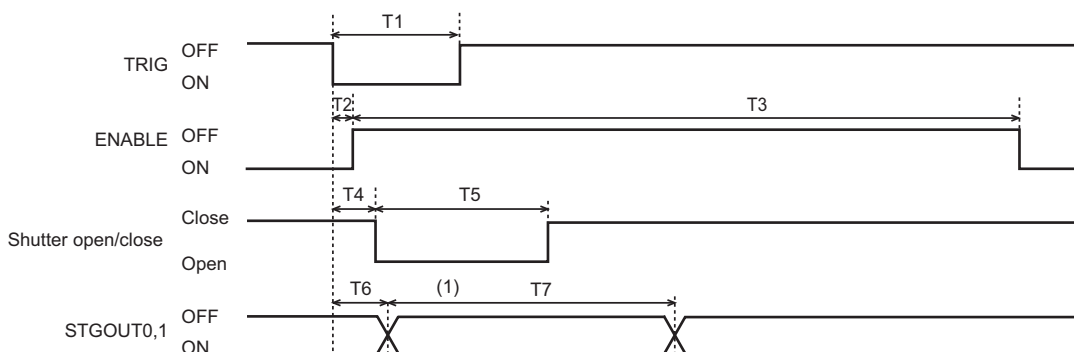

|                                           |                                                                                                                                          |
|-------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------|
| <b>T1:</b><br>Trigger input time          | Set to ON for at least 0.5 ms.                                                                                                           |
| <b>T2:</b><br>ENABLE output response time | This is the time after the trigger is input until the ENABLE signal turns ON. 0.5 ms or less                                             |
| <b>T3:</b><br>Measurement time            | This time is "image input" + "measurement". This time can be changed to only "image input" or "image input" + "measurement" + "display". |
| <b>T4:</b><br>Trigger delay time          | This is the time after trigger input until the camera's shutter is opened (max. 65.535 ms).                                              |
| <b>T5:</b><br>Shutter time                | This is the time that the image is captured (max. 2 ms).<br>This time can be changed by setting the shutter speed.                       |
| <b>T6:</b><br>Strobe delay time           | This is the time after trigger input until the Controller outputs the STGOUT signal (max. 65.535 ms).                                    |
| <b>T7:</b><br>Strobe pulse width          | This is the strobe trigger output time (max. 65.535 ms).                                                                                 |


### ► Explanation of operation

- (1) The STGOUT signal is used to output the strobe firing trigger to the strobe device connected to the Controller. After the shutter opens, the STGOUT signal is output after the STGOUT delay time (T6) has elapsed, and the strobe fires. The ON/OFF polarity of the STGOUT signal can be changed.



## ENABLE Signal Output

The following three output pattern can be specified for ENABLE signal.

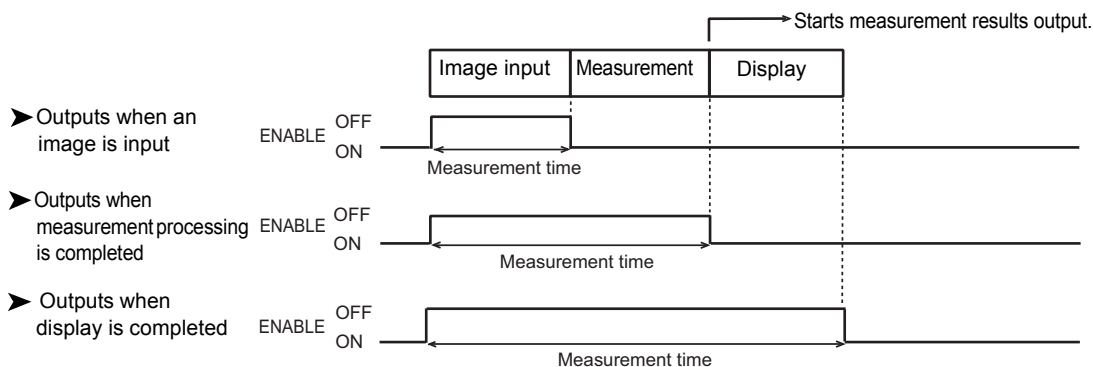


## OR Signal Output

The following two output pattern can be specified for the OR signal.


### ► Level output

Output of the overall judgment is retained until output of the next overall judgment.

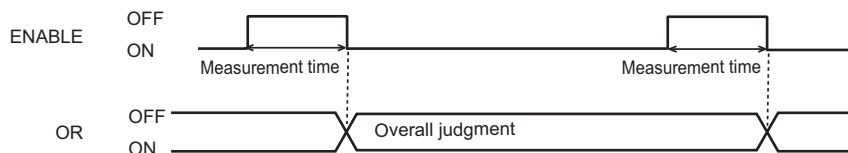

### ► One-shot output


The OR signal is remained to be ON during the output time set in [System/Comm/OR output/Output time] when [One-shot] is set in [System/Comm/OR output/Output mode].

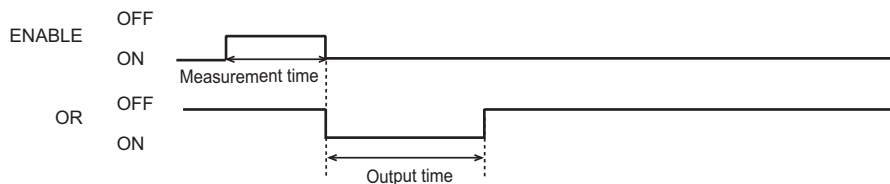

## Operation at Startup

This section shows the Controller's operation when it is powered ON in the RUN mode.

The following describes the order in which signals change.

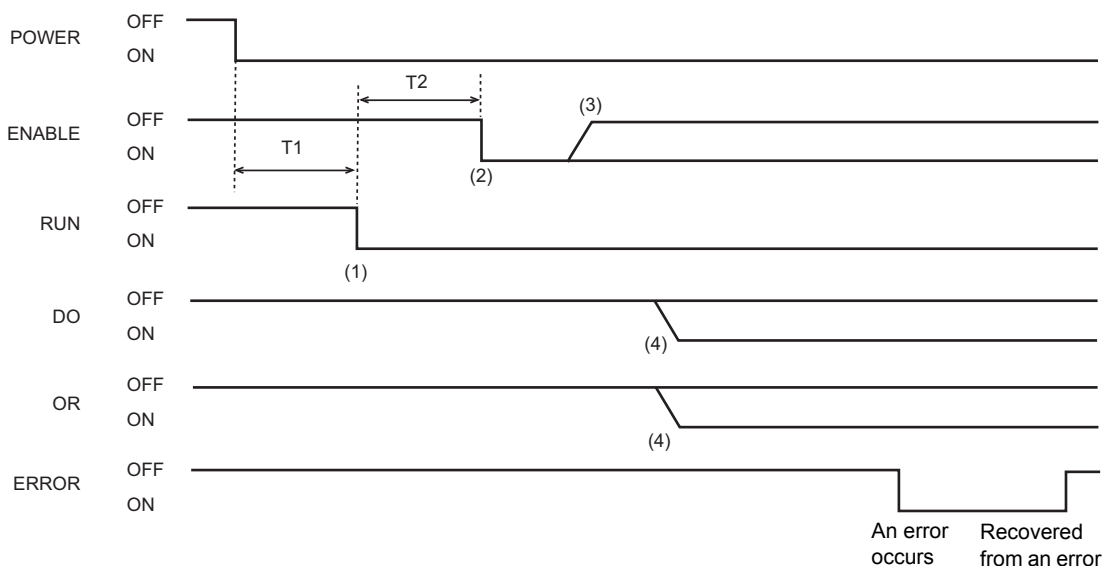

|                                           |                                                      |
|-------------------------------------------|------------------------------------------------------|
| T1:<br>Startup processing at power ON     | The time required changes according to the settings. |
| T2:<br>RUN mode initialization processing | The time required changes according to the settings. |

### ► Explanation of operation

- (1) The RUN signal turns ON when the startup process is completed after the Controller is powered ON in the RUN mode.
- (2) When the RUN signal turns ON, initialization processing in the RUN mode is performed. When the initialization processing is completed, the ENABLE signal turns ON and command inputs can be accepted.
- (3) The ENABLE signal turns OFF when the Controller accepts command and stays OFF during processing commands.
- (4) The signal turns ON/OFF after output of data such as measurement results.

## Reset Input

Set the RESET signal to ON for at least 10 ms.

# APPENDICES

---

|                                                    |            |
|----------------------------------------------------|------------|
| <b>Error Messages and Corrective Actions</b>       | <b>154</b> |
| <b>List of Available Functions for Each Camera</b> | <b>155</b> |
| <b>AUTO Setting</b>                                | <b>156</b> |
| AUTO Setting of Measurement Items                  | 156        |
| AUTO Setting in Individual Adjustment Screens      | 157        |
| <b>Specifications and External Dimensions</b>      | <b>158</b> |
| Camera                                             | 158        |
| Controller                                         | 164        |
| Accessories & Options                              | 166        |
| <b>LED Safety</b>                                  | <b>175</b> |
| <b>Basic Knowledge for Operation</b>               | <b>176</b> |
| <b>Menu List</b>                                   | <b>180</b> |
| <b>INDEX</b>                                       | <b>183</b> |
| <b>How Color Images are Processed</b>              | <b>189</b> |
| Color Filter                                       | 190        |
| Color Pickup                                       | 192        |
| Hue, Saturation and Brightness Value               | 194        |
| <b>Version Upgrade Information</b>                 | <b>195</b> |
| <b>Revision History</b>                            | <b>196</b> |

# Error Messages and Corrective Actions

The following shows error messages that are displayed on the LCD screen and their corrective actions.

| Error message                      | Probable cause                                                                                                                                                                                                                                                                                                                                                                                                                                                       | Reference |
|------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------|
| Draw at least one OR figure.       | The NOT figure mode is used to delete part of a drawn area.<br>Draw in the OR region.                                                                                                                                                                                                                                                                                                                                                                                | p.178     |
| SD card access error               | An error occurred during accessing of the SD card.<br><ul style="list-style-type: none"> <li>• Make sure that the SD card is inserted.</li> <li>• Make sure that the SD card is not locked.</li> <li>• Make sure that the attribute of files on the SD card is not read-only.</li> <li>• Make sure that the SD card has not run out of free space.</li> </ul>                                                                                                        | -         |
| Illegal syntax in expression.      | An operation expression setting is probably illegal as follows:<br><ul style="list-style-type: none"> <li>• The number of brackets on the left and right differ.</li> <li>• The region Nos. are continuous.</li> <li>• The operators are continuous.</li> <li>• The constants are continuous.</li> <li>• The functions are continuous.</li> <li>• There are not enough or too many function arguments.</li> </ul>                                                    | p.100     |
| Automatic setting failed.          | Make sure that images are being captured appropriately.<br>If images are too dark, adjust the shutter speed or the brightness of the lighting.                                                                                                                                                                                                                                                                                                                       | p.88, 91  |
| Camera error                       | A camera connection error occurred.<br>Make sure that the connector between the camera and the Controller is connected correctly.                                                                                                                                                                                                                                                                                                                                    | p.29      |
| Calibration failed.                | Execute sampling or specify points at three locations that are not on a straight line.                                                                                                                                                                                                                                                                                                                                                                               | p.92      |
| SYSTEM ERROR (BOOT error)          | A hardware error occurred.<br>A probable cause is a Controller malfunction.<br>Contact an OMRON sales representative.                                                                                                                                                                                                                                                                                                                                                | -         |
| Communication error                | A serial communications (RS-232C/422) error occurred.<br><ul style="list-style-type: none"> <li>• Make sure that the serial cable is connected correctly.</li> <li>• Make sure that the communications specifications of the Controller match those of the external device.</li> <li>• Make sure that the external device is operating correctly.</li> <li>• Make sure that the serial cable is not located near power lines or noise-generating sources.</li> </ul> | p.116     |
| Input value is incorrect.          | The input numerical values are not within the permissible range.<br>Change the numerical values so that they are within the permissible range.                                                                                                                                                                                                                                                                                                                       | -         |
| Password is incorrect.             | Input the correct password.                                                                                                                                                                                                                                                                                                                                                                                                                                          | p.125     |
| Timeout error. (parallel I/O)      | A timeout occurred in parallel I/O.<br><ul style="list-style-type: none"> <li>• Make sure that the DSA signal is connected correctly.</li> <li>• Make sure that the DSA signal is connected correctly to the host side.</li> </ul>                                                                                                                                                                                                                                   | p.117     |
| Insufficient free space of memory. | Delete unwanted banks and measurement items.                                                                                                                                                                                                                                                                                                                                                                                                                         | p.115     |
| Model registration failed.         | Make sure that images are being captured appropriately.<br>If images are too dark, adjust the shutter speed or the brightness of the lighting.                                                                                                                                                                                                                                                                                                                       | p.88, 91  |
| Loaded file is incorrect.          | Specify the correct file and load the file again.                                                                                                                                                                                                                                                                                                                                                                                                                    | p.129     |
| Fan error!                         | A fan error occurred.<br>A probable cause is a Controller malfunction.<br>Contact an OMRON sales representative.                                                                                                                                                                                                                                                                                                                                                     | -         |

# List of Available Functions for Each Camera

|                      |            |            | Gain      | Image Rate    | Partial Function | Shutter Speed             | Lighting control |
|----------------------|------------|------------|-----------|---------------|------------------|---------------------------|------------------|
| Camera with lighting | Monochrome | ZFX-SR10   | Available | Available     | Not available    | Available <sup>(*)1</sup> | Available        |
|                      |            | ZFX-SR50   | Available | Available     | Not available    | Available <sup>(*)1</sup> | Available        |
|                      | Color      | ZFX-SC10   | Available | Not available | Available        | Available <sup>(*)1</sup> | Available        |
|                      |            | ZFX-SC50_  | Available | Not available | Available        | Available <sup>(*)1</sup> | Available        |
|                      |            | ZFX-SC90_  | Available | Not available | Available        | Available <sup>(*)1</sup> | Available        |
|                      |            | ZFX-SC150_ | Available | Not available | Available        | Available <sup>(*)1</sup> | Not available    |
| Camera only          | Monochrome | ZFX-S      | Available | Available     | Not available    | Available <sup>(*)1</sup> | Not available    |
|                      | Color      | ZFX-SC     | Available | Not available | Available        | Available <sup>(*)1</sup> | Not available    |

\*1: The shutter speed is determined by the image rate and partial function settings.

## Image Rate/Partial Function and Shutter Speeds

|                                    |                       | Shutter Speed (s)                |           |           |           |           |           |           |           |           |           |
|------------------------------------|-----------------------|----------------------------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
|                                    |                       | 1/170<br>1/200<br>1/300<br>1/500 | 1/1000    | 1/1400    | 1/1500    | 1/2000    | 1/2500    | 1/3000    | 1/4000    | 1/8000    | 1/20000   |
| ZFX-SR_                            | Image rate Fine       | (*)2                             | Available | Available | Available | Available | Available | Available | Available | Available | Available |
|                                    | Image rate Normal     | (*)2                             | (*)2      | (*)2      | (*)2      | Available | Available | Available | Available | Available | Available |
|                                    | Image rate High speed | (*)2                             | (*)2      | (*)2      | (*)2      | (*)2      | (*)2      | (*)2      | Available | Available | Available |
| ZFX-SC10<br>ZFX-SC50_<br>ZFX-SC90_ | Partial function None | (*)2                             | Available | Available | Available | Available | Available | Available | Available | Available | Available |
|                                    | Partial 1/2           | (*)2                             | Available | Available | Available | Available | Available | Available | Available | Available | Available |
|                                    | Partial 1/4           | (*)2                             | (*)2      | (*)2      | (*)2      | Available | Available | Available | Available | Available | Available |
| ZFX-SC150_<br>(*)1                 | Partial function None | (*)2                             | Available | Available | Available | Available | Available | Available | Available | Available | Available |
|                                    | Partial 1/2           | (*)2                             | Available | Available | Available | Available | Available | Available | Available | Available | Available |
|                                    | Partial 1/4           | (*)2                             | Available | Available | Available | Available | Available | Available | Available | Available | Available |
| ZFX-S                              | Image rate Fine       | (*)2                             | Available | Available | Available | Available | Available | Available | Available | Available | Available |
|                                    | Image rate Normal     | (*)2                             | (*)2      | (*)2      | (*)2      | Available | Available | Available | Available | Available | Available |
|                                    | Image rate High speed | (*)2                             | (*)2      | (*)2      | (*)2      | (*)2      | (*)2      | (*)2      | Available | Available | Available |
| ZFX-SC                             | Partial function None | (*)2                             | Available | Available | Available | Available | Available | Available | Available | Available | Available |
|                                    | Partial 1/2           | (*)2                             | Available | Available | Available | Available | Available | Available | Available | Available | Available |
|                                    | Partial 1/4           | (*)2                             | (*)2      | (*)2      | (*)2      | Available | Available | Available | Available | Available | Available |

\*1: The LED lights for 1 ms only when it is turned ON/OFF.

\*2: These shutter speeds can be selected only when the lighting is turned OFF.

# AUTO Setting

Support functions for automatically optimally adjusting the measurement conditions are collectively referred to as the "AUTO setting."

The [AUTO] button is displayed at the bottom of screens that support execution of the AUTO setting.


The following explains the screens in which the [AUTO] button is displayed and items that are automatically set.

## AUTO Setting of Measurement Items

Basic setting of measurement items is completed by selecting the measurement item, setting measurement regions, and then executing automatic setting.


### step1

Selecting measurement items

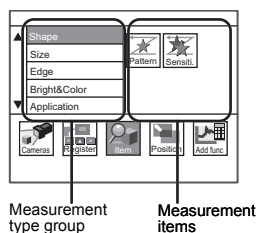

### step2


Setting measurement regions

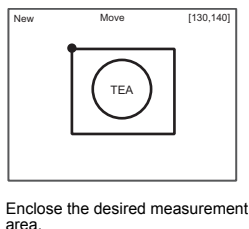

Enclose the desired measurement area.

### step3

Executing automatic setting

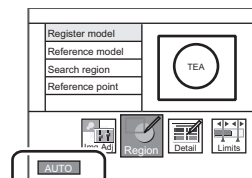

The optimum measurement conditions are automatically set just by selecting [AUTO]. Measurement conditions can also be checked and changed.

## Automatically Set Items

| Item                                     | Explanation                                                                                                                                                                                                                                                                                                                                                      |
|------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Color filter                             | The currently displayed image is analyzed to automatically select the optimum color filter for measurement items that use a color filter.<br>(Measurement items that use a color filter: Pattern Search, Sensitive Search, Position, Width, Count, Angle, Defect)                                                                                                |
| Model image                              | The image after the automatically set optimum color filter is applied is registered as the model for measurement items that use a model.<br>When only the region is changed after AUTO setting is executed, the model image and not the color filter is updated.<br>(Measurement items that require registration of the model: Pattern Search, Sensitive Search) |
| Threshold                                | The threshold values are automatically set for the following measurement items:<br>(Area, Position, Width, Count, Angle, Bright, HUE)                                                                                                                                                                                                                            |
| Edge search color of detailed conditions | The edge search color of detailed conditions is automatically set for measurement items in edge inspection.<br>(Measurement items in edge inspection: Position, Width, Count, Angle)                                                                                                                                                                             |
| Reference value                          | The measurement value of the currently displayed image is registered as the reference value.<br>This reference value is updated when the region is changed and AUTO setting need not be executed again.                                                                                                                                                          |


# AUTO Setting in Individual Adjustment Screens

The ZFX displays candidates to support setting of items that take time to adjust.

## Automatic Pickup of Candidate Color

The currently displayed image is analyzed to pick up a maximum of four candidate colors for the measurement target.

 Color Pickup p.192

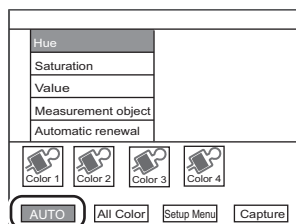


## AUTO Selection of Color Filter

The currently displayed image is analyzed to automatically select the optimum color filter.

This is used to adjust only the color filter independently of AUTO setting of measurement items.


 Color Filter p.190

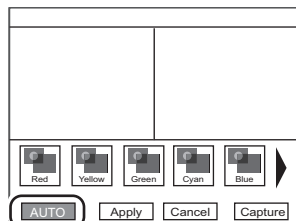

## AUTO Setting of Lighting

Candidate lighting patterns are displayed as images.

 Light Control (Recipe Functions) p.91

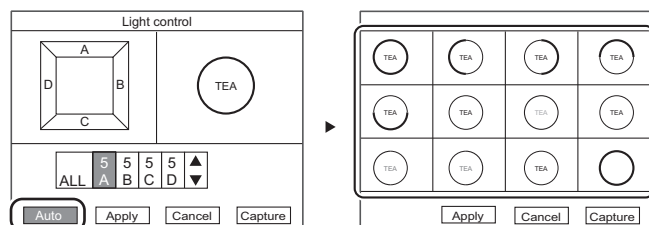




# Specifications and External Dimensions

## Camera

### Specifications






#### Camera with lighting

#### ZFX-SR10/SR50 (monochrome type)
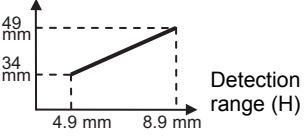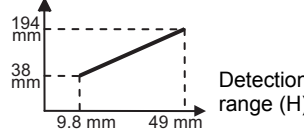
| Item                                                      |                                                                                   | ZFX-SR10                                                                                  | ZFX-SR50                                                                           |
|-----------------------------------------------------------|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------|
| Detection range (H x V)                                   |  | 4.9 mm x 4.9 mm to 8.9 mm x 8.9 mm<br>(variable range)                                    | 9.8 mm x 9.8 mm to 49 mm x 49 mm<br>(variable range)                               |
|                                                           |                                                                                   |                                                                                           |                                                                                    |
| Setting distance (L)                                      |                                                                                   | 34 mm to 49 mm                                                                            | 38 mm to 194 mm                                                                    |
| Relationship between setting distance and detection range |                                                                                   |          |  |
| Image capture element                                     |                                                                                   | All-pixel capture inter-line transfer type 1/3" CCD (monochrome)                          |                                                                                    |
| Effective number of pixels                                |                                                                                   | 659(H) x 494 (V)                                                                          |                                                                                    |
| Pixel size                                                |                                                                                   | 7.4 μm (H) x 7.4 μm (V)                                                                   |                                                                                    |
| Shutter speed                                             |                                                                                   | 1/170 to 1/20000 s                                                                        |                                                                                    |
| Partial function (partial capture)                        |                                                                                   | OFF                                                                                       |                                                                                    |
| Image rate function                                       |                                                                                   | Fine, Normal, High speed                                                                  |                                                                                    |
| Frame rate (at capture of entire screen)                  |                                                                                   | 90 fps                                                                                    |                                                                                    |
| Lighting                                                  | Lighting method                                                                   | Pulse lighting                                                                            |                                                                                    |
|                                                           | LED                                                                               | Red LED                                                                                   |                                                                                    |
|                                                           | Type                                                                              | Direct lighting                                                                           |                                                                                    |
|                                                           | Guide light                                                                       | Available (center, measurement region)                                                    |                                                                                    |
|                                                           | Optional lighting I/F                                                             | Not available                                                                             |                                                                                    |
| Ratings                                                   | Power supply voltage (supplied from Controller)                                   | 15 VDC                                                                                    |                                                                                    |
|                                                           | Current consumption                                                               | Approx. 200 mA                                                                            |                                                                                    |
| Operation environment robustness                          | Ambient temperature range                                                         | Operating: 0 to + 40°C, Storage: -20 to +65°C (with no icing or condensation)             |                                                                                    |
|                                                           | Ambient humidity range                                                            | Operating and storage: 35% to 85% (with no condensation)                                  |                                                                                    |
|                                                           | Ambient atmosphere                                                                | No corrosive gases allowed                                                                |                                                                                    |
|                                                           | Degree of protection                                                              | IP65 (IEC60529)                                                                           |                                                                                    |
|                                                           | Dielectric strength                                                               | 1000 VAC 50 Hz/60 Hz 1 min                                                                |                                                                                    |
|                                                           | Vibration resistance (durability)                                                 | 10 to 150 Hz Single-amplitude 0.35 mm 10 times for 8 min each in X, Y, and Z directions   |                                                                                    |
|                                                           | Shock resistance (destructive)                                                    | 150 m/s <sup>2</sup> 3 times each in 6 directions (up/down, left/right, forward/backward) |                                                                                    |
| Connection method                                         |                                                                                   | Cable built-in type (cable length: 2 m)                                                   |                                                                                    |
| Material                                                  |                                                                                   | Case: ABS, mounting fixture: PBT                                                          |                                                                                    |
| Weight                                                    |                                                                                   | Approx. 200 g (including mounting fixture and cable)                                      |                                                                                    |
| Accessories                                               |                                                                                   | mounting fixture (ZFV-XMF) 1 p'ce, Ferrite core 2 p'ces, Instruction Sheet                |                                                                                    |



## ZFX-SC10/SC50/SC50W/SC90/SC90W/SC150/SC150W (color type)
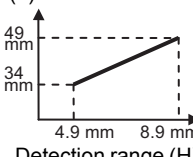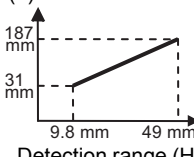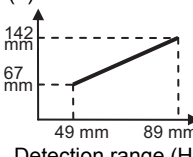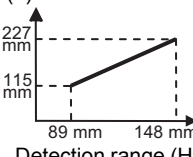
| Item                                                                                                         |                                                 | ZFX-SC10                                                                                                                         | ZFX-SC50/SC50W                                                                                                                      | ZFX-SC90/SC90W                                                                                                                    | ZFX-SC150/SC150W                                                                                                                   |
|--------------------------------------------------------------------------------------------------------------|-------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------|
| Detection range (H x V)<br> |                                                 | 4.9 mm x 4.9 mm to 8.9 mm x 8.9 mm (variable range)                                                                              | 9.8 mm x 9.8 mm to 49 mm x 49 mm (variable range)                                                                                   | 49 mm x 49 mm to 89 mm x 89 mm (variable range)                                                                                   | 89 mm x 89 mm to 148 mm x 148 mm (variable range)                                                                                  |
| Setting distance (L)                                                                                         |                                                 | 34 mm to 49 mm                                                                                                                   | 31 mm to 187 mm                                                                                                                     | 67 mm to 142 mm                                                                                                                   | 115 mm to 227 mm                                                                                                                   |
| Relationship between setting distance and detection range                                                    |                                                 | Setting distance (L)<br><br>Detection range (H) | Setting distance (L)<br><br>Detection range (H)    | Setting distance (L)<br><br>Detection range (H) | Setting distance (L)<br><br>Detection range (H) |
| Image capture element                                                                                        |                                                 | All-pixel capture inter-line transfer type 1/3" CCD (color)                                                                      |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
| Effective number of pixels                                                                                   |                                                 | 659(H) x 494 (V)                                                                                                                 |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
| Pixel size                                                                                                   |                                                 | 7.4 μm (H) x 7.4 μm (V)                                                                                                          |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
| Shutter speed                                                                                                |                                                 | 1/170 to 1/20000 s                                                                                                               |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
| Partial function (partial capture)                                                                           |                                                 | 1/2 partial, 1/4 partial                                                                                                         |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
| Image rate function                                                                                          |                                                 | Not available                                                                                                                    |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
| Frame rate (at capture of entire screen)                                                                     |                                                 | 90 fps                                                                                                                           |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
| Lighting                                                                                                     | Lighting method                                 | Pulse lighting                                                                                                                   |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
|                                                                                                              | LED                                             | White LED                                                                                                                        |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
|                                                                                                              | Type                                            | Direct lighting                                                                                                                  |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
|                                                                                                              | Guide light                                     | Not available                                                                                                                    |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
|                                                                                                              | Optional lighting I/F                           | Not available                                                                                                                    | Available (ZFV-LT)                                                                                                                  |                                                                                                                                   | Not available                                                                                                                      |
|                                                                                                              | Indicator Class <sup>*1</sup>                   | -                                                                                                                                | Risk Group 1                                                                                                                        | Risk Group 1                                                                                                                      | -                                                                                                                                  |
| Ratings                                                                                                      | Power supply voltage (supplied from Controller) | 15 VDC                                                                                                                           | 15 VDC, 48 VDC                                                                                                                      |                                                                                                                                   |                                                                                                                                    |
|                                                                                                              | Current consumption                             | Approx. 200 mA                                                                                                                   | Approx. 350 mA (15 VDC: approx. 150 mA, 48 VDC: approx. 200 mA) (including current consumption when optional lighting is connected) |                                                                                                                                   |                                                                                                                                    |
| Operation environment robustness                                                                             | Ambient temperature range                       | Operating: 0 to +40°C, Storage: -20 to +65°C (with no icing or condensation)                                                     |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
|                                                                                                              | Ambient humidity range                          | Operating and storage: 35% to 85% (with no condensation)                                                                         |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
|                                                                                                              | Ambient atmosphere                              | No corrosive gases allowed                                                                                                       |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
|                                                                                                              | Degree of protection                            | ZFX-SC___: IP65 (IEC60529), ZFX-SC___W: IP67 (IEC60529)                                                                          |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
|                                                                                                              | Dielectric strength                             | 1000 VAC 50 Hz/60 Hz 1 min                                                                                                       |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
|                                                                                                              | Vibration resistance (durability)               | 10 to 150 Hz Single-amplitude 0.35 mm Acceleration: 50 m/s <sup>2</sup> 10 times for 8 min each in X, Y, and Z directions        |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
|                                                                                                              | Shock resistance (destructive)                  | 150 m/s <sup>2</sup> 3 times each in 6 directions (up/down, left/right, forward/backward)                                        |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
| Connection method                                                                                            |                                                 | Cable built-in type (standard cable length: 2 m)                                                                                 |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
| Material                                                                                                     |                                                 | Case: ABS, mounting fixture: PBT                                                                                                 |                                                                                                                                     |                                                                                                                                   |                                                                                                                                    |
| Weight                                                                                                       |                                                 | Approx. 200 g (including mounting fixture and cable)                                                                             | Approx. 270 g (including mounting fixture and cable)                                                                                | Approx. 300 g (including mounting fixture and cable)                                                                              | Approx. 600 g (including mounting fixture and cable)                                                                               |
| Accessories                                                                                                  |                                                 | mounting fixture (ZFV-XMF) 1 p'ce, Ferrite core 2 p'ces, Instruction Sheet                                                       | mounting fixture (ZFV-XMF2) 1 p'ce, Ferrite core 2 p'ces, Instruction Sheet                                                         | mounting fixture (ZFV-XMF2) 1 p'ce, Ferrite core 2 p'ces, Instruction Sheet                                                       | Ferrite core 2 p'ces, Instruction Sheet                                                                                            |

\*1: Applicable standards IEC62471

## Camera only

### ZFX-S/SC


| Item                                        |                                                       | ZFX-S (monochrome type)                                                                                                                                            | ZFX-SC (color type)                                            |
|---------------------------------------------|-------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------|
| Image capture element                       |                                                       | All-pixel capture inter-line transfer type<br>1/3" CCD (monochrome)                                                                                                | All-pixel capture inter-line transfer type<br>1/3" CCD (color) |
| Effective number of pixels                  |                                                       | 659 (H) x 494 (V)                                                                                                                                                  |                                                                |
| Pixel size                                  |                                                       | 7.4 μm (H) x 7.4 μm (V)                                                                                                                                            |                                                                |
| Shutter speed                               |                                                       | 1/170 to 1/20000 s                                                                                                                                                 |                                                                |
| Partial function (partial capture)          |                                                       | Not available                                                                                                                                                      | 1/2 partial, 1/4 partial                                       |
| Image rate function                         |                                                       | Fine, Normal, High speed                                                                                                                                           | Not available                                                  |
| Frame rate<br>(at capture of entire screen) |                                                       | 90 fps                                                                                                                                                             |                                                                |
| Lens mount                                  |                                                       | C mount                                                                                                                                                            |                                                                |
| Lighting                                    | Optional lighting<br>I/F                              | Available<br>External lighting: 3Z4S-LT *1<br>Flash Controller: made by Moritex Corporation 3Z4S-LT MLEK-C100E1TSX *1                                              |                                                                |
| Ratings                                     | Power supply<br>voltage (supplied<br>from Controller) | 15 VDC, 48 VDC                                                                                                                                                     |                                                                |
|                                             | Current consumption                                   | Approx. 160 mA                                                                                                                                                     |                                                                |
| Operation<br>environment<br>robustness      | Ambient<br>temperature range                          | Operating: 0 to + 50°C, Storage: -25 to +65°C (with no icing or condensation)                                                                                      |                                                                |
|                                             | Ambient humidity<br>range                             | Operating and storage: 35% to 85% (with no condensation)                                                                                                           |                                                                |
|                                             | Ambient atmo-<br>sphere                               | No corrosive gases allowed                                                                                                                                         |                                                                |
|                                             | Degree of protection                                  | IP20 (IEC60529)                                                                                                                                                    |                                                                |
|                                             | Dielectric strength                                   | 500 VAC 50 Hz/60 Hz 1 min                                                                                                                                          |                                                                |
|                                             | Vibration resis-<br>tance (durability)                | 10 to 150 Hz Single-amplitude 0.35 mm Acceleration: 50 m/s <sup>2</sup> 10 times for 8 min each in X, Y, and Z directions                                          |                                                                |
|                                             | Shock resistance<br>(destructive)                     | 150 m/s <sup>2</sup> 3 times each in 6 directions (up/down, left/right, forward/backward)                                                                          |                                                                |
| Connection method                           |                                                       | Connector connection type (camera cable ZFX-VS/VSR required)                                                                                                       |                                                                |
| Material                                    |                                                       | Case: Aluminum die cast alloy (C mount section), zinc die cast alloy (mounting base side), Cover: Zinc-plated copper plate 0.5 mm thick, Camera mounting base: ABS |                                                                |
| Weight                                      |                                                       | Approx. 80 g                                                                                                                                                       |                                                                |
| Accessories                                 |                                                       | Instruction Sheet                                                                                                                                                  |                                                                |

\*1: 3Z4S-LT are not yet released for overseas.


## External Dimensions

### Camera with lighting


#### ZFX-SR10/SR50 (monochrome type)

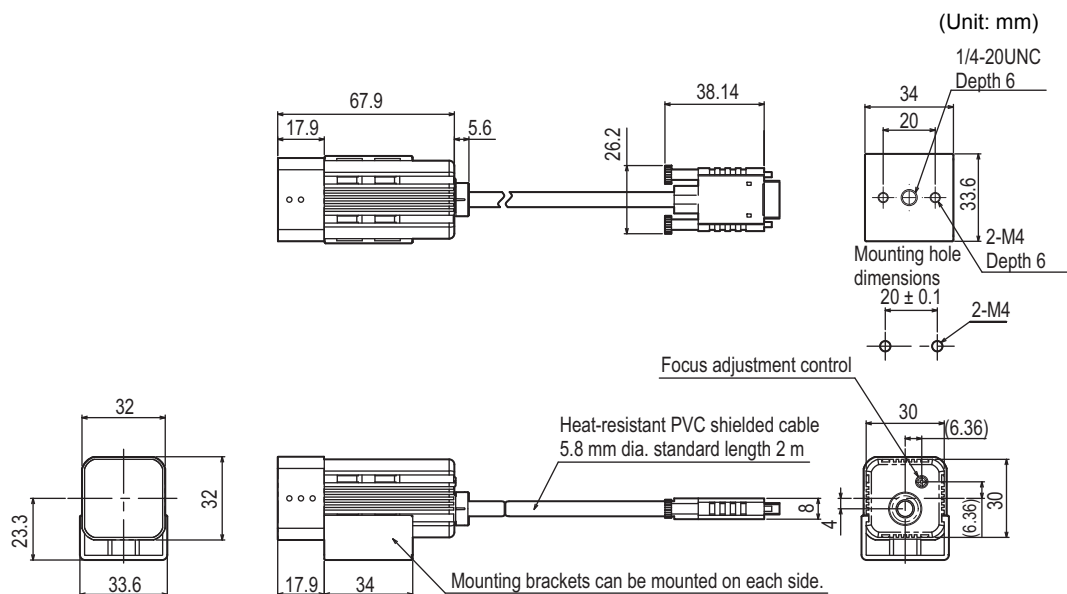


#### ZFX-SC10 (color type)

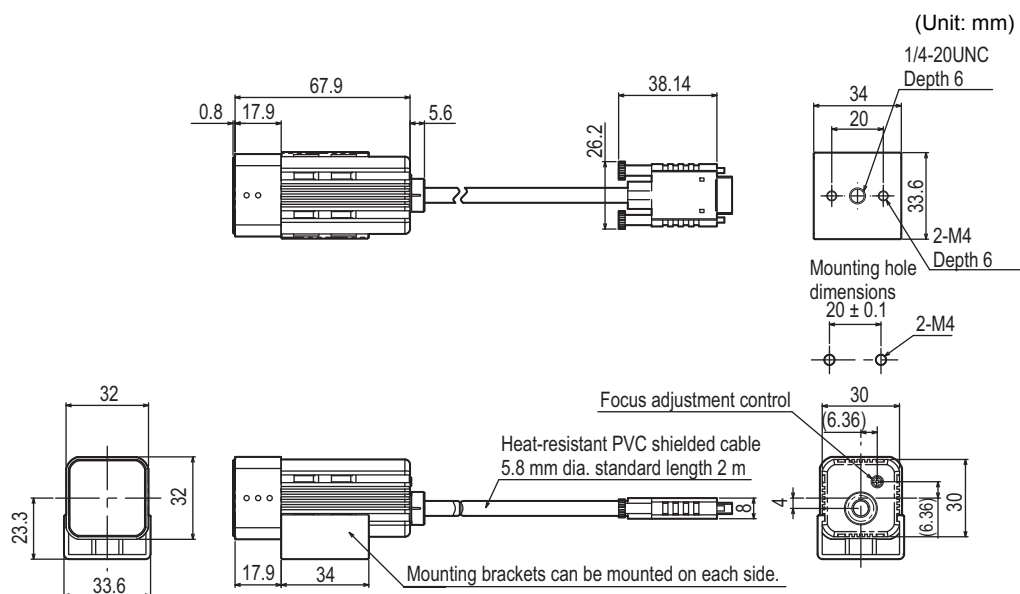


## ZFX-SC50/SC50W (color type)

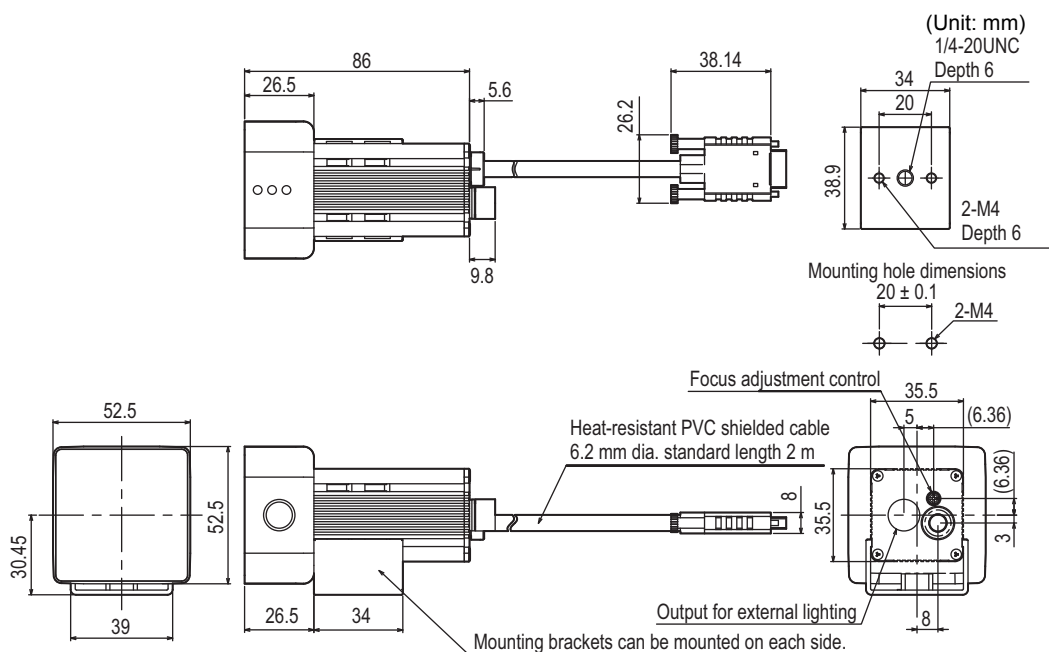

## ZFX-SC90/SC90W (color type)

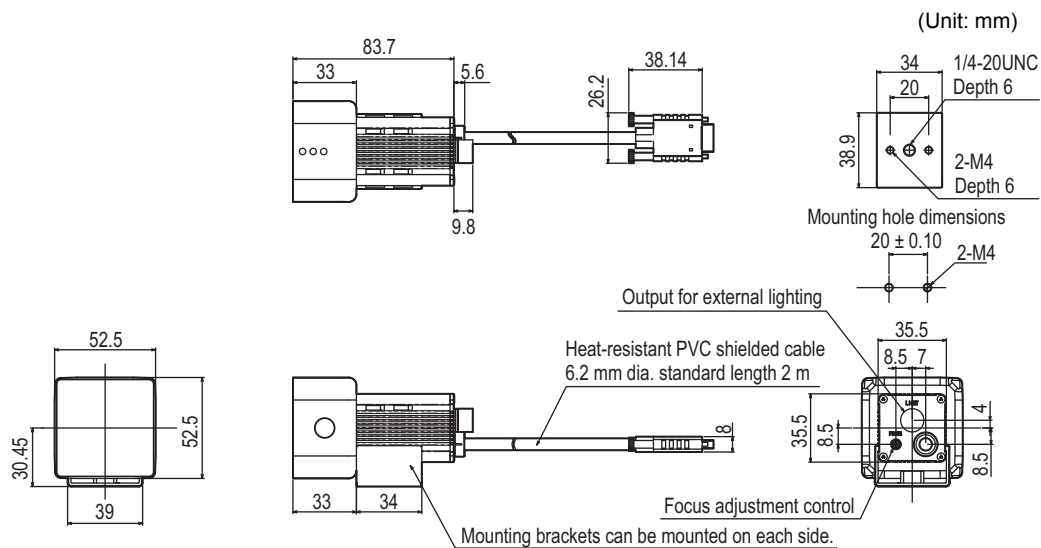


## ZFX-SC150/SC150W (color type)

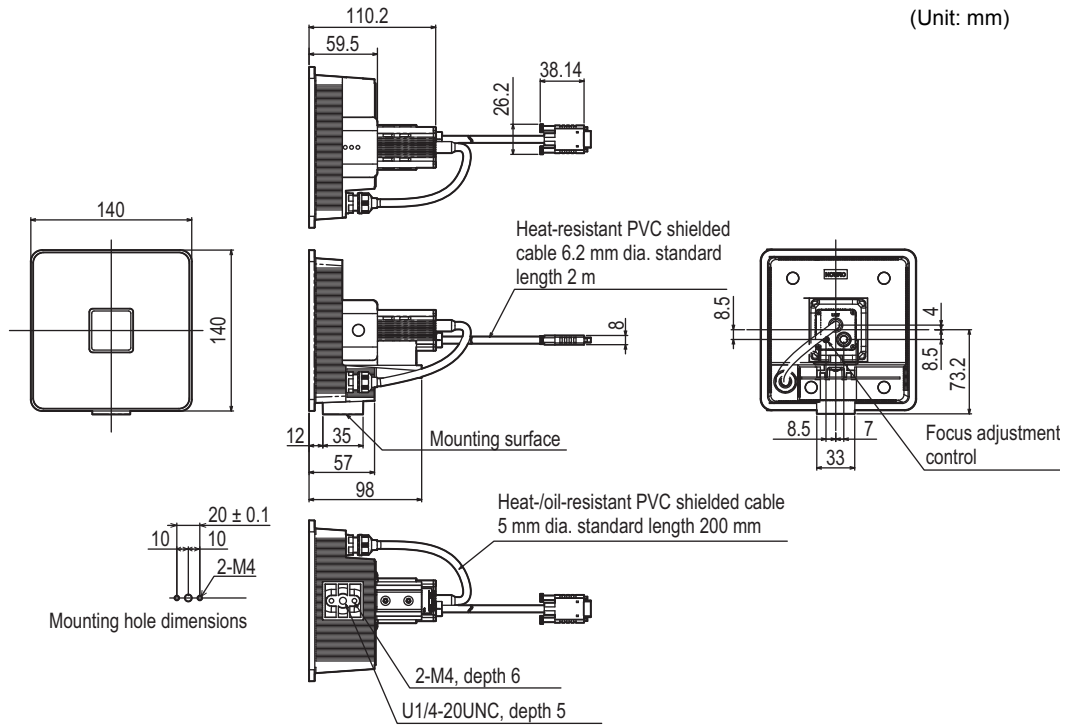

### Camera only

## ZFX-S (monochrome type) /SC (color type)

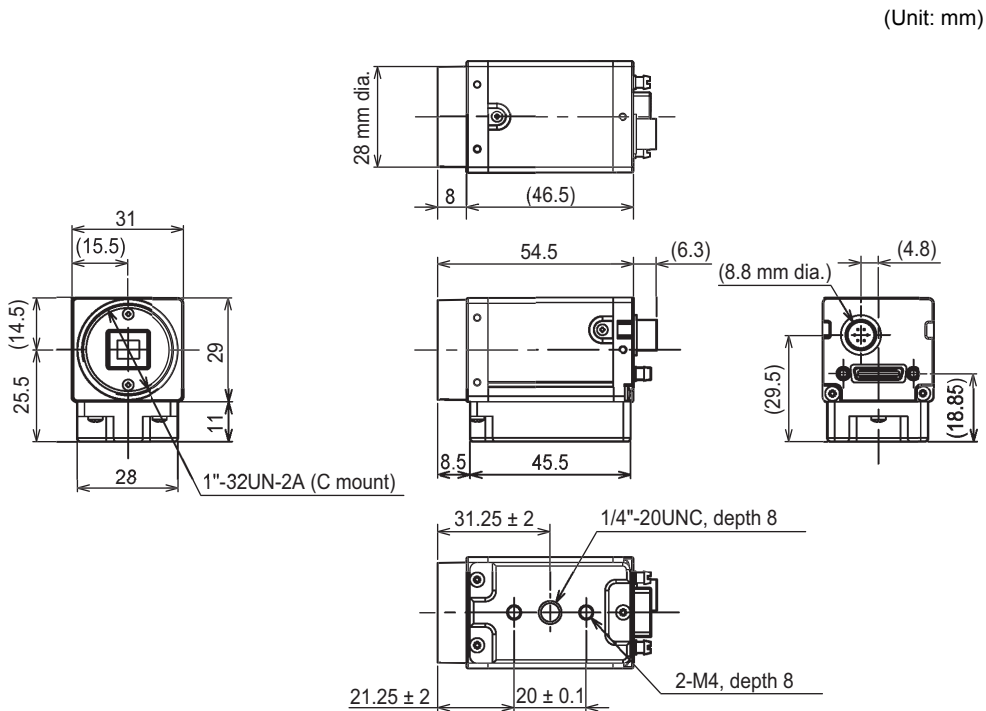

# Controller

## Specifications




### ZFX-C10/C15

| Item                             |                                   | ZFX-C10                                                                                                                                                                                   | ZFX-C15                                                                        |
|----------------------------------|-----------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
| Number of connected cameras      |                                   | 1                                                                                                                                                                                         |                                                                                |
| Connectable camera               |                                   | ZFX-SR_/SC_/S/SC                                                                                                                                                                          |                                                                                |
| Processing resolution            |                                   | When ZFX-SR_/SC_ is connected:464 (H) x464 (V)<br>When ZFX-S/SC is connected:608 (H) x464 (V)                                                                                             |                                                                                |
| Display                          | LCD monitor                       | 3.5" TFT color LCD (320 x 240 pixels)                                                                                                                                                     |                                                                                |
|                                  | Indicator                         | "Measuring" indicator (color: green): RUN<br>Trigger indicator (color: blue): ENABLE<br>Judgment indicator (color: orange): OUTPUT<br>Error indicator (color: red): ERROR                 |                                                                                |
| External I/F                     | Parallel interface                | Input                                                                                                                                                                                     | 12 points (RESET, DSA, DI0 to 8, TRIG)                                         |
|                                  |                                   | Output                                                                                                                                                                                    | 23 points (OR, ERROR, RUN, ENABLE, GATE, STGOUT0, DO0 to 15)                   |
|                                  |                                   | Circuit type                                                                                                                                                                              | NPN PNP                                                                        |
|                                  | Serial interface                  | USB2.0                                                                                                                                                                                    | 1 port, FULL SPEED, MINI-B connector                                           |
|                                  |                                   | RS-232C                                                                                                                                                                                   | 1 port, max. 115200 bps (cannot be used simultaneously with RS-422 interface)  |
|                                  |                                   | RS-422                                                                                                                                                                                    | 1 port, max. 115200 bps (cannot be used simultaneously with RS-232C interface) |
|                                  | Network communications            | Ethernet                                                                                                                                                                                  | 1 port, 100BASE-TX/10BASE-T                                                    |
|                                  | Monitor output                    |                                                                                                                                                                                           | Analog RGB output, 1 ch (resolution VGA: 640 x 480)                            |
|                                  | Memory card I/F                   |                                                                                                                                                                                           | SD card slot 1 ch                                                              |
| Operation I/F                    |                                   | Touch panel, key operation, console connection                                                                                                                                            |                                                                                |
| Main functions                   | Number of registered banks        |                                                                                                                                                                                           | 32 banks                                                                       |
|                                  | Number of setup items             |                                                                                                                                                                                           | 32 items/1 bank                                                                |
|                                  | Measurement items                 | Shape inspection                                                                                                                                                                          | Pattern search, sensitive search                                               |
|                                  |                                   | Size inspection                                                                                                                                                                           | Area                                                                           |
|                                  |                                   | Edge inspection                                                                                                                                                                           | Position, width, count, angle                                                  |
|                                  |                                   | Brightness/color inspection                                                                                                                                                               | Brightness, HUE                                                                |
|                                  |                                   | Application-based inspection                                                                                                                                                              | Defects                                                                        |
|                                  | Position correction               |                                                                                                                                                                                           | 1 model search, 2 model search, position, area                                 |
| Additional functions             | Image memory function             |                                                                                                                                                                                           | Max. 100 images                                                                |
| Menu language                    |                                   | Japanese/English (can be switched)                                                                                                                                                        |                                                                                |
| Ratings                          | Power supply voltage              | 21.6 to 26.4 VDC (including ripple)                                                                                                                                                       |                                                                                |
|                                  | Current consumption               | 1.0 A max.                                                                                                                                                                                |                                                                                |
|                                  | Insulation resistance             | Across all lead wires and controller case: 20 MΩ (by 250 V megger)                                                                                                                        |                                                                                |
|                                  | Dielectric strength               | Across all lead wires and controller case, 1000 VAC, 50/60 Hz, 1 min                                                                                                                      |                                                                                |
| Operation environment robustness | Ambient temperature range         | Operating: 0 to + 50°C, Storage: -15 to +60°C (with no icing or condensation)                                                                                                             |                                                                                |
|                                  | Ambient humidity range            | Operating and storage: 35% to 85% (with no condensation)                                                                                                                                  |                                                                                |
|                                  | Ambient atmosphere                | No corrosive gases allowed                                                                                                                                                                |                                                                                |
|                                  | Degree of protection              | IP20 (IEC60529)                                                                                                                                                                           |                                                                                |
|                                  | Vibration resistance (durability) | Vibration frequency: 10 to 150 Hz Single-amplitude: 0.35 mm<br>Acceleration: 50 m/s <sup>2</sup> 10 times for 8 minutes in X, Y, and Z directions                                         |                                                                                |
|                                  | Shock resistance (destructive)    | 150 m/s <sup>2</sup> 3 times each in 6 directions (up/down, left/right, forward/backward)                                                                                                 |                                                                                |
| Material                         |                                   | Case: Polycarbonate (PC), Plate face: PMMA                                                                                                                                                |                                                                                |
| Weight                           |                                   | Approx. 620 g                                                                                                                                                                             |                                                                                |
| Accessories                      |                                   | Touch pen (ZFX-TP), Exhaust unit (ZFX-EU), Terminal block adapter (ZFX-XTB), Terminal block adapter mounting screws (4 p'ces), Ferrite core (2 p'ces), Instruction Sheet, Power connector |                                                                                |

## External Dimensions

ZFX-C10/C15


(Unit: mm)

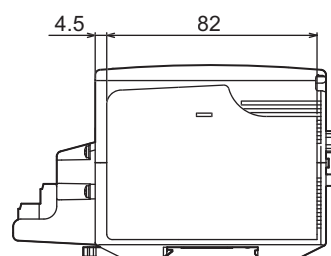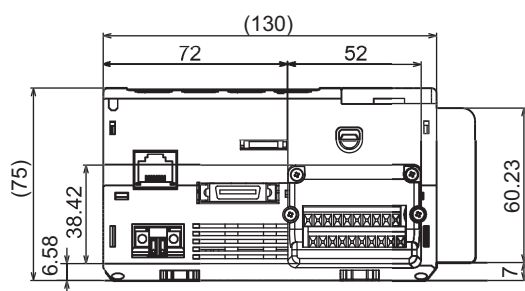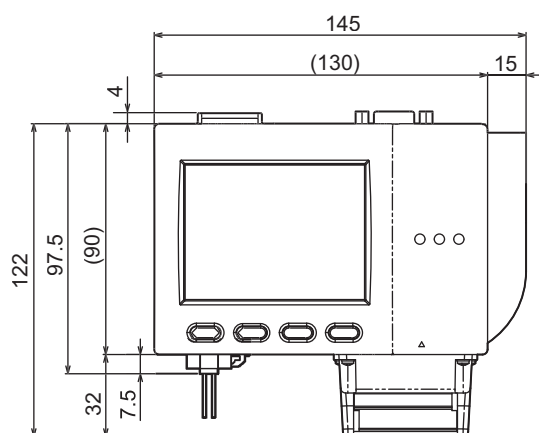

# Accessories & Options

## Camera Cable

### ZFX-VS 3M/8M, ZFX-VSR 3M

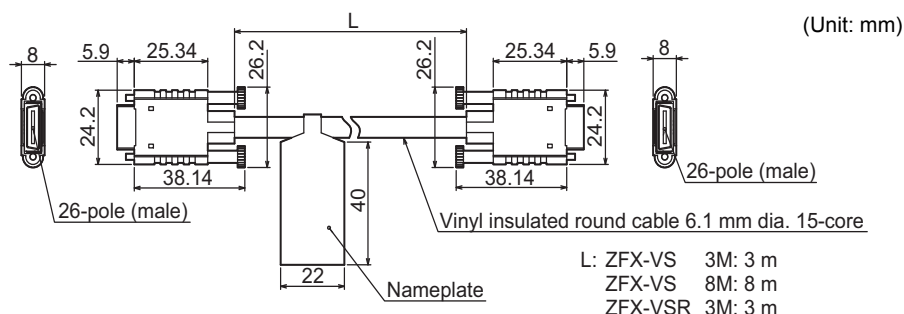


| Item                   | ZFX-VS 3M     | ZFX-VS 8M     | ZFX-VSR 3M <sup>(*)</sup> |
|------------------------|---------------|---------------|---------------------------|
| Applicable controller  | ZFX           |               |                           |
| Cable length           | 3 m           | 8 m           | 3 m                       |
| Minimum bending radius | 40 mm         |               |                           |
| Weight                 | Approx. 250 g | Approx. 550 g | Approx. 250 g             |

\*1: Robot cable type

## Camera Extension Cable

### ZFX-XC3A/XC8A, ZFX-XC3AR

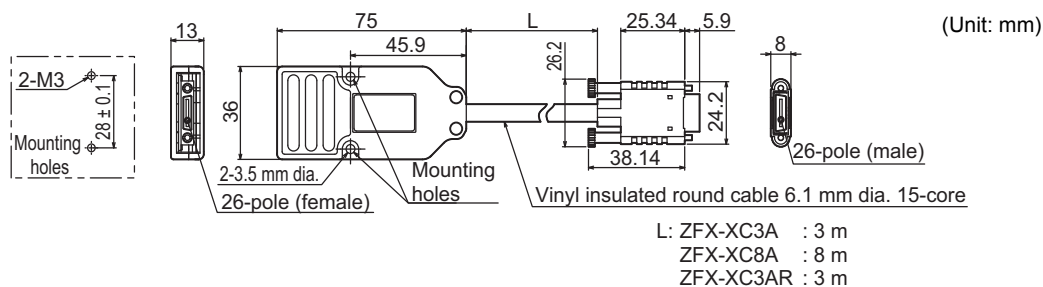

| Item                              | ZFX-XC3A                                                                                  | ZFX-XC8A      | ZFX-XC3AR <sup>(*)</sup> |
|-----------------------------------|-------------------------------------------------------------------------------------------|---------------|--------------------------|
| Applicable controller/camera      | ZFX                                                                                       |               |                          |
| Cable length                      | 3 m                                                                                       | 8 m           | 3 m                      |
| Minimum bending radius            | 40 mm                                                                                     |               |                          |
| Power supply voltage              | 15 VDC                                                                                    |               |                          |
| Current consumption               | Approx. 30 mA (extension cable only. excluding camera)                                    |               |                          |
| Ambient temperature range         | Operating: 0 to + 50°C, Storage: -20 to +65°C (with no icing or condensation)             |               |                          |
| Ambient humidity range            | Operating and storage: 35% to 85% (with no condensation)                                  |               |                          |
| Vibration resistance (durability) | 10 to 150 Hz Single-amplitude 0.35 mm 10 times for 8 min each in X, Y, and Z directions   |               |                          |
| Shock resistance (destructive)    | 150 m/s <sup>2</sup> 3 times each in 6 directions (up/down, left/right, forward/backward) |               |                          |
| Material                          | Case: Polycarbonate (PC)                                                                  |               |                          |
| Weight                            | Approx. 250 g                                                                             | Approx. 550 g | Approx. 250 g            |

\*1: Robot cable type



## Parallel I/O Cable


### ZFX-VP

| Item                   | ZFX-VP                                                                            |
|------------------------|-----------------------------------------------------------------------------------|
| Cable length           | 2 m, 5 m                                                                          |
| Minimum bending radius | 5.5 mm                                                                            |
| Material               | Cable sheath: Non-lead heat-resistant vinyl, Connector: PBT resin/polyamide resin |
| Weight                 | 2 m type approx.100 g, 5 m type approx. 250 g                                     |

## RS-232C/422 Cable

### ZFX-XPT2A/XPT5A/XPT15A (RS-232C), ZFX-XPT2B/XPT5B/XPT15B (RS-422)


(Unit: mm)

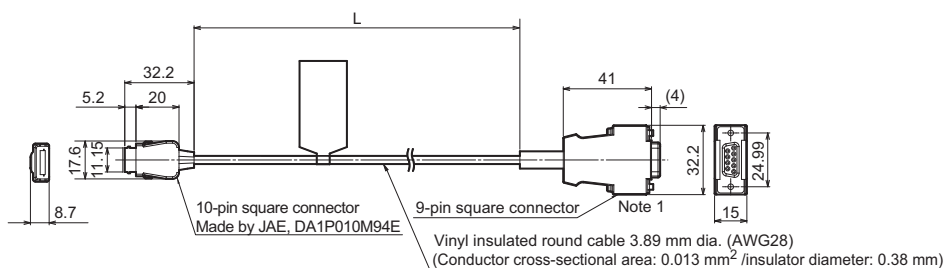

L: ZFX-XPT2 : 2m  
ZFX-XPT5 : 5m  
ZFX-XPT15 : 15m


Note 1: Plug type connector

#### ZFX-XPT2A/XPT5A/XPT15A

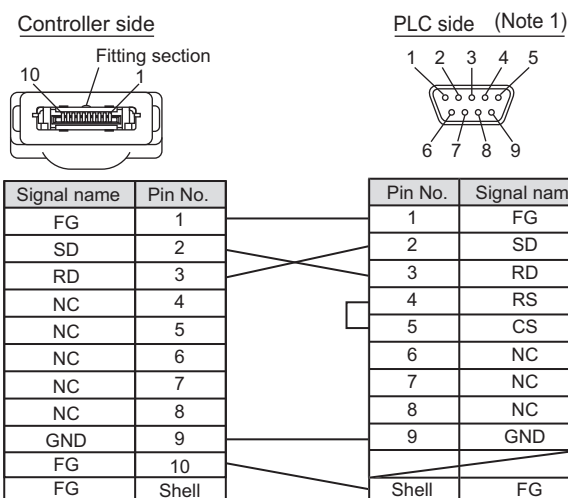

Note 1: Male connector

#### ZFX-XPT2B/XPT5B/XPT15B

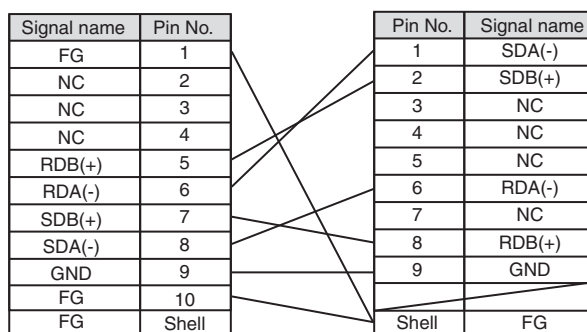


Note 1: Male connector

| Item                   | ZFX-XPT2A                                         | ZFX-XPT2B | ZFX-XPT5A     | ZFX-XPT5B | ZFX-XPT15A    | ZFX-XPT15B |
|------------------------|---------------------------------------------------|-----------|---------------|-----------|---------------|------------|
| Cable length           | 2 m                                               |           | 5 m           |           | 15 m          |            |
| Minimum bending radius | 22.8 mm                                           |           |               |           |               |            |
| Material               | Cable sheath: Heat-resistant vinyl chloride (PVC) |           |               |           |               |            |
| Weight                 | Approx. 50 g                                      |           | Approx. 150 g |           | Approx. 350 g |            |

# LCD Monitor

## FZ-M08

(Unit: mm)

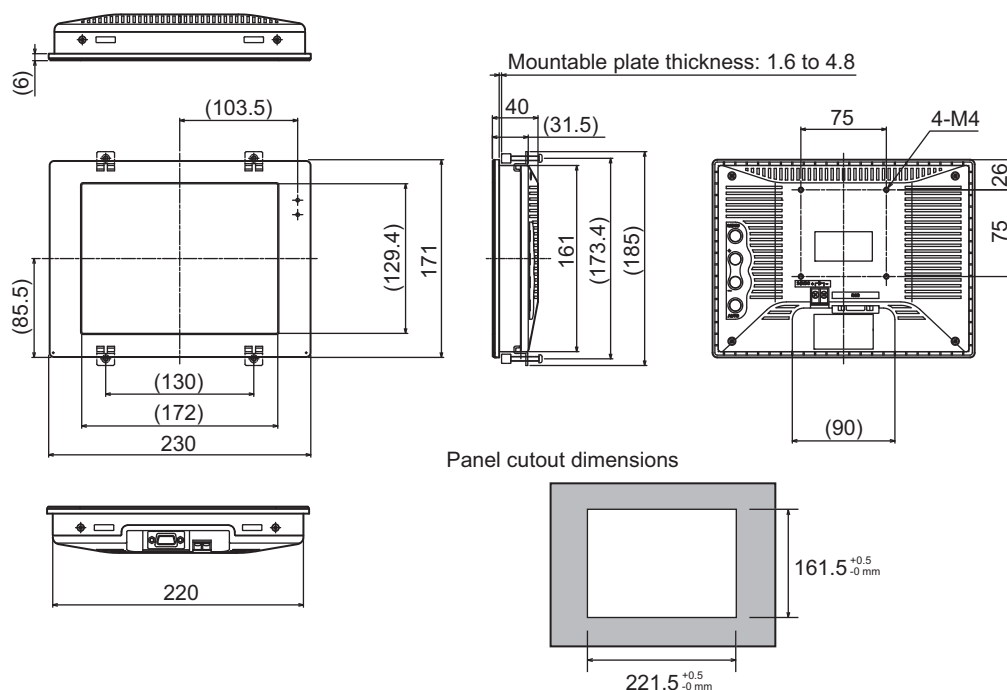


| Item                          | FZ-M08                                                                                                                |
|-------------------------------|-----------------------------------------------------------------------------------------------------------------------|
| Power supply voltage          | 21.6 to 26.4 VDC                                                                                                      |
| Current consumption           | 0.7 A max.                                                                                                            |
| Video input signal            | Analog RGB video input 1 ch                                                                                           |
| Screen size                   | 21.3 cm across corners, 8.4 type or equivalent                                                                        |
| Number of pixels              | 1024 (vertical) x 768 (horizontal) pixels                                                                             |
| Number of display colors      | 16.7 million (8 bits/color)                                                                                           |
| Brightness <sup>(*)</sup>     | 500 cd/m <sup>2</sup>                                                                                                 |
| Contrast ratio <sup>(*)</sup> | 600:1                                                                                                                 |
| Visible angle <sup>(*)</sup>  | Left/right: Angle 65°, Up: 60°, Down: 50° (contrast ratio 10:1 min.)                                                  |
| Backlight                     | Edge light system, White LED                                                                                          |
| Dielectric strength           | Across all DC external terminals and GND: 840 VAC 50/60 Hz                                                            |
| Vibration resistance          | 10 to 150 Hz Single-amplitude 0.1 mm (max. acceleration 15 m/s <sup>2</sup> ) 10 times for 8 min each in 3 directions |
| Ambient temperature range     | Operating: 0 to +50°C, Storage: -20 to +60°C                                                                          |
| Ambient humidity range        | Operating and storage: 20% to 85% (with no condensation)                                                              |
| Degree of protection          | IP20 (IEC60529)                                                                                                       |
| Material                      | Case: PC/PBT, Buttons: ABS                                                                                            |
| Weight                        | Approx. 1,000 g                                                                                                       |

\*1: Specifications of LCD panel. The optical characteristics differ slightly as a protective cover is attached on this product.

## Monitor Cable


### FZ-VM

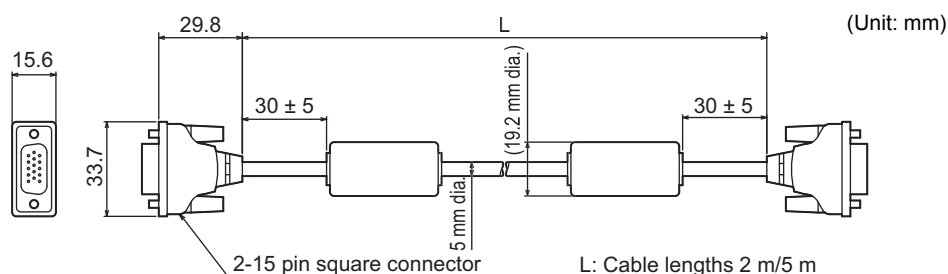

|                        |                                                  |
|------------------------|--------------------------------------------------|
| Item                   | FZ-VM                                            |
| Material               | Cable sheath: Heat-resistant PVC, Connector: PVC |
| Minimum bending radius | 75 mm                                            |
| Weight                 | Approx. 170 g                                    |

## Console

### ZFX-KP

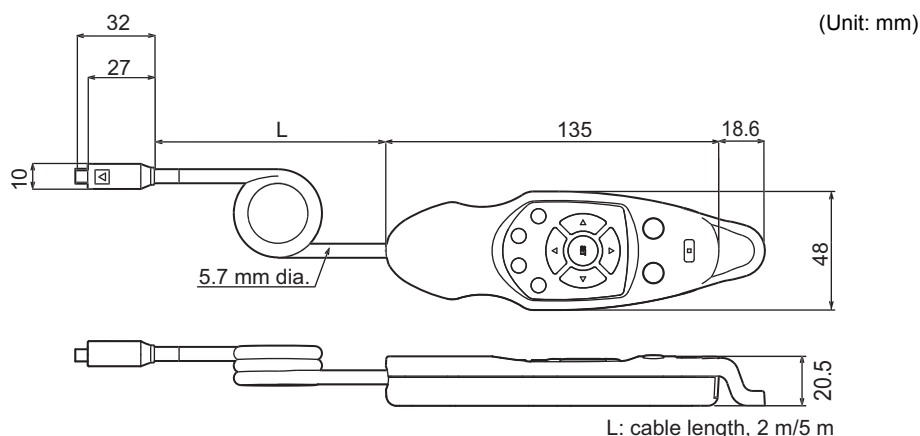

|                                   |                                                                                           |
|-----------------------------------|-------------------------------------------------------------------------------------------|
| Item                              | ZFX-KP                                                                                    |
| Current consumption               | Max. 14 mA (when all buttons are pressed)                                                 |
| Cable length                      | 2 m, 5 m                                                                                  |
| Minimum bending radius            | 75 mm                                                                                     |
| Ambient temperature range         | Operating: 0 to + 50°C, Storage: -15 to +60°C (with no icing or condensation)             |
| Ambient humidity range            | Operating and storage: 35% to 85% (with no condensation)                                  |
| Vibration resistance (durability) | 10 to 150 Hz (0.7 mm double amplitude), 80 min each in X, Y and Z directions              |
| Shock resistance (destructive)    | 300 m/s <sup>2</sup> 3 times each in 6 directions (up/down, left/right, forward/backward) |
| Material                          | Body: ABS, Cable sheath: PVC, Connector: 66 nylon                                         |
| Weight                            | Approx. 260 g (5 m)/Approx. 150 g (2 m)                                                   |

#### Note

Key entry switches are located on the rear of the console.


ENABLE: Entry by console keys is enabled.

DISABLE: Entry by console keys is disabled.(excluding the MENU/ADJ/RUN mode switch)



## Panel Mount Adapters

### ZFX-XPM

(Unit: mm)

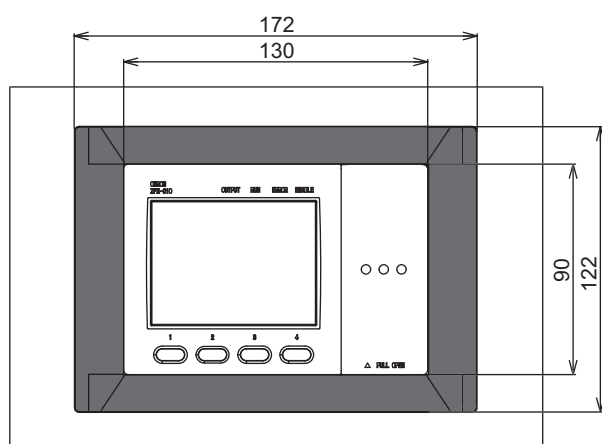

Panel cutout dimensions

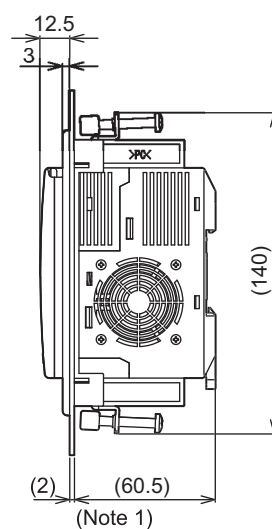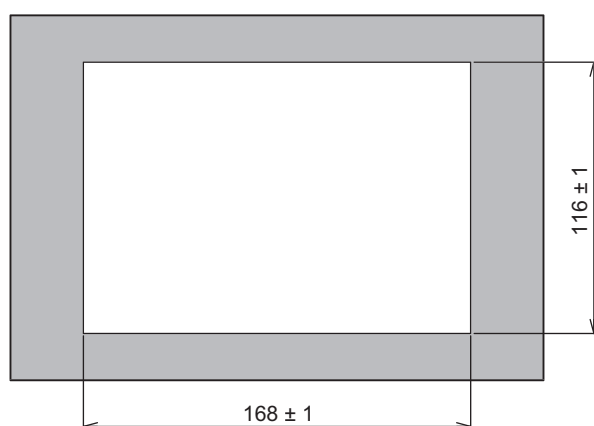


Note 1:  
Dimensions when the panel thickness is 2.0 mm

|                       |                    |
|-----------------------|--------------------|
| Item                  | ZFX-XPM            |
| Applicable controller | ZFX                |
| Material              | Polycarbonate (PC) |
| Weight                | Approx. 100 g      |

### Optional Lighting


### ZFV-LTL01 (bar lighting)

(Unit: mm)

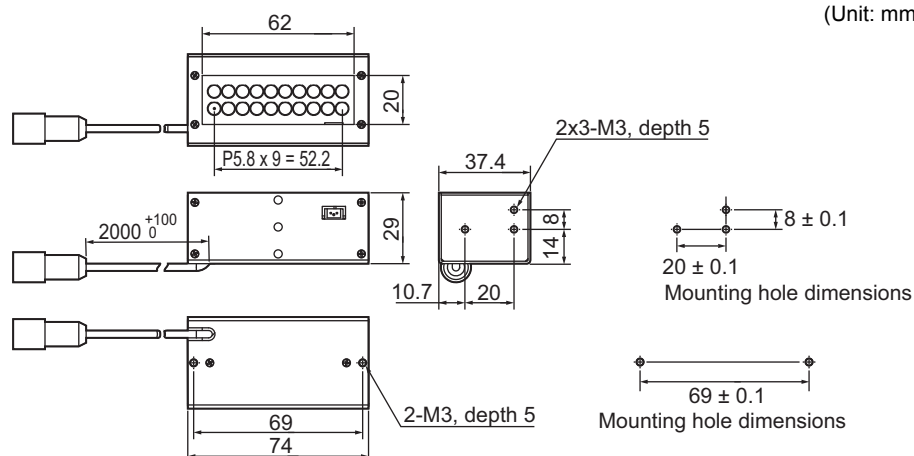


**ZFV-LTL02 (bar double-lighting)**


(Unit: mm)

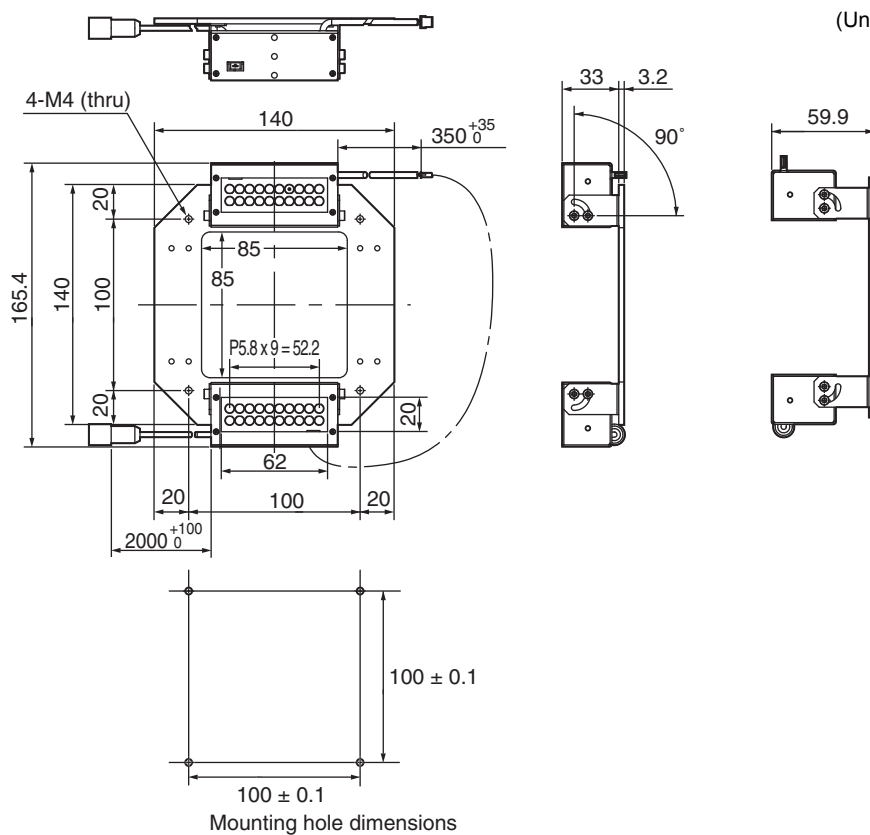

**ZFV-LTL04 (bar low-angle lighting)**

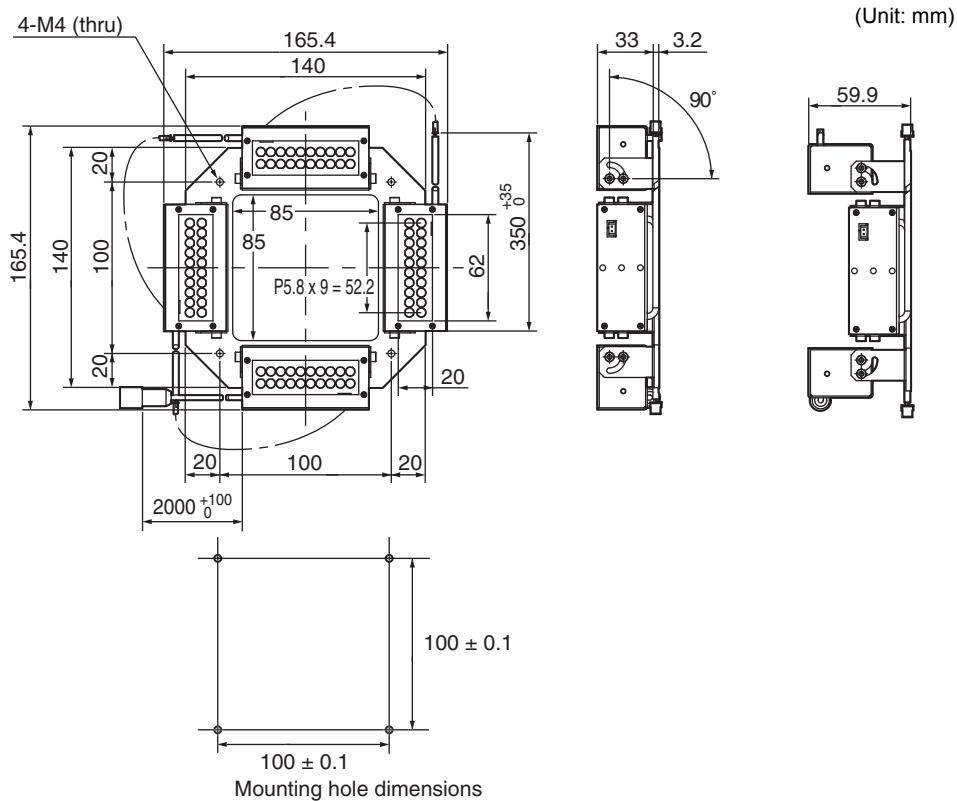

**ZFV-LTF01 (light source for through-beam lighting)**

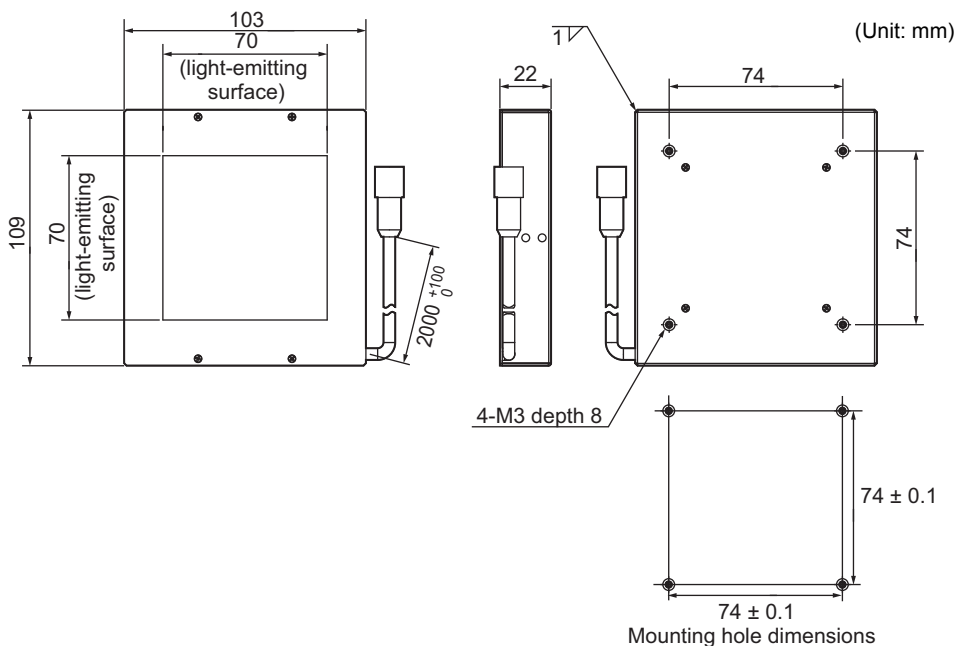

| Item                              | ZFV-LTF01                                                                                 | ZFV-LTL01                                     | ZFV-LTL02                                     | ZFV-LTL04                                       |
|-----------------------------------|-------------------------------------------------------------------------------------------|-----------------------------------------------|-----------------------------------------------|-------------------------------------------------|
| Applicable camera                 | ZFV, ZFX                                                                                  |                                               |                                               |                                                 |
| Lighting method                   | Pulse lighting                                                                            |                                               |                                               |                                                 |
| Lighting interval                 | Fixed (1.1 to 1.4 ms)                                                                     |                                               |                                               |                                                 |
| Lighting source                   | White LEDs x 60 p'ces                                                                     | White LEDs x 20 p'ces                         | White LEDs x 40 p'ces                         | White LEDs x 80 p'ces                           |
| Power supply voltage              | 48 VDC (supplied from camera)                                                             |                                               |                                               |                                                 |
| Current consumption               | Approx. 160 mA                                                                            | Approx. 80 mA                                 | Approx. 120 mA                                | Approx. 210 mA                                  |
| Dielectric strength               | 300 VAC 50 Hz/60 Hz 1 min                                                                 |                                               |                                               |                                                 |
| Vibration resistance (durability) | 10 to 150 Hz Single-amplitude 0.35 mm 10 times for 8 min each in X, Y, and Z directions   |                                               |                                               |                                                 |
| Shock resistance (destructive)    | 150 m/s <sup>2</sup> 3 times each in 6 directions (up/down, left/right, forward/backward) |                                               |                                               |                                                 |
| Ambient temperature range         | Operating: 0 to +40°C, Storage: -20 to +65°C (with no icing or condensation)              |                                               |                                               |                                                 |
| Ambient humidity range            | Operating and storage: 35% to 85% (with no condensation)                                  |                                               |                                               |                                                 |
| Ambient atmosphere                | No corrosive gases allowed                                                                |                                               |                                               |                                                 |
| Connection method                 | Cable built-in type (standard cable length: 2 m)                                          |                                               |                                               |                                                 |
| Degree of protection              | IP20 (IEC60529)                                                                           |                                               |                                               |                                                 |
| Material                          | SPCC                                                                                      | SPCC, aluminum                                |                                               |                                                 |
| Weight                            | Approx. 500 g (packaged state: approx. 550 g)                                             | Approx. 250 g (packaged state: approx. 300 g) | Approx. 650 g (packaged state: approx. 900 g) | Approx. 900 g (packaged state: approx. 1,150 g) |
| LED Class <sup>*1</sup>           | ---                                                                                       | Risk Group 1                                  |                                               |                                                 |

\*1: Applicable standards IEC62471



# LED Safety

For LED devices, class classification to indicate dangerous level and safety standards are stipulated in respective countries.

Take necessary safety preventive measures according to the standards.

## Classification

| Standards and classifications <sup>(*)</sup> |                  |
|----------------------------------------------|------------------|
| IEC62471                                     | FDA (the U.S.A.) |
| ZFX-SC50/SC50W/SC90/SC90W: Risk Group 1      | (Exception)      |

\*1: Safety standards vary with the country in which the instrument is to be used (except for Japan, Europe and the U.S.A.). Refer to the safety regulations and standards for laser devices stipulated in the country in which the instrument is to be used.


# Basic Knowledge for Operation

## Input Methods


The ZFX-C uses three input methods: input by the touch pen, input by operating the keys on the front of the Controller, and input from the console.

### Input by the touch pen

#### <Tapping>

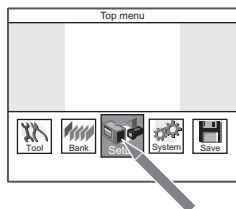


Tap the desired part with the touch pen.

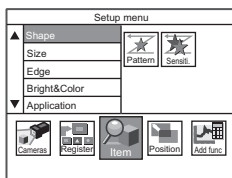


This selects/applies the part you tapped.

#### <Dragging>

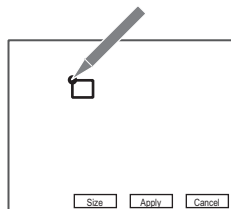


Tap any point in the screen and move the touch pen in this state.

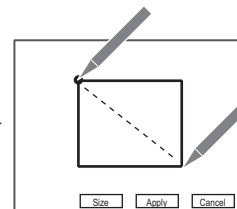


The region is moved or resized by the amount that the touch pen is moved.

### Key entry from the Controller/Console

#### Controller


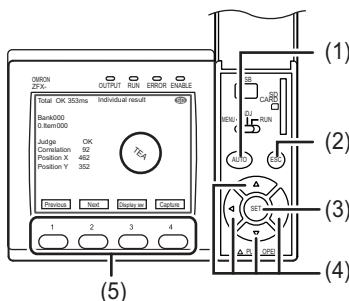


#### Console

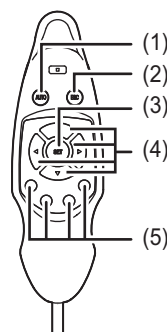

| Name                                             | Function                                                                                                                                                                                                                                                                               |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| (1) AUTO key                                     | Executes automatic setup of measurement conditions.<br>This key is enabled only when the [AUTO] icon is displayed on the LCD screen.                                                                                                                                                   |
| (2) ESC key                                      | Returns to the previous menu or cancels the current menu.                                                                                                                                                                                                                              |
| (3) SET key                                      | Applies each item.                                                                                                                                                                                                                                                                     |
| (4) ← L key<br>→ R key<br>↑ UP key<br>↓ DOWN key | Changes movement of the focus or numerical values in the following screens:<br><ul style="list-style-type: none"> <li>Item selection</li> <li>Threshold value parameter selection</li> <li>Parameter setup</li> <li>Measurement region setup</li> <li>Numerical value setup</li> </ul> |
| (5) Function keys                                | Directly sets each item that is displayed on the LCD screen.<br>The function varies according to the display screen.                                                                                                                                                                   |

Order of focus movement

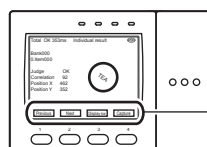


Menu button  
Displays the function corresponding to the function key.

## Parameter Setup


### Setting numerical values

A software keyboard is displayed on screen for parameters that require input of numerical values. Operate this software keyboard to input numerical values.

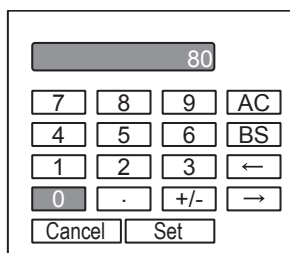


### Setting numerical values by the bar display

#### Touch pen input

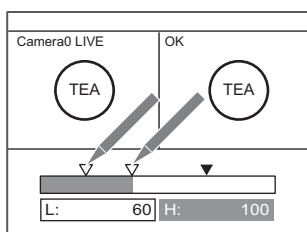


Tap and drag the ▽.

<To input numerical values directly>

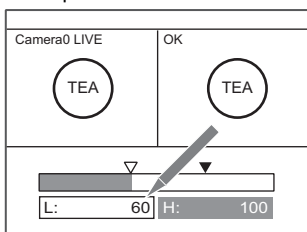


Tap the numerical value display.

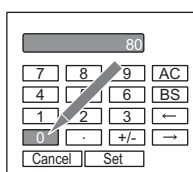


Set and apply the numerical values on the software keyboard.

#### Key input

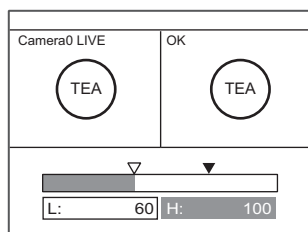


Select the target for input of the numerical values using the ← L key/→ R key, and press the SET key.

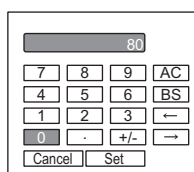

Set and apply the numerical values on the software keyboard.

## Setting the Region

### Moving and resizing regions

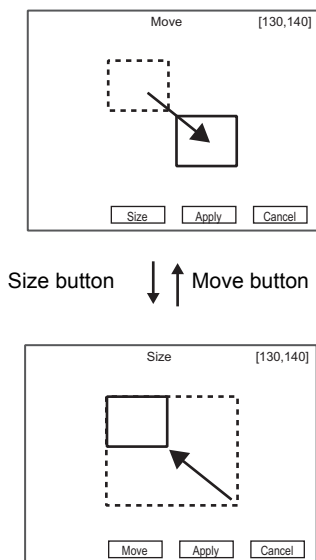

#### <Moving regions>

##### Touch pen operation

Tap any point in the screen and drag the touch pen in this state. The region moves by the amount that the touch pen is dragged (X, Y).

##### Key operation

↑ UP key: Moves the region upwards.  
↓ DOWN key: Moves the region downward.  
→ R key: Moves the region to the right.  
← L key: Moves the region to the left.  
(Holding the keys down moves the region at high speed.)

#### <Resizing regions>

##### Touch pen operation

Tap any point in the screen and drag the touch pen in this state. The region is resized (enlarged or reduced) by the amount that the touch pen is dragged (X, Y).

Also, you can drag somewhere else on screen to set a region on top of [Cancel] or other buttons at the bottom of the screen, and resize the region.

##### Key operation


↓ DOWN key/→ R key: Enlarges a region.  
↑ UP key/← L key: Reduces a region.  
(Holding the keys down moves the region at high speed.)

### Combining multiple shapes

Depending on the measurement item, up to five shapes can be combined to set a measurement region. Combining various shapes in this way allows you to draw complex shape regions or exclude unwanted parts from the measurement region.

| Item | Description                                                                        |
|------|------------------------------------------------------------------------------------|
| OR   | When drawing a complex shape, register a combination of shapes as a single region. |
| NOT  | This item is used for excluding part of a region.                                  |


Example:

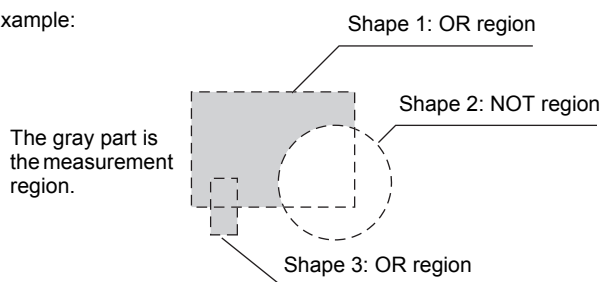

The shapes that can be selected differ according to the measurement item. Only selectable shapes are displayed.

| Shape                      | How to draw this shape                                                                                                                                                              |
|----------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Box                        | <p>The entire shape moves. The bottom right coordinates move.</p>                                                                                                                   |
| Circle                     | <p>The entire shape moves. The diameter is changed.</p>                                                                                                                             |
| Ellipse                    | <p>The entire shape moves. The bottom right coordinates move.</p>                                                                                                                   |
| Polygon                    | <p>Specification of 1st point      Specification of 2nd point      Specification of 3rd point onwards      Applying the shape      The shape moves (only when it is corrected).</p> |
| Circum                     | <p>The entire shape moves. The diameter is changed. The width is changed.</p>                                                                                                       |
| Arc                        | <p>The entire shape moves. The end point moves. The center moves. The width is changed.</p>                                                                                         |
| Box (diagonal development) | <p>The entire shape moves. The end point moves. The width is changed. The shape moves. The new size is applied.</p>                                                                 |

# Menu List

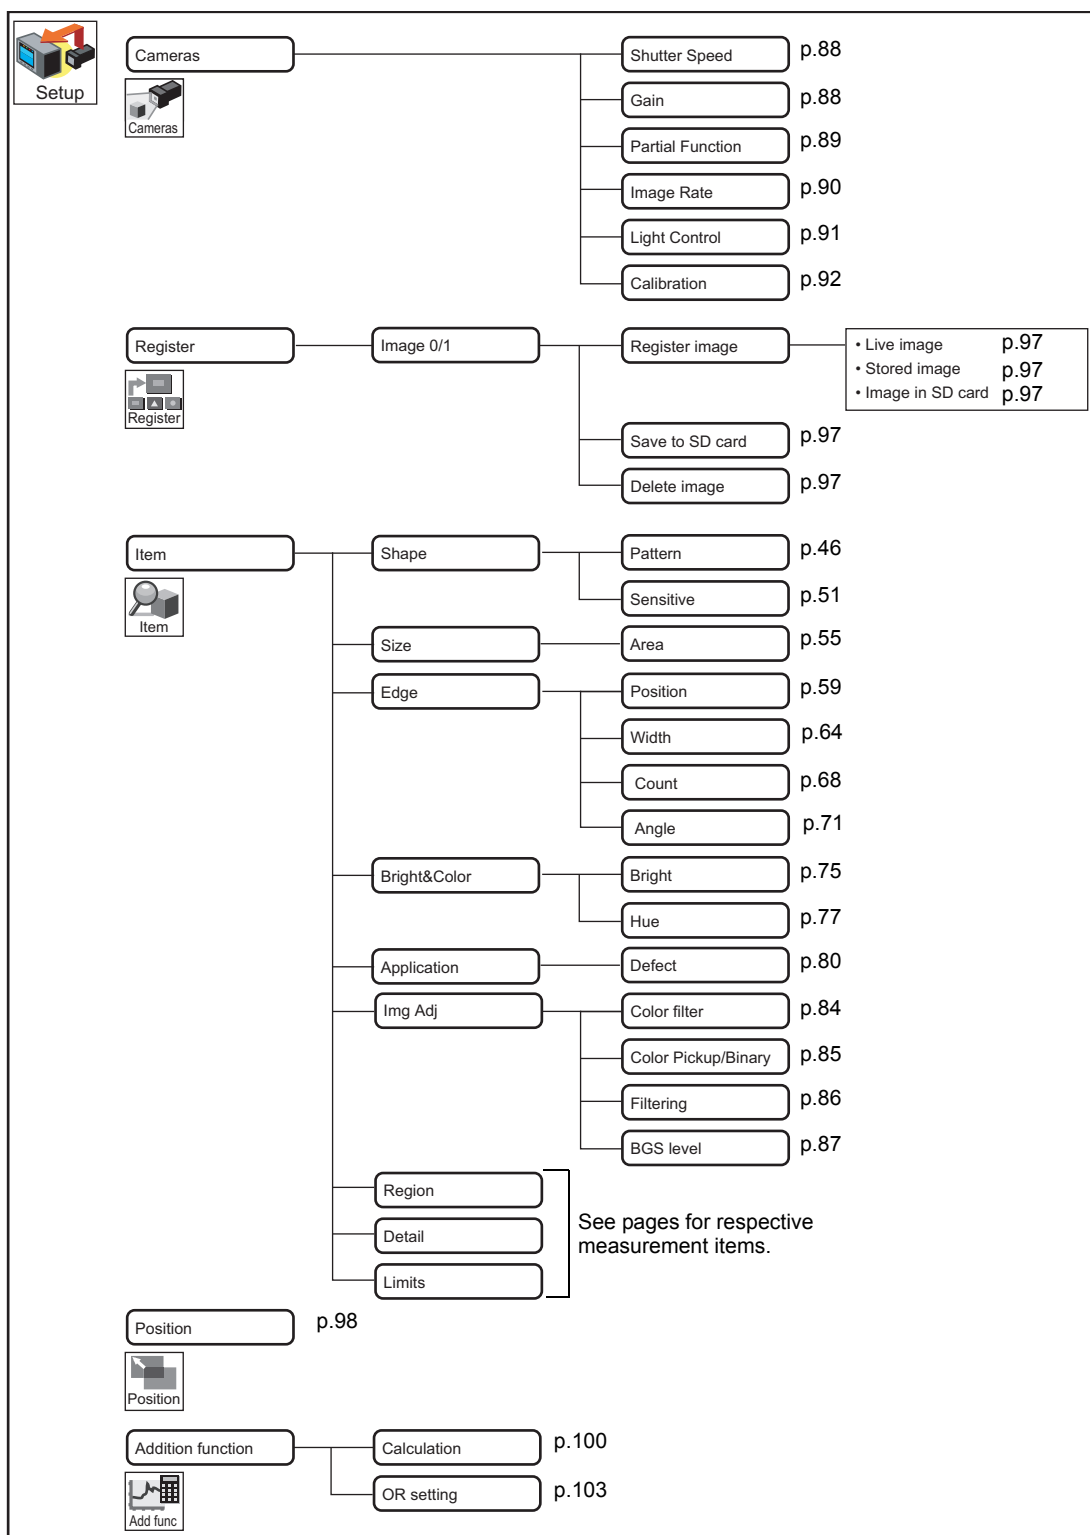

System

|        |                    |       |
|--------|--------------------|-------|
| Camera | White balance      | p.116 |
| Camera | Strobe delay time  | p.116 |
| Camera | Strobe polarity    | p.116 |
| Camera | Strobe width       | p.116 |
| Camera | Trigger delay time | p.116 |

|      |              |       |
|------|--------------|-------|
| Comm | RS-232C/422  | p.116 |
| Comm | Normal       | p.117 |
| Comm | Parallel     | p.117 |
| Comm | OR output    | p.118 |
| Comm | ENABLE range | p.118 |
| Comm | Ethernet     | p.119 |

|        |                       |       |
|--------|-----------------------|-------|
| Output | Data output           | p.120 |
| Output | Judgement output      | p.120 |
| Output | Date format (Serial)  | p.121 |
| Output | Date format (SD Card) | p.121 |
| Output | Total jg. output      | p.120 |

|         |                  |       |
|---------|------------------|-------|
| Display | ECO mode         | p.122 |
| Display | Display Setting  | p.123 |
| Display | Designate Colors | p.123 |

|           |                           |       |
|-----------|---------------------------|-------|
| Operation | Display capture           | p.124 |
| Operation | Save at switch Bank Group | p.125 |
| Operation | Password                  | p.125 |
| Operation | RUN mode key lock         | p.125 |

|         |                 |       |
|---------|-----------------|-------|
| Measure | Image storage   | p.126 |
| Measure | Trig in measure | p.127 |

|         |                    |       |
|---------|--------------------|-------|
| Startup | Startup Bank Group | p.127 |
| Startup | Startup Bank       | p.127 |

|          |  |       |
|----------|--|-------|
| Language |  | p.127 |
|----------|--|-------|

|          |  |  |
|----------|--|--|
| Language |  |  |
|----------|--|--|

|      |  |       |
|------|--|-------|
| Date |  | p.128 |
|------|--|-------|

|      |  |  |
|------|--|--|
| Date |  |  |
|------|--|--|

|            |  |       |
|------------|--|-------|
| Initialize |  | p.132 |
|------------|--|-------|

|       |  |  |
|-------|--|--|
| Init. |  |  |
|-------|--|--|

|                                                                                   |                                                                                   |                 |       |
|-----------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|-----------------|-------|
|  | Backup                                                                            | Image data      | p.129 |
|                                                                                   |  | Bank group data | p.129 |
|                                                                                   |                                                                                   | Bank data       | p.129 |
|                                                                                   |                                                                                   | System data     | p.129 |
|                                                                                   | SD card                                                                           |                 | p.130 |
|                                                                                   |  |                 |       |
|                                                                                   | Profile                                                                           |                 | p.130 |
|                                                                                   |  |                 |       |
|                                                                                   | I/O monitor                                                                       | RS-232C/422     | p.131 |
|                                                                                   |  | Parallel        | p.132 |
|                                                                                   | Sys info                                                                          |                 | p.35  |
|                                                                                   |  |                 |       |

|                                                                                   |            |       |
|-----------------------------------------------------------------------------------|------------|-------|
|  | Bank Group | p.114 |
|                                                                                   | Bank       | p.114 |

|                                                                                     |      |
|-------------------------------------------------------------------------------------|------|
|  | p.36 |
|-------------------------------------------------------------------------------------|------|



# INDEX

## Symbols

"Measuring" indicator 17

## A

Additional Functions 100  
ADJ Mode 31, 42, 109  
Adjusting focus 21  
Adjusting Measurement  
Conditions 112  
All results/Judge 106, 109  
All results/Region 106, 109  
Angle 71  
Area 55  
Automatic setting 41

## B

Backup 129  
Bank 115  
Bank Group 115  
Bank Settings 114  
BGS level 87  
Binary 85  
Bright 75  
Bright/Color Inspection 75  
Brightness value 194

## C

Calculation  
Data 100  
Judgment 100  
Variables 100  
Calibration 92  
Camera  
Connecting 29  
Extension cable 15  
External Dimensions 161  
Installing 19  
Part Names and Functions 16  
Specifications 158  
Camera connector 18  
Camera specifications 116  
Checking Communication Status 131  
Checking Density Distribution 130  
Checking Measurement  
Status 42, 109  
Checking/Adjusting the  
Measurement 109  
Circuit diagram 138, 139  
Color Filter 190

Color images processing 189  
Color Pickup 85, 192  
Communication Setup  
Parallel Communication 117  
Serial Communication 116  
Connecting Devices 28  
Connecting the camera 29  
Connecting the power supply 28  
Console connector 18  
Control keys 17  
Controller  
External Dimensions 165  
Installing 25  
Part Names and Functions 17  
Specifications 164  
Coordinates mode 63  
Count 68

## D

Data 100  
Data list 106, 109  
Data output destination 120  
Date format (Serial) 121, 122  
Date setting 128  
Defect 80  
Designate Colors 123  
Display capture 124  
Display Setting 123  
Displaying Measurement  
Information 106

## E

ECO Display 122  
Edge Inspection 59  
Error indicator 17  
Exhaust Unit 30  
Extended Parallel Port 136  
Extension Tube 24

## F

Ferrite Core 28  
Focus adjustment control 16

## G

Gain Setting 88

## H

Hue 77, 194

**I**

|                                      |          |
|--------------------------------------|----------|
| Image Adjustment                     | 84       |
| Image deletion                       | 126      |
| Image Rate                           | 90       |
| Image Saving                         | 126      |
| Individual judgment result           | 142      |
| Individual results                   | 106, 109 |
| Initialization                       | 35       |
| Input Methods                        | 176      |
| Inspection by Individual Application | 80       |
| Installing the mounting fixture      | 20, 24   |
| Item No.                             | 101      |

**J**

|                             |          |
|-----------------------------|----------|
| Judge                       | 100      |
| Judgment indicator          | 17       |
| Judgment output destination | 120      |
| Judgments list              | 106, 109 |

**K**

|          |     |
|----------|-----|
| Key Lock | 125 |
|----------|-----|

**L**

|               |     |
|---------------|-----|
| Language      | 127 |
| Lenses        | 23  |
| Light Control | 91  |
| Loading Data  | 129 |

**M**

|                              |        |
|------------------------------|--------|
| Measurement Condition        |        |
| Adjusting                    | 112    |
| Setting                      | 38     |
| measurement display settings | 123    |
| Measurement items            |        |
| Selecting                    | 39     |
| Measurement items and banks  | 33     |
| Measurement regions          |        |
| Setting                      | 40     |
| Measurement values/judgment  | 100    |
| Memory capacity              | 132    |
| Menu Button                  |        |
| ADJ Mode                     | 110    |
| RUN Mode                     | 107    |
| MENU Mode                    | 31, 38 |
| Mode switch                  | 17     |
| Monitor connector            | 18     |
| Monitoring the Measurement   |        |
| Status                       | 106    |

**O**

|                      |    |
|----------------------|----|
| Optical chart        |    |
| Camera only          | 22 |
| Camera with lighting | 19 |

|                         |        |
|-------------------------|--------|
| Optional lighting       | 15, 30 |
| Overall judgment result | 142    |

**P**

|                                   |              |
|-----------------------------------|--------------|
| Panel output dimensions           | 171          |
| Parallel Connector Specifications | 134          |
| Parallel I/O cable                |              |
| Connecting                        | 136          |
| Pin assignment                    | 137          |
| Parallel port                     | 18           |
| Parameter Setup                   | 177          |
| Partial Function Settings         | 89           |
| Password                          | 125          |
| Pattern Search                    | 46           |
| Perform Re-measurement            | 111          |
| Position                          | 59           |
| Position correction               | 98, 106, 109 |
| Power connector                   | 18           |
| Pre-processing                    | 86           |
| Profile                           | 130          |

**R**

|                       |             |
|-----------------------|-------------|
| Recipe Function       | 91          |
| Registering Images    | 97          |
| RS-232C/422 connector | 18          |
| RUN Mode              | 31, 42, 106 |

**S**

|                                          |          |
|------------------------------------------|----------|
| Saturation                               | 194      |
| Saving Data                              | 129      |
| Saving during Switching of Bank          |          |
| Groups                                   | 125      |
| Saving Setup Data                        | 36       |
| SD Card                                  | 121, 122 |
| Sensitive Search                         | 51       |
| Setting Reflection of Individual Results | 103      |
| Setting the Region                       | 40, 178  |
| Shape Inspection                         | 46       |
| Shutter Speed                            | 88       |
| Size Inspection                          | 55       |
| Standard Parallel Port                   | 134      |
| Starting Measurement                     | 42       |
| Startup                                  | 127      |
| Stored image                             | 109      |
| Switching the image display              | 108, 111 |
| System Configuration                     | 14       |
| System information                       | 132      |

**T**

|                        |     |
|------------------------|-----|
| Terminal Block Adapter |     |
| Pin assignment         | 135 |
| Wiring                 | 134 |

|                                  |     |
|----------------------------------|-----|
| Timing Chart                     |     |
| Bank group switching             | 149 |
| Bank switching                   | 149 |
| ENABLE Signal Output             | 151 |
| Measurement (Handshaking<br>OFF) | 145 |
| Measurement (Handshaking<br>ON)  | 148 |
| Model re-registration            | 149 |
| Operation at Startup             | 152 |
| OR Signal Output                 | 151 |
| Reset Input                      | 152 |
| Trigger Input                    | 150 |
| Touch pen                        | 17  |
| Trigger indicator                | 17  |

**U**


---

|          |    |
|----------|----|
| USB port | 17 |
|----------|----|

**V**


---

|                     |          |
|---------------------|----------|
| Variables           | 100      |
| Variables list      | 106, 109 |
| Ventilation film    | 16       |
| Version information | 132      |

**W**


---

|       |    |
|-------|----|
| Width | 64 |
|-------|----|

MEMO


MEMO

MEMO

# How Color Images are Processed

The ZFX-C performs measurement with the processes "Color filter" or "Color Pickup" applied to images captured from the camera.


This section describes how color images are processed.

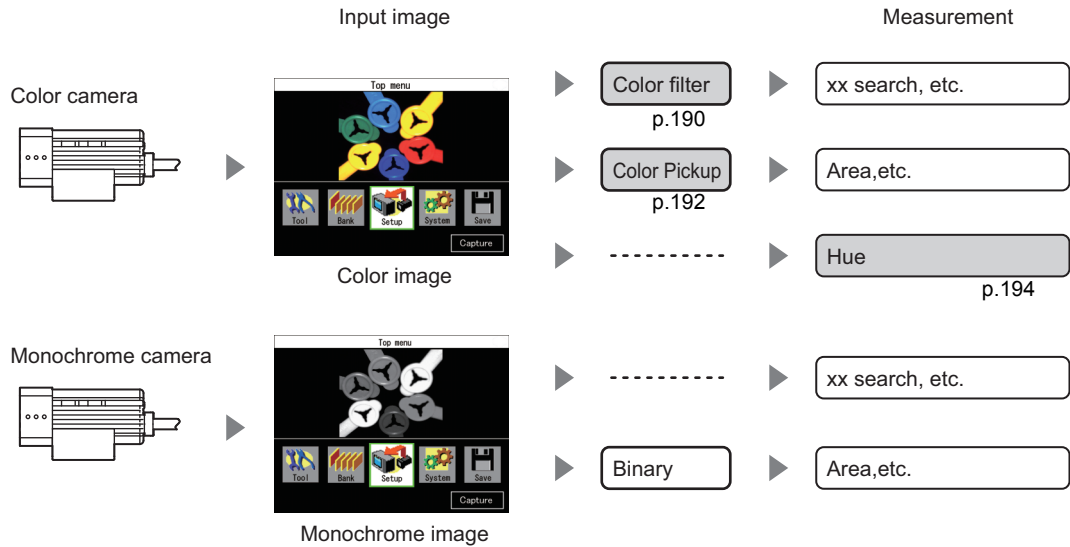


# Color Filter

This function improves the contrast of images. This function can be set only when a color camera is connected to the Controller.

Example:

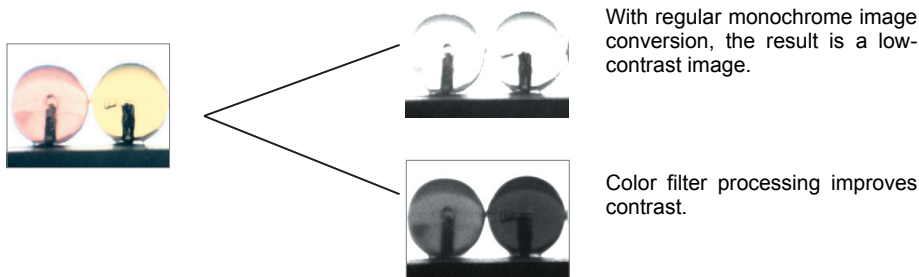

## Setting color filter processing

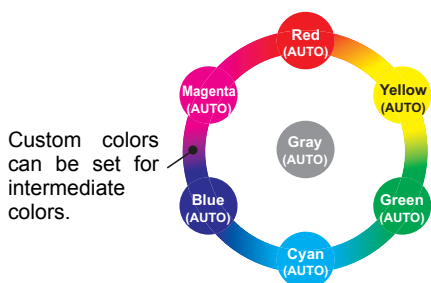

There are three ways of setting custom colors:

### AUTO

The optimum filter is automatically selected from seven color filters.

### Select filter

This setting allows you to select from six color filters + gray filter to match the color whose contrast is to be improved.

### Custom filter

This setting allows you to set the color filter to any custom color. You can select the desired color from the color palette.

### Note

For monochrome images, the color of the currently selected filter is displayed as white and complementary colors are displayed as black. "Complementary colors" refers to colors that lie on opposite sides of the white point in a chromaticity diagram.

Example: When the blue filter is selected, blue is displayed as white and yellow is displayed as black.



## AUTO

With measurement items that can use color filters, the optimum color filter is automatically set when the AUTO setting is executed. The color filter for enhancing the contrast between the color having the largest area and the color having the second largest area in the region is selected.


### Select Filter

The color filter can be selected to match the color whose contrast is to be improved.

You can choose from Red, Blue, Green, Yellow, Cyan, Magenta, Gray, and Custom as the color filters.

#### ► MENU mode - [Setup] - [Item] - [Img Adj] - [Color filter] - [Select filter]


When "Blue" is selected:

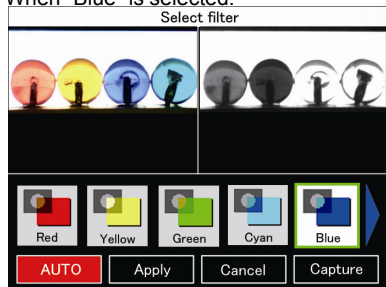

**1** Select the desired color.

**2** Select [Apply].


The color bar is displayed when [Custom] is selected from the color filters. You can set any color from this color bar to custom filters.

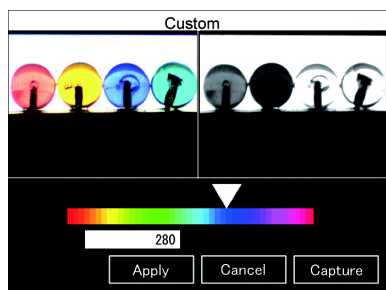

### Fixing the Color Filter

To hold the color filter without changing its settings when the AUTO setting is next executed, change [Auto function] to [OFF].

#### ► MENU mode - [Setup] - [Item] - [Img Adj] - [Color filter] - [Auto function]

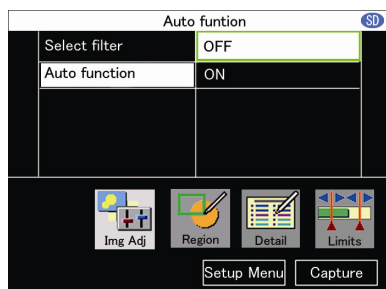

**1** Select [OFF].


# Color Pickup

This function picks up colors to be measured. This function can be set only when a color camera is connected to the Controller.

Up to four measurement target colors can be specified for one measurement item.

## ► MENU mode - [Setup] - [Item] - [Img Adj] - [Color Pickup]

Automatically picking up colors

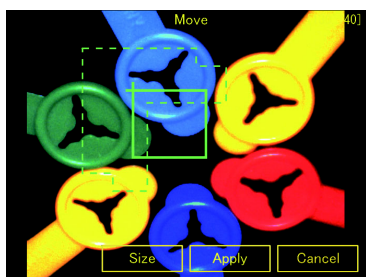

### 1 Select [Region].

Specify the area having the color to be measured.

For details on how to set the region p.178

### 2 Select [PickUp].

### 3 Select [AUTO].

Candidates for up to four colors are displayed in order of the color having the largest area.


### 4 Check whether or not the color to be measured is picked up.

Select the icon of a candidate color. Only an image of the corresponding color is displayed.

### 5 If there are colors not to be used as the measurement target, select [Enable/Disable]-[Disable].


Enable: The picked up color is used as the measurement target.

Disable: The picked up color is not used as the measurement target.

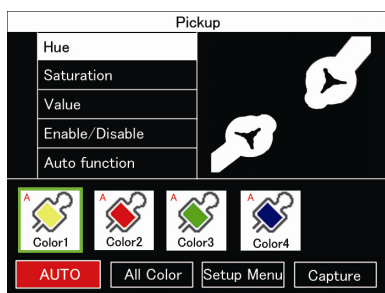

If the appropriate image is not obtained by automatic color pick up, fine-adjust three parameters hue, saturation and brightness. The image can be adjusted while comparing the picked up color image and original image.

## 6 Select [Hue/Saturation/Value].

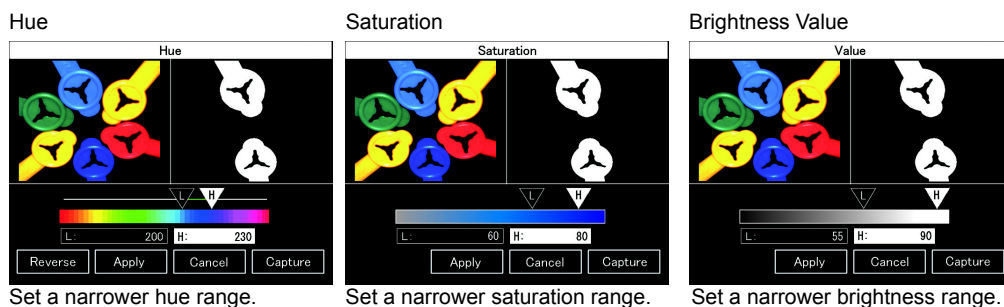

Hue, Saturation and Brightness Value p.194

## 7 Select [Apply].


## 8 Select [Auto function]-[OFF].

The picked up color is fixed. The icons of fixed colors are not cleared and are held even if the AUTO button is selected again.

# Hue, Saturation and Brightness Value

The parameters hue, saturation and brightness value are used in the measurement values in color inspection.

| Parameter        | Description                                                                                                                                                                                            |
|------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Hue              | The name of a color, such as red, yellow or blue, that is perceived subjectively. Hue is expressed by a chromaticity diagram.                                                                          |
| Saturation       | The degree to which color is mixed with white.<br>When a color has little saturation, it becomes an achromatic color. The higher saturation becomes, the purer the color becomes in proportion to hue. |
| Brightness value | The ratio of light intensity in a color.                                                                                                                                                               |

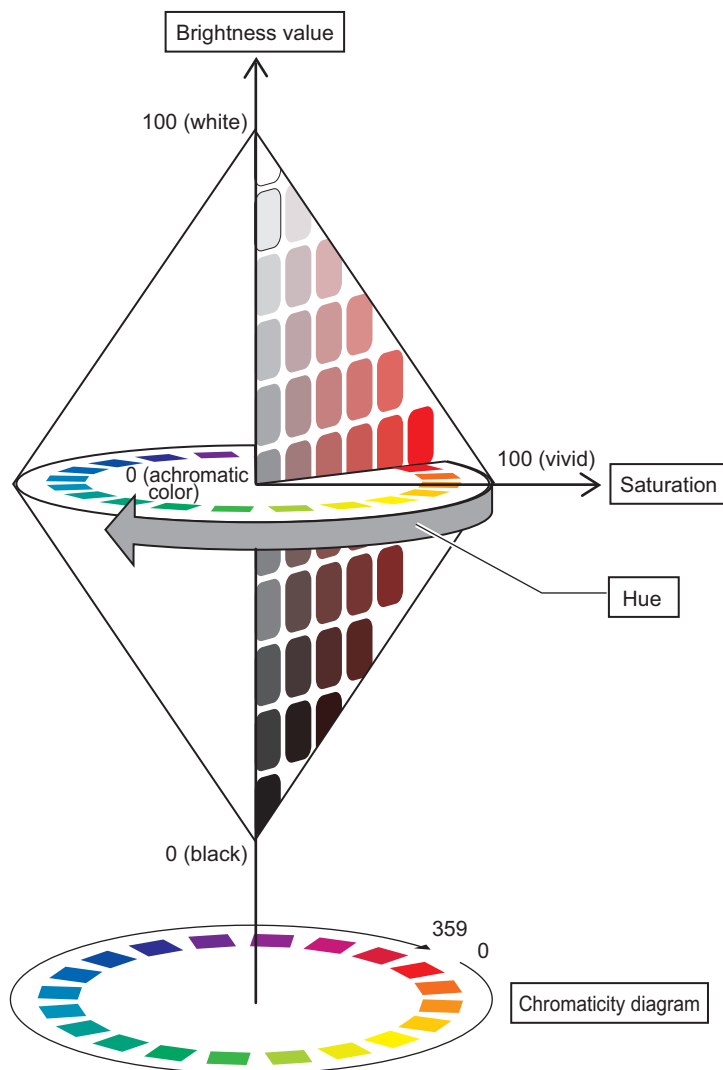

# Version Upgrade Information

The following describes the content of the version upgrade.

Ver1.00 → Ver1.20

| Changes                                                                                                                                                     | Reference      |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------|
| The "coordinates mode" function has been newly added to the following measurement items.<br>Pattern Search, Sensitive Search, Area, Position, Width, Defect | p.63           |
| Camera images can now be displayed also when the "Variables list," "Data list" and "Judgments list" are displayed in the RUN mode or the ADJ mode.          | p.108<br>p.111 |
| Measurement data can now be prefixed with time information when measurement information is output on the serial interface or to SD card.                    | p.121          |
| Clearing or holding saved image data in memory can now be selected at bank switching.                                                                       | p.126          |

Ver1.20 → Ver1.30

| Changes                                                                                 | Reference |
|-----------------------------------------------------------------------------------------|-----------|
| "Angle" has been newly added to the measurement items.                                  | p.71      |
| "Angle" has been newly added to the position correction items.                          | p.98      |
| "IMAX" and "IMIN" have been added to the general functions in [Add Func]-[Calculation]. | p.101     |
| "Display Setting" and "Designate colors" have been added to the system settings.        | p.123     |

# Revision History

A manual revision code appears as a suffix to the catalog number at the bottom of the front and back covers of this manual.

Cat. No. Z251-E1-04

↑  
Revision code

| Revision code | Date          | Revised contents                                                                                                                                        |
|---------------|---------------|---------------------------------------------------------------------------------------------------------------------------------------------------------|
| 01            | April 2007    | Original production                                                                                                                                     |
| 02            | August 2007   | New details as explained in "Version Upgrade Information" added (Ver1.20)                                                                               |
| 03            | November 2007 | <ul style="list-style-type: none"><li>• New details as explained in "Version Upgrade Information" added (Ver1.30)</li><li>• Minor corrections</li></ul> |
| 03A           | March 2012    | Additions for Notice for Korea Radio Law                                                                                                                |
| 04            | August 2015   | Additions corresponding to change of EN standard.                                                                                                       |



**OMRON Corporation    Industrial Automation Company**  
Kyoto, JAPAN

**Contact: [www.ia.omron.com](http://www.ia.omron.com)**

***Regional Headquarters***

**OMRON EUROPE B.V.**

**Sensor Business Unit**

Carl-Benz-Str. 4, D-71154 Nufringen, Germany  
Tel: (49) 7032-811-0/Fax: (49) 7032-811-199

**OMRON ASIA PACIFIC PTE. LTD.**

No. 438A Alexandra Road # 05-05/08 (Lobby 2),  
Alexandra Technopark,  
Singapore 119967  
Tel: (65) 6835-3011/Fax: (65) 6835-2711

**OMRON ELECTRONICS LLC**

2895 Greenspoint Parkway, Suite 200  
Hoffman Estates, IL 60169 U.S.A.  
Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

**OMRON (CHINA) CO., LTD.**

Room 2211, Bank of China Tower,  
200 Yin Cheng Zhong Road,  
PuDong New Area, Shanghai, 200120, China  
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

**Authorized Distributor:**

© OMRON Corporation 2007 All Rights Reserved.  
In the interest of product improvement,  
specifications are subject to change without notice.

**Cat. No. Z251-E1-04**

**0815**