

SYSMAC
C200HW-ZW3AT2-E-V2
Controller Link Support Software
Ver. 2.00

Operation Manual

Revised March 2000

Notice:

OMRON products are manufactured for use according to proper procedures by a qualified operator and only for the purposes described in this manual.

The following conventions are used to indicate and classify precautions in this manual. Always heed the information provided with them. Failure to heed precautions can result in injury to people or damage to property.



DANGER

Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.



WARNING

Indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.



Caution

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury, or property damage.

OMRON Product References

All OMRON products are capitalized in this manual. The word “Unit” is also capitalized when it refers to an OMRON product, regardless of whether or not it appears in the proper name of the product.

The abbreviation “Ch,” which appears in some displays and on some OMRON products, often means “word” and is abbreviated “Wd” in documentation in this sense.

The abbreviation “PC” means Programmable Controller and is not used as an abbreviation for anything else.

Visual Aids

The following headings appear in the left column of the manual to help you locate different types of information.

Note Indicates information of particular interest for efficient and convenient operation of the product.

1, 2, 3... 1. Indicates lists of one sort or another, such as procedures, checklists, etc.

© OMRON, 2000

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system, or transmitted, in any form, or by any means, mechanical, electronic, photocopying, recording, or otherwise, without the prior written permission of OMRON.

No patent liability is assumed with respect to the use of the information contained herein. Moreover, because OMRON is constantly striving to improve its high-quality products, the information contained in this manual is subject to change without notice. Every precaution has been taken in the preparation of this manual. Nevertheless, OMRON assumes no responsibility for errors or omissions. Neither is any liability assumed for damages resulting from the use of the information contained in this publication.

DOS, Windows and Microsoft C are registered trademarks of Microsoft Corporation.

IBM is a registered trademark of International Business Machines Corporation.

All other product names or company names that appear in this manual are trademarks or registered trademarks of each respective company.

TABLE OF CONTENTS

PRECAUTIONS	xi
1 Intended Audience	xii
2 General Precautions	xii
3 Safety Precautions	xii
4 Application Precautions	xii
5 Trademarks	xiii
6 Checking the Contents	xiii
SECTION 1	
Features	1
1-1 About the Controller Link Support Software	2
1-2 Checking Components	7
1-3 Operating Environment	7
1-4 Overall Flow of Operation	9
1-5 Menu Hierarchy	10
SECTION 2	
Installation	11
2-1 Preparations for Installation	12
2-2 Installation Procedure	13
SECTION 3	
Basic Operations and Connections	15
3-1 Starting and Exiting the Controller Link Support Software	16
3-2 Basic Operations	19
3-3 Connecting to a Node	23
SECTION 4	
Basic Operating Procedures	37
4-1 Starting the Network for the First Time	38
4-2 Starting Data Links	38
4-3 Interconnecting Networks	39
SECTION 5	
Operating Procedures	41
5-1 Keyboard Operation	43
5-2 Main Menu	43
5-3 L: Data Link	45
5-4 P: Set Network Parameters	83
5-5 R: Routing Table	85
5-6 N: Echoback Test	100
5-7 D: Broadcast Test	101
5-8 C: Monitor Network	103
5-9 E: Display Error Log	104
5-10 S: Display Node Status	109
5-11 M: Maintenance	112
5-12 K: Connection Information	115
5-13 W: Edit PC ID	124
5-14 I: System Setup	135
5-15 Q: Exit to DOS	142
SECTION 6	
Troubleshooting	143

TABLE OF CONTENTS

Appendices

A Error Messages	145
B Using Modems	149
C Registering the Controller Link Support Software in the SYSMAC Support Software	163
D Running the Controller Link Support Software under Windows 95	165
E Editing the Device Information Setting File	167

Index	173
--------------------	------------

Revision History	177
-------------------------------	------------

About this Manual:

This manual describes the installation and operation of the C200HW-ZW3AT2-E-V2 Controller Link Support Software (Ver. 2.00) and includes the sections described below. The Controller Link Support Software is used to set up and manage a Controller Link Network (Wired type, Optical type, Optical Ring type).

The C200HW-ZW3AT2-E-V2 is for use on a computer that is not part of the Controller Link Network (i.e., a computer connected to the Network via a PC, not as a Network node).

The following three manuals are directly related to application of the Controller Link Network.

Name	Contents	Cat. No. (suffixes omitted)
SYSMAC C200HW-ZW3AT2-E-V2, Controller Link Support Software Operation Manual (this manual)	Installation and operating procedures for the Controller Link Support Software Ver 2.00. The Controller Link Support Software enables manual setting of data links and other procedures for a Controller Link Network. Use this software for Optical Controller Link Networks.	W308
SYSMAC 3G8F5-CLK11-E, 3G8F5-CLK21-E Controller Link Support Boards Operation Manual	Installation, setup, and operating procedures for Controller Link Support Boards. Controller Link Support Boards are used to connect IBM PC/ATs or compatibles to a Controller Link Network.	W307
SYSMAC CS1W-CLK11/21, C200HW-CLK21, CVM1-CLK21, CQM1H-CLK2 Controller Link Units Operation Manual	Installation, setup, and operating procedures for the Controller Link Units. Controller Link Units are used to connect CS1-series, CV-series, CVM1, C200HX/HG/HE, and CQM1H PCs to a Controller Link Network.	W309
SYSMAC CS1W-CLK12, CVM1-CLK12 Optical Ring Controller Link Units Operation Manual	Installation, setup, and operating procedures for Optical Ring Controller Link Units. Optical Ring Controller Link Units are used to connect CS1-series, CV-series, and CVM1 PCs to an Optical Ring Controller Link Network.	W370
SYSMAC C200HW-ZW3AT2-E, 3G8F5-CLK11-E/CLK21-E Controller Link Support Software Operation Manual	Installation and operating procedures for the Controller Link Support Software Ver. 1.10 (or earlier versions). This manual is included with Controller Link Support Boards. Use Controller Link Support Software Ver. 1.10 (or earlier versions) with Controller Link Support Boards.	W308

Please read this manual and related manuals carefully and be sure you understand the information provided before attempting to use the Controller Link Support Software.

Precautions provides general precautions for using the Controller Link Support Software.

Section 1 explains the features of the Controller Link Support Software and its operating environment.

Section 2 describes how to install the C200HW-ZW3AT2-E-V2 Controller Link Support Software. Refer to the *Controller Link Support Boards Operation Manual (W307)* for installation procedures for the 3G8F5-CLK□1-E Controller Link Support Software.

Section 3 describes the Controller Link Support Software menu structure and basic operations, such as starting and exiting the software. It also describes how to connect the computer running the Controller Link Support Software to the Network.

Section 4 outlines operating procedures for the Controller Link Support Software. Actual procedures are provided in Section 5 Operating Procedures.

Section 5 describes individual operating procedures for the Controller Link Support Software.

Section 6 describes troubleshooting methods for some of the problems that can occur with the Controller Link Support Software.

Appendix A provides a list of error messages displayed by the Controller Link Support Software.


Appendix B describes how to connect a remote computer running the Controller Link Support Software to a PC on a Controller Link Network via modem.

Appendix C tells how to register the Controller Link Support Software on the Option Menu of the SYSMAC Support Software.

Appendix D tells how to run the Controller Link Support Software under Windows 95.

Appendix E tells how to edit the device information setting file.

Appendix F provides forms that can be used to help structure data links.

 **WARNING** Failure to read and understand the information provided in this manual may result in personal injury or death, damage to the product, or product failure. Please read each section in its entirety and be sure you understand the information provided in the section and related sections before attempting any of the procedures or operations given.

PRECAUTIONS

This section provides general precautions for using the Controller Link Support Software.

The information contained in this section is important for the safe and reliable application of the product. You must read this section and understand the information contained before attempting to set up or operate the Controller Link Support Software.

1 Intended Audience	xii
2 General Precautions	xii
3 Safety Precautions	xii
4 Application Precautions	xii
5 Trademarks	xiii
6 Checking the Contents	xiii

1 Intended Audience

This manual is intended for the following personnel, who must also have knowledge of electrical systems (an electrical engineer or the equivalent).

- Personnel in charge of installing FA systems.
- Personnel in charge of designing FA systems.
- Personnel in charge of managing FA systems and facilities.


2 General Precautions

The user must operate the product according to the performance specifications described in the operation manuals.


Before using the product under conditions which are not described in the manual or applying the product to nuclear control systems, railroad systems, aviation systems, vehicles, combustion systems, medical equipment, amusement machines, safety equipment, and other systems, machines, and equipment that may have a serious influence on lives and property if used improperly, consult your OMRON representative.


Make sure that the ratings and performance characteristics of the product are sufficient for the systems, machines, and equipment, and be sure to provide the systems, machines, and equipment with double safety mechanisms.


This manual provides information for programming and operating the Unit. Be sure to read this manual before attempting to use the Unit and keep this manual close at hand for reference during operation.


 **WARNING** It is extremely important that a PC and all PC Units be used for the specified purpose and under the specified conditions, especially in applications that can directly or indirectly affect human life. You must consult with your OMRON representative before applying a PC System to the above-mentioned applications.

3 Safety Precautions

 **WARNING** Do not attempt to disassemble the Board or touch the inside of the Unit while the power is being supplied. Doing so may result in electric shock.


 **WARNING** Do not touch any of the terminals or terminal blocks while the power is being supplied. Doing so may result in electric shock.

 **WARNING** Be sure to turn OFF the power supply before assembling the Unit or connecting cables. Not doing so may result in electric shock.

 **WARNING** Do not attempt to disassemble, repair, or modify any Units. Any attempt to do so may result in malfunction, fire, or electric shock.

4 Application Precautions

Observe the following precautions when using the PC System.

 **Caution** Before starting data links, make sure that data link tables have been appropriately set at each node for which the data links are to be established. If the data link tables have been inappropriately set, the equipment may perform unexpected operation and result in injury. Even if the data link tables have been appropriately set, always make sure that the equipment will not be affected before starting or stopping the data link.

**Caution**

Once routing tables are transferred to a PC, all CPU Bus Units at the node (except SYSMAC BUS/2 Master Units) will be reset. Before transferring the routing tables, always make sure that the equipment will not be affected.

5 Trademarks

MS-DOS, Windows, Microsoft C, and Quick BASIC are registered trademarks of Microsoft Corporation.

IBM and IBM PAC-DOS are registered trademarks of International Business Machines Corporation (U.S.A.).

PC-PR210H is a registered trademark of NEC Corporation.

ESC/P is a registered trademark of Seiko Epson Corporation.

Other brands and their products are trademarks or registered trademarks of their respective holders and should be noted as such.

6 Checking the Contents

Confirm that the following items are included with your purchase. These items are required to configure the C200HW-ZW3AT2-E-V2

- Installation disk (3.5 inch, 1 disk)
- Operation manual (B5 size, English)
- User registration cards (English and Japanese)
- Mailing label
- One operation manual (this manual)

SECTION 1

Features

This section explains the features of the Controller Link Support Software and its operating environment.

1-1	About the Controller Link Support Software	2
1-1-1	Features	2
1-1-2	Functions	3
1-1-3	Additional Functions	3
1-1-4	Main Functions	4
1-1-5	Connecting to the Network	5
1-2	Checking Components	7
1-2-1	C200HW-ZW3AT2-E-V2 Controller Link Support Software	7
1-3	Operating Environment	7
1-3-1	Compatible Computers	7
1-3-2	Printers	8
1-4	Overall Flow of Operation	9
1-5	Menu Hierarchy	10

1-1 About the Controller Link Support Software

The Controller Link Support Software is used to set up, control, and monitor Controller Link Networks.

Functionality for Optical Ring Controller Link Networks has been added with this version. Ver. 2.00 of the Controller Link Support Software is required for Optical Ring Controller Link Networks. For other types of network, Ver. 1.10 (or earlier versions) can be used.

1-1-1 Features

Sets Data Link Tables

The Controller Link Support Software can be used to create data link tables to manually set data links. It can also create data link areas used for automatically set data links.

Run from Programming Device or from a Node

The Controller Link Support Software can be run on an IBM PC/AT or compatible computer as a programming device connected to a PC via an RS-232C interface, or it can be run on an IBM PC/AT or compatible computer connected as a node to the Controller Link Network via a Controller Link Support Board.

Compatible with All Controller Link Models

The Controller Link Support Software supports all Controller Link Units and Controller Link Support Boards.

Note The following products are available for the Controller Link Network.

- Controller Link Unit for SYSMAC CS1-series PCs (wired, and optical, and optical ring)
- Controller Link Unit for SYSMAC C200HX/HG/HE PCs (wired only)
- Controller Link Unit for SYSMAC CVM1 and CV-series PCs (wired and optical ring)
- Controller Link Unit for SYSMAC CQM1H PCs (wired only)
- Controller Link Support Board for IBM PC/AT or compatible computer (wired and optical)

Print the Current Screen or Data

The Controller Link Support Software can print the current screen or data.

Create Routing Tables

The Controller Link Support Software can create routing tables, which allow inter-network connections. Data files for routing tables can be shared with the SYSMAC Support Software.

Set PC IDs

The Controller Link Support Software allows you to create and edit PC IDs, which facilitate node management. Data files for PC IDs can be shared with the SYSMAC Support Software.

Connect from Remote FA Networks

When multiple FA networks are inter-connected, the Controller Link Support Software can be used to set and display all Controller Link Networks within a three-level hierarchy (including the local network).

Note Here, FA networks include Controller Link, SYSMAC NET, and SYSMAC LINK Networks.

Facilitate Unit Replacement

The Controller Link Support Software can save in the computer all the settings stored in Controller Link Units or Controller Link Support Boards. Therefore, before replacing a Controller Link Unit or Controller Link Support Board, you can save all the settings in the computer and restore them to the new Controller Link Unit or Controller Link Support Board. This will save you the trouble of redoing settings after replacement.

1-1-2 Functions

The functions of the Controller Link Support Software are outlined in the following table.

Function	Explanation
Data link management	Creates and edits data link tables for manually set data links, registers data link tables at nodes, saves data link tables as files, and performs other processing related to data links.
Network parameter setting	Adjusts network communications parameter settings to provide the most suitable Controller Link communications for the user application.
Routing table management	Creates and edits routing tables, registers routing tables at nodes, and saves routing tables as files. Routing tables are used to specify data communications paths when data is transferred to/from remote FA networks. (See note.)
Communications testing	Checks whether the Controller Link Network is working properly.
Status display	Displays the network and node status, data link status, error logs, and so on.
Maintenance	Backs up the contents of the EEPROM in the Controller Link Unit or Controller Link Support Board as a file and restores the file to the EEPROM.
Connection information reading	Reads node configurations and the status of networks. (Only available for Optical Ring Networks.)
PC ID editing	Assigns a unique ID to each PC. Using PC IDs allows easier PC management than using network and node addresses.
System setup	Sets the communications parameters for the Controller Link Support Software, the PC to be connected, the service conditions for the Controller Link Support Software, and so on. These must be set before the Controller Link Support Software is connected to a node.

Note Other FA networks, such as Controller Link Networks, SYSMAC NET Networks, and SYSMAC LINK Networks, can be inter-connected.


1-1-3 Additional Functions

The following functions were added to the Controller Link Support Software for when upgrading from Ver. 1.1□ to Ver. 2.00.

- Optical Ring Controller Link Networks
Connection configuration data for Optical Ring Controller Link Networks can be read using the Connection Information Menu. In addition, since an Optical Ring Network can have up to 62 nodes, the maximum number of nodes for which each menu's functions can be used has been increased to 62 (from 32 with Ver. 1.10).
- CS1-series PCs
This version of the Controller Link Support Software can be directly connected to, and used with, CS1-series PCs.
- Saving and Printing of Error Log Files
Error logs read from specified nodes can be saved to files, and this data can be read from the file and displayed. The error log data saved to files in this way, can be displayed and edited using a standard text editor, and used in other applications. It can also be printed out.


1-1-4 Main Functions

Registering Data Link Tables

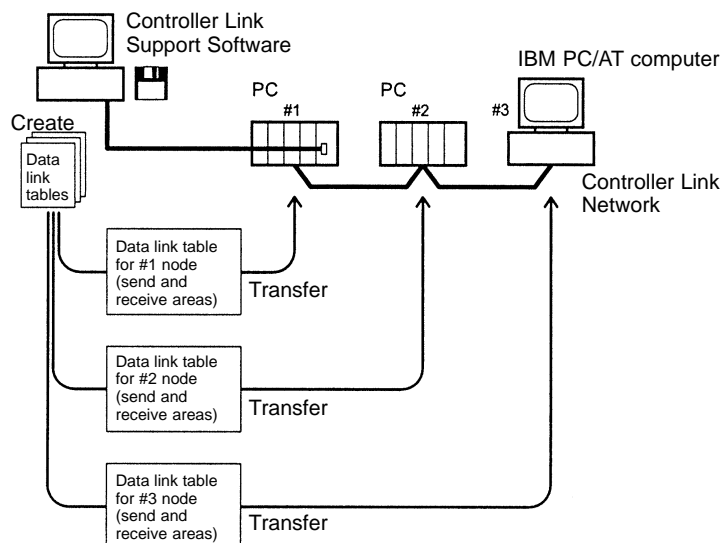


Data link tables: Tables that specify the send areas at the local node and the numbers of words to be received from a particular areas at remote nodes.


Starting and Stopping Data Links

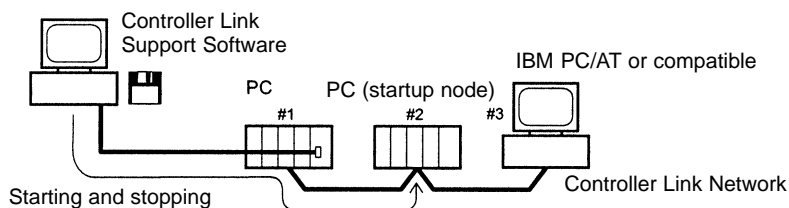


Displaying Network and Node Status

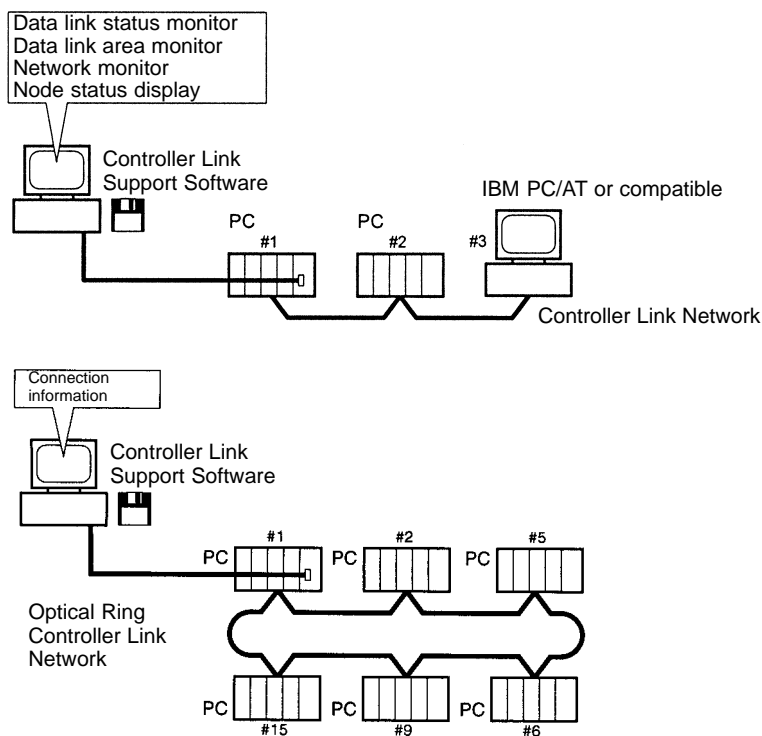

Testing

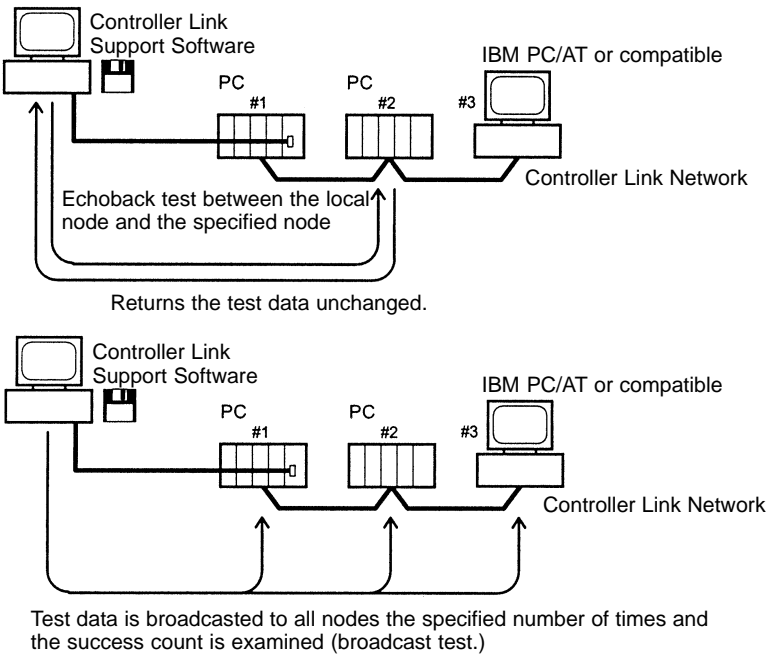


Displaying Error Logs

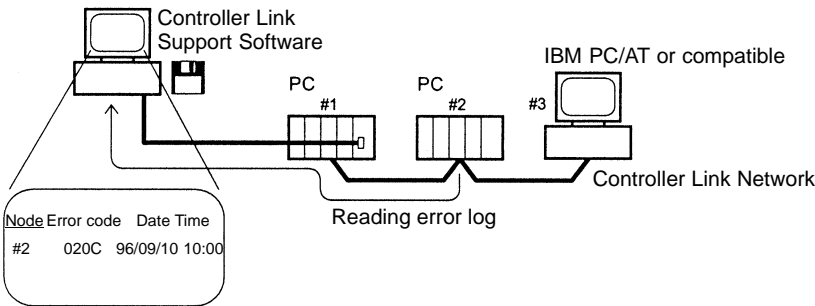


1-1-5 Connecting to the Network

Connecting to a PC

The Controller Link Support Software can be run from a computer that is connected to a Network PC as a dedicated programming device, i.e., one that is not a node on the Network.

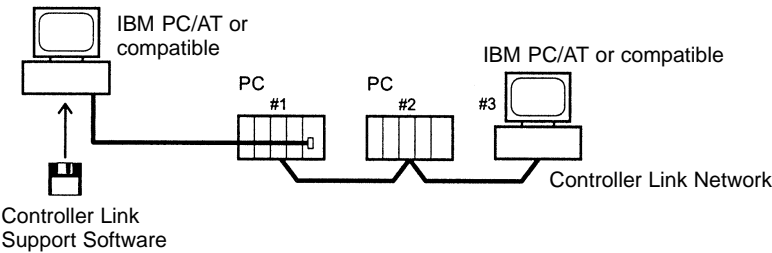


The Controller Link Support Software can also be used simultaneously with the SYSMAC Support Software, i.e., it can be registered in the Option Menu of the SYSMAC Support Software.

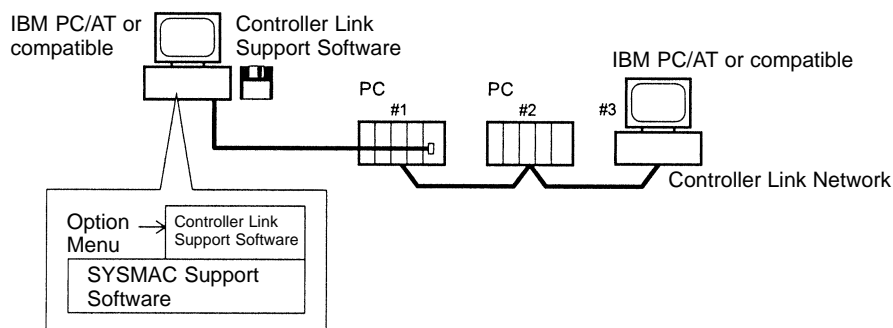


Installing in a Computer Node

The Controller Link Support Software can also be run directly from a Network computer.

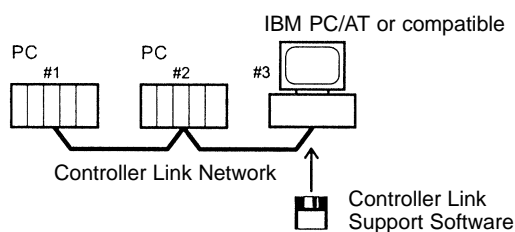


Supplemental Connection Information

The Controller Link Support Software can be connected to PCs via modems.

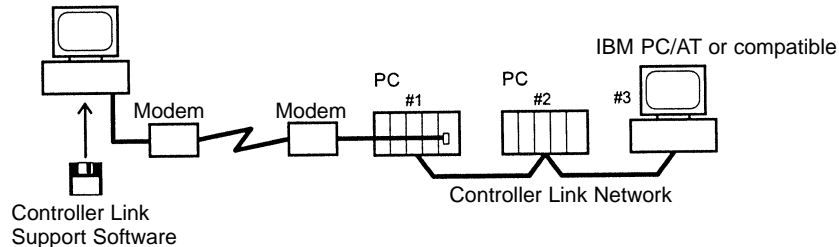


When multiple FA networks are inter-connected, the Controller Link Support Software can be used to set up and monitor up to three levels of Controller Link Networks, including the local network. In this case, set routing tables at each node.

Running from a Computer Node

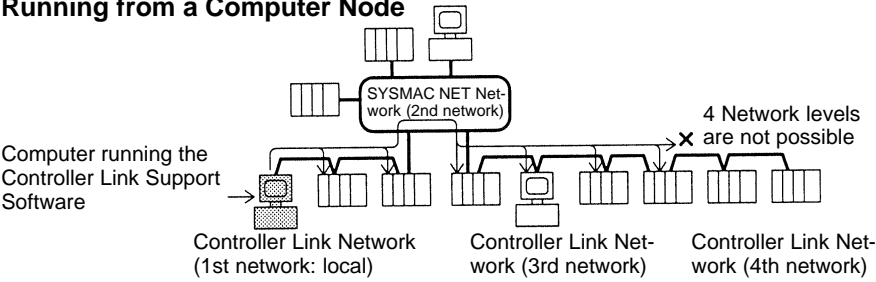

Running from a Programming Device

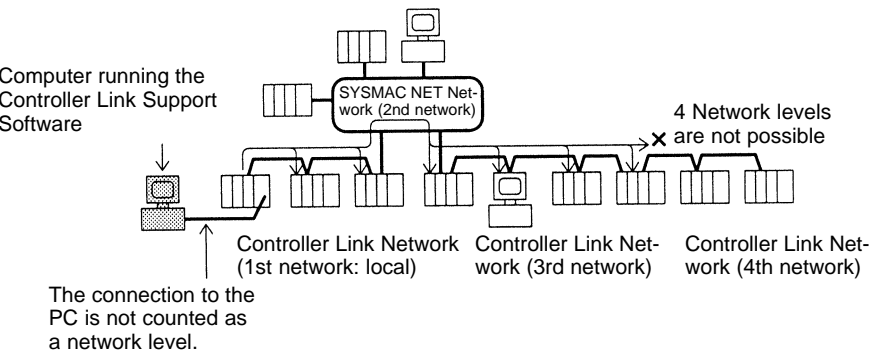

1-2 Checking Components

When you first open the container, check the contents to be sure you have the product you ordered and that all items are present.

1-2-1 C200HW-ZW3AT2-E-V2 Controller Link Support Software

The C200HW-ZW3AT2-E-V2 Controller Link Support Software is used when connecting to a PC from a computer that is not a node on the Network.

- Installation disk (3.5"): 1
- Operation manual (this manual): 1
- User registration card: 1

1-3 Operating Environment

1-3-1 Compatible Computers

The Controller Link Support Software must be run on an IBM PC/AT or compatible computer.

Controller Link Support Software	Manufacturer	Model
C200HW-ZW3AT2-E-V2	Various	IBM PC/AT or compatible computer

The computer must provide the following.

Item	Specifications
Processor	80386/80486 or higher
Main memory	450K bytes min.
Floppy disk	3 1/2" 2HD
Hard disk	1M bytes min. empty disk space
Display	640 × 480 dots (i.e., a 640 × 480 dot display with Windows 95/98)
Keyboard	The following keys are required: Home, Escape, Control, Page Up, Page Down, Backspace, F1 through F10, End, Insert, Delete, Tab.
OS	IBM PC-DOS 7.0 or later Microsoft MS-DOS 6.2 or later Windows 95/98

1-3-2 Printers


To print data from the Controller Link Support Software, use a printer that can execute the following emulation:

Printer specifications
PCL2 specifications
IBM
ESC/P

The following printers are recommended:

Printers
HP Laser Jet 4P
IBM 4202-003
EPSON MJ-500

1-4 Overall Flow of Operation

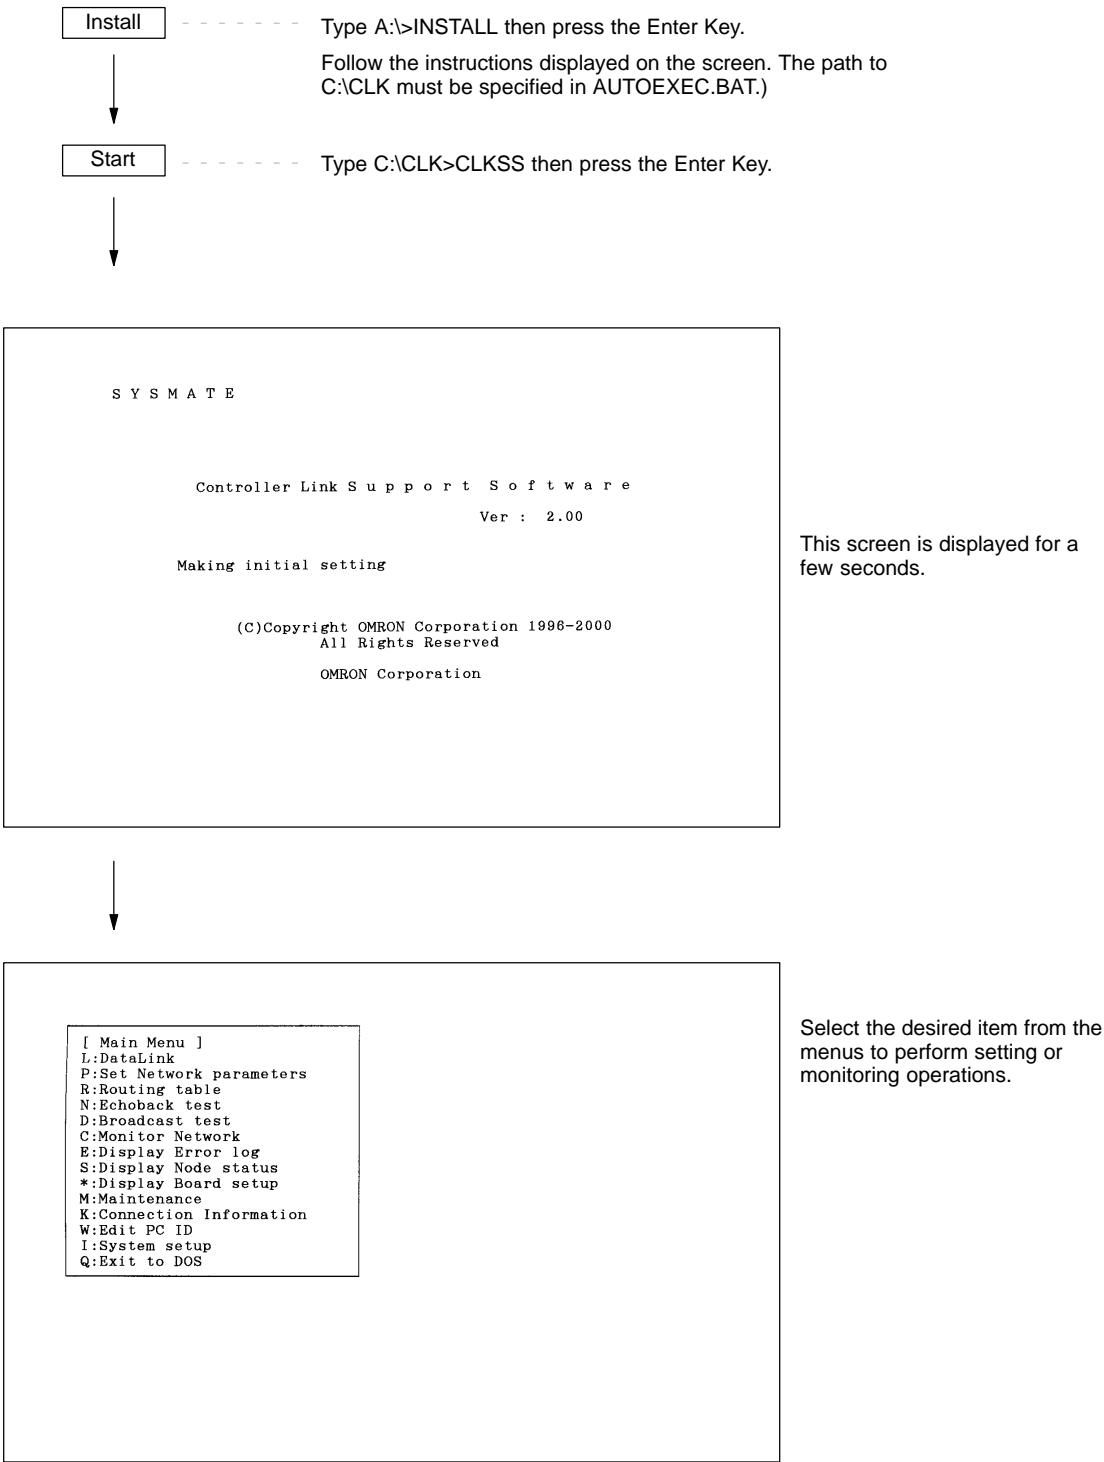


1-5 Menu Hierarchy

This section shows the menu hierarchy of the Controller Link Support Software.

The following illustration shows the overall flow of the menus; it does not show all the steps necessary to display individual menus.

The menu items marked with asterisks (*) are valid only when a Controller Link Support Board is installed in the computer. If a Controller Link Support Board is not installed in the computer, these menu items cannot be selected.

Note Use Controller Link Support Software Ver. 1.10 when creating a Controller Link Network with a Controller Link Support Board. This version is included with the Support Board. Also, use the *SYSMAC C200HW-ZW3AT2-E 3G8F5-CLK11-E/CLK21-E Controller Link Support Software Operation Manual* instead of this manual.

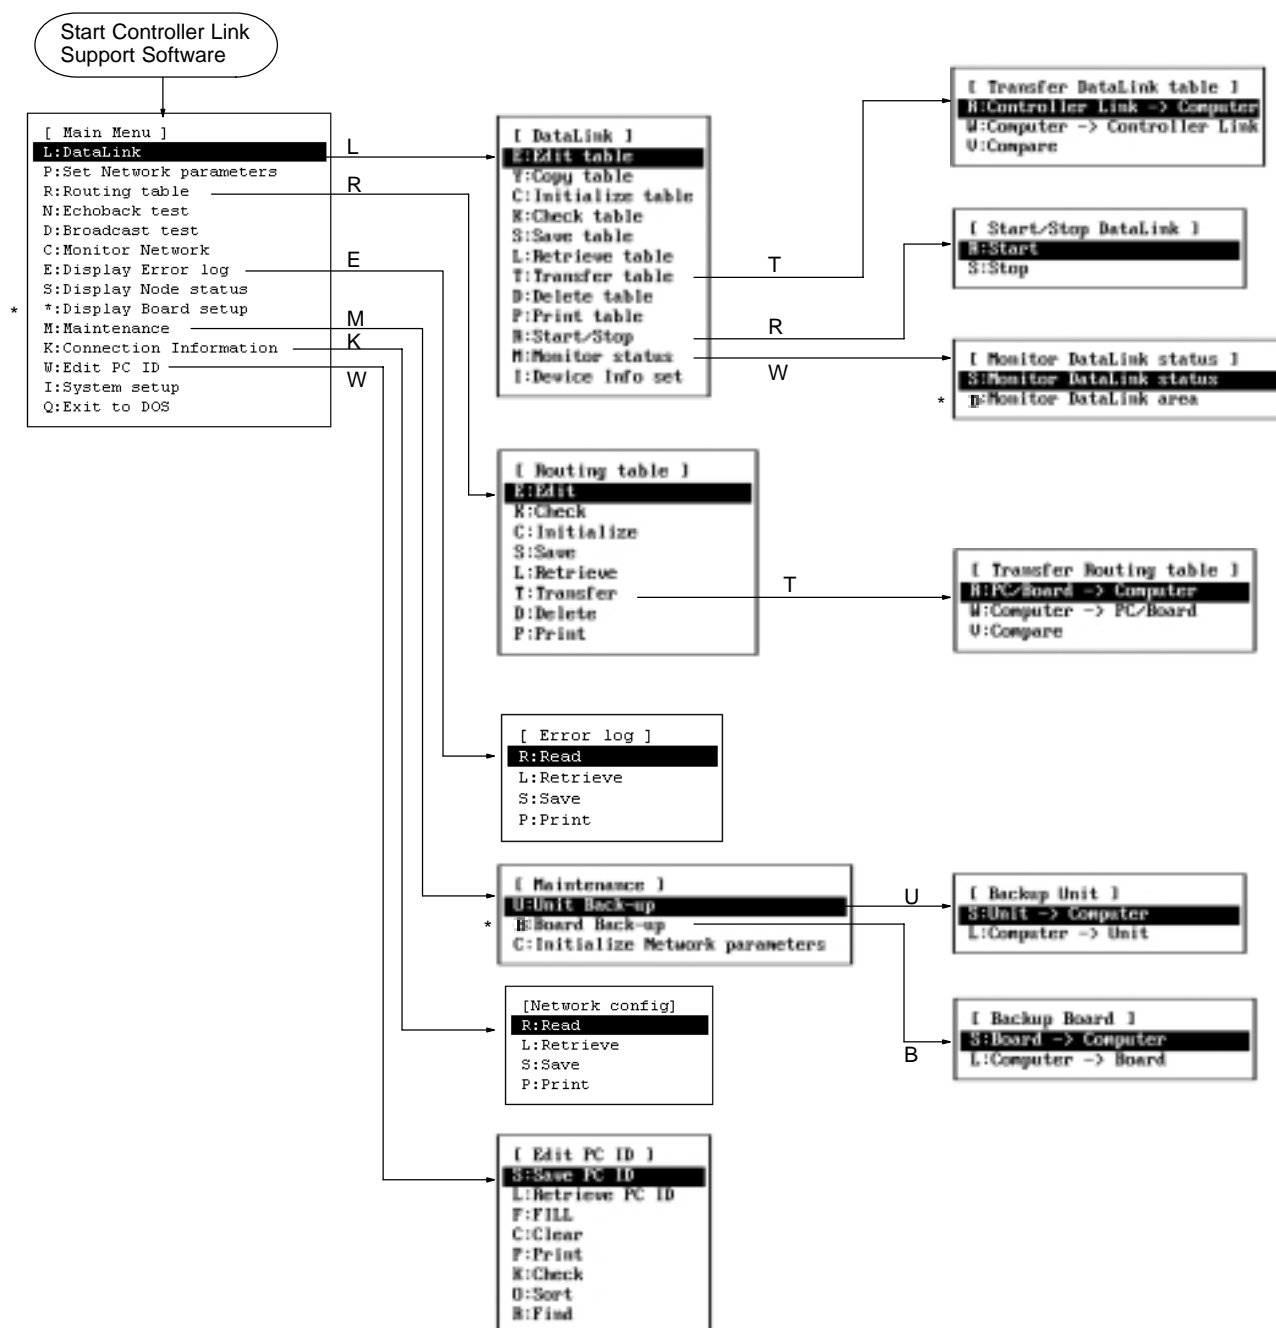

SECTION 2

Installation

This section describes how to install the C200HW-ZW3AT2-E-V2 Controller Link Support Software.

2-1	Preparations for Installation	12
2-1-1	Check Items	12
2-1-2	Backing Up the Installation Disk	12
2-2	Installation Procedure	13

2-1 Preparations for Installation

This section describes the knowledge required and tasks to be performed before installation.

2-1-1 Check Items

Item	Contents
Product	Installation disk: 1 Operation manual (this manual): 1
Operating environment	See 1-3 <i>Operating Environment</i> (page 7.)

2-1-2 Backing Up the Installation Disk

Files may be erased or data may be corrupted by operation errors during installation. Create a copy of the floppy disk of the Controller Link Support Software and use the disk containing the copy for installation. This will protect the master installation disk should any problem occur. Creation of a disk copy is called backing up the disk.

Prepare one new floppy disk for the backup. After completing the backup, store the master disk (the original floppy disk) carefully. It will be necessary for future version upgrades. Use the copied disk for subsequent operation. If the copy is ever damaged, make a backup copy again. If the master disk is damaged, please return it to OMRON. OMRON will fix or replace the disk for a small charge.

This section describes the backup procedure using the following drive structure as the example. If the drive structure is different, replace the drive name.

Floppy disk drive: Drive A (for 3.5" 2HD floppy disks)

Hard disk drive: Drive C (contains the DOS system)

- Note**
- 1) Write protect the Controller Link Support Software disk to ensure that files are not accidentally erased.
 - 2) Always create a backup copy for the Controller Link Support Software in order to provide protection against data corruption.
 - 3) Use the DISKCOPY command of DOS for backing up the disk. The disk to which data is to be copied need not be formatted since DISKCOPY command formats the disk before copying.
 - 4) The operating system (MS-DOS) is not provided with the Controller Link Support Software.

Required Items

New floppy disk (3.5" 2HD): 1

Backup Procedure

- 1, 2, 3...**
1. Turn on the power of the computer. In this example, the computer is started from the hard disk and command input is prompted as shown below.

C:\>

Note If other applications are running, terminate them and display the DOS command input prompt. Refer to the related manuals for your computer and application software.

2. Write protect the floppy disk containing the Controller Link Support Board.
3. Enter the following command (underlined section).

C:\>DISKCOPY A: A:

The following messages will be displayed.

Insert SOURCE disk in Drive A:
and press ENTER when ready...

4. Insert a disk of the Controller Link Support Software in Drive A.
5. Press the Enter Key. The data on the disk will be read and the following messages will be displayed after a short time.

```
Insert TARGET disk in drive A:
and press ENTER when ready...
```

6. Remove the master disk of the Controller Link Support Software from drive A and insert a new floppy disk.
7. Press the Enter Key. The data will be written to the new disk.
8. If a message prompts replacing the disk, replace the disk in drive A according to the message.
9. When copying is completed, the following message will be displayed.

```
Create another copy (Y/N)?
```

10. Press the N key. The following message will be displayed immediately.

```
Copy another disk (Y/N)?
```

11. Press the N key.

Note Store the master installation disk carefully.

2-2 Installation Procedure

This section describes how to install the C200HW-ZW3AT2-E-V2 Controller Link Support Software to the hard disk of a DOS computer connected to a PC. In this example, the system environment is as follows:

- Floppy disk drive: Drive A
- Destination drive in hard disk: Drive C
- Destination directory: C:\CLK

If the drives to be used are different from those shown in this example, replace drives A and C in the following descriptions with the actual drives to be used. Any directory name (up to 8 characters long) can be specified as the destination directory.

Always follow the procedure described in this section. Otherwise, the software may not be installed properly.

- 1, 2, 3... 1. Turn on the power to the computer. The computer is started from the hard disk and command input is prompted as shown below.

```
C:\>
```

Note If another applications is started, terminate it and display a DOS command input prompt. Refer to the related manuals for your computer and the application software.

2. Insert the Controller Link Support Software disk into drive A.

Note Be sure to use the backup disk previously created when installing the software.

3. Change the current drive to drive A by entering the following command.

```
C:\>A:
```

4. Execute the installation program by entering the following command. Specify in the underlined section the directory in which the Controller Link Support Software is to be installed. If a nonexistent directory is specified, it will be automatically created.

```
A:\>INSTALL C:\CLK
```

When the installation program file is activated, the Controller Link Support Software files will be copied from the floppy disk to the hard disk. Follow the instructions displayed on the screen.

Note If the destination directory is omitted, the files will be copied to C:\CLK.

5. When the installation processing is complete, the following message will be displayed.

```
Add "path=%PATH%;C:\CLK" to AUTOEXEC.BAT.  
Command Usage : CLKSS
```

6. Use a text editor to add the following line anywhere in the AUTOEXEC.BAT file as indicated by the message in step 5.

```
path=%PATH%;C:\CLK
```

This completes the installation procedure.

Note If the Controller Link Support Software is registered in the SYSMAC Support Software, it can be started from the SYSMAC Support Software's Option Menu. See *Appendix C Registering the Controller Link Support Software in the SYSMAC Support Software* (page 163) for the registration procedure. We recommend that the Controller Link Support Software be registered in this way if the SYSMAC Support Software is already installed.

SECTION 3

Basic Operations and Connections

This section describes the Controller Link Support Software menu structure and basic operations, such as starting and exiting the software. It also describes how to connect the computer running the Controller Link Support Software to the Network.

3-1	Starting and Exiting the Controller Link Support Software	16
3-1-1	Starting the Software	16
3-1-2	Exiting the Software	18
3-2	Basic Operations	19
3-2-1	Screen Displays	19
3-2-2	Selecting Menu Items	20
3-2-3	Entering Word Addresses	20
3-2-4	Selecting a File from the File List Screen	22
3-2-5	Printing Screens	23
3-3	Connecting to a Node	23
3-3-1	Connection Method	23
3-3-2	PC Settings	25

3-1 Starting and Exiting the Controller Link Support Software

This section describes how to start and exit the Controller Link Support Software.

- Note**
- 1) In the following examples, all command strings are shown in uppercase. They can also be entered in lowercase.
 - 2) If the Controller Link Support Software is registered in the SYSMAC Support Software, it can be started from the SYSMAC Support Software's Option Menu. See *Appendix C Registering the Controller Link Support Software in the SYSMAC Support Software* (page 163) for the registration procedure.
 - 3) The Controller Link Support Software can be run from Windows. See *Appendix D Running the Controller Link Support Software under Windows 95/98* (page 165) for the procedure.

3-1-1 Starting the Software

This section describes how to start the Controller Link Support Software.

In this example, the system environment is as follows:

- Hard disk: Drive C
- Directory for Controller Link Support Software: C:\CLK

If the drive and directory to be used are different from those shown in this example, replace drive C and directory C:\CLK in the following descriptions with the actual drive and directory being used.

Basic Procedure

1, 2, 3...

Turn on the power of the computer. The computer will be started from the hard disk and command input will be prompted as shown below.

```
C:\>
```

Note If another application is started, terminate it and display a DOS command input prompt. Refer to the related manuals for your computer and the application software.

Make sure that the current drive is the drive in which the Controller Link Support Software has been installed.

- Note**
- a) The current drive is the default drive that files are read from or written to. If a file name is specified without a drive name, the file will be searched or written in the current drive.
 - b) When C:\> is displayed as shown in step , drive C is the current drive.

If the current drive is not the drive in which the Controller Link Support Software has been installed, enter the drive name as below to change the current drive.

Example: When changing the current drive from drive A to drive C

```
A:\>C:
```

Enter the command shown below to change the current directory to the directory in which the Controller Link Support Software has been installed. Specify in the underlined section the directory in which the Controller Link Support Software has been installed.

Example: Controller Link Support Software is in directory CLK

```
C:\>CD \CLK
```

- Note**
- a) The current directory is the default directory that files are read from or written to. If a file is specified without a directory name, the file will be searched or written in the current directory.

- b) If the path to the Controller Link Support Software directory is specified in the AUTOEXEC.BAT file, this step need not be performed.

Enter the following command string to start the Controller Link Support Software.

```
C:\CLK>CLKSS
```

- Note** a) Options can be specified in the start command. See *Start Options* (on page 17) for details.
- b) If the Controller Link Support Software is started normally, the logo screen and the Main Menu will be displayed in order. The version number of the Controller Link Support Software appears on the logo screen.

Startup Options

The operation mode can be specified using options when starting the Controller Link Support Software. The option entry format is as follows:

```
CLKSS [ /B ] [ /OSS path ]
      [ /U ]
```

Portions in brackets [] may be omitted. The brackets themselves are not input.

Option	Meaning
/B	The Controller Link Support Software is started for use with a Controller Link Support Board (as a node.) This option is valid only when a Controller Link Support Board is installed in the computer. If a Controller Link Support Board is not installed or does not operate normally, an error message will be displayed.
/U	The Controller Link Support Software is started for use with a Controller Link Unit (for connecting to a PC.) Even if the Controller Link Unit is not connected to a PC, no error will occur. The Controller Link Unit may be connected to PC only when data needs to be transferred between them.
Both /B and /U omitted	The Controller Link Support Software is started in either of the following modes, depending on the presence or absence of the driver for the Controller Link Support Board. When the driver exists: The Controller Link Support Software is started for use with the Controller Link Support Board (as a node.) When the driver does not exist: The Controller Link Support Software is started for use with the Controller Link Unit (for connecting to a PC.)
/OSS path	The Controller Link Support Software is started with the same conditions as the SYSMAC Support Software by reading the information specified in the System Setup of the SYSMAC Support Software. In the SSS <i>path</i> , specify the directory in which the SYSMAC Support Software is installed (e.g., C:\SYSMATE.) The following system setup information is read. Communications parameters Printer model Data drive This option is invalid when the SYSMAC Support Software is not installed or does not operate normally.

3-1-2 Exiting the Software

1, 2, 3...

Press the F1 (Menu) Key to display the Main Menu.

If the Main Menu does not appear when the F1 Key is pressed, press the Escape Key or F10 (End) Key to terminate the active function, and then press the F1 Key.

```
[ Main Menu ]
L:DataLink
P:Set Network parameters
R:Routing table
N:Echoback test
D:Broadcast test
C:Monitor Network
E:Display Error log
S:Display Node status
*:Display Board setup
M:Maintenance
K:Connection Information
W>Edit PC ID
I:System setup
Q:Exit to DOS
```

Select "Q: Exit to DOS" from the Main Menu.

To select "Q: Exit to DOS," press "Q," or use the Up and Down Cursor Keys to highlight "Q: Exit to DOS" and then press the Enter Key.

The Controller Link Support Software will terminate and the system will be ready to receive the next command as shown below.

```
C:\>
```

- Note**
- a) If the Controller Link Support Software is started from the SYS-MAC Support Software or Windows, it will return to the original state when terminated.
 - b) If the Controller Link Support Software is started for use with the Controller Link Support Board, the Controller Link Support Board will be disconnected from the network when the software terminates. Then, an error indicating that the number of nodes participating in the network has decreased (error code 0206 Hex) will be recorded in the error log in the other nodes connected to the network.

3-2 Basic Operations

3-2-1 Screen Displays

A sample screen for the Controller Link Support Software is shown below.

Subfunction name
The submenu item corresponding to the current function is displayed. Nothing is displayed when the current function (main menu item) has no submenu.

Error message display area
An error message is displayed if an error occurs during Controller Link Support Software operation.

Function name
The main menu item corresponding to the current function is displayed.

Cursor
The cursor indicates the selection or input object. On the menu, move the cursor to a desired item, then press the Enter Key. For setting, enter a character string or numerical value at the cursor position.

Function Keys
The Function Keys labels are arranged from left to right and correspond to the F1 to F10 Keys, respectively. Pressing a Function Key executes the displayed function. For example, pressing the F1 (Menu) Key displays the Main Menu. The functions of Function Keys differ according to the screen displayed.

Note The display color of the function and subfunction name fields indicates the device to which the Controller Link Support Software is connected.

- Blue: The Controller Link Support Software is running for connecting to a Controller Link Unit (for connecting to a PC.)
- Yellow: The Controller Link Support Software is running for use with the Controller Link Support Board (as a node.)

The destination to which the Controller Link Support Software is to be connected can be selected by specifying an option when starting the software (see page 17.)

3-2-2 Selecting Menu Items

Using Shortcut Keys

Menu items can be selected in either of the following two ways.

As shown in the figure below, a letter is displayed on the left of each main menu item or submenu item. This key for this letter on the keyboard is called a shortcut key. You can select a menu item by simply pressing the corresponding shortcut key.

Example: Data Link Submenu



In this example, pressing “K” at the Data Link Submenu selects “K: Check table.”

Using the Cursor

Part of each Controller Link Support Software menu is always highlighted. This highlighted portion is called the cursor. The cursor indicates a selected object. To move the cursor, use the Up and Down Cursor Keys. Press the Enter Key to select the item at the cursor position.

Example: Data Link Submenu



In this example, pressing the Enter Key selects “E:Edit table.”

3-2-3 Entering Word Addresses

The Controller Link Support Software displays the Function Keys at the bottom of the screen as shown below when the cursor moves to the word address entry field.



The word address entry methods for CIO (IR), LR, and DM Areas are slightly different from that for the EM Area.

Note When entering data in the first status word field, you can also use the “—” Key and the Delete Key to set the first status word to its default value.

Specifying CIO, LR, and DM Addresses

1, 2, 3... Specify the data area by pressing the corresponding Function Key. In the following example, the DM Area is specified by pressing the F5 (DM) Key.

Example:

[D00000]

Specify a word address by pressing the numeric keys.

Each time a numeric key is pressed, the corresponding number appears on the right end of the highlighted portion and the other digits shift to the left.

Example: When pressing “1”, “2”, and “5” in this order

[D00001] → [D00012] → [D00125]

Press the Enter Key to register the entered data.

The entered data will be automatically checked according to the node model specified as described in 5-3-15 *Specifying Node Models* (page 81.)

Example:

[D00125]

Note You cannot use the Backspace Key or the Delete Key when entering a word address. If an incorrect digit is entered, continue to enter digits until the correct five-digit number is entered. Each time a digit is entered, the incorrect digit shifts to the left and eventually disappears from the field. The Function Keys for data area selection (F3 to F6) are valid while a word address is being entered. If an incorrect digit is entered, the word address entry procedure can be canceled and restarted by pressing one of the F3 to F6 Keys.

Specifying EM Addresses

1, 2, 3...

Press the F6 (EM) Key.

The display will wait for input of the bank.

Example:

[E0_00000]

Enter a bank number by pressing one of the numeric keys or A” to “F.”

The bank number must be a single-digit hexadecimal number. The bank number must be followed by a word address.

Example: Pressing “1” (bank number 1)

[E1_00000]

Specify a word address by pressing the numeric keys.

Each time a numeric key is pressed, the corresponding number appears on the right end of the highlighted portion and the other digits shift to the left.

Example: When pressing “4”, “1”, and “9” in this order

[E1_00004] → [E1_00041] → [E1_00419]

Press the Enter Key to register the entered data.

The entered data will be automatically checked according to the node model specified as described in 5-3-15 *Specifying Node Models* (page 81.)

Example:

[E1_00419]

- Note**
- 1) You cannot use the Backspace Key or the Delete Key when entering a word address. If an incorrect digit is entered, continue to enter digits until the correct five-digit number is entered. Each time a digit is entered, the incorrect digit shifts to the left and eventually disappears from the field. The Function Keys for area selection (F3 to F6) are valid while a word address is being entered. If an incorrect digit is entered, the word address entry procedure can be canceled and restarted by pressing one of the F3 to F6 Keys.
 - 2) If an incorrect bank number is entered, it cannot be corrected. Press the F6 (EM) Key to restart the entry procedure.

3-2-4 Selecting a File from the File List Screen

The Controller Link Support Software allows you to display a list of files in a directory and select one of the files. This will save you the trouble of entering file names and also prevent entry mistakes.

Displaying a File List

The F8 Key serves as the “Files” Function Key as shown below and allows you to select a file from the file list. File lists can be displayed in any window where the F8 Key has “Files” displayed for it.



Selecting from a File List

1, 2, 3...

Specify in the file name entry field the directory for which the file list is to be displayed. Enter a file name with Alphanumeric Keys, the Insert Key, the Delete Key, and the Backspace Key.

The character string before the last backslash (\) is treated as a directory name. When the window is first displayed, the directory specified in “Data disk drive” of the “System setup” Menu is displayed.

Example:




In this example, C:\CLK\DATA is treated as the directory name.

Press the F8 (Files) Key.

A list of files in the specified directory will be displayed.

Example:

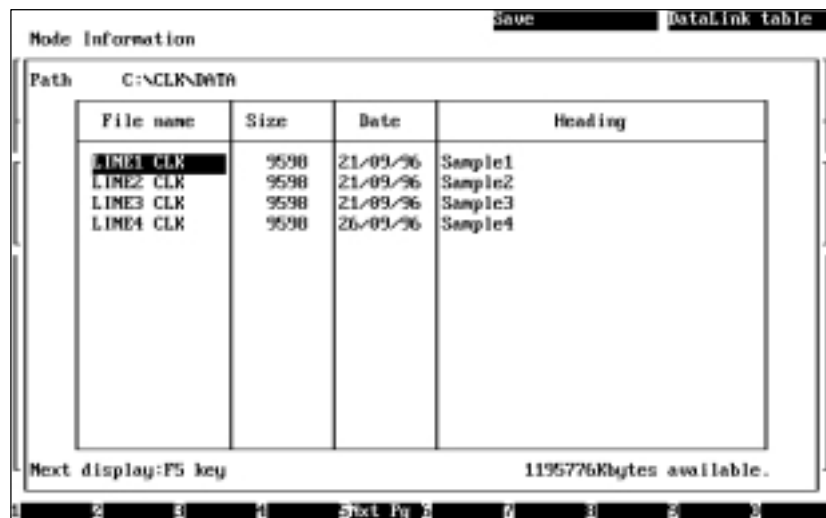

Select a file.

Use the Cursor Keys to move the cursor to a desired file, then press the Enter Key. Subdirectories are displayed as <DIR> in the “Size” column. Selecting a subdirectory displays a list of files in the subdirectory.

Selecting a file will return you to the original screen. The specified file name will appear in the file name entry field.

Example: Selecting LINE3.CLK



If necessary, you can press the F8 (Files) Key and select a file again from the file list.

Press the Enter Key.
The file will be selected.

Note In the file list screen, you can switch to the file list of a subdirectory but cannot return to the parent directory. Press the Escape Key to return to the file name entry screen, then specify the directory again.

3-2-5 Printing Screens

The Controller Link Support Software allows you to print the screen from the connected printer.

- 1, 2, 3... Make sure that the correct printer model is specified in “Printer model” of the “System setup” Menu.
Make sure that the printer is connected to the computer in which the Controller Link Support Software is running and that the printer is ready to operate.
Press the Print Screen Key.
The current screen images will be printed.

Note The Controller Link Support Software cannot be operated while printing.

3-3 Connecting to a Node

3-3-1 Connection Method

Running from a Computer Node

If the Controller Link Support Software is being used in a computer in which a Controller Link Support Board is installed and the computer is connected as a Network node, you need not bother to connect the Controller Link Support Software.


If the Support Board is activated normally, the Controller Link Support Software will be automatically connected to nodes when started.

Connecting to a PC


If the computer in which the Controller Link Support Software is installed is to be connected to a PC, use the SYSMAC Support Software connection cable to connect the computer to the PC.

Note The Controller Link Support Software communicates with a PC only when data is transferred between them. Therefore, you may connect the computer to a PC only when necessary to transfer data or monitor status.


Peripheral Port on CS1-series PCs

Computer	Cable	PC	PC communications
PC/AT	CS1W-CN226/626 (D-Sub 9-pin ↔ dedicated connector) 	Peripheral port on CS1-series PC	Peripheral Bus or Host Link

Peripheral Port on C200HX/HG/HE PCs

Computer	Cable	PC	PC communications
PC/AT	CQM1-CIF02 (D-Sub 9-pin ↔ dedicated connector) 	Peripheral port on C200HX/HG/HE PC	Peripheral Bus or Host Link


Peripheral Port on CVM1 and CV-series PCs

Computer	Cable	PC	PC communications
PC/AT If the RS-232C connector on the computer is a 9-pin connector, use a commercially available 9-to-25-pin conversion adapter to connect the cable to the computer.	CV500-CIF01 (D-Sub 25-pin ↔ dedicated connector) 	Peripheral device connector on CVM1 or CV-series PC	Peripheral Bus

Peripheral Port on CQM1H PCs


Computer	Cable	PC	PC communications
PC/AT	CQM1-CIF02 and CS1W-CN114	Peripheral port on CQM1H PC	Peripheral Bus or Host Link

RS-232C Host Link Port on PC's CPU Unit

Computer	Cable	PC	PC communications
PC/AT If the RS-232C connector on the computer is a 9-pin connector, use a commercially available 9-to-25-pin conversion adapter to connect the cable to the computer.	XW2Z-200S (D-Sub 25-pin ↔ D-Sub 9-pin) XW2Z-500S (D-Sub 25-pin ↔ D-Sub 9-pin) 	RS-232C port on CS1-series PC RS-232C port on C200HX/HG/HE (see note), CVM1, CV-series, or CQM1H PC	Peripheral Bus or Host Link Host Link


Note Connection is only possible to a C200HX/HG/HE CPU Unit with an RS-232C port.

RS-232C Port on Host Link Unit

Computer	Cable	PC (Host Link Unit)	PC communications
PC/AT	CV500-LK201 port 1, in full-duplex mode: XW2Z-200S (D-Sub 25-pin ↔ D-Sub 9-pin) XW2Z-500S (D-Sub 25-pin ↔ D-Sub 9-pin) CV500-LK201 port 2, in full-duplex mode: XW2Z-200P (D-Sub 25-pin ↔ D-Sub 25-pin) XW2Z-500P (D-Sub 25-pin ↔ D-Sub 25-pin) 	RS-232C port on Host Link Unit for CVM1 or CV-series PC (CV500-LK201)	Host Link

Select an appropriate cable according to the shape of the RS-232C connector on the Host Link Unit.

RS-232C Port on Serial Communications Board/Unit

Computer	Cable	PC (Serial Communications Board/Unit)	PC communications
PC/AT	XW2Z-200S (D-Sub 25-pin ↔ D-Sub 9-pin) XW2Z-500S (D-Sub 25-pin ↔ D-Sub 9-pin) 	RS-232C port on Serial Communications Board (CS1W-SC B21/41) or Serial Communications Unit (CS1W-SC U21) for CS1-series PC	Host Link

3-3-2 PC Settings**Peripheral Bus**

If the Controller Link Support Software is to communicate with a PC via the peripheral bus, the PC must be set to the same baud rate as the Controller Link Support Software.

Note See 5-14-3 *Setting PC Communications* (on page 137) in 5-14 *System Setup* to set the baud rate for the Controller Link Support Software.

CS1-series PCs**Connecting to Peripheral Port**

When connecting to the peripheral port on the CPU Unit, set DIP switch pin 4 to OFF, and set the baud rate for the Controller Link Support Software to the maximum value (19,200 bps). Alternatively, set DIP switch pin 4 to ON and make the PC Setup settings for the CPU Unit using CX-Programmer. Select the peripheral port and set the serial communications mode to peripheral bus, and make the same communications settings as the Controller Link Support Software.

Connecting to RS-232C Port


When connecting to the RS-232C port on the CPU Unit, set DIP switch pin 5 to ON, and set the baud rate for the Controller Link Support Software to the maximum value (19,200 bps). Alternatively, set DIP switch pin 5 to OFF and make the PC Setup settings for the CPU Unit using CX-Programmer. Select the RS-232C port and set the serial communications mode to peripheral bus, and make the same communications settings as the Controller Link Support Software.

C200HX/HG/HE PCs

Set the same baud rate as the Controller Link Support Software in PC Setup words DM 6650 and DM 6651 of the CPU Unit.

Setting the Standard Communications Parameters


Peripheral port: DM 6650



Communications parameters
0: Standard communications parameters (9600 bps)
1: According to DM6651
Initial status: 0000 (Standard communications parameters at 9,600 bps.)

Setting the Baud Rate

Peripheral port: DM 6651 bits 0 to 7




Baud rate
00: 1200 bps (see note)
01: 2400 bps
02: 4800 bps
03: 9600 bps
04: 19200 bps
Initial status: 0000 (1200 bps)

Note The baud rate cannot be set to 1,200 bps for the Controller Link Support Software.

CVM1 and CV-series PCs

Use DIP switch pins 1 and 2 on the CPU Unit to set the same baud rate as the Controller Link Support Software.

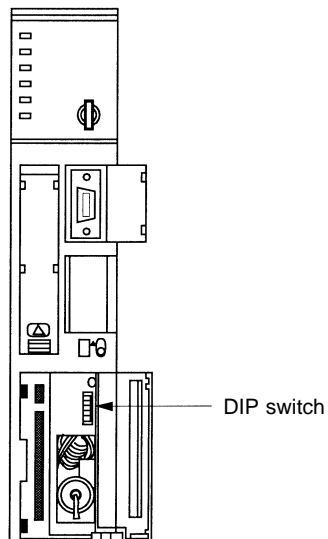

DIP switch pins		Baud rate
1	2	
OFF	OFF	50 Kbps (see note)
ON	OFF	19,200 bps
OFF	ON	9,600 bps
ON	ON	4,800 bps

Note The baud rate cannot be set to 50 kbps for the Controller Link Support Software.

CQM1H PCs**Connecting to Peripheral Port**

Use one of the following methods when connecting to the peripheral port on the CPU Unit.

- Set DIP switch pins 5 and 7 to ON, and set the baud rate for the Controller Link Support Software to 9,600 bps.
- Set DIP switch pin 5 to OFF and pin 7 to ON, and set the PC Setup word DM 6650 (peripheral port settings) to 0000 Hex (standard setting). Set the baud rate for the Controller Link Support Software to 9,600 bps.
- Set DIP switch pin 5 to OFF and pin 7 to ON, and set the PC Setup word DM 6650 (peripheral port settings) to 0001 Hex (settings according to DM 6651). Set the communications settings (DM 6651: peripheral port settings) to the same settings as the Controller Link Support Software. Set the baud rate for the Controller Link Support Software to a value in the range 2,400 to 19,200 bps.

Connecting to RS-232C Port

Peripheral bus connection to the RS-232C port is not possible.

Host Link

If the Controller Link Support Software is to communicate with a PC via a Host Link, the PC must be set to the same communications parameters as the Controller Link Support Software.

Note See 5-14-3 *Setting PC Communications* (on page 137) in 5-14 *System Setup* to set the communications parameters for the Controller Link Support Software.

CS1-series PCs**Connecting to Peripheral Port**

When connecting to the peripheral port on the CPU Unit, set DIP switch pin 5 to ON and make the PC Setup settings for the CPU Unit using CX-Programmer. Select the peripheral port and set the serial communications mode to Host Link, and make the same communications settings as the Controller Link Support Software.

Connecting to RS-232C Port

When connecting to the RS-232C port on the CPU Unit, set DIP switch pin 5 to OFF and make the PC Setup settings for the CPU Unit using CX-Programmer.

**CS1-series Serial
Communications
Board/Unit**

Select the RS-232C port and set the serial communications mode to Host Link, and make the same communications settings as the Controller Link Support Software.

In the software switch settings of the Serial Communications Board/Unit registered in the CX-Programmer's I/O table, select the serial port for connection, set the serial communications mode to Host Link, and make the same communications settings as the Controller Link Support Software.

C200HX/HG/HE PCs


Use the PC Setup (DM Area) of the PC to set the communications parameters for the port to be used (peripheral port or RS-232C port.)

Note When DIP switch pin 5 on the CPU Unit is set to ON, the communications parameters are set as follows, regardless of the PC Setup:

Communications: Host Link mode
 Node No.: 00
 Start bits: 1 bit
 Data bits: 7 bits
 Stop bits: 2 bits
 Parity: Even
 Baud rate: 9,600 bps
 Transmission delay: None

Setting Standard Communications Parameters**RS-232C port: DM6645**

Communications mode —————→
 Set to (0: Host Link)
 Not related when Host Link is set —————→
 CTS control (Yes/No) —————→
 Communications parameters —————→
 0: Standard communications parameters
 1: According to DM 6646
 Initial status: 0000 (Standard communications at 9,600 bps.)

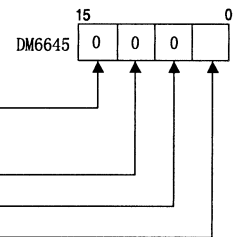

Bits 8 to 11 are valid for only the master node with 1:1 link.

Bits 0 to 7 and 12 to 15 are valid only when DIP switch pin 5 on the CPU Unit is set to OFF.

The standard communications parameters are as follows:

Start bits: 1 bit
 Data bits: 7 bits
 Stop bits: 2 bits
 Parity: Even
 Baud rate: 9,600 bps

Always set the mode to be used.


If the above communications parameters are acceptable, specify 00 in the lower two digits.

Setting Communications Parameters

The Controller Link Support Software can communicate with PC only when DIP switch pin 5 on the CPU Unit is set to OFF and DM 6645 is set to use DM 6646 settings.

RS-232C port: DM 6646

Transmission frame format (see table) —————→
 Baud rate (see table) —————→
 Initial status: 0000 (Start bits: 1, Data length: 7, Stop bits: 1, Even parity, 1,200 bps.)

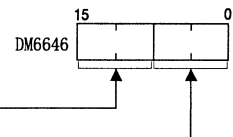

Transmission Frame Format


Setting	Start bits	Data length	Stop bits	Parity	Setting	Start bits	Data length	Stop bits	Parity
00	1	7	1	Even	06	1	8	1	Even
01	1	7	1	Odd	07	1	8	1	Odd
02	1	7	1	None	08	1	8	1	None
03	1	7	2	Even	09	1	8	2	Even
04	1	7	2	Odd	10	1	8	2	Odd
05	1	7	2	None	11	1	8	2	None

Baud Rate

Setting	Baud rate
00	1,200 bps
01	2,400 bps
02	4,800 bps
03	9,600 bps
04	19,200 bps

The baud rate cannot be set to 1,200 bps for the Controller Link Support Software.

Set the communications parameters for the PC according to the communications parameters for the Controller Link Support Software.

Setting the Node Number**RS-232C port: DM 6648**

Node no. (2 digit BCD) 00 to 31


Initial status: 00 (node no. 00.)

When multiple PCs are connected to the host computer, a node number is assigned to each PC for identification purposes. Assign the PC the same node number as that specified in the Controller Link Support Software.

CVM1 and CV-series PCs

Use the DIP switch on the PC and the PC Setup to set the communications parameters for the Host Link connection.

Note Use the SYSMAC Support Software to set up the PC Setup.

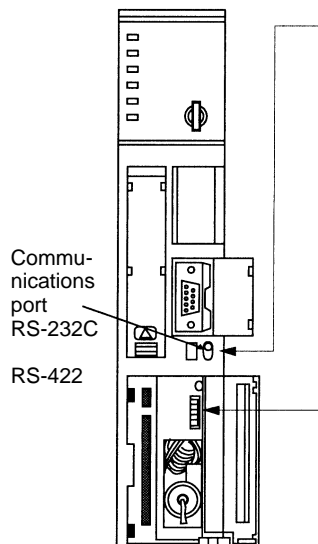

I/O port setting (selector switch)
Set the selector switch to RS-232C.

System setup (DIP switch pin 4)
To set to the values specified by the DIP switch: Set DIP switch pin 4 to ON.
To set to the values specified in the PC Setup: Set DIP switch pin 4 to OFF.

Note For CPU Units manufactured before June 1995 (lot No. □□65), the default values specified by the DIP switch differ from those specified in PC Setup as follows:

The default values specified by the DIP switch are 2,400 bps, one stop bit, even parity, and 7-bit data length.

The default values specified in the PC Setup are 9,600 bps, two stop bits, even parity, and 7-bit data length.

For CPU Units manufactured after July 1995 (lot No. □□75), the values specified in the DIP switch have been changed to 9,600 bps and two stop bits to make them identical with those of the PC Setup.

CVM1/CV-series Host Link Unit


Set the communications parameters for the port to be used (port 1 or 2) with the rotary switches, DIP switch, and CPU Bus Unit System Setup of the CVM1/CV-series Host Link Unit (CV500-LK201).

Setting the Node Number for Communications Port 2


When multiple PCs are connected to the host computer, a node number is assigned to each PC for identification purposes. Decimal numbers 0 to 31 can be assigned as the node number of communications port 2. Set the tens digit with the left switch and the ones digit with the right switch.

Setting Example

Node No.



- Note**
- 1) Do not specify a node number higher than 31. Doing so results in an error and lights the ERC2 indicator on the display panel.
 - 2) Since the Controller Link Support Software and the Host Link Unit are always connected on the one-to-one basis, the node number can normally be 0.
 - 3) The node number of communications port 1 is fixed at 0.

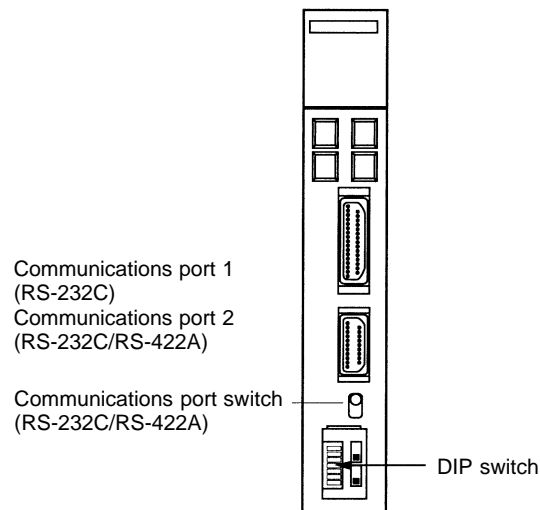DIP Switch Settings of CVM1/CV-series Host Link Units

For each DIP switch pin, ON is on the left side and OFF is on the right side.

No.	Function	Setting	Meaning
1	Communications parameter settings (for communications ports 1 and 2) (see note)	ON	The communications parameters for communications ports 1 and 2 are as follows: Baud rate: 9,600 bps Stop bits: 2 bits Parity: Even Data bits: 7 bits Xon/Xoff control: No Communications method: Full duplex
		OFF	The values specified for the CPU Bus Unit System in the PC are used as communications parameters. The initial values are as follows: Baud rate: 9,600 bps Stop bits: 2 bits Parity: Even Data bits: 7 bits Xon/Xoff control: Not Communications method: Full duplex
2	CTS switch (communications port 1)	ON	The CTS signal (ready to receive) is always set to ON (0 V fixed.) Always set this switch pin to ON when connecting the Controller Link Support Software.
		OFF	Cannot be set.
3	CTS switch (communications port 2)	ON	The CTS signal (ready to receive) is always set to ON (0 V fixed.) Always set this switch pin to ON when connecting the Controller Link Support Software.
		OFF	Cannot be set.
4	Reserved for system use	ON	Cannot be set.
		OFF	Always set this bit to OFF.
5	Loopback test	ON	Cannot be set when the Controller Link Support Software is connected.
		OFF	Always set this switch pin to OFF when connecting the Controller Link Support Software.
6	Test port selection	ON	Cannot be set when the Controller Link Support Software is connected.
		OFF	Always set this switch pin to OFF when connecting the Controller Link Support Software.

Note For Host Link Units manufactured after July 1995 (lot No.**75), the communications parameter settings when DIP switch pin 1 is ON are as shown in the table above.


For Host Link Units manufactured before June 1995 (lot No.**65), the communications parameter settings are different from the above (baud rate = 2,400 bps, stop bits = 1 bit.)

CPU Bus Unit System Setup

Item	Setting	Initial value
Baud rate	Specify the baud rate. Select 2400, 4800, 9600, or 19200 bps.	9,600 bps
Stop bits	Specify the stop bit length. Select 1 or 2 stop bits.	2 bits
Parity	Specify the parity check. First, select "Parity" or "No parity." If Parity is selected, specify even or odd parity.	Even parity
Data bits	Specify the send data bit length. Select 7 bits or 8 bits.	7 bits
Xon/Xoff control	Specify whether Xon/Xoff control is to be performed. This item is valid only in full duplex mode. Select Yes or No.	No
Communications mode	Specify the communications mode. Half duplex is valid only for RS-232C interface. Select full duplex or half duplex.	Full duplex
Retries	Specify whether data is to be resent from scratch when transmission is interrupted. This item is valid in half duplex mode. Select No or Yes.	No
Send stop code (Xoff)	Specify the Xoff (send stop) code. This item is valid only when Xon/Xoff control is performed.	13 Hex
Send stop release code (Xon)	Specify an Xon (send stop release) code. This item is valid only when Xon/Xoff control is performed.	11 Hex
Transmission delay	Specify the delay from the time the RS signal is turned on until data is transmitted. This item is valid only in half duplex mode. Specify a value between 00 and FF Hex (between 0 and 255 in decimal) The transmission delay is determined by multiplying the setting by 2 ms (0 to 510 ms.) If 00 Hex (0 ms) is specified, data will be transmitted 1 ms after the RS signal is turned on.	0 ms


Use the CPU Bus Unit System Setup of the SYSMAC Support Software to set the bit strings as follows:

Communications Port 1

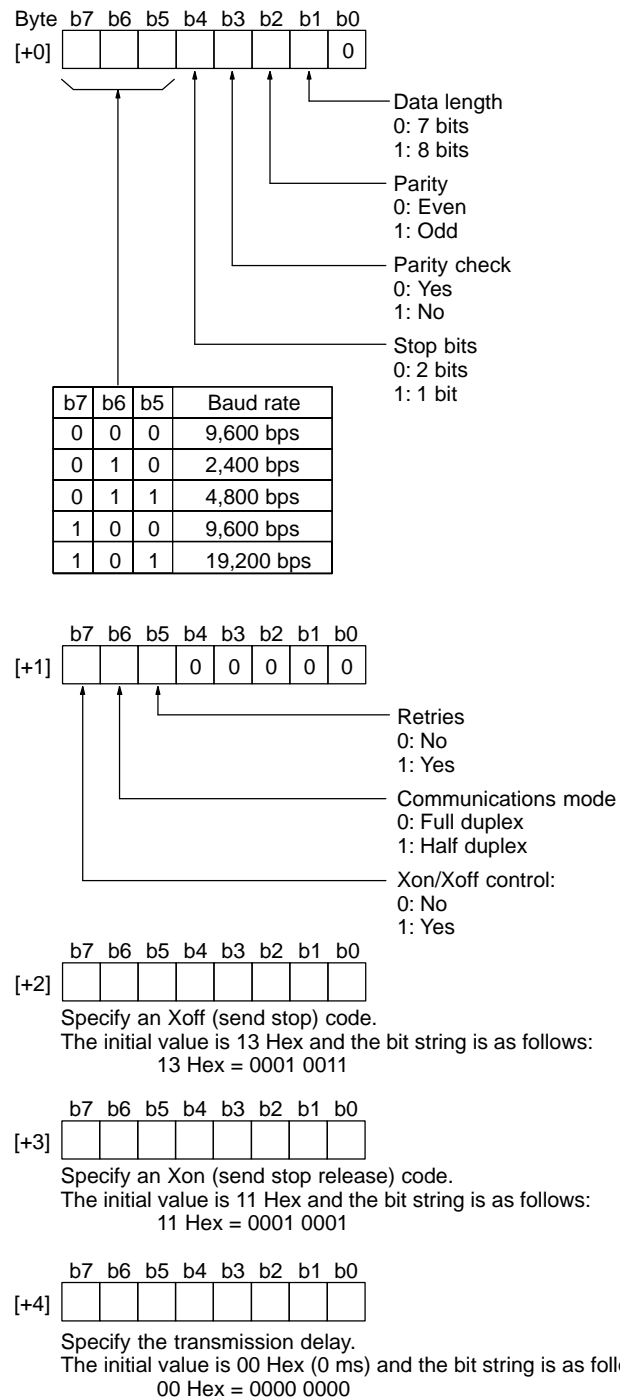

Set all bits of bytes [+5] to [+9] to 0.

Communications Port 2

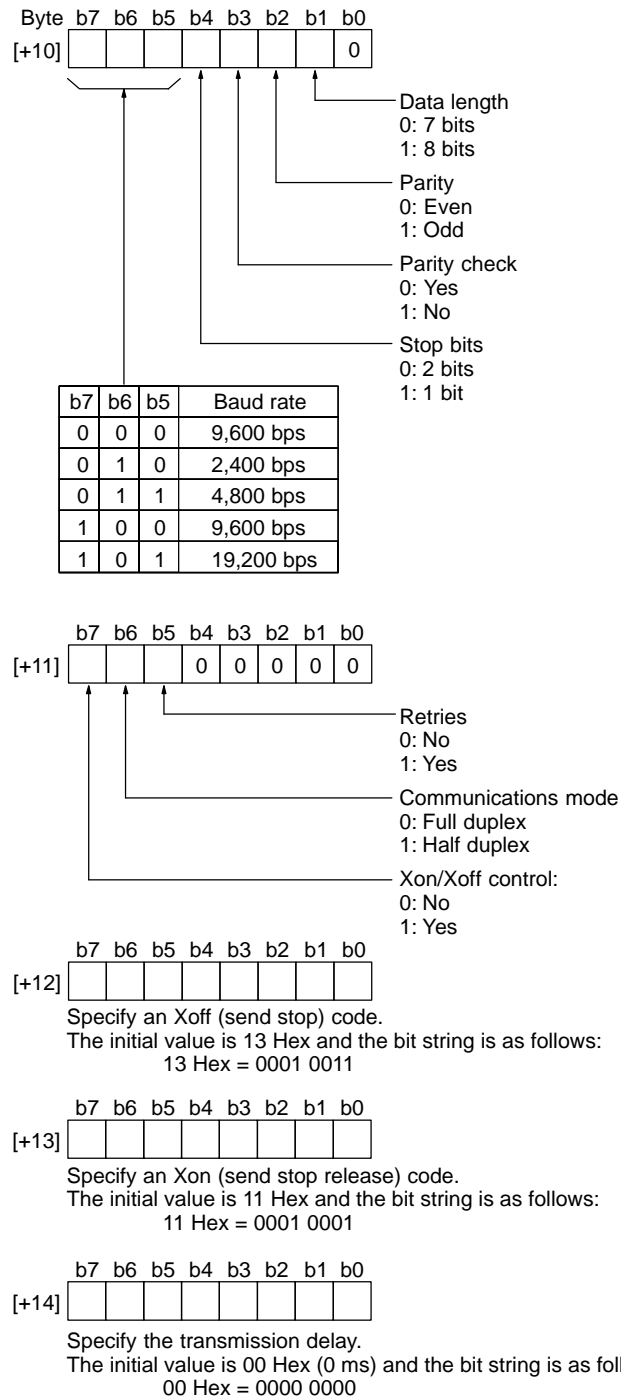

Set all bits of bytes [+15] to [+19] to 0.

CQM1H PCs

Connecting to Peripheral Port

Use one of the following methods when connecting to the peripheral port on the CPU Unit.

- a) Set DIP switch pins 5 and 7 to ON, and set the baud rate for the Controller Link Support Software to 9,600 bps.

- b) Set DIP switch pin 5 to OFF and pin 7 to ON, and set the PC Setup word DM 6650 (peripheral port settings) to 0000 Hex (standard setting). Set the baud rate for the Controller Link Support Software to 9,600 bps.
- c) Set DIP switch pin 5 to OFF and pin 7 to ON, and set the PC Setup word DM 6650 (peripheral port settings) to 0001 Hex (settings as in DM 6651). Set the communications settings (DM 6651: peripheral port settings) to the same settings as the Controller Link Support Software. Set the baud rate for the Controller Link Support Software to a value in the range 2,400 to 19,200 bps.

Connecting to RS-232C Port

Use one of the following methods when connecting to the RS-232C port on the CPU Unit.

- a) Set DIP switch pin 5 to ON, and set the baud rate for the Controller Link Support Software to 9,600 bps.
- b) Set DIP switch pin 5 to OFF, and set the PC Setup word DM 6645 (RS-232C port settings) to 0000 Hex (standard setting). Set the baud rate for the Controller Link Support Software to 9,600 bps.
- c) Set DIP switch pin 5 to OFF, and set the PC Setup word DM 6645 (RS-232C port settings) to 0001 Hex (settings as in DM 6646). Set the communications settings (DM 6646: RS-232C port settings) to the same settings as the Controller Link Support Software. Set the baud rate for the Controller Link Support Software to a value in the range 2,400 to 19,200 bps.

SECTION 4

Basic Operating Procedures

This section outlines operating procedures for the Controller Link Support Software. Actual procedures are provided in *Section 5 Operating Procedures*.

4-1	Starting the Network for the First Time	38
4-2	Starting Data Links	38
4-2-1	Manually Set Data Links	38
4-2-2	Automatically Set Data Links	39
4-3	Interconnecting Networks	39

4-1 Starting the Network for the First Time

1, 2, 3...

1. System Setup

Set up the Controller Link Support Software operating environment and the PCs to be connected.

This step does not necessarily need to be performed first, but it does need to be performed before transferring data between the Controller Link Support Software and nodes, printing data, or executing the functions on the Maintenance Menu.

- **Main Item Selection**

Main Menu → I:System setup

2. Broadcast Test

If necessary, conduct a communications test for the entire network to check for any communications problems.

- **Main Item Selection**

Main Menu → D:Broadcast test

3. Echoback Test

If necessary, conduct a communications test (stricter than the broadcast test) for each node and make sure that the Controller Link Support Software can communicate normally with each node.

- **Main Item Selection**

Main Menu → N:Echoback test

4. PC IDs (This step is optional.)

Assign a PC ID to each node to facilitate node management and Controller Link Support Software operations.

- **Main Item Selection**

Main Menu → W>Edit PC ID

4-2 Starting Data Links

4-2-1 Manually Set Data Links

1, 2, 3...

1. Setting Device Information

Specify the model of each node on the Controller Link Network. This information is used to perform word address validity checks when data link tables are created or edited.

- **Main Item Selection**

Main Menu → L:Data Link → Data Link submenu (F2) → I:Device Info set

2. Creating Data Link Tables

Data link tables are required for manually set data links.

- **Main Item Selection**

Main Menu → L:Data Link

3. Checking Data Link Tables

Check the created data link tables for errors or inconsistencies.

- **Main Item Selection**

Main Menu → L:Data Link → Data Link submenu (F2) → K:Check table

4. Transferring the Data Link Tables

Transfer the created data link tables to the nodes.

- **Main Item Selection**

Main Menu → L:Data Link → Data Link submenu (F2) → T:Transfer table
→ W:Computer→Controller Link

5. Starting the Data Links

After the data link tables have been transferred, start the data links.

- **Main Item Selection**

Main Menu → L:Data Link → Data Link submenu (F2) → R:Start/Stop



Caution

Before starting data links, make sure that data link tables have been appropriately set at each node for which the data links are to be established. If the data link tables have been inappropriately set, the equipment may perform unexpected operation and result in injury. Even if the data link tables have been appropriately set, always make sure that the equipment will not be affected before starting or stopping the data link.

6. Checking Data Link Operation

Use the operation status monitor to check whether the data links are operating normally.

- **Main Item Selection**

Main Menu → L:Data Link → Data Link submenu (F2) → M:Monitor status

7. Saving the Data Link Tables

After the data link operates normally, save the data link tables as a file.

- **Main Item Selection**

Main Menu → L:Data Link → Data Link submenu (F2) → S:Save table

4-2-2 Automatically Set Data Links

1, 2, 3...

1. Starting the Data Links (After the Data Link Tables Have Been Transferred to the Nodes)

For automatically set data links, set the data link auto setting parameters for the data link startup node. Refer to the *Controller Link Unit Operation Manual (W309)* for details.

- **Main Item Selection**

Main Menu → L:Data Link → Data Link submenu (F2) → R:Start/Stop



WARNING

Before starting a data link, make sure that data link parameters have been appropriately set at the data link start-up node. If the data link parameters have been inappropriately set, the equipment may perform unexpected operation and result in injury. Even if the data link parameters have been appropriately set, always make sure that the equipment will not be affected before starting or stopping the data link.

2. Checking Data Link Operation

Use the operation status monitor function to check whether the data links are operating normally.

- **Main Item Selection**

Main Menu → L:Data Link → Data Link submenu (F2) → M:Monitor status

4-3 Interconnecting Networks

1, 2, 3...

1. Creating Routing Tables

Routing tables are required when multiple FA networks are connected.

- **Main Item Selection**

Main Menu → R:Routing table

2. Checking the Routing Tables

Check the created routing tables for errors or inconsistencies.

- **Main Item Selection**

Main Menu → R:Routing table → Routing table submenu (F2) → K:Check

3. Transferring the Routing Tables

Transfer the routing tables to nodes.

- **Main Item Selection**

Main Menu → R:Routing table → Routing table submenu (F2) → T:Transfer → W:Computer → PC/Board

4. Saving the Routing Tables

Routing tables can be edited for only one node at a time. Therefore, always save the routing tables as a file after transferring them to the node.

Repeat the routing table creation/check/transfer/save procedures until the routing tables are registered at all nodes.

- **Main Item Selection**

Main Menu → R:Routing table → Routing table submenu (F2) → S:Save

**Caution**

Once routing tables are transferred to a PC, all CPU Bus Units at the node will be reset. This is for the purpose of reading and enabling the set routing tables. Before transferring the routing tables, always make sure that the equipment will not be affected.

SECTION 5

Operating Procedures

This section describes individual operating procedures for the Controller Link Support Software.

5-1	Keyboard Operation	43
5-2	Main Menu	43
5-3	L: Data Link	45
5-3-1	Data Link Areas and Data Link Tables	46
5-3-2	Setting Data Link Tables	51
5-3-3	Displaying the Data Link Menu	51
5-3-4	Creating and Editing Data Link Tables — E: Edit Table	52
5-3-5	Copying Data Link Tables — Y: Copy Table	59
5-3-6	Initializing All Data Link Tables — C: Initialize Table	60
5-3-7	Checking Data Link Tables — K: Check Table	61
5-3-8	Saving Data Link Tables as a File — S: Save Table	64
5-3-9	Reading Data Link Tables from a File — L: Retrieve Table	66
5-3-10	Transferring Data Link Tables — T: Transfer Table	67
5-3-11	Deleting Data Link Tables from Nodes — D: Delete Table	74
5-3-12	Printing Data Link Tables — P: Print Table	75
5-3-13	Starting and Stopping Data Links — R: Start/Stop	77
5-3-14	Displaying Data Link Status — M: Monitor Status	78
5-3-15	Specifying Node Models — I: Device Information Settings	81
5-4	P: Set Network Parameters	83
5-5	R: Routing Table	85
5-5-1	Outline of Routing Tables	86
5-5-2	Setting Routing Tables	87
5-5-3	Communications Range	87
5-5-4	Displaying the Routing Table Menu	88
5-5-5	Creating and Editing Routing Tables — E: Edit	88
5-5-6	Checking Routing Tables — K: Check	91
5-5-7	Initializing Routing Tables — C: Initialize	93
5-5-8	Saving Routing Tables as a File — S: Save	93
5-5-9	Reading Routing Tables from the File — L: Retrieve	94
5-5-10	Transferring Routing Tables — T: Transfer	94
5-5-11	Deleting Routing Tables from a Node — D: Delete	98
5-5-12	Printing Routing Tables — P: Print	99
5-6	N: Echoback Test	100
5-7	D: Broadcast Test	101
5-8	C: Monitor Network	103
5-9	E: Display Error Log	104
5-9-1	About Error Logs	105
5-9-2	Data Formats for Error Log Files	105
5-9-3	Displaying the Error Log Menu	106
5-9-4	Reading Error Logs — R: Read	106
5-9-5	Reading Error Logs from a File — L: Retrieve	108
5-9-6	Saving Error Logs as a File — S: Save	108
5-9-7	Printing Error Logs — P: Print	108
5-10	S: Display Node Status	109
5-11	M: Maintenance	112
5-11-1	Displaying the Maintenance Menu	113
5-11-2	Backing Up Unit EEPROM — U: Unit Backup	113
5-11-3	Initializing Network Parameters — C: Initialize Network Parameters	114

5-12	K: Connection Information	115
5-12-1	About Connection Information	115
5-12-2	Displaying the Connection Information Menu (Network Configuration)	119
5-12-3	Reading Connection Information — R: Read	119
5-12-4	Reading Connection Information from a File — L: Retrieve	122
5-12-5	Saving Connection Information as a File — S: Save	122
5-12-6	Printing Connection Information — P: Print	123
5-13	W: Edit PC ID	124
5-13-1	About PC IDs	125
5-13-2	Displaying the PC ID Edit Screen	126
5-13-3	Creating and Editing PC IDs	127
5-13-4	Displaying the Edit PC ID Menu	129
5-13-5	Saving PC ID Data as a File — S: Save PC ID	129
5-13-6	Reading PC ID Data from a File — L: Retrieve PC ID	129
5-13-7	Specifying Multiple Nodes — F: FILL	130
5-13-8	Clearing Multiple PC IDs — C: Clear	131
5-13-9	Printing PC ID Data — P: Print	131
5-13-10	Checking PC ID Data — K: Check	132
5-13-11	Sorting PC ID Data — O: Sort	133
5-13-12	Searching PC ID Data — R: Find	134
5-14	I: System Setup	135
5-14-1	About the System Setup	135
5-14-2	Displaying the System Setup — I: System Setup	136
5-14-3	Setting PC Communications — C: PC Interface	137
5-14-4	Setting the Node Response Time — T: Watchdog Timer	140
5-14-5	Setting the Printer Model — P: Printer Model	141
5-14-6	Setting the Data Directory — D: Data Disk Drive	141
5-15	Q: Exit to DOS	142

5-1 Keyboard Operation



This section describes the keys used to operate the Controller Link Support Software.




Operation	Key
Display a menu	End
Return to previous step	Esc
Display the previous screen	Page Up
Display the next screen	Page Down
Print screen	Print Screen
Delete one character back	Backspace
Insert space	Insert
Delete one character forward	Delete

5-2 Main Menu

The Controller Link Support Software displays the Main Menu when the F1 (Menu) Key is pressed at any screen.

The Main Menu consists of the following items.

Menu item	Function	Page
L: Data Link	<p>Performs various data link operations such as creating and editing data link tables, transferring data link tables to nodes, starting and stopping data links, and displaying operating status.</p> <p>This item has the following menu.</p> 	45
P: Set Network parameters	<p>Modifies network communications parameters to provide the most suitable Controller Link communications for the user application.</p>	83
R: Routing table	<p>Creates or edits routing tables and transfers them to nodes when multiple FA networks are interconnected.</p> <p>This item has the following menu.</p> 	85
N: Echoback test	<p>Conducts a communications test for the specified node. This item can be used to locate faulty sections when a communications error occurs.</p>	100

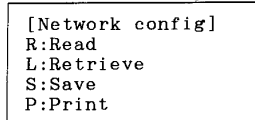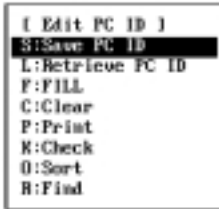Menu item	Function	Page
D: Broadcast test	Transmits the same data to all nodes within the Controller Link Network. Use this item to check the status of communications with all nodes within the network.	101
C: Monitor Network	Displays the network participation status and data link status for all nodes within the Controller Link Network. Use this item to locate faulty sections.	103
E: Display Error log	Reads and displays the error log recorded at the specified node. Network problems can be examined by checking the past error log.	104
S: Display Node status	Displays the operating status of the specified node. Use this item to isolate the cause of an error that has occurred to a node.	109
M: Maintenance	<p>Reads and writes data from/to EEPROM in the Controller Link Unit or Controller Link Support Board and initializes network parameters. Use this item for network maintenance.</p> <p>This item has the following menu.</p> 	112
K: Connection Information	<p>Displays the order of connection for the nodes that make up the Optical Ring Controller Link Network, as well as the connection status, and the contents of errors. This data can be stored in files from which they can be read and displayed. This function can only be used with Optical Ring Networks. Any attempt to use it with a different type of network will result in an error.</p> <p>This item has the following menu.</p> 	115
W: Edit PC ID	<p>Sets and edits a unique PC ID for each PC. Using PC IDs allows easier PC management than using network and node addresses.</p> <p>This item has the following menu.</p> 	124
I: System setup	<p>Sets the method of communications between the Controller Link Support Software and the node to be connected, the service conditions for the Controller Link Support Software, and so on.</p> <p>These settings must be set before the Controller Link Support Software is connected to a node.</p>	135
Q: Exit to DOS	Exits the Controller Link Support Software.	142

5-3 L: Data Link

“L: Data Link” is used to perform various data link operations for the Controller Link. It has the following menu.

Menu item	Function	Page
E: Edit table	Creates and edits data link tables. These tables are created in the computer memory. To register data link tables at each node, execute “T: Transfer table.”	52
Y: Copy table	Copies data link tables within the memory. A data link table can be easily created by copying and changing a similar data link table.	59
C: Initialize table	Initializes (clears) all data link tables in the memory. Use this item to create data link tables from scratch.	60
K: Check table	Checks all data link tables in the memory for errors or inconsistencies.	61
S: Save table	Saves all data link tables in the memory as a file.	64
L: Retrieve table	Reads data link tables from a file to the memory.	66
T: Transfer table	Writes data link tables from the memory to each node or reads data link tables from each node to the memory. Data link tables in the memory can also be compared with the data link tables at each node.	67
D: Delete table	Deletes data link tables from the specified node to remove the node from the data links.	74
P: Print table	Prints data link tables in the memory.	75
R: Start/Stop	Starts and stops data links.	77
M: Monitor status	Displays the data link status or writes data to send areas. This item can be used to check data link operations. This item is valid only when the Controller Link Support Software is installed in a computer with a Controller Link Support Board.	78
I: Device Info set	Sets the model of each node in the network. Even when nodes are not connected to the Controller Link Network, this item can be used to set the network configuration to check data link tables.	81 167

5-3-1 Data Link Areas and Data Link Tables


Manually set data links are created by setting data link areas in data link tables. There are two types of Data Link Table Edit Screen.

Node Information Screen

The Node Information Screens are used to specify the nodes for which data link tables are to be created or edited. The Data Link Table Screens can be displayed from these screens. There are two Node Information Screens (one for nodes 1 to 32, and one for nodes 33 to 62) available for one Controller Link Network.

Data Link Table Screens

The Data Link Table Screens are used to create or edit a data link table for each node. One screen is provided for each node.


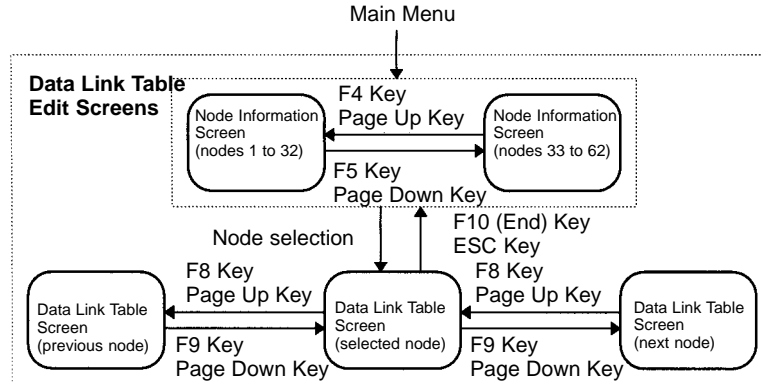


Select "Edit table" from the Data Link Menu to go to a Node Information Screen. Specify a node address on a Data Link Table Screen to display the Data Link Table Screen for that node. If there are more than 16 nodes registered on one Data Link Table Screen, use the Up and Down Arrow Keys to scroll up or down as required.

Setting Data Link Tables

Perform the following procedure to set a data link table on the Data Link Table Screen.


1. Specify the link start words for areas 1 and 2.
2. Specify the address of the node from which to receive data.
3. Specify the number of words to be received ("Num Wd").
4. Repeat steps 2. and 3. for each node that is to participate in the data links.

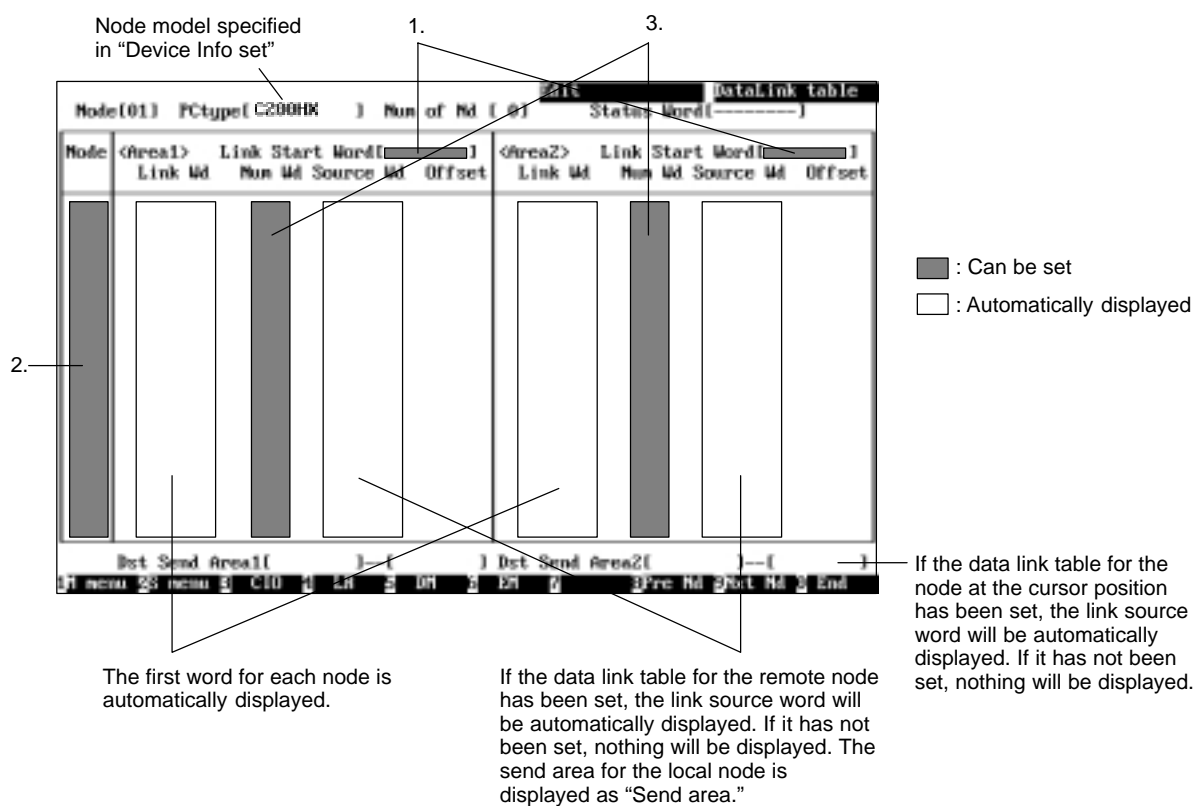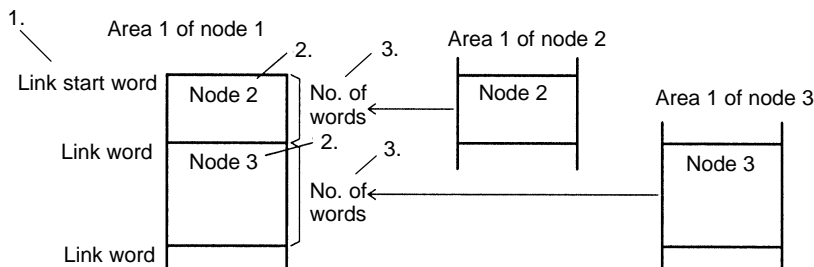

Note Items that can be input on the screen are displayed in green.

Setting Example

The following is an example of data link areas and the corresponding data link tables.

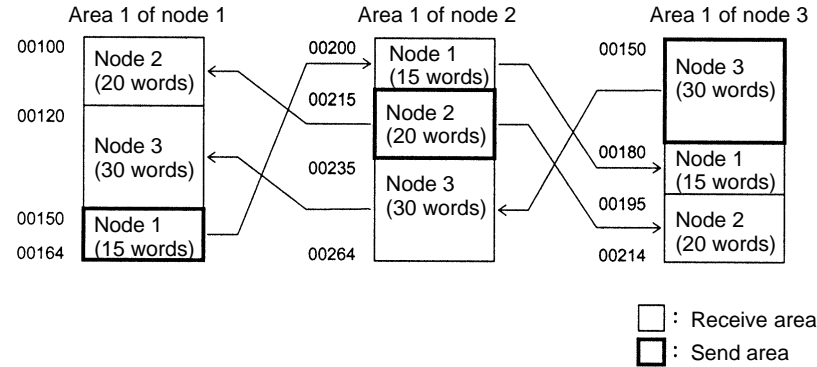

Data Link Table for Node 1

Node(01) Pctype[] Num of Nd [3] Edit Status Word[-----] DataLink table									
Node	<Area1>	Link Start Word	Link Id	Num	Id	Source	Id	<Area2>	Link Start Word
02	00100	20	00215					D00000	0 D00000
03	00120	30	00150					D00000	0 D00000
01	00150	15	Send Area					D00000	0 Send Area

Data Link Table for Node 2

Node(02) Pctype[] Num of Nd [3] Edit Status Word[-----] DataLink table									
Node	<Area1>	Link Start Word	Link Id	Num	Id	Source	Id	<Area2>	Link Start Word
01	00200	15	00150					D00000	0 D00000
02	00215	20	Send Area					D00000	0 Send Area
03	00235	30	00150					D00000	0 D00000

Data Link Table for Node 3

Node(03) Pctype[] Num of Nd [3] Edit Status Word[-----] DataLink table									
Node	<Area1>	Link Start Word	Link Id	Num	Id	Source	Id	<Area2>	Link Start Word
03	00150	30	Send Area					D00000	0 Send Area
01	00180	15	00150					D00000	0 D00000
02	00195	20	00215					D00000	0 D00000

Data Link Status

When data link status is to be used, specify in the “Status Word” field the first word of the area in which data link status is to be stored.

Example: To store data link status in DM 01000 to DM 01015 set the first status word to D01000.

Data Link Setting Forms

Before setting data link tables with the Controller Link Support Software, you must determine how data is to be sent and received. Make an enlarged copy of the Data Link Setting Forms provided in Appendix E and use them to design the data link.

- 1, 2, 3... 1. Use Setting Form 1 to determine the data to be sent and received.

Controller Link Support Software
Data Link Setting Form1

Date

___/___/___

Comments:

System

Drawing No.

Link start word [00100]

Node # [1]

Line A errors #1, 15 wds

00115

Line B errors #2, 20 wds

00135

Line C errors #3, 15 wds

00149

Link start word [00215]

Node # [2]

Line A errors #1, 15 wds

00225

Line B errors #2, 30 wds

00254

Link start word [00150]

Node # [3]

Line A errors #1, 15 wds

00165

Line B errors #2, 30 wds

00195

Line C errors #3, 15 wds

00209

Link start word []

Node # []

Link start word []

Node # []

2. Use Setting Form 2 to enter the values to be set in the data link table.
3. Enter the values in the Controller Link Support Software.

Controller Link Support Software
Data Link Setting Form 2

Date

___/___/___

Comments:

System

Drawing No.

Node # [1]
Area 2

Link start word [00100]

Data	Send/Receive	Start word at local node	Source node	Number of words	Offset
Line A errors	Send/Receive	00100	# -	15	-
Line B errors	Send/Receive	00115	# 2	20	10
Line C errors	Send/Receive	00135	# 3	15	0
			#		
			#		

Node # [2]
Area 2

Link start word [00215]

Data	Send/Receive	Start word at local node	Source node	Number of words	Offset
Line A errors	Send/Receive	00215	# 1	10	5
Line B errors	Send/Receive	00225	# -	30	-
			#		
			#		
			#		

Automatically displayed

Automatically displayed

Node(01)

PCtype(

Num of Wd (3)

Edit

DataLink table

Status Word(-----)

Node	Area1	Link Start Word	Link Wd	Num Wd	Source Wd	Offset	Area2	Link Start Word	Link Wd	Num Wd	Source Wd	Offset
01	00100	15	Send Area	---			D00000	0	Send Area	---		
02	00115	20	00245	10			D00000	0	D00000	0		
03	00135	30	00195	0			D00000	0	D00000	0		

Offsets


Offsets can be set by pressing the F6 (Offset) Key to display the “Offset” column in the table. Offsets do not need to be set unless they are required.

Node[01] Pctype[] Num of Nd [0]					Edit DataLink table Status Word[-----]				
Node	<Area1>	Link Start WordID00100	1		<Area2>	Link Start WordID00000	1		
	Link Wd	Num Wd	Source Wd	Offset	Link Wd	Num Wd	Source Wd	Offset	
Dst Send Area1[]--[]					Dst Send Area2[]--[]				
H menu 28 menu 3Delete 4Insert 5					Offset 6 Clear 3Pre Nd 3Ext Nd 3 End				

In the “Offset” column, specify the offset for each reception node.

Setting Example

The following is an example of data link areas and the corresponding data link tables.

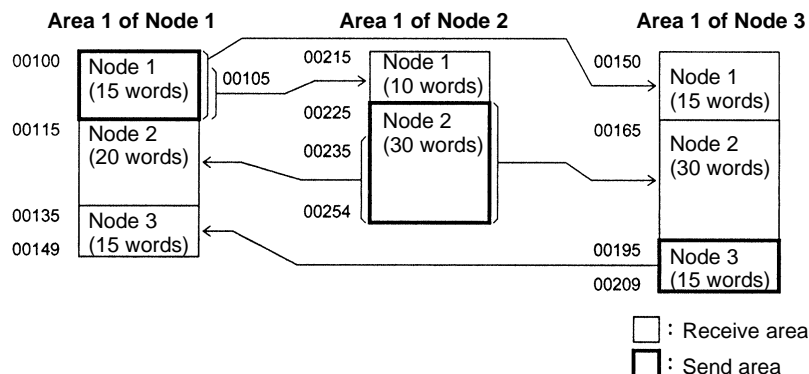

Data Link Table for Node 1

Node	Area1	Link	Start Word	WordID	1	Area2	Link	Start Word	WordID	1
	Link Wd	Num Wd	Source Wd	Offset		Link Wd	Num Wd	Source Wd	Offset	
01	00100	15	Send Area	---		D00000	0	Send Area	---	
02	00115	20	00235	10		D00000	0	D00000	0	
03	00135	15	00195	0		D00000	0	D00000	0	

Data Link Table for Node 2

Node	Area1	Link	Start	WordID	1	Area2	Link	Start	WordID	1
Node	Area1	Link	Start	WordID	1	Area2	Link	Start	WordID	1
Node	Area1	Link	Start	WordID	1	Area2	Link	Start	WordID	1
01	00215	10	00105	5		00000	0	00000	0	
02	00225	30	Send Area	---		00000	0	Send Area	---	

Data Link Table for Node 3

Node	Area	Link Start Word	Link End Word	Link Start Word	Link End Word
01	00150	15	00100	0	0
02	00165	30	00225	0	0
03	00195	155	Send Area	0	Send Area

5-3-2 Setting Data Link Tables

Perform the following procedures to create and transfer data link tables.

- 1, 2, 3...**
1. "Edit table" on page 52.
 2. "Check table" on page 61.
 3. "Transfer table" on page 67.

When necessary, use "Save table" and "Retrieve table" to save and retrieve data link tables to/from files.

- Note**
- 1) Data link table data created or edited with the Controller Link Support Software is recorded in the memory of the computer. The data will be lost when the Controller Link Support Software is exited. To avoid this, use "Save table" to save the data created or edited with "Edit table."
 - 2) If data link tables have already been saved or transferred, the following procedures can be used to read the tables to the Controller Link Support Software and edit them again.
"Retrieve table" on page 66.
"Controller Link → Computer" under the Transfer Table Menu on page 67.

5-3-3 Displaying the Data Link Menu

To create or edit a data link table or manage a data link, select the corresponding function from the Data Link Menu. Each function is described on the following pages. The following procedure shows how to display the Data Link Menu.

- 1, 2, 3... 1. Select “L: Data Link” from the Main Menu. The Node Information Screen will be displayed.

Node Information				Node Information DataLink table			
Node	Number of Nodes	Area 1 Link Wd	Area 2 Link Wd	Node	Number of Nodes	Area 1 Link Wd	Area 2 Link Wd
01				17			
02				18			
03				19			
04				20			
05				21			
06				22			
07				23			
08				24			
09				25			
10				26			
11				27			
12				28			
13				29			
14				30			
15				31			
16				32			

Select a node for edit.
 1M menu 2S menu 3Delete 4Pre Pg 5Nxt Pg 6Set A117 8 9 0 End

Node Information				Node Information DataLink table			
Node	Number of Nodes	Area 1 Link Wd	Area 2 Link Wd	Node	Number of Nodes	Area 1 Link Wd	Area 2 Link Wd
33				48			
34				49			
35				50			
36				51			
37				52			
38				53			
39				54			
40				55			
41				56			
42				57			
43				58			
44				59			
45				60			
46				61			
47				62			

Select a node for edit.
 1M menu 2S menu 3Delete 4Pre Pg 5Nxt Pg 6Set A117 8 9 0 End

2. Press the F2 (Menu) Key. The Data Link Menu will be displayed.

```

I:DataLink 1
E:Edit table
Y:Copy table
C:Initialize table
K:Check table
S:Save table
L:Retrieve table
T:Transfer table
D>Delete table
P:Print table
R:Start/Stop
M:Monitor status
I:Device Info set
  
```

5-3-4 Creating and Editing Data Link Tables — E: Edit Table

“E: Edit Table” is used to create or edit data link tables.

- Note** 1) “E: Edit Table” creates or edits data link tables in the computer memory. To actually set the data link table at a node, select “T: Transfer table” from the Data Link Menu. Also, save the data link tables as a file by selecting “S: Save table” from the Data Link Menu. Otherwise, the table data will be cleared when the Controller Link Support Software is exited.

- 2) The Controller Link Support Software allows you to edit data link tables for all nodes within the network at the same time.
- 1, 2, 3... 1. Select "L: Data Link" from the Main Menu. The Node Information Screen will be displayed.

Node Information				Node Information DataLink table			
Node	Number of Nodes	Area 1 Link Wd	Area 2 Link Wd	Node	Number of Nodes	Area 1 Link Wd	Area 2 Link Wd
01				17			
02				18			
03				19			
04				20			
05				21			
06				22			
07				23			
08				24			
09				25			
10				26			
11				27			
12				28			
13				29			
14				30			
15				31			
16				32			

Select a node for edit.

17 menu 33 menu Delete 1 2 3 Set All 4 5 6 End

The meaning of each display item is as follows:

Item	Meaning
Number of Nodes	Displays the number of send and receive areas (number of nodes) specified in the data link table for each node.
Area 1 Link Wd	Displays the total number of words in the data link area 1 for each node.
Area 2 Link Wd	Displays the total number of words in the data link area 2 for each node.

These items are not displayed for a node for which a data link table has not been set.

Press the F3 (Delete) Key or the Delete Key to delete the data link table for the node in the cursor position. When either of these keys is pressed, a confirmation message will appear at the bottom of the screen. To delete the data link table, press "Y" and then the Enter Key. To cancel the delete processing, press "N" and then the Enter Key.

Press the F4 Key (Pre Pg), F5 Key (Nxt Pg), Page Up Key, or Page Down Key to switch between the screen for nodes 1 to 31 and the screen for nodes 33 to 62.

Data link areas similar to automatically set areas can be easily created by pressing the F6 (Set All) Key. See page 56 for details.

2. Select the node for which a data link table is to be created or edited. Use the Cursor Keys to move the cursor to the node, then press the Enter Key. The Data Link Table Screen for the specified node will be displayed.

DataLink table										
Node[01]		PcType[]		Num of Nd [0]		Status Word[-----]				
Node	<Area1>	Link Start Word[00000]	1	<Area2>	Link Start Word[00000]	1	Link Wd	Num Wd	Source Wd	Offset

Dst Send Area1[]--[]		Dst Send Area2[]--[]	
01	mem 28	mem 8	CID
4	LR	5	DR
8	ER	9	Pre Nd
8	Next Nd	8	End

The functions of the Function Keys differ depending on whether the cursor is in a word address input field or in other input fields.

- The following Function Keys appear when the cursor is in a word address input field

17	incm1	55	incm1	5	CID	4	LR	5	DM	5	EM	7	3Pre Nd	3Net Nd	3	End
----	-------	----	-------	---	-----	---	----	---	----	---	----	---	---------	---------	---	-----

- The following Function Keys appear when the cursor is in other input fields

17 menu 28 menu 3Delete 4Insert 5 6Offset 7 Clear 8Pre Hd 9Net Hd 0 End

The screen can be switched to the Data Link Table Screen for a specified node by moving the cursor to the “Node” field on the upper left of the screen and entering the node address.

Key	Function
F3 (Delete)	Deletes the line on which the cursor is positioned.
F4 (Insert)	Inserts one line before the line on which the cursor is positioned. The newly inserted line is for a node with the next smallest unspecified address.
F6 (Offset)	Switches between the offset display mode and no offset display mode. If an attempt is made to switch the mode when offset data has already been entered, a confirmation message will be displayed. Press “Y” and then the Enter Key to set all the offsets to 0 and removes the offset displays. To cancel the operation, press “N” and then the Enter Key.
F7 (Clear)	Clears all the data link tables that are currently displayed. When the F7 (Clear) Key is pressed, a confirmation message will be displayed. To clear the tables, press “Y” and then the Enter Key. To cancel the operation, press “N” and then the Enter Key.
F8 (Pre Nd)	Displays the Data Link Table Screen for the previous node.
F9 (Nxt Nd)	Displays the Data Link Table Screen for the next node.

3. Use the Cursor Keys to move the cursor to each field in the data link table and enter appropriate data.

In the Data Link Table Screens, up to 16 lines can be displayed simultaneously. When setting 17 lines or more, the screen will automatically scroll.

If 17 or more lines have been set, the screen will automatically scroll up (down) if the Page Up (Down) Key is pressed with the cursor in the top (bottom) line of the "Node" or "Num Wd" column.

To specify the data area, use the F3 (CIO/IR), F4 (LR), F5 (DM), or F6 (EM) Key.

Press "_" or the Delete Key in the first status word field to set the default value. Use Numeric Keys to enter numeric values.

Node	Area1	Link Start Word	Link Wd	Num Wd	Source Wd	Area2	Link Start Word	Link Wd	Num Wd	Source Wd
02	00000	0				00000	0			
03	00000	30				00000	0			
01	00030	15	Send Area			00000	0	Send Area		

The setting range for each item is as follows:

Item	CS1-series PCs	C200HX/HG/HE PCs	CVM1 and CV-series PCs	CQM1H PCs	IBM PC/AT (see note a)
Node	1 to 62				
Link start word	CIO: 0000 to 6143 LR: 000 to 199 (see note c) DM: 00000 to 32767 (see note d) EM (banks 0 to 12): 00000 to 32767 (see note d)	CIO: 000 to 235, 300 to 511 LR: 00 to 63 DM: 0000 to 5999 (see note d) EM (banks 0 to 15): 0000 to 6143 (see note d)	CIO: 0000 to 2555 LR: 000 to 199 (see note c) DM: 00000 to 24575 (see note d) EM (banks 0 to 7): 00000 to 32765 (see note d)	CIO: 0000 to 247 LR: 00 to 63 DM: 0000 to 5999 (see note d) EM: 0000 to 6143 (see note d)	CIO: 00000 to 65534 LR: 00000 to 65534 DM: 00000 to 65534 EM (banks 0 to 15): 00000 to 65534
No. of words (Num Wd)	000 to 1000				
Offset	000 to 999				
Status word	CIO: 0001 to 6128 LR: 000 to 184 (see note c) DM: 00000 to 32752 (see note d) EM (banks 0 to 12): 00000 to 32752 (see note d)	CIO: 001 to 220, 300 to 496 LR: 00 to 48 DM: 0000 to 5984 (see note d) EM (Banks 0 to 15): 0000 to 6128 (see note d)	CIO: 0001 to 2540 LR: 000 to 184 (see note c) DM: 00000 to 24560 (see note d) EM (banks 0 to 7): 00000 to 32750 (see note d)	CIO: 00000 to 65534 LR: 00000 to 65534 DM: 00000 to 65534 EM (banks 0 to 15): 00000 to 65534	CIO: 00000 to 65534 LR: 00000 to 65534 DM: 00000 to 65534 EM (banks 0 to 15): 00000 to 65534


Note a) Because IBM PC/AT or compatible computers have no data areas, it is meaningless to specify first status words and link start

words for areas 1 and 2. The data link area always starts from the beginning of the specified area, and data link status cannot be read using functions or driver call. Computers do not have a specific areas.

- b) In Wired Controller Link Networks, node addresses can only be set in the range 1 to 32. The same restriction applies to Controller Link Networks that consist only of Optical Controller Link Units (with CLK11 at the end of the model number), or that consist of both Optical Controller Link Units and Optical Ring Controller Link Units (with CLK12 at the end of the model number). Node addresses 1 to 62 can only be used in Controller Link Networks that consist of Optical Ring Controller Link Units only.
- c) If a start word address is specified between LR 000 and LR 199 for a CS1-series, CVM1, or CV-series PC, it will be allocated to the CIO1000 to CIO1199.
- d) The number of DM words and the number of EM banks differ according to the CPU Unit model used. Refer to the PC operation or programming manual for details.

Creating Simple Data Link Areas — Set All

“Set All” can be used to simply create data link areas similar to automatically set data link areas. An example is shown below.

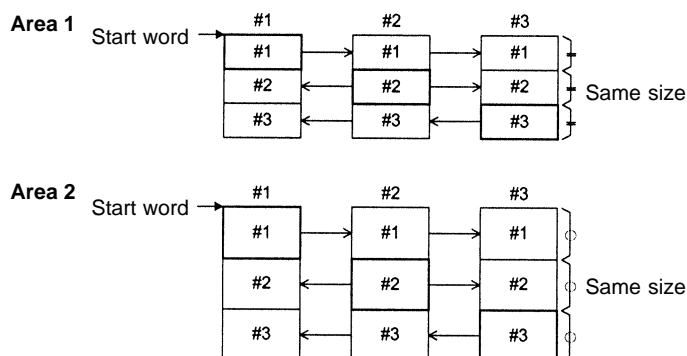

After “Set All” is performed, highly flexible data link tables can be quickly created by changing the link start word addresses, the number of send words, and the number of receive words for each node.

With automatically set data links, only limited areas can be used for areas 1 and 2. With “Set All,” however, data areas can be freely selected for link areas 1 and 2.

With automatically set data links, data links must use the automatically created data link areas. With “Set All,” the link start word, the number of send words, and the number of receive words can be freely changed for each node later.

Differences	“Set All”	Automatic setting
Data area	Can be freely selected for both areas 1 and 2.	Area 1: CIO (IR) Area 2: DM or EM
Link start word in areas 1 and 2	Can be freely specified for each area (this is the same for all nodes).	Cannot be changed later.
	Can be changed for each node later.	
Send area size for each node	Same size for each area	Cannot be changed later.
	Can be changed for each node later.	
Receive-only nodes	Cannot be specified by default.	Cannot be specified.
	Can be specified by changing the data link area later.	
Send-only nodes	Cannot be specified by default.	Cannot be specified.
	Can be specified by changing the data link area later.	
Node sequence for data link areas	Automatically determined (ascending order)	
	Can be changed later by deleting or inserting nodes.	Cannot be changed later.
Data link status words	Can be specified in CIO (IR), DM, or EM.	Can be specified only in CIO (IR).

Press the F6 (Set All) Key at the Node Information Screen to display the following window.

```

( Link Parameter Setup )
Area 1 Link Start Word : 000000
Area 1 Link Word Number : 10
Area 2 Link Start Word : 000000
Area 2 Link Word Number : 10
Status Start Word : -----

```

The items are almost the same as the items that are set in the DM parameter area for automatic setting.

Item	Meaning
Area 1 Link Start Word	Specify the first word address of area 1.
Area 1 Link Word Number	Specify the number of words in the send area in each node in area 1.
Area 2 Link Start Word	Specify the first word address for area 2.
Area 2 Link Word Number	Specify the number of words in the send area in each node in area 2.
Status Word	Specify the first word of the words in which data link status is to be stored.

The setting range for each item is as follows:

Item	CS1-series PC	C200HX/HG/ HE PC	CVM1 or CV-series PC	CQM1-series PC	IBM PC/AT (see note a)
Nodes in data links	1 to 62				
Area 1 Link Start Word	CIO: 0000 to 6143 LR: 000 to 199 (see note c) DM: 00000 to 32767 (see note d)	CIO: 000 to 235, 300 to 511 LR: 00 to 63 DM: 0000 to 5999 (see note d) EM (banks 0 to 15): 0000 to 6143 (see note d)	CIO: 0000 to 2555 LR: 000 to 199 (see note c) DM: 00000 to 24575 (see note d) EM (banks 0 to 7): 00000 to 32765 (see note d)	CIO: 0000 to 247 LR: 00 to 63 DM: 0000 to 5999 (see note d) EM: 0000 to 6143 (see note d)	CIO: 00000 to 65534 LR: 00000 to 65534 DM: 00000 to 65534 EM (banks 0 to 15): 00000 to 65534
Area 2 Link Start Word	EM (banks 0 to 12): 00000 to 32767 (see note d)				
Area 1 Link Word Number	000 to 1000				
Area 2 Link Word Number					
Status Word	CIO: 0001 to 6128 LR: 000 to 184 (see note c) DM: 00000 to 32752 (see note d) EM (banks 0 to 12): 00000 to 32752 (see note d)	CIO: 001 to 220, 300 to 496 LR: 00 to 48 DM: 0000 to 5984 (see note d) EM (Banks 0 to 15): 0000 to 6128 (see note d)	CIO: 0001 to 2540 LR: 000 to 184 (see note c) DM: 00000 to 24560 (see note d) EM (banks 0 to 7): 00000 to 32750 (see note d)	CIO: 00000 to 65534 LR: 00000 to 65534 DM: 00000 to 65534 EM (banks 0 to 15): 00000 to 65534	CIO: 00000 to 65534 LR: 00000 to 65534 DM: 00000 to 65534 EM (banks 0 to 15): 00000 to 65534

Note a) Because IBM PC/AT or compatible computers have no data areas, it is meaningless to specify first status words and link start words for areas 1 and 2. The data link area always starts from the beginning of the specified area, and data link status cannot be read using functions or driver call. Computers do not have a specific areas.

b) In Wired Controller Link Networks, node addresses can only be set in the range 1 to 32. The same restriction applies to Controller Link Networks that consist only of Optical Controller Link Units (with CLK11 at the end of the model number), or that consist of both Optical Controller Link Units and Optical Ring Controller Link Units (with CLK12 at the end of the model number). Node addresses 1 to 62 can only be used in Controller Link Networks that consist of Optical Ring Controller Link Units only.

c) If a start word address is specified between LR 000 and LR 199 for a CS1-series, CVM1, or CV-series PC, it will be allocated to the CIO1000 to CIO1199.

d) The number of DM words and the number of EM banks differ according to the CPU Unit model used. Refer to the PC operation or programming manual for details.

After the necessary items have been specified, press the F7 (Execute) Key to display the following window in which the nodes to participate in the data link can be selected.

Node Information DataLink table

Node Information		Node Information DataLink table			
Node		Node	Number of Nodes	Area 1 Link Wd	Area 2 Link Wd
33	[Link Parameter Setup]	48			
34	Area 1 Link Start Word : 00000				
35	Area 1 Link Word Number : 10				
36	[Select Node]				
37	Specify nodes for Set All.				
38					
39	Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn				
40	01 11 21 31 41 51 61				
41	02 12 22 32 42 52 62				
42	03 13 23 33 43 53				
43	04 14 24 34 44 54				
44	05 15 25 35 45 55				
45	06 16 26 36 46 56				
46	07 17 27 37 47 57				
47	08 18 28 38 48 58				
48	09 19 29 39 49 59				
49	10 20 30 40 50 60				

Select a node for edit.
 1M menu 2S menu 3 4 5 6Execute7 8 9 0 End

Use the Cursor Keys to move the cursor to the nodes to participate in the data links, then press the Enter Key. "Yes" will be displayed. An unmarked node will not participate in the data links. Press the Enter Key at a node marked with "Yes" to erase the "Yes."

Press the F6 (Execute) Key to display the following window to prompt you to specify whether the data link tables for the nodes not participating in the data links are to be cleared or retained.

Will clear DataLink table of
undesignated nodes. OK ?
(Y:Clear,N:Hold)

Press "Y" and then the Enter Key to erase the data link tables for the nodes not participating in the data links and create data link areas (similar to the one for automatically set data links) at each node participating in the data links.

Press "N" and then the Enter Key to retain the data link tables for the nodes not participating in the data links and create data link areas (similar to the one for automatically set data links) at each node participating in the data links.

Press the Escape Key to cancel the execution and return to the Node Information Screen. The execution can also be canceled by pressing the F1 (Menu) Key, the F2 (Menu) Key, or the F10 (End) Key. The following screens are displayed when these keys are pressed.

- F1: Main Menu
- F2: Data Link Menu
- F10: Node Information Screen

5-3-5 Copying Data Link Tables — Y: Copy Table

"Y: Copy table" is used to copy a data link table for one node to other nodes. When a similar data link area is to be used for other nodes, the data link table for each node can be easily created by copying the original data link table and then making changes.

- Note**
- 1) Once this copy function is executed, the existing data link table at the destination node will be lost. Be sure to check table data at the destination node before executing the function.
 - 2) "Y: Copy table" copies data link tables in the computer memory. To actually set the data link table for a node, select "T: Transfer table" from the Data Link Menu. Also, save the data link tables as a file by selecting "S: Save table" from the Data Link Menu. Otherwise, the table data will be cleared when the Controller Link Support Software is exited.

- 3) Executing “Y: Copy table” also changes the node model specified in “Device Info set” at the destination node to the same node model as the source node.

- 1, 2, 3... 1. Select “Y: Copy table” from the Data Link Menu.



2. Specify the source node address. Specify the node address with Numeric Keys, then press the Enter Key. Any number between 1 and 62 can be specified.

If the number of nodes set in the data link table for the specified node is 0, an error message will be displayed.

The following window will be displayed to prompt you to specify the destination node address.

Node Information				Copy				DataLink table			
Node	Number of	Area 1	Area 2	Node	Number of	Area 1	Area 2	Node	Number of	Area 1	Area 2
[Designate Node]											
Specify copy destination node address. Source node address: 01											
01				01				01			
02				02				02			
03				03				03			
04				04				04			
05				05				05			
06				06				06			
07				07				07			
08				08				08			
09				09				09			
10				10				10			
11				11				11			
12				12				12			
13				13				13			
14				14				14			
15				15				15			
16				16				16			

Select a node for edit.
1M menu 2S menu 3 4 5 6Execute7 8 9 0 End

3. Specify the destination node address. Use the Cursor Keys to move the cursor to the copy destination node address, then press the Enter Key. “Yes” will be displayed to represent the copy destination.

To deselect the copy destination node (or erase “Yes”), move the cursor to the node address marked with “Yes,” then press the Enter Key again. “Yes” will be erased to deselect the copy destination node.

4. After specifying all destination nodes, press the F6 (Execute) Key. The data link tables will be copied.


5-3-6 Initializing All Data Link Tables — C: Initialize Table

“C: Initialize table” is used to initialize all data link tables.

When data link tables are to be created from scratch, initialize the data link tables for all nodes before beginning.

- Note**
- 1) “C: Initialize table” initializes the data link tables in the computer memory.
 - 2) Executing initializes the data link tables for all nodes. Initialization processing sets the “Link start word” field of area 1 to 00000, the “Link start word” field of area 2 to D00000, and other settings to defaults.

- 1, 2, 3... 1. Select “C: Initialize table” from the Data Link Menu.



2. Press “Y” and then the Enter Key. The data link tables for all nodes will be initialized.

To cancel the initialization processing, press “N” and then the Enter Key.

5-3-7 Checking Data Link Tables — K: Check Table

“K: Check table” is used to check data link tables for errors or inconsistencies. It can also check for inconsistencies between the data link tables for multiple nodes.

If errors are detected, correct the data link tables as described in *Error Messages* (on page 63).

- Note**
- 1) Before executing “K: Check table,” always select “I: Device Info Set” from the Data Link Menu and specify the PC models.
 - 2) “K: Check table” checks the data link tables in the computer memory. To check the data link table that has been set for a node, use “T: Transfer table” on the Data Link Menu to read the table to the computer, then execute “K: Check table.”

- 1, 2, 3...**
1. Select “K: Check table” from the Data Link Menu. If the number of nodes set in all data link tables is 0, an error message will be displayed.

The following window will be displayed to prompt you to specify the check level.

```
[ Check DataLink table ]
Check level ?
A:Rank A, B (Error and Warning)
B:Rank A only (only error)
```

2. Select the error level to be checked. The following window will be displayed to prompt you to specify the nodes to be checked.

When the window appears, each node will be displayed as shown as follows, depending on the number of nodes set in the data link table in the memory:

Nodes for which the number of nodes is not 0: YES (checked)

Nodes for which the number of nodes is 0: No display (not checked)

Node Information										Check		DataLink table	
Nod	[Check DataLink table]						de	Number of		Area 1	Area 2		
[Check DataLink table]													
Specify nodes to be checked.													
01													
02													
03	Check level :Rank A, B												
04	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node	Dsgn	
05	01	YES	11		21		31		41	YES	51	YES	
06	02	YES	12	YES	22		32	YES	42	YES	52	YES	
07	03	YES	13	YES	23		33	YES	43		53	YES	
08	04	YES	14	YES	24		34	YES	44	YES	54	YES	
09	05	YES	15		25		35	YES	45		55	YES	
10	06	YES	16		26	YES	36	YES	46		56	YES	
11	07		17		27	YES	37	YES	47	YES	57	YES	
12	08		18	YES	28	YES	38	YES	48	YES	58	YES	
13	09		19		29		39		49	YES	59	YES	
14	10		20		30		40		50	YES	60	YES	
15													
16	62		620		620		32		62		620		
Select a node for edit.													
1M menu 2S menu 3 4 5 6Execute7 8 9 0 End													

Error level	Meaning
Rank A (error)	Indicates serious errors. If this level of error is detected, the data links will not execute normally.
Rank B (warning)	Indicates minor errors or the locations of settings that could be faulty. Even if this level of error is detected, the data links will execute, but may result in unexpected operation. The settings should be checked.

3. Specify the nodes to be checked. Use the Cursor Keys to move the cursor to the node to be checked, then press the Enter Key. "Yes" will be displayed to represent the nodes to be checked.

To deselect a node to be checked, move the cursor to a node marked with "Yes," then press the Enter Key again. "Yes" will be erased to deselect the node.

4. After specifying all the nodes to be checked, press the F6 (Execute) Key. The data link tables will be checked and the check results screen will be displayed.

Node [01] DataLink table		Node [02] DataLink table	
Node	error message	Node	error message
03	Source node has no Table		
03	Source node has no Send data		
04	Recv area remain(area 1)		

Continue

[F1] menu [F3] menu [F4] Pre Pg [F5] Next Pg [F6] [F7] [F8] Pre Nd [F9] Next Nd [F10] End

Each error level is indicated by a different character color as follows:

Red: Error

White: Warning

A message is displayed in the lower part of the screen according to the check results as follows:

When no errors has been detected: "Check OK"

When errors are continued on the next page: "Continue"

When the current page is the last page of the error display: "Last page"

5. When errors are displayed on multiple screens, use the following keys to switch the screen and display the check results. F4 (Pre Pg), F5 (Nxt Pg), F8 (Pre Node), F9 (Nxt Node), Page Up, and Page Down
6. After confirming the check results, press the F10 (End) Key.

Error Messages

The following table lists the error messages that are displayed on the check results screen. After confirming the check results, use "E: Edit table" to correct the data link tables, then check the data link tables again.

Errors


Message	Meaning	Action
Insufficient Status area	There are too few words in the data area for the data link status.	Change the first status word so that data link status (16 words) can be stored in the area.
Table Data error	<p>The first status word is outside the allowable range. (see note)</p> <p>The link start word address of area 1 is outside the allowable range. (see note)</p> <p>The number of registered nodes exceeds 62.</p> <p>The node address is 0 or more than 62.</p> <p>There is a node for which the send area or receive area for one node exceeds 1,000 words.</p> <p>An offset exceeds 999.</p> <p>An offset for the send area of the local node is not 0.</p>	Correct the values within the allowable range as shown in the table on page 55.
Duplicate Node address	The same node address is set more than once in the data link table.	Correct the duplicate node address.
Link word number over	There is a node for which the total number of words in the send areas of areas 1 and 2 exceeds 1,000.	Change the total number of words in the send areas of areas 1 and 2 to 1,000 or less.
Too many words in data link	<p>The total number of words in the data link areas of areas 1 and 2 exceeds the maximum allowable number of words for the following PCs.</p> <p>CS1-series PCs: 12,000 words</p> <p>C200HX/HG/HE PCs: 8,000 words</p> <p>CQM1H PCs: 8,000 words</p> <p>CVM1 and CV-series PCs: 8,000 words</p> <p>IBM PC/AT: 32,000 words</p>	<p>Reduce the total number of words in the data link areas of areas 1 and 2 to the maximum allowable number of words for the following PCs or less.</p> <p>CS1-series PCs: 12,000 words</p> <p>C200HX/HG/HE PCs: 8,000 words</p> <p>CQM1H and CV-series PCs: 8,000 words</p> <p>IBM PC/AT: 32,000 words</p>
Link area overlap error	<p>The same data area is specified for areas 1 and 2.</p> <p>The data link status words overlap with a data link area.</p>	Change the link start and first status word of areas 1 and 2 so that the data link area and the data link status words do not overlap each other.
Insufficient Link area (Area 1/ Area 2)	There are not enough words for the data link area.	Correct the data link area within the allowable range.
Link word number 0 error	The total number of link words for one node is set to 0.	Set the number of link words for area 1 or 2.

Note Range checks are performed according to the model specified in “Device Info set.” For C200HX/HG/HE PCs, no error will occur even if a word address between CIO 236 and CIO 299, which are the outside the allowable range, is specified. However, when the data link table is transferred (or written) to the node, an error will occur. Use the Data Link Table Edit Screen to check the word addresses.


Warnings

Message	Meaning	Action
Recv area remain (Area 1/ Area 2) (see note a)	The number of words in the receive area is greater than that in the send area.	Check the number of link words. If free space is intentionally left in the receive area, the data link can be executed without having to make any changes.
Recv area short (Area 1/ Area 2) (see note b)	The number of words in the receive area is fewer than that in the send area.	Check the number of link words. If only part of data in the send area is to be received, the data link can be executed without having to make any changes.
Invalid offset (Area 1/ Area 2)	The specified offset is outside the send area.	Check the offset. The data link can be executed, but no data can be received.
Source node has no send data	A send area has not been set for a node from which data reception has been specified.	Change the reception node or set a send area for that node.
Source node has no table	A data link table has not been set at the node from which data reception has been specified.	Change the reception node or set the data link table for that node.

Note a) Message “Receive area remain” will be displayed when the number of send words and the receive area are as shown in the following illustration.

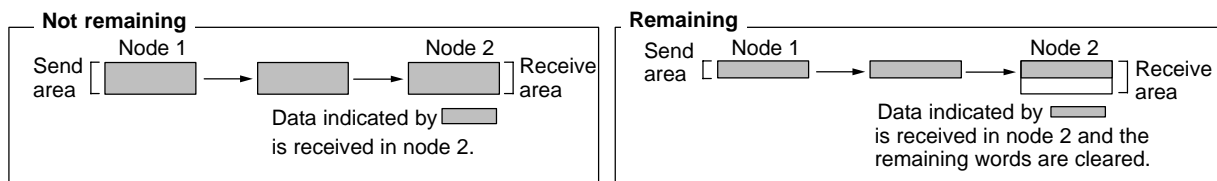

b) Message “Receive area short” will be displayed when the number of send words and the receive area are as shown in the following illustration.

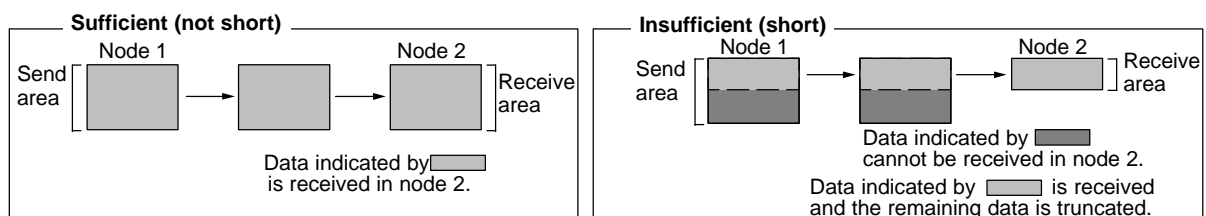

5-3-8 Saving Data Link Tables as a File — S: Save Table


“S: Save table” is used to save all data link tables as a file.

With Controller Link Support Software Ver. 2.00, data link tables can be saved in the file formats shown below.

Format	Extension	Saving supported
Controller Link Support Software Ver. 2.00	.CL2	Yes
Controller Link Support Software Ver. 1.10	.CLK	Yes (see note 1)
CX-Net on CX-Programmer	.CL3	No

- Note**
- 1) Data link tables containing node addresses in the range 33 to 62 cannot be saved with Controller Link Support Software Ver. 1.10.
 - 2) Unless saved, all data link tables in the memory will be lost when the Controller Link Support Software is exited.
 - 3) If data link tables have been modified but have not yet been saved, a confirmation message will be displayed when you attempt to exit the Controller Link Support Software.
 - 4) "S: Save table" saves the data link tables in the computer memory. To save the data link tables that have already been set at nodes, select "T: Transfer table" from the Data Link Menu to read the data link tables to the computer, then save the tables.
 - 5) Data link table files for the Controller Link Support Software are not compatible with those for the conventional SYSMAC LINK Support Utility.

- 1, 2, 3...**
1. Select "S: Save table" from the Data Link Menu.



```

I Save DataLink table      1
Input file name to save.
C:\

```

2. Specify the file name (including the directory) to be saved. Enter the file name with Alphanumeric Keys, then press the Enter Key.

Use the extension .CL2 for files to be saved in Ver. 2.00 format, and use the extension .CLK for files to be saved in Ver. 1.10 format. (If an attempt to save a file containing node addresses 33 to 62 is made with the extension .CLK, an error will be generated.) If the extension is omitted by the user, it will be added automatically depending on the node addresses used, in the following way.

- If node addresses 33 to 62 are used: .CL2.
- If node addresses 33 to 62 are not used: .CLK.

When this window appears, the data directory specified in "System setup" will be displayed as the destination. The Insert, Backspace, and Delete Keys can be used to correct the characters.

You can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen. (The extension can be changed after the file is selected.)

If an existing file name is specified, a confirmation message will be displayed to ask you to check whether the file can be overwritten. Press "Y" to overwrite the file or press "N" to cancel the save processing, then press the Enter Key.

3. Enter a title for the file.

Enter the title with Alphanumeric Keys, then press the Enter Key. Up to 30 characters can be entered. The Insert, Backspace, and Delete Keys can be used to correct the characters.

If no title is required, just press the Enter Key.

The file will be saved.

5-3-9 Reading Data Link Tables from a File — L: Retrieve Table

“L: Retrieve table” is used to read data link tables from a file into computer memory.

With Controller Link Support Software Ver. 2.00, data link tables can be saved in the file formats shown below.

Format	Extension	Reading supported
Controller Link Support Software Ver. 2.00	.CL2	Yes
Controller Link Support Software Ver. 1.10	.CLK	Yes
CX-Net on CX-Programmer	.CL3	Yes (see note 1)

Note Data link tables in CX-Net format can be read but not saved.

There are differences in PC model information between the Controller Link Support Software and the CX-Net. Therefore, when reading CX-Net format files with Controller Link Support Software, the data will be converted in the way shown in the following table. When performing operations where a high degree of precision is required, such as when checking data link tables, reset as necessary.

Model information in CX-Net on CX-Programmer	Model information in Controller Link Support Software
No specification	No specification
C200HE	C200HE(-Z)
C200HG	C200HG(-Z)
C200HX	C200HX
CVM1	CVM1-CPU21
CV2000	CV2000
CV1000	CV1000
CV500	CV500
NSB	CLK Board
CS1G	CS1G-45
CS1H	CS1H-67
CVM1-V2	CVM1-CPU21
C200HX-Z	C200HX-85Z
C00HG-Z	C200HG(-Z)
C200HE-Z	C200HE(-Z)
IDSC	No specification

- Note**
- 1) If data link tables are read from a file, the current data link tables in the memory will be lost.
 - 2) If data link tables in the memory have been modified, a confirmation window will be displayed when you attempt to read data link tables from the file.
 - 3) Data link table files for the Controller Link Support Software are not compatible with those for the SYSMAC LINK Support Utility.

- 1, 2, 3...**
1. Select “L: Retrieve table” from the Data Link Menu. If data link tables in the memory have been modified, a confirmation window will be displayed. Press “Y” to continue or press “N” to cancel the process, and then press the Enter Key. If data link tables in the memory have not been modified or “Y” is

pressed to continue, the following window will be displayed to prompt you to specify a file name.



2. Specify the file name (including the directory) to be read. Enter the file name with Alphanumeric Keys, then press the Enter Key.

When reading files, specify the extension .CL2 for Ver. 2.00 format files, .CLK for Ver. 1.10 format files, or .CL3 for CX-Net format files. If an extension is not specified, a search for the specified file-name in the specified directory will be made and if a corresponding file is found it will be read. If more than one file of the same name is found then priority will be in the following order:

1. .CLK (Ver. 1.10 format)
2. .CL2 (Ver. 2.00 format)
3. .CL3 (CX-Net format)

For example, if two files with the same name are found, and one of the files has the extension .CLK and the other one has the extension .CL2, the one with the .CLK will be read.

When this window appears, the data directory specified in "System setup" will be displayed as the source directory. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

You can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen.

The file will be read.


5-3-10 Transferring Data Link Tables — T: Transfer Table

"T: Transfer table" is used to transfer data link tables between nodes and the computer as follows:

Item	Function	Page
R: Controller Link → Computer	Reads the data link tables set at nodes to the computer memory.	67
W: Computer → Controller Link	Writes the data link tables from the computer memory to nodes for registration.	69
V: Compare	Compares the data link tables set at nodes with the data link tables in the computer memory.	71

Displaying the Transfer Data Link Table Menu

Select "T: Transfer table" from the Data Link Menu. The Transfer Data Link table Menu will be displayed.



Reading Data Link Tables from Nodes — R: Controller Link → Computer

"R: Controller Link → Computer" is used to read the data link tables at nodes into the computer memory.

Note If data link tables are read from nodes, the current data link tables in the computer memory will be lost. If data link tables in the memory have been modified, a confirmation window will be displayed when you attempt to read data link tables from the nodes. To save the data link tables in the memory, select "S: Save table" from the Data Link Menu to save them as a file.

1, 2, 3...

1. Select "R: Controller Link → Computer" from the Transfer Data Link table Menu. If data link tables in the memory have been modified, a confirmation

window will be displayed. Press “Y” to continue or press “N” to cancel the process, then press the Enter Key. If data link tables in the memory have not been modified or “Y” is pressed to continue, the following window will be displayed to prompt you to specify the target nodes.

Node Information

CLK->ComputerDataLink table

Nod	[Transfer DataLink table]	2	Node	Number of	Area 1	Area 2
01	[Controller Link->Computer]					
02	Will transfer DataLink table.Specify network address,					
03	node address to transfer.					
04	Network address :000					
05	Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn					
06						
07						
08						
09						
10						
11						
12						
13						
14						
15						
16						

Select a node for edit.
1M menu 2S menu 3456Execute7890 End

2. Specify the address of the Controller Link Network containing the nodes from which data link tables are to be read. Enter the network address with Numeric Keys, then press the Enter Key. When the Enter Key is pressed, the nodes on the specified network will be checked and displayed in ascending order of node address.
- When node addresses are displayed, all nodes will be marked with YES, which represents the target nodes for reading.
3. Specify the nodes that are to be excluded from read processing. Use the Cursor Keys to move the cursor to the nodes to be excluded from reading, then press the Enter Key. YES will be erased to deselect the node. To reselect a node for reading, move the cursor to the node unmarked with YES, then press the Enter Key again. YES will be displayed to reselect the node.

Node Information


CLK->ComputerDataLink table

Nod	[Transfer DataLink table]	2	Node	Number of	Area 1	Area 2
01	[Controller Link->Computer]					
02	Will transfer DataLink table.Specify network address,					
03	node address to transfer.					
04	Network address :000					
05	Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn					
06	01 YES					
07	31 YES					
08						
09						
10						
11						
12						
13						
14						
15						
16						

Select a node for edit.
1M menu 2S menu 3456Execute7890 End

4. After specifying all the target nodes for reading, press the F6 (Execute) Key. The transfer results screen will be displayed and data link table read proces-

sing will start. Data link tables will be read in ascending order of node address.

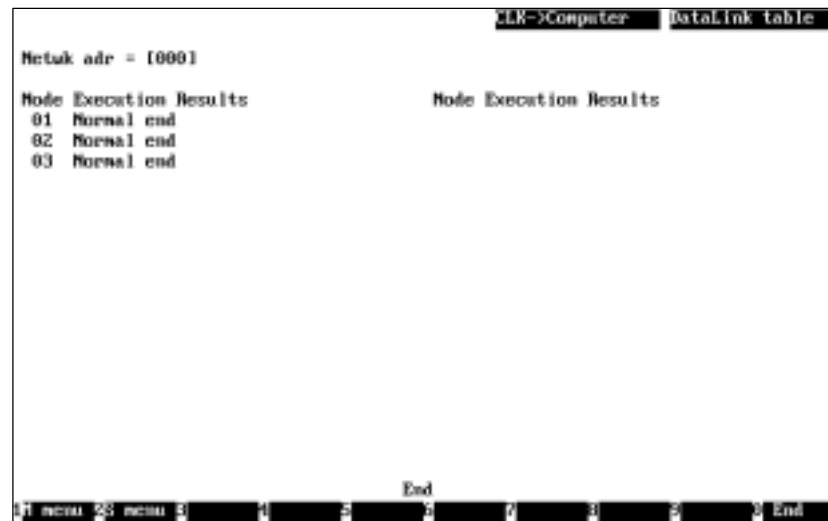

To cancel the read processing, press the F9 (Cancel) Key.

During read processing, "Wait" will be displayed in the lower part of the screen and the progress of processing will be displayed for each node.

When read processing for all the specified nodes is completed, "End" will be displayed in the lower part of the screen.

5. Then, press the F10 (End) Key.

Writing Data Link Tables to Nodes — W: Computer → Controller Link

"W: Computer → Controller Link" is used to write the data link tables from the computer memory to nodes.

- Note**
- 1) If data link tables are written to nodes, the existing data link tables set at the nodes will be lost. In this case, a confirmation message for overwriting will not be displayed even if data link tables have already been set at the nodes. Therefore, carefully check the contents of the data link tables set at the nodes before transferring new data link tables.
When writing data to the CS1-series PC, be sure to set pin 1 of the CPU Unit's DIP switch to OFF.
 - 2) When writing data link tables to a CVM1 or CV-series PC, always set the system protect key switch on the CPU Unit to NORMAL.
 - 3) "W: Computer → Controller Link" can also be used to delete the data link tables for the nodes that are not participating in the data link. Always delete unused data link tables.
 - 4) Data link tables can be written to nodes only when the nodes are not participating in active data links or when the data links are inactive.

- 1, 2, 3... 1. Select "W: Computer → Controller Link" from the Transfer Data Link table Menu. The following window will be displayed to prompt you to specify the target nodes.

Computer→CLK DataLink table

Node Information						
Nod	[Transfer DataLink table]	2	Node	Number of	Area 1	Area 2
01	[Computer→Controller Link]					
02	Will transfer DataLink table.Specify network address,					
03	node address to transfer.					
04	(Yes:Write, No>Delete, Space:No operation)					
05	Network address :000					
06	Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn					
07						
08						
09						
10						
11						
12						
13						
14						
15						
16						

Select a node for edit.

1M menu 2S menu 3 4 5 6Execute7 8 9 0 End

2. Specify the address of the Controller Link Network containing the nodes to which data link tables are to be written. Enter the network address with Numeric Keys, then press the Enter Key.

When the Enter Key is pressed, the nodes on the specified network will be checked and displayed in ascending order of node address.

When node addresses are displayed, Yes or No will be displayed as follows, depending on the number of nodes set in the data link table in the memory:

Nodes for which the number of nodes is not 0: Yes (data link tables written)

Nodes for which the number of nodes is 0: No (data link tables removed)

3. Specify the processing for each node. Use the Cursor Keys to move the cursor to the node, then press the Enter Key. Each time the Enter Key is pressed, the display will change in the following order.

Yes (data link tables written)

↓

No (data link tables removed)

↓


No display (nothing done, i.e., data link tables not transferred nor removed)

↓

Yes (data link tables written)

4. After specifying the processing for each node, press the F6 (Execute) Key. The transfer results screen will be displayed and data link tables will be written or removed as specified.

The processing will be performed in ascending order of node address.

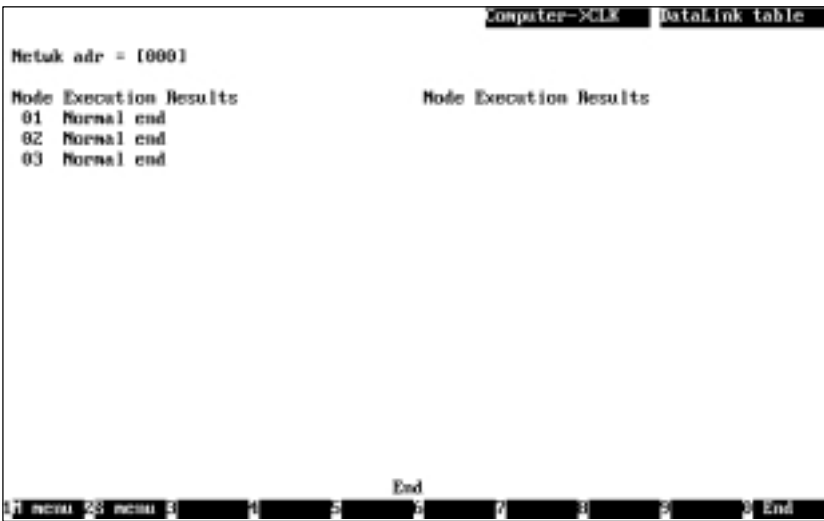

To cancel the processing, press the F9 (Cancel) Key.

During the processing, "Wait" will be displayed in the lower part of the screen and the progress of processing will be displayed for each node.

In write processing, each data link table will be simultaneously checked for serious errors or link offset errors. If an error is detected in a data link table, a window will be displayed to ask you to determine whether the data is to be written to the node. Press "Y" to write the data or press "N" to cancel the write processing, and then press the Enter Key. If "N" is pressed to cancel the write processing, "Canceled due to table error" will be displayed at the node address.

When processing for all the specified nodes is completed, "End" will be displayed at the lower part of the screen.


5. Then, press the F10 (End) Key.

Comparing Data Link Tables — V: Compare

"V: Compare" is used to compare data link tables in the computer memory with data link tables set at each node.

- 1, 2, 3...
1.

Select "V: Compare" from the Transfer Data Link Table Menu. The following window will be displayed to prompt you to specify the nodes for which data link tables are to be compared with those in the memory.

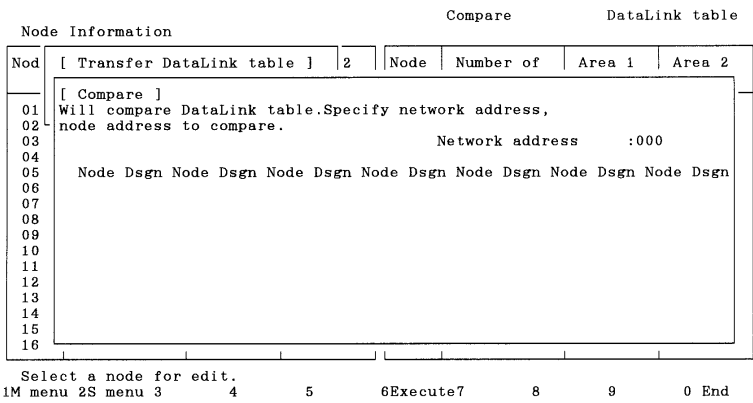

2. Specify the address of the Controller Link Network containing the nodes for which data link tables are to be compared. Enter the network address with Numeric Keys, then press the Enter Key.
- When the Enter Key is pressed, the software will check the nodes on the specified network and display only the nodes that exist in the network and for which the number of nodes specified in the data link table in the memory is not 0. These nodes will be displayed in ascending order of node address.
- When node addresses are displayed, YES will be displayed at each node address to represent the target nodes for comparison.
3. Select the nodes to be excluded from comparison. Use the Cursor Keys to move the cursor to the node to be excluded from comparison, then press the Enter Key. YES will be erased to deselect the node.
- To reselect a node for comparison, move the cursor to the node unmarked with YES, then press the Enter Key again. YES will be displayed to reselect the node.

Node Information

CompareDataLink table

Nod	[Transfer DataLink table]	2	Node	Number of	Area 1	Area 2
01	[Compare]					
02	Will compare DataLink table.Specify network address,					
03	node address to compare.					
04	Network address :000					
05	Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn					
06	01 YES					
07	31 YES					
08						
09						
10						
11						
12						
13						
14						
15						
16						

Select a node for edit.1M menu 2S menu 3456Execute7890 End

4. After specifying all the target nodes for comparison, press the F6 (Execute) Key. The transfer results screen will be displayed and data link table comparison will start. Comparison will be performed in ascending order of node address.

CompareDataLink table

Netuk adr = [000]

Node Execution ResultsNode Execution Results

01 Compare error

02 Compare error

03 Compare OK

Will display differences. Specify node address.01

1M menu 2S menu 3456Execute7890 End

To cancel the comparison, press the F9 (Cancel) Key.

During comparison, "Wait" will be displayed in the lower part of the screen and the progress of processing will be displayed for each node.

If a comparison error is detected in a node, the node address and the execution results will be highlighted.

If no comparison error is detected in all the specified nodes, “Compare OK” will be displayed. In this case, press the F10 (End) Key to quit the comparison.

If comparison errors are detected, message “Will display differences. Specify node address” will be displayed along with the mode number of the smallest node address with a comparison error.

5. Specify the node address of the node for which the comparison errors are to be displayed. Enter the network address with Numeric Keys, then press the Enter Key. The comparison error screen for the specified node will be displayed.

The comparison error screen differs depending on the location of the error.

- The following will be displayed when an inconsistency is found in the number of nodes set, first status word, link start word of area 1, or link start word of area 2.

Metuk -[000] Mode-[01]

Compare

DataLink table

Upper:Computer
Lower:Controller Link

Num of Node	
Status word	
Start Word	
Area 1 Link	100010
Start Word	100000
Area 2 Link	
Start Word	

Lastpage

11 menu 23 menu 0 Fre Pg 3 Ext Pg 0 3 2 2 End

When the number of nodes set is inconsistent, the number of words in area 1, offset in area 1, the number of words in area 2, and offset in area 2 will not be compared.

- The following will be displayed when an inconsistency is found in the number of words in area 1, offset in area 1, number of words in area 2, or offset in area 2.

Metuk -[000] Mode-[01]		Compare	DataLink table
Upper:Computer/Lower:Controller Link			
Mode	Area1 Num Wd	Area1 Offset	Area2 Num Wd
82			10
02			100
Lastpage			
11 menu	23 menu	0 Fre Pg	3 Ext Pg
		0	3
		2	2
		2	End

The message for the comparison results will be displayed in the lower part of the screen as follows:

When comparison errors continue on the next page: "Continue"

When the comparison error screen is the last page: "Last page"

When inconsistent data is found, the data in the memory will be displayed in the upper row and the data at the node will be displayed in the lower row. (Consistent data will not be displayed.)

6. If the comparison error screen extends across more than one page, use the F4 (Pre Pg) and F5 (Nxt Pg) Keys to switch the screen and display the results. The Page Up and Page Down Keys can also be used to switch the screen.

To display the comparison errors for another node, press the Escape Key to exit from the comparison error screen, then repeat the procedure from step 5.

7. After checking the comparison results, press the F10 (End) Key.

5-3-11 Deleting Data Link Tables from Nodes — D: Delete Table

"D: Delete table" is used to delete the data link tables set at one or more nodes.

- Note**
- 1) Data link tables cannot be deleted from a node that is currently participating in the data links.
 - 2) The nodes for which the number of nodes set in the data link table in the computer memory is 0 will be automatically selected as the nodes from which data link tables are to be deleted. Therefore, data link tables can be deleted from only the nodes that are not to participate in the data links. You can also change the target nodes for deletion.
 - 3) Always delete the data link tables from the nodes that are not be participating in the data links.

- 1, 2, 3... 1. Select "D: Delete table" from the Data Link Menu. The following window will be displayed to prompt you to specify the nodes from which data link tables are to be deleted.

Node Information				Delete				DataLink table				
Nod	[Delete DataLink table]											
	Will delete DataLink table. Specify network address, node address to delete.											
	Network address : 000											
	Node Dsgn	Node Dsgn	Node Dsgn	Node Dsgn	Node Dsgn	Node Dsgn	Node Dsgn	Node Dsgn	Node Dsgn	Node Dsgn	Node Dsgn	Node Dsgn
01												
02												
03												
04												
05												
06												
07												
08												
09												
10												
11												
12												
13												
14												
15	62	620	620	620	31	62	620	620				
16	62	620	620	620	32	62	620	620				
Select a node for edit.												
1M menu 2S menu 3 4 5 6Execute7 8 9 0 End												

2. Specify the address of the Controller Link Network containing the nodes from which data link tables are to be deleted. Enter the network address with Numeric Keys, then press the Enter Key.

When the Enter Key is pressed, the nodes on the specified network will be checked and displayed in ascending order of node address.

When node addresses are displayed, YES or No will be displayed as follows, depending on the number of nodes set in the data link table in the memory:

Nodes for which the number of nodes is not 0: YES (data link tables deleted)

Nodes for which the number of nodes is 0: No display (data link tables not deleted)

3. Specify the processing for each node. Use the Cursor Keys to move the cursor to the node for which the processing is to be changed, then press the Enter Key.
- Each time the Enter Key is pressed, the display will change as follows:
- YES (data link tables deleted)
- ☐
- No display (data link tables not deleted)

Node Information

Delete

DataLink table

Nod	[Delete DataLink table]												d
	Will delete DataLink table. Specify network address, node address to delete.												
01	Network address : 000												
02	Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn Node Dsgn												
03													
04	01 YES												
05	31												
06													
07													
08													
09													
10													
11													
12													
13													
14													
15	62	620	620	31	62	620	620						
16	62	620	620	32	62	620	620						

Select a node for edit.

1M menu 2S menu 3 4 5 6Execute7 8 9 0 End

4. After specifying all the nodes from which data link tables are to be deleted, press the F6 (Execute) Key. The deletion results screen will be displayed and data link table delete processing will start.
- Data link tables will be deleted in ascending order of node address.

Delete

DataLink table

Netuk adr = [000]

Node Execution Results

02 Normal end

Node Execution Results

End

1M menu 2S menu 3 4 5 6Execute7 8 9 0 End

- To cancel the delete processing, press the F9 (Cancel) Key.
- During delete processing, "Wait" will be displayed in the lower part of the screen and the progress of processing will be displayed for each node.
- When the delete processing for all the specified nodes is completed, "End" will be displayed in the lower part of the screen.
5. Then, press the F10 (End) Key.

5-3-12 Printing Data Link Tables — P: Print Table

"P: Print table" is used to print the data link tables in the computer memory.

Note Select "Printer model" from the System Setup Menu and specify the printer model before using "P: Print table."

- 1, 2, 3...
1. Select “P: Print table” from the Data Link Menu. The following window will be displayed to prompt you to specify the nodes for which the data link tables are to be printed.

This window displays the nodes for which the number of nodes set in the data link table in the memory is not zero. These nodes are displayed in ascending order of node address and YES is displayed at each node address to represent the nodes for which data link tables are to be printed.

2. Select the nodes to be excluded from printing. Use the Cursor Keys to move the cursor to the node to be excluded from printing, then press the Enter Key. YES will be erased to deselect the node.

To reselect a node for printing, move the cursor to the node unmarked with YES, then press the Enter Key again. YES will be displayed to reselect the node.

Node Information

Print

DataLink table

Nod	[Print DataLink table]												d
	Specify nodes to be printed.												
01	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node	Dsgn	
02	01	YES											
03	02	YES											
04	03	YES											
05	04	YES											
06													
07													
08													
09													
10													
11													
12													
13							29						
14							30						
15							31						
16							32						

Select a node for edit.

1M menu 2S menu 3 4 5 6Execute7 8 9 0 End

3. After specifying all the target nodes for print processing, press the F6 (Execute) Key. Data link table printing will start and the print status display window will appear. Data link tables will be printed in ascending order of node address.
- To cancel the printing, press the F9 (Cancel) Key.
- “Printing” will be displayed during printing.
- When printing for all the specified nodes is completed, the print status display window will close and the processing will automatically terminate.
- During printing, the print position will be automatically adjusted so that the data link table for one node is not split.
- The contents of the data link table being printed are the same as those displayed on the Node Information List and Data Link Table Screens. The presence or absence of the “Offset” column also depend son the data link table conditions.

See 5-3-4 Creating and Editing Data Link Tables (page 52) for details on printing.

Printing Example

< < Controller Link DataLink table Directory > > 01/05/2000 PAGE = 0001

Node Information							
Node	Number of Nodes	Area 1 Link Wd	Area 2 Link Wd	Node	Number of Nodes	Area 1 Link Wd	Area 2 Link Wd
01	4	50	600	33			
02	4	50	600	34			
03	4	50	600	35			
04	4	50	600	36			
05				37			
06				38			
07				39			
08				40			
09				41			
10				42			
11				43			
12				44			
13				45			
14				46			
15				47			
16				48			
17				49			
18				50			
19				51			
20				52			
21				53			
22				54			
23				55			
24				56			
25				57			
26				58			
27				59			
28				60			
29				61			
30				62			
31							
32							

Node[01] Pctype[CS1G-42] Num of Nd [04] Status Word[-----]			
Node	<Area1> Link Wd	Link Start Word[00000] Num Wd Source Wd	<Area2> Link Start Word[D00000] Link Wd Num Wd Source Wd
01	00000	10 Send_Area	D00000 200 Send_Area
02	00010	10 00010	D00200 100 D00200
03	00020	10 00020	D00300 100 D00300
04	00030	20 00030	D00400 200 D00400

Node[02] Pctype[CS1G-42] Num of Nd [04] Status Word[-----]			
<Area1> Link Start Word[00000]		<Area2> Link Start Word[D00000]	
Node	Link Wd	Num Wd	Source Wd
01	00000	10	00000
02	00010	10	Send_Area
03	00020	10	00020
04	00030	20	00030

Node[03] Pctype[CS1G-42] Num of Nd [04] Status Word[-----]				
Node	<Area1> Link Wd	Link Start Word[00000] Num Wd Source Wd	<Area2> Link Wd	Link Start Word[D00000] Num Wd Source Wd
01	00000	10 00000	D00000	200 D00000
02	00010	10 00010	D00200	100 D00200
03	00020	10 Send_Area	D00300	100 Send_Area
04	00030	20 00030	D00400	200 D00400

Node[04] Pctype[CS1G-42] Num of Nd [04] Status Word[-----]				
Node	<Area1> Link Wd	Link Start Word[00000] Num Wd Source Wd	<Area2> Link Wd	Link Start Word[D00000] Num Wd Source Wd
01	00000	10 00000	D00000	200 D00000
02	00010	10 00010	D00200	100 D00200
03	00020	10 00020	D00300	100 D00300
04	00030	20 Send Area	D00400	200 Send Area

5-3-13 Starting and Stopping Data Links — R: Start/Stop

“R: Start/Stop” is used to start and stop data links.



Caution

Before starting data links, make sure that the data link tables for each node for manually set data links, or the data link parameters at the data link start node for automatically set data links, have been appropriately set. If the settings are inappropriate, the equipment may perform unexpected operation and result in injury. Even if the settings are appropriate, always make sure that the equipment will not be affected before starting or stopping the data links.


Note Before starting the data links, always check the data link mode (manual or automatic) set at the node from which the data links are to be started.

- 1, 2, 3... 1. Select "R: Start/Stop" from the Data Link Menu.



2. Select "R: Start" to start the data links or "S: Stop" to stop the data links.

Example for "R: Start"

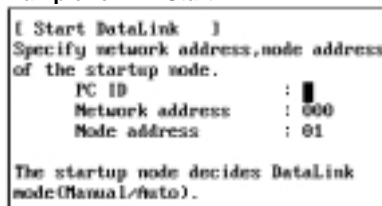

3. Specify the node to start or stop the data links. Use the Cursor Keys to move the cursor to each field ("PC ID," "Network address," and "Node address"), then enter a numeric value with Numeric Keys (enter a PC ID with Alphanumeric Keys).

Press the Enter Key to register the input item and move the cursor to the next field.

Item	Meaning
PC ID	Enter the PC ID of the node. Use this field only when a PC ID is to be used. If a PC ID is used, the network address and node address will be specified automatically (see page 124).
Network address	Enter the network address of the node. The setting range is between 0 and 127. Network address 0 represents the local network (the address of the network containing the node to which the Controller Link Support Software is connected). (see note) For CS1-series, CVM1, or CV-series PCs with multiple Communications Units, specify the network address explicitly.
Node address	Enter the node address of the node. The setting range is between 0 and 62. Node address 0 represents the local node (the address of the node to which the Controller Link Support Software is connected).

Note For CVM1 or CV-series CPU Units manufactured before April 1996 (lot No.: □□46), always set routing tables. Specify in the "Network address" the value (other than 0) specified in the routing tables. Refer to the *Controller Link Units Operation Manual (W309)* for details.

Press the F10 (End) Key to cancel the data link start/stop procedure.

4. Press the F6 (Execute) Key. The data links for the specified network will be started or stopped.

5-3-14 Displaying Data Link Status — M: Monitor Status

"M: Monitor status" is used to check data link operations.

Item	Meaning	Page
S: Monitor Data Link status	Displays data link operating status for the specified node.	79

Displaying the Monitor Data Link Status Menu

To use each status monitor functions, select the desired function from the Monitor Data Link Status Menu. Select "M: Monitor status" from the Data Link Menu. The Monitor Data Link Status Menu will be displayed.




Displaying Data Link Status — S: Monitor Data Link Status

"S: Monitor Data Link status" is used to display the data link operating status for the specified node.

1, 2, 3...

1. Select "S: Monitor Data Link status" from the Monitor Data Link status Menu.

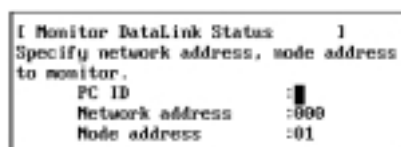

2. Specify the node for which the data link status is to be displayed. Use the Cursor Keys to move the cursor to each field ("PC ID," "Network address," and "Node address"), then enter a numeric value with Numeric Keys (enter a PC ID with Alphanumeric Keys).

Press the Enter Key to register the input item and move the cursor to the next field.

Item	Meaning
PC ID	Enter the PC ID of the node. Use this field only when a PC ID is to be used. If a PC ID is used, the network address and node address will be input automatically(see page 124).
Network address	Enter the network address of the node. The setting range is between 0 and 127. Network address 0 represents the local network (the address of the network containing the node to which the Controller Link Support Software is connected). (see note) For CS1-series, CVM1, or CV-series PCs with multiple Communications Units, specify the network address explicitly.
Node address	Enter the node address of the node. The setting range is between 0 and 62. Node address 0 represents the local node (the address of the node to which the Controller Link Support Software is connected).

Note For CVM1 or CV-series CPU Units manufactured before April 1996 (lot No.: □□46), always set routing tables. Specify in "Network address" the value (other than 0) specified in the routing tables. Refer to the *Controller Link Units Operation Manual (W309)* for details.

Press the F10 (End) Key to cancel the data link start/stop procedure.

3. Press the F6 (Execute) Key. Data link status will be read from the specified node and operating status will be displayed on the real-time basis.

Note The nodes registered in the data link table for the specified node are highlighted. They are the nodes that have data links to the specified node.

				Monitor status		DataLink		
Netwk addr = [000] Node addr = [01] Startup node = [01]								
	Node addr	PC Run	PC err	Comm err	DtLink Join	Offset err	Area short	Area remain
Comm cycle time	31	YES			YES			
[0.5ms	32							YES
DataLink	33				YES			YES
Inactive	34			YES				
[Manual]	35			YES				
Refresh cycle	36			YES				
Currl 0ms	37			YES				
Max l 0ms	38			YES				
DataLink table	39			YES				
ISet 1	40			YES				
	41			YES				
	42			YES				
	43			YES				
	44			YES				
	45			YES				
	46			YES				
Continue								
[F1] Netwk [F2] Netwk [F3] Free Pg [F4] Next Pg [F5] 0 [F6] 3 [F7] Cancel [F8] End								

Key	Function
F4 (Pre Pg) Page Up	When this key is pressed, the node addresses for which the node status is displayed will change cyclically in the following order: 1 to 16 → 17 to 32 → 33 to 48 → 49 to 62
F5 (Nxt Pg) Page Down	When this key is pressed, the node addresses for which the node status is displayed will change cyclically in the following order: 49 to 62 → 33 to 48 → 17 to 32 → 1 to 16
F9 (Cancel)	Stops updating the display and changes the F9 Key function to "Start."
F9 (Start)	Restarts updating the display and changes the F9 Key function to "Cancel."
F10 (End)	Closes the operating status display screen.

The meaning of each item is as follows:

Item	Meaning
Communications cycle time (Comm cycle time)	Displays the current communications cycle time of the Controller Link Network.
Data link (DataLink)	Displays the data link operating status, active/inactive on the top and manual/automatic on the bottom.
Refresh cycle time (Refresh cycle)	Displays the current data link refresh time (the period from the time the data link data is refreshed at the PC until the next refresh is completed) and the maximum data link refresh time that has been measured since the data links were started. For nodes with a Controller Link Support Board, the refresh cycle time is always 0 ms.
Data link table (DataLink table)	Displays whether data link tables have been set at the nodes displayed on the screen.

Item	Meaning
PC run (PC Run)	Displays the operating status of PC on the network as follows: When user program is not running on PC: No display When user program is running on PC: YES YES will be always displayed for nodes with a Controller Link Support Board.
PC error (PC err)	Displays error status of each PC on the network as follows: When the PC is operating normally or is not participating in the data link: No display When the PC has a fatal or nonfatal error: YES
Communications error (Comm err)	Displays the communications status of each node on the network as follows: When the node is communicating normally: No display When the node has caused a cyclic communications error or is not participating in the network: YES
Data link join (DtLnk join)	Displays the data link participation status of each node on the network as follows: When the node is not participating in the data link due to data link table error or other errors: No display When the node is participating in the data link: YES
Offset error (offset err)	Displays offset error status in the data link table for node communications within the network as follows: When there is no offset error: No display When there is an offset error: YES An offset error occurs when the offset value is greater than the number of send words.
Area short (Area short)	Displays area shortage status in the data link tables for node communications within the network as follows: When the area is sufficient: No display When the area is short: YES When the data link is inactive: No display. A short area occurs when the receive area is smaller than the amount of send data and not all of the send data can be received. It is not a fatal error. If the receive area intentionally receives only part of the send data, it can be used without having to make any changes.
Area remaining (Area remain)	Displays remaining area in the data link table for node communications within the network as follows: When the area does not remain empty: No display When words in the area remain empty: YES Remaining area occurs when the receive area is larger than the amount of send data and extra space remains unfilled after reception. The remaining space will be cleared with 0s. This is not a serious error. If the receive area intentionally provides extra space, it can be used without having to make any changes.

5-3-15 Specifying Node Models — I: Device Information Settings

“I: Device Info set” is used to specify the models of the nodes that comprise the Controller Link Network. The specified data is saved as a file.

The Controller Link Support Software performs word address validity checking according to the node model information specified in “Device Info set.”

Note 1) Model information for all nodes is unspecified (left blank) immediately after the Controller Link Support Software is initially started.

- 2) Executing "Initialize table" makes the model information for all nodes unspecified (blank).

- 1, 2, 3... 1. Select "I: Device Info set" from the Data Link Menu.

Device Info set DataLink table

Node	Model name	Node	Model name	Node	Model name	Node	Model name
01		17		33		49	
02		18		34		50	
03		19		35		51	
04		20		36		52	
05		21		37		53	
06		22		38		54	
07		23		39		55	
08		24		40		56	
09		25		41		57	
10		26		42		58	
11		27		43		59	
12		28		44		60	
13		29		45		61	
14		30		46		62	
15		31		47			
16		32		48			

1M menu 2S menu 3Delete 4 5 6Select 7 Fill 8 9 0 End

2. Select the node for which model is to be specified. Use the Cursor Keys to move the cursor to the target node, then press the Enter Key or the F6 (Select) Key.

Press the F7 (Fill) Key to select all nodes.

Press the F3 (Delete) Key or the Delete Key to delete the model information for the node in the cursor position.

Device Info set DataLink table

[Select Model]

CS1G-42 CV2000

CS1G-43 CV1000

CS1G-44 CV500

CS1G-45 CLK Board

CS1H-63 Others

CS1H-64

CS1H-65

CS1H-66

CS1H-67

C200HX-*4Z

C200HX-65Z

C200HX-85Z

C200HE(-Z)

C200HG(-Z)

C200HX

CQM1H-51

CQM1H-61

CVM1-CPU21

CVM1-CPU11

CVM1-CPU01

Model name	Node	Model name	Node	Model name
	33		49	
	34		50	
	35		51	
	36		52	
	37		53	
	38		54	
	39		55	
	40		56	
	41		57	
	42		58	
	43		59	
	44		60	
	45		61	
	46		62	
	47			
	48			

1M menu 2S menu 3Delete 4 5 6Select 7 Fill 8 9 0 End

Note a) If "Others" is selected, restrictions for each model will no longer apply. Regardless of the model, restrictions will apply to only the upper limits when numeric values are entered or checked.

b) New PCs that do not appear in the model list can be displayed and selected from Controller Link Support Software by editing the device information setting file (see *Appendix E Editing the Device Information Setting File*).

c) The version of the Controller Link Support Software is displayed on the logo screen when the software is started.

3. Select the model to be set. Use the Cursor Keys to move the cursor to the model to be set, then press the Enter Key. The specified model will be set for the specified node. (Press the F7 Key to set the specified model for all the nodes.)
4. After specifying the models for all the nodes, press the F10 (End) Key. The model setting procedure will end.

5-4 P: Set Network Parameters

“P: Set Network parameters” is used to modify network communications parameters to provide the most suitable Controller Link communications for the user application.

- Note**
- 1) Network parameters cannot be set during data link operation. Set the network parameters after stopping the data links. (See 5-3-13 *Starting and Stopping Data Links* on page 77.)
 - 2) The same network parameters are used for all nodes within the Controller Link Network. Therefore, any change in each network parameters will affect all nodes within the network.
 - 3) Before executing “P: Set Network parameters”, always set pin 1 of the DIP switch on the CS1-series and CQM1H-series CPU Unit to OFF.
 - 4) Before executing “P: Set Network parameters”, always set the system protect key switch on the CVM1 or CV-series CPU Unit to NORMAL.

- 1, 2, 3...**
1. Select “P: Set Network parameters” from the Main Menu.
 2. Specify the address of the Controller Link Network for which network parameters are to be changed. Enter the network address with Numeric Keys, then press the Enter Key. The current network parameter settings for the specified network will be displayed.

```
[ Set Network Parameters ]
Network address      : 000
Max node address (2--62) : 62
# of Event-frames
  per comm cycle (16--238) : 035
# of Polled nodes
  per comm cycle (1--61)  : 04
```

3. Specify the new values for the network parameters. Use the Cursor Keys to move the cursor to the desired field, then enter a value with Numeric Keys. Press the Enter Key to register a new value and move the cursor to the next field.

Item	Meaning
Maximum node address (Max node address)	Maximum node address of nodes that are checked by the network polling node. Any node with a node address greater than this setting will not participate in the network. Unnecessary polling (connection checking) can be avoided by setting the maximum node address of the nodes to be checked. The setting range is between 2 and 62. The default is 62.
Number of Event-frames per communications cycle (# of Event-frames per comm cycle)	Maximum amount of event data (such as message service data) that can be transmitted during a communications cycle Increasing the value also increases the communications cycle time. Too small a value results in frequent transmission timeout errors. The setting range is between 16 and 238. The default is 35.
Number of Polled nodes per communications cycle (# of Polled nodes per comm cycle)	Maximum number of nodes for which communications status can be checked by the network polling node during a communication cycle Increasing the value also increases the communications cycle time but provides quicker response to nodes participating in or leaving the network. The setting range is between 1 and 61. The default is 4.

Press the F7 (Initialize) Key to set each item to its default.

Note If the Controller Link Network consists of Units other than Optical Ring Controller Link Units, do not set node addresses higher than 32. (Node addresses higher than 32 can only be set for Controller Link Networks that consist of only Optical Ring Controller Link Units.)

4. Press the F6 (Execute) Key. A confirmation message will be displayed at the bottom of the window.
5. Press "Y" and then the Enter Key. The network parameter settings will be modified.
- To cancel the processing, press "N" and then the Enter Key.

5-5 R: Routing Table

“R: Routing table” is used to manage the routing tables used for determining communications paths between multiple networks. It has the following menu.

Menu item	Function	Page
E: Edit	Creates or edits routing tables. Routing tables are created in the computer memory. To set the routing tables for each node, execute “T: Transfer.”	88
K: Check	Checks the routing tables in the memory for errors or inconsistencies.	91
C: Initialize	Initializes (or clears) the routing tables in the memory. Use this item when routing tables are to be created from scratch.	93
S: Save	Saves routing tables in the memory as a file.	93
L: Retrieve	Reads routing tables from the file into the memory.	94
T: Transfer	Writes routing tables from the memory to the specified node or reads routing tables from the specified node into the memory. This item can also be used to compare the routing tables in the memory with the routing tables at the specified node.	94
D: Delete	Deletes routing tables from the specified node.	98
P: Print	Prints routing tables in the memory.	99

5-5-1 Outline of Routing Tables


Routing tables must be set when the local node communicates with PCs, computers, and other nodes on remote networks. Routing tables need not be set when the node communicates only with other nodes on the local network.

Note For CVM1 or CV-series CPU Units manufactured before April 1996 (lot No.: □□46), always set routing tables. Refer to the *Controller Link Units Operation Manual (W309)* for details.

About Routing Tables

Routing tables define communications paths when a local node communicates with nodes on remote networks.

The following is a network example and the data required to create routing tables is explained below.

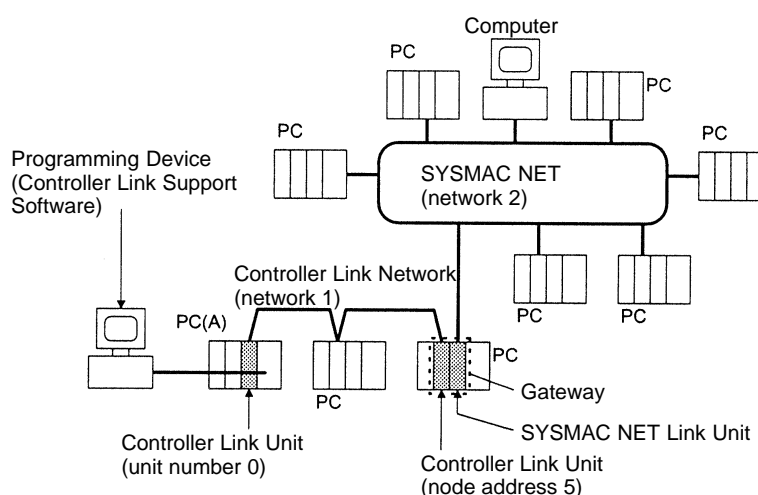

In this network example, when the PC connected to the Programming Device on network 1 is to communicate with a PC on network 2, you need to create routing tables containing the following information and transfer them to the PCs and computer on network 2.

- The local node belongs to network 1 (local network).
- The unit number of the Communications Unit is 0 (link unit number).
- Communications is performed via the Communications Unit with node address 5 that belongs to network 1 (relay node).
- The local node communicates with the remote network via network 1 (relay network).
- The local node communicates with a node on network 2 (end network).

Routing Tables for PC (A)

Local Network Table

Local network	Link unit number
001	00

Relay Network Table

End network	Relay network	Relay node
002	001	005

5-5-2 Setting Routing Tables

Create and transfer routing tables for each node according to the following setting procedures.

- 1, 2, 3... 1. "Edit" on page 88.
2. "Check" on page 91.
3. "Save" on page 93.
4. "Computer → PC/Board" under "Transfer" on page 96.



Caution

Once routing tables are transferred to a PC, all CPU Bus Units at the node (except SYSMAC BUS/2 Master Units) will be reset. Before transferring the routing tables, always make sure that the equipment will not be affected.

Note

- 1) If routing tables have already been saved or transferred, the following procedures can be used to read the routing tables into the Controller Link Support Software and edit them again.
"Retrieve" on page 94.
"PC/Board → Computer" under "Transfer" on page 95.
- 2) The Controller Link Support Software can create and transfer routing tables for all nodes supporting FINS commands, as well as for the Controller Link Units and Controller Link Support Boards. It cannot create or transfer routing tables for PCs for which the SYSMAC NET Link Unit is set to C Mode even if these PCs are CVM1 or CV-series PCs. In this case, connect the SYSMAC Support Software directly to such nodes and create and transfer routing tables.
- 3) The Controller Link Support Software can set a local network table containing up to 16 entries and a relay network table containing up to 20 entries. For C200HX/HG/HE PCs, a maximum of two entries can be made in the local network table.


5-5-3 Communications Range

Network Communications Range

The Controller Link Support Software can communicate with nodes on a Controller Link Network via OA networks (Ethernet networks) or FA networks (Controller Link, SYSMAC NET, and SYSMAC LINK networks) to set or monitor the Controller Link Units and Controller Support Boards at remote nodes.

The Controller Link Support Software can communicate with up to three networks.

Running from a Programming Device

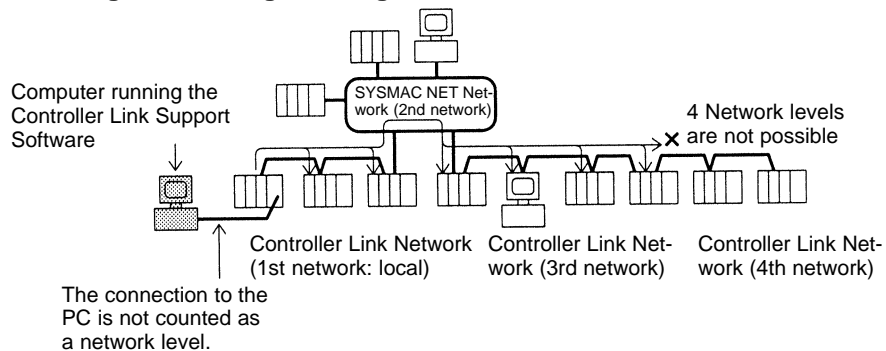

Relay Nodes

Only CS1-series, CVM1, and CV-series PCs can be used as nodes for relaying between networks. Install multiple Communications Units on a PC to relay between networks.

C-series PCs and IBM PC/AT computers cannot be used as relay nodes (but can be used as source and destination nodes).

5-5-4 Displaying the Routing Table Menu

To create or edit routing tables, select the corresponding function from the Routing Table Menu.

Each function is described on the following pages. The Routing Table Menu is displayed as follows:

- 1, 2, 3...
1. Select "R: Routing table" from the Main Menu. The routing table (local network table) will be displayed.

Edit Routing table					
[Local Network table]					
No.	Loc Netwk	SIOU unit #	No.	Loc Netwk	SIOU unit #
1			9		
2			10		
3			11		
4			12		
5			13		
6			14		
7			15		
8			16		

F1 menu F3 menu F4 Net # F5 Pre Pg F6 Ext Pg F7 Insert F8 Delete F9 F10 End

2. Press the F2 (Menu) Key. The Routing Table Menu will be displayed.

[Routing table]	
E:Edit	
K:Check	
C:Initialize	
S:Save	
L:Retrieve	
T:Transfer	
D>Delete	
P:Print	

5-5-5 Creating and Editing Routing Tables — E: Edit

“E: Edit” is used to create or edit the routing tables: the local network table and the relay network table.

- Note
- 1) “E: Edit” creates or edits routing tables in the computer memory. To actually set the routing tables at a node, select “T: Transfer” from the Routing Table Menu. Also, save the routing tables as a file by selecting “S: Save” from the Routing Table Menu. The table data will be cleared when the Controller Link Support Software is exited.
- 2) The Controller Link Support Software can create routing tables for only one node at a time. If routing tables for more than one node are to be created, save the created routing tables for a node, then create routing tables for the next node.

- 1, 2, 3... 1. Select "E: Edit" from the Routing Table Menu. The Local Network Table Screen will be displayed. The Local Network Table Screen can also be displayed by selecting "R: Routing table" from the Main Menu.

No.	Loc Netwk	SIOU unit #	No.	Loc Netwk	SIOU unit #
1			9		
2			10		
3			11		
4			12		
5			13		
6			14		
7			15		
8			16		

2. Set the local network table. Use the Cursor Keys to move the cursor to the desired position, then enter a numeric value with Numeric Keys.
Press the Enter Key to register the entered value and move the cursor to the next position.

Item	Meaning
Loc Netwk	<p>Specify the address of the network to which the Communications Unit or Board installed at the target node belongs.</p> <p>The setting range is between 1 and 127.</p> <p>Be careful not to specify the same network address for more than one network.</p>
SIOU unit #	<p>Specify the unit number of the Communications Unit or Board that is installed at the target node and is connected to the local network.</p> <p>The setting range is between 0 and 15.</p> <p>With Controller Link, the unit number is set in the following locations.</p> <p>Communications Unit: Rotary switch on the front panel of the Unit for CS1-series, CVM1, and CV-series PCs</p> <p>DIP switch pin 4 on the front panel of the Unit for C200HX/HG/HE PCs)</p> <p>(Fixed to 0 for CQM1H PCs.)</p> <p>Communications Board: Option switch on Controller Link BIOS (device driver)</p> <p>Enter the same unit number as the above setting.</p>

Press the F6 (Insert) Key or the Insert Key to insert one blank line before the cursor line. (You cannot move the cursor until you enter a value in the "Loc Netwk" column on the blank line.)

Press the F7 (Delete) Key or the Delete Key to delete the line on which the cursor is currently positioned.

3. After entering all the necessary values in the local network table, press the F4 (Pre Pg) Key or the F5 (Nxt Pg) Key. The Relay Network Table Screen will be displayed.

Press the Page Up Key or the Page Down Key to switch between the Local Network Table Screen and the Relay Network Table Screen.

No.	End Netwk	PC ID	Relay Netwk	node
1				
2				
3				
4				
5				
6				
7				
8				
9				
10				

No.	End Netwk	PC ID	Relay Netwk	node
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				

F1 menu F2 menu F3 Net ID F4 Pre Pg F5 Next Pg F6 Insert F7 Delete F8 F9 F10 End

4. Set the relay network table. Use the Cursor Keys to move the cursor to the desired position, then enter a numeric value with Numeric Keys. (Use Alphanumeric Keys to enter the PC ID of each relay node.)

Press the Enter Key to register the entered value and move the cursor to the next position.

Item	Meaning
End Network	Specify the address of the destination network. The setting range is between 1 and 127. Be careful not to specify the same network address for two different networks.
Relay PC ID	Specify the PC ID of the relay node. This entry is valid only when PC IDs are used. If PC IDs are used, network and node addresses are automatically input (see page 124.)
Relay network	Specify the network address of the relay node. Enter one of the values specified in the "Loc Netwk" column of the Local Network Table. The setting range is between 1 and 127.
Relay node	Specify the node address of the relay node. The setting range is between 1 and 126 (or between 1 and 62 for Controller Link Networks). (see note)

Note The setting range for Controller Link Units other than Optical Ring Controller Link Units is between 1 and 32.

Press the F6 (Insert) Key or the Insert Key to insert one blank line before the cursor line. (You cannot move the cursor until you enter a value in the "End Netwk" column on the blank line.)

Press the F7 (Delete) Key or the Delete Key to delete the line on which the cursor is currently positioned.

5. After entering all the necessary values in the relay network table, press the F10 (End) Key.

Even if the Relay Network Table Screen is switched to another screen, the contents of the routing table will be retained until the Controller Link Support Software is exited.

To return to the Local Network Table Screen, use the F4 (Pre Pg) Key, F5 (Next Pg) Key, Page Up Key, or Page Down Key.

5-5-6 Checking Routing Tables — K: Check

“K: Check” is used to check the routing tables for errors or inconsistencies. If errors are detected, correct the routing tables as described in *Error Messages* (on page 92).

Note “K: Check” checks the routing tables in the computer memory. To check the routing tables that have been set at a node, use “T: Transfer” on the Routing Table Menu to read the tables to the computer, then execute “K: Check.”

- 1, 2, 3...
1. Select “K: Check” from the Routing Table Menu. The routing table check will start and the check results screen will be displayed.

Local Network table 1					
No	Loc Netuk	Error message	No	Loc Netuk	Error message
1	001	Dup local netuk addr			
		Dup SIOU unit No. err			
2	001	Dup local netuk addr			
3	002	Dup SIOU unit No. err			
4	008	Dup SIOU unit No. err			

Lastpage

A message will be displayed in the lower part of the screen according to the check results as follows:

- When no error has been detected: “Check OK”
- When errors are continued on the next page: “Continue”
- When the current screen is the last page: “Last page”

2. When errors are displayed on multiple screens, use the F4 (Pre Pg) Key, the F5 (Nxt Pg) Key, the Page Up Key, or the Page Down Key to switch the screen and display the check results. After confirming the check results, press the F10 (End) Key.

Error Messages

The following tables list the error messages that are displayed on the check results screen. After confirming the check results, use "E: Edit" to correct the routing tables, then check them again.

• Local Network Table

Error message	Meaning	Action to be taken
Too many networks	The number of networks set in the table is outside the allowable range (0 to 16). Data may have been damaged.	Initialize the routing tables, then set them again.
Local netwk addr err	The network address specified in the "Loc Netwk" column is outside the allowable range (1 to 127).	Change the network address to a value between 1 and 127.
SIOU unit No. range err	The unit number is outside the allowable range (0 to 15).	Change the unit number to a value between 0 and 15.
Dup local netwk addr	The same local network address is specified more than once.	Change the local network address to a unique address.
Dup SIOU unit No. err	The same unit number is specified more than once.	Change the unit number to a unique number.


• Relay Network Table

Error message	Meaning	Action to be taken
Too many networks	The number of networks set in the table is outside the allowable range (0 to 20). Data may have been damaged.	Initialize the routing tables, then set them again.
End netwk addr range err	The end network address is outside the allowable range (1 to 127).	Change the network address to a value between 1 and 127.
Relay netwk addr rng err	The relay network address is outside the allowable range (1 to 127).	Change the network address to a value between 1 and 127.
Relay node addr rng err	The relay node address is outside the allowable range (1 to 126).	Change the network address to a value between 1 and 126.
Dup end netwk addr	The same end network address is specified more than once.	Change the local network address to a unique address.
Relay netwk addr err	A network address not in the local network table is specified as a relay network address.	Specify one of the network addresses set in the local network table.

5-5-7 Initializing Routing Tables — C: Initialize

“C: Initialize” is used to initialize routing tables.

- Note**
- 1) “C: Initialize” initializes the routing tables in the computer memory. To initialize the routing tables that have been set at a node, select “D: Delete” from the Routing Table Menu.
 - 2) Initializing the routing tables makes them unspecified (blank).
- 1, 2, 3...**
1. Select “C: Initialize” from the Routing Table Menu. The following confirmation message will be displayed.



2. To initialize the routing tables, press “Y” and then the Enter Key. The routing tables will be initialized.

To cancel the initialization processing, press “N” and then the Enter Key.

5-5-8 Saving Routing Tables as a File — S: Save

“S: Save” is used to save routing tables as a file.

- Note**
- 1) Unless saved, the routing tables in the memory will be lost when the Controller Link Support Software is exited.
 - 2) If routing tables have been modified but have not yet been saved, a confirmation message will be displayed when you attempt to exit the Controller Link Support Software.
 - 3) “S: Save” is used to save routing tables residing in the computer memory. To save the routing tables that have already been set at a node, select “T: Transfer” from the Routing Table Menu to read the tables to the computer, then save them.
 - 4) Routing table files for the Controller Link Support Software are compatible with those for the SYSMAC Support Software and the SYSMAC LINK Support Utility. Therefore, routing files can be transferred between them.
- 1, 2, 3...**
1. Select “S: Save” from the Routing Table Menu.



2. Specify the file name (including the directory name) to be saved. Enter the file name with Alphanumeric Keys, then press the Enter Key.

The extension of the file name to be saved must be .RTG. If the extension is omitted, .RTG will be automatically added as an extension.

When this window appears, the data directory specified in “System setup” will be displayed as the destination. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

Alternatively, you can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen.

If an existing file name is specified, a confirmation message will be displayed to ask you to check whether the file can be overwritten. Press “Y” to overwrite the file or press “N” to cancel the save processing, then press the Enter Key.

3. Enter a title to be attached to the file. Enter a title with Alphanumeric Keys, then press the Enter Key. Up to 30 characters can be entered as the title. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

If no title is required, just press the Enter Key.

The file will be saved.

5-5-9 Reading Routing Tables from the File — L: Retrieve

“L: Retrieve” is used to read routing tables from a file into the memory.

- Note**
- 1) If routing tables are read from a file, the current routing tables residing in the memory will be lost.
 - 2) If routing tables in the memory have been modified, a confirmation window will be displayed when you attempt to read routing tables from a file.
 - 3) Routing table files for the Controller Link Support Software are compatible with those for the SYSMAC Support Software and the SYSMAC LINK Support Utility. Therefore, routing files can be transferred between them.

- 1, 2, 3...**
1. Select “L: Retrieve” from the Routing Table Menu. If routing tables in the memory have been modified, a confirmation window will be displayed. Press “Y” to continue the read processing or press “N” to cancel the processing, and then press the Enter Key.

If routing tables in the memory have not been modified or “Y” is pressed to continue, the following window will be displayed to prompt you to specify a file name.

```
[ Retrieve Routing table ]
Input file name to retrieve.
C:\
```

2. Specify the file name (including the directory name) to be read. Enter the file name with Alphanumeric Keys, then press the Enter Key.

When this window appears, the data directory specified in “System setup” will be displayed as the source directory. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

You can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen.

The file will be read.

5-5-10 Transferring Routing Tables — T: Transfer

“T: Transfer” is used to transfer routing tables between the personal computer and the specified node as follows:

Item	Function	Page
R: PC/Board → Computer	Reads the routing tables set at the specified node into the computer memory.	95
W: Computer → PC/Board	Writes the routing tables from the memory to the specified node for registration.	96
V: Compare	Compares the routing tables set at the specified node with the routing tables in the memory.	96

Displaying the Transfer Routing Table Menu

- 1, 2, 3...**
1. Select “T: Transfer” from the Routing Table Menu. The following window will be displayed to prompt you to specify the target node.

```
[ Transfer Routing table ]
Specify network address, node address
to transfer.
PC ID          :
Network address :000
Node address   :000
```

2. Specify the desired node. Use the Cursor Keys to move the cursor to the desired field, then enter a numeric value with Numeric Keys. (Use Alphanumeric Keys to enter a PC ID.)


Press the Enter Key to register the entered value and move the cursor to the next field.

Item	Meaning
PC ID	Enter the PC ID of the node. Use this field only when a PC ID is to be used. If a PC ID is used, the network address and node address will be input automatically (see page 124).
Network address	Enter the network address of the node. The setting range is between 0 and 127. Network address 0 represents the local network (the address of the network containing the node to which the Controller Link Support Software is connected). (see note) For CS1-series, CVM1, and CV-series PCs with multiple Communications Units, specify the network address explicitly.
Node address	Enter the node address of the node. The setting range is between 0 and 126. Node address 0 represents the local node (the address of the node to which the Controller Link Support Software is connected).

Note For CVM1 or CV-series CPU Units manufactured before April 1996 (lot No.: □□46), always set routing tables. Specify in "Network address" the value (other than 0) specified in the routing tables. Refer to the *Controller Link Units Operation Manual (W309)* for details.

Press the F10 (End) Key to cancel the routing table transfer.

- Press the F6 (Execute) Key. The Transfer Routing Table Menu will be displayed.



Reading Routing Tables from a Node — R: PC/Board → Computer

"R: PC/Board → Computer" is used to read the routing tables set at the specified node into the computer memory.

Note If routing tables are read from a node, the current routing tables in the memory will be lost. If routing tables in the memory have been modified, a confirmation window will be displayed when you attempt to read routing tables from a node. To save the routing tables already in the memory, select "S: Save" from the Routing Table Menu to save them as a file.

- 1, 2, 3... 1. Select "R: PC/Board → Computer" from the Transfer Routing Table Menu. If routing tables in the memory have been modified, a confirmation window will be displayed. Press "Y" to continue or press "N" to cancel the processing, and then press the Enter Key.

If routing tables in the memory have not been modified or "Y" is pressed to continue, routing table read will start.

If the routing table read terminates normally, the following window will be displayed.



Writing Routing Tables to Nodes — W: Computer → PC/Board

“W: Computer → PC/Board” is used to write the routing tables from the computer memory to a node.


**Caution**

Once routing tables are transferred to a PC, all CPU Bus Units at the node (except SYSMAC BUS/2 Master Units) will be reset. Before transferring the routing tables, always make sure that the equipment will not be affected.

- Note**
- 1) If routing tables are written to a node, the existing routing tables set at the node will be lost. In this case, a confirmation message for overwriting will not be displayed even if routing tables have already been set at the node. Therefore, carefully check the contents of the routing tables set at the node before transferring routing tables.
 - 2) When writing routing tables for the first time, perform the following procedure.
 - a) Connect the Controller Link Support Software to nodes with only one Communications Unit or Board that reside on the network for which the routing tables are to be set.
 - b) Specify 0 as the network address of the target network.
 - c) Write the routing tables to each node on the network.
 - d) If the routing tables are to be written to another network, connect the Controller Link Support Software to a node on that network.

Select “W: Computer → PC/Board” from the Transfer Routing Table Menu. Routing table write processing will start.

If the routing table write terminates normally, the following window will be displayed.

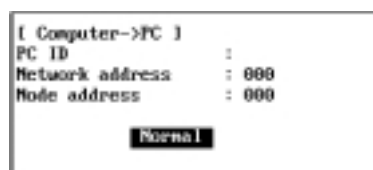

- Note** For C200HX/HG/HE or CQM1H Controller Link Units, the Routing Table Enable Bit in the DM Parameter Area must be set to ON (enabled). If the Routing Table Enable Bit is set to OFF (disabled), routing tables cannot be written to the node. Refer to the *Controller Link Units Operation Manual (W309)* for details.

Comparing Routing Tables — V: Compare

“V: Compare” is used to compare the routing tables in the computer memory with the routing tables at the specified node.

- 1, 2, 3... 1. Select “V: Compare” from the Transfer Routing Table Menu. Routing table comparison will start.
During comparison, “Wait” will be displayed in the window.

When the comparison is completed, the comparison results screen will be displayed.

Compare						Routing table					
[Local Network table]			Netuk =[000] Node=[000]			Upp:Comp./Low:PC					
No.	Loc ntak	unit	No.	Loc ntak	unit	No.	Loc ntak	unit	No.	Loc ntak	unit
1	001 xxx	00 xx									

Lastpage

Fr Pg 1

Fr Pg 2

Fr Pg 3

Fr Pg 4

Fr Pg 5

Fr Pg 6

Fr Pg 7

Fr Pg 8

Fr Pg 9

Fr Pg 10

Fr Pg 11

Fr Pg 12

Fr Pg 13

Fr Pg 14

Fr Pg 15

Fr Pg 16

Fr Pg 17

Fr Pg 18

Fr Pg 19

Fr Pg 20

Fr Pg 21

Fr Pg 22

Fr Pg 23

Fr Pg 24

Fr Pg 25

Fr Pg 26

Fr Pg 27

Fr Pg 28

Fr Pg 29

Fr Pg 30

Fr Pg 31

Fr Pg 32

Fr Pg 33

Fr Pg 34

Fr Pg 35

Fr Pg 36

Fr Pg 37

Fr Pg 38

Fr Pg 39

Fr Pg 40

Fr Pg 41

Fr Pg 42

Fr Pg 43

Fr Pg 44

Fr Pg 45

Fr Pg 46

Fr Pg 47

Fr Pg 48

Fr Pg 49

Fr Pg 50

Fr Pg 51

Fr Pg 52

Fr Pg 53

Fr Pg 54

Fr Pg 55

Fr Pg 56

Fr Pg 57

Fr Pg 58

Fr Pg 59

Fr Pg 60

Fr Pg 61

Fr Pg 62

Fr Pg 63

Fr Pg 64

Fr Pg 65

Fr Pg 66

Fr Pg 67

Fr Pg 68

Fr Pg 69

Fr Pg 70

Fr Pg 71

Fr Pg 72

Fr Pg 73

Fr Pg 74

Fr Pg 75

Fr Pg 76

Fr Pg 77

Fr Pg 78

Fr Pg 79

Fr Pg 80

Fr Pg 81

Fr Pg 82

Fr Pg 83

Fr Pg 84

Fr Pg 85

Fr Pg 86

Fr Pg 87

Fr Pg 88

Fr Pg 89

Fr Pg 90

Fr Pg 91

Fr Pg 92

Fr Pg 93

Fr Pg 94

Fr Pg 95

Fr Pg 96

Fr Pg 97

Fr Pg 98

Fr Pg 99

Fr Pg 100

Fr Pg 101

Fr Pg 102

Fr Pg 103

Fr Pg 104

Fr Pg 105

Fr Pg 106

Fr Pg 107

Fr Pg 108

Fr Pg 109

Fr Pg 110

Fr Pg 111

Fr Pg 112

Fr Pg 113

Fr Pg 114

Fr Pg 115

Fr Pg 116

Fr Pg 117

Fr Pg 118

Fr Pg 119

Fr Pg 120

Fr Pg 121

Fr Pg 122

Fr Pg 123

Fr Pg 124

Fr Pg 125

Fr Pg 126

Fr Pg 127

Fr Pg 128

Fr Pg 129

Fr Pg 130

Fr Pg 131

Fr Pg 132

Fr Pg 133

Fr Pg 134

Fr Pg 135

Fr Pg 136

Fr Pg 137

Fr Pg 138

Fr Pg 139

Fr Pg 140

Fr Pg 141

Fr Pg 142

Fr Pg 143

Fr Pg 144

Fr Pg 145

Fr Pg 146

Fr Pg 147

Fr Pg 148

Fr Pg 149

Fr Pg 150

Fr Pg 151

Fr Pg 152

Fr Pg 153

Fr Pg 154

Fr Pg 155

Fr Pg 156

Fr Pg 157

Fr Pg 158

Fr Pg 159

Fr Pg 160

Fr Pg 161

Fr Pg 162

Fr Pg 163

Fr Pg 164

Fr Pg 165

Fr Pg 166

Fr Pg 167

Fr Pg 168

Fr Pg 169

Fr Pg 170

Fr Pg 171

Fr Pg 172

Fr Pg 173

Fr Pg 174

Fr Pg 175

Fr Pg 176

Fr Pg 177

Fr Pg 178

Fr Pg 179

Fr Pg 180

Fr Pg 181

Fr Pg 182

Fr Pg 183

Fr Pg 184

Fr Pg 185

Fr Pg 186

Fr Pg 187

Fr Pg 188

Fr Pg 189

Fr Pg 190

Fr Pg 191

Fr Pg 192

Fr Pg 193

Fr Pg 194

Fr Pg 195

Fr Pg 196

Fr Pg 197

Fr Pg 198

Fr Pg 199

Fr Pg 200

Fr Pg 201

Fr Pg 202

Fr Pg 203

Fr Pg 204

Fr Pg 205

Fr Pg 206

Fr Pg 207

Fr Pg 208

Fr Pg 209

Fr Pg 210

Fr Pg 211

Fr Pg 212

Fr Pg 213

Fr Pg 214

Fr Pg 215

Fr Pg 216

Fr Pg 217

Fr Pg 218

Fr Pg 219

Fr Pg 220

Fr Pg 221

Fr Pg 222

Fr Pg 223

Fr Pg 224

Fr Pg 225

Fr Pg 226

Fr Pg 227

Fr Pg 228

Fr Pg 229

Fr Pg 230

Fr Pg 231

Fr Pg 232

Fr Pg 233

Fr Pg 234

Fr Pg 235

Fr Pg 236

Fr Pg 237

Fr Pg 238

Fr Pg 239

Fr Pg 240

Fr Pg 241

Fr Pg 242

Fr Pg 243

Fr Pg 244

Fr Pg 245

Fr Pg 246

Fr Pg 247

Fr Pg 248

Fr Pg 249

Fr Pg 250

Fr Pg 251

Fr Pg 252

Fr Pg 253

Fr Pg 254

Fr Pg 255

Fr Pg 256

Fr Pg 257

Fr Pg 258

Fr Pg 259

Fr Pg 260

Fr Pg 261

Fr Pg 262

Fr Pg 263

Fr Pg 264

Fr Pg 265

Fr Pg 266

Fr Pg 267

Fr Pg 268

Fr Pg 269

Fr Pg 270

Fr Pg 271

Fr Pg 272

Fr Pg 273

Fr Pg 274

Fr Pg 275

Fr Pg 276

Fr Pg 277

Fr Pg 278

Fr Pg 279

Fr Pg 280

Fr Pg 281

Fr Pg 282

Fr Pg 283

Fr Pg 284

Fr Pg 285

Fr Pg 286

Fr Pg 287

Fr Pg 288

Fr Pg 289

Fr Pg 290

Fr Pg 291

Fr Pg 292

Fr Pg 293

Fr Pg 294

Fr Pg 295

Fr Pg 296

Fr Pg 297

Fr Pg 298

Fr Pg 299

Fr Pg 300

Fr Pg 301

Fr Pg 302

Fr Pg 303

Fr Pg 304

Fr Pg 305

Fr Pg 306

Fr Pg 307

Fr Pg 308

Fr Pg 309

Fr Pg 310

Fr Pg 311

Fr Pg 312

Fr Pg 313

Fr Pg 314

Fr Pg 315

Fr Pg 316

Fr Pg 317

Fr Pg 318

Fr Pg 319

Fr Pg 320

Fr Pg 321

Fr Pg 322

Fr Pg 323

Fr Pg 324

Fr Pg 325

Fr Pg 326

Fr Pg 327

Fr Pg 328

Fr Pg 329

Fr Pg 330

Fr Pg 331

Fr Pg 332

Fr Pg 333

Fr Pg 334

Fr Pg 335

Fr Pg 336

Fr Pg 337

Fr Pg 338

Fr Pg 339

Fr Pg 340

Fr Pg 341

Fr Pg 342

Fr Pg 343

Fr Pg 344

Fr Pg 345

Fr Pg 346

Fr Pg 347

Fr Pg 348

Fr Pg 349

Fr Pg 350

Fr Pg 351

Fr Pg 352

Fr Pg 353

Fr Pg 354

Fr Pg 355

Fr Pg 356

Fr Pg 357

Fr Pg 358

Fr Pg 359

Fr Pg 360

Fr Pg 361

Fr Pg 362

Fr Pg 363

Fr Pg 364

Fr Pg 365

Fr Pg 366

Fr Pg 367

Fr Pg 368

Fr Pg 369

Fr Pg 370

Fr Pg 371

Fr Pg 372

Fr Pg 373

Fr Pg 374

Fr Pg 375

Fr Pg 376

Fr Pg 377

Fr Pg 378

Fr Pg 379

Fr Pg 380

Fr Pg 381

Fr Pg 382

Fr Pg 383

Fr Pg 384

Fr Pg 385

Fr Pg 386

Fr Pg 387

Fr Pg 388

Fr Pg 389

Fr Pg 390

Fr Pg 391

Fr Pg 392

Fr Pg 393

Fr Pg 394

Fr Pg 395

Fr Pg 396

Fr Pg 397

Fr Pg 398

Fr Pg 399

Fr Pg 400

Fr Pg 401

Fr Pg 402

Fr Pg 403

Fr Pg 404

Fr Pg 405

Fr Pg 406

Fr Pg 407

Fr Pg 408

Fr Pg 409

Fr Pg 410

Fr Pg 411

Fr Pg 412

Fr Pg 413

Fr Pg 414

Fr Pg 415

Fr Pg 416

Fr Pg 417

Fr Pg 418

Fr Pg 419

Fr Pg 420

Fr Pg 421

Fr Pg 422

Fr Pg 423

Fr Pg 424

Fr Pg 425

Fr Pg 426

Fr Pg 427

Fr Pg 428

Fr Pg 429

Fr Pg 430

Fr Pg 431

Fr Pg 432

Fr Pg 433

Fr Pg 434

Fr Pg 435

Fr Pg 436

Fr Pg 437

Fr Pg 438

Fr Pg 439

Fr Pg 440

Fr Pg 441

Fr Pg 442

Fr Pg 443

Fr Pg 444

Fr Pg 445

Fr Pg 446

Fr Pg 447

Fr Pg 448

Fr Pg 449

Fr Pg 450

Fr Pg 451

Fr Pg 452

Fr Pg 453

Fr Pg 454

Fr Pg 455

Fr Pg 456

Fr Pg 457

Fr Pg 458

Fr Pg 459

Fr Pg 460

Fr Pg 461

Fr Pg 462

Fr Pg 463

Fr Pg 464

Fr Pg 465

Fr Pg 466

Fr Pg 467

Fr Pg 468

Fr Pg 469

Fr Pg 470

Fr Pg 471

Fr Pg 472

Fr Pg 473

Fr Pg 474

Fr Pg 475

Fr Pg 476

Fr Pg 477

Fr Pg 478

Fr Pg 479

Fr Pg 480

Fr Pg 481

Fr Pg 482

Fr Pg 483

Fr Pg 484

Fr Pg 485

Fr Pg 486

Fr Pg 487

Fr Pg 488

Fr Pg 489

Fr Pg 490

Fr Pg 491

Fr Pg 492

Fr Pg 493

Fr Pg 494

Fr Pg 495

Fr Pg 496

Fr Pg 497

Fr Pg 498

Fr Pg 499

Fr Pg 500

Fr Pg 501

Fr Pg 502

Fr Pg 503

Fr Pg 504

Fr Pg 505

Fr Pg 506

Fr Pg 507

Fr Pg 508

Fr Pg 509

Fr Pg 510

Fr Pg 511

Fr Pg 512

Fr Pg 513

Fr Pg 514

Fr Pg 515

Fr Pg 516

Fr Pg 517

Fr Pg 518

Fr Pg 519

Fr Pg 520

Fr Pg 521

Fr Pg 522

Fr Pg 523

Fr Pg 524

Fr Pg 525

Fr Pg 526

Fr Pg 527

Fr Pg 528

Fr Pg 529

Fr Pg 530

Fr Pg 531

Fr Pg 532

Fr Pg 533

Fr Pg 534

Fr Pg 535

Fr Pg 536

Fr Pg 537

Fr Pg 538

Fr Pg 539

Fr Pg 540

Fr Pg 541

Fr Pg 542

Fr Pg 543

Fr Pg 544

Fr Pg 545

Fr Pg 546

Fr Pg 547

Fr Pg 548

Fr Pg 549

Fr Pg 550

Fr Pg 551

Fr Pg 552

Fr Pg 553

Fr Pg 554

Fr Pg 555

Fr Pg 556

Fr Pg 557

Fr Pg 558

Fr Pg 559

Fr Pg 560

Fr Pg 561

Fr Pg 562

Fr Pg 563

Fr Pg 564

Fr Pg 565

Fr Pg 566

Fr Pg 567

Fr Pg 568

Fr Pg 569

Fr Pg 570

Fr Pg 571

Fr Pg 572

Fr Pg 573

Fr Pg 574

Fr Pg 575

Fr Pg 576

Fr Pg 577

Fr Pg 578

Fr Pg 579

Fr Pg 580

Fr Pg 581

Fr Pg 582

Fr Pg 583

Fr Pg 584

Fr Pg 585

Fr Pg 586

Fr Pg 587

Fr Pg 588

Fr Pg 589

Fr Pg 590

Fr Pg 591

Fr Pg 592

Fr Pg 593

Fr Pg 594

Fr Pg 595

Fr Pg 596

Fr Pg 597

Fr Pg 598

Fr Pg 599

Fr Pg 600

Fr Pg 601

Fr Pg 602

Fr Pg 603

Fr Pg 604

Fr Pg 605

Fr Pg 606

Fr Pg 607

Fr Pg 608

Fr Pg 609

Fr Pg 610

Fr Pg 611

Fr Pg 612

Fr Pg 613

Fr Pg 614

Fr Pg 615

Fr Pg 616

Fr Pg 617

Fr Pg 618

Fr Pg 619

Fr Pg 620

Fr Pg 621

Fr Pg 622

Fr Pg 623

Fr Pg 624

Fr Pg 625

Fr Pg 626

Fr Pg 627

Fr Pg 628

Fr Pg 629

Fr Pg 630

Fr Pg 631

Fr Pg 632

Fr Pg 633

Fr Pg 634

Fr Pg 635

Fr Pg 636

Fr Pg 637

Fr Pg 638

Fr Pg 639

Fr Pg 640

Fr Pg 641

Fr Pg 642

Fr Pg 643

Fr Pg 644

Fr Pg 645

Fr Pg 646

Fr Pg 647

Fr Pg 648

Fr Pg 649

Fr Pg 650

Fr Pg 651

Fr Pg 652

Fr Pg 653

Fr Pg 654

Fr Pg 655

Fr Pg 656

Fr Pg 657

Fr Pg 658

Fr Pg 659

Fr Pg 660

Fr Pg 661

Fr Pg 662

Fr Pg 663

Fr Pg 664

Fr Pg 665

Fr Pg 666

Fr Pg 667

Fr Pg 668

Fr Pg 669

Fr Pg 670

Fr Pg 671

Fr Pg 672

Fr Pg 673

Fr Pg 674

Fr Pg 675

Fr Pg 676

Fr Pg 677

Fr Pg 678

Fr Pg 679

Fr Pg 680

Fr Pg 681

Fr Pg 682

Fr Pg 683

Fr Pg 684

Fr Pg 685

Fr Pg 686

Fr Pg 687

Fr Pg 688

Fr Pg 689

Fr Pg 690

Fr Pg 691

Fr Pg 692

Fr Pg 693

Fr Pg 694

Fr Pg 695

Fr Pg 696

Fr Pg 697

Fr Pg 698

Fr Pg 699

Fr Pg 700

Fr Pg 701

Fr Pg 702

Fr Pg 703

Fr Pg 704

Fr Pg 705

Fr Pg 706

Fr Pg 707

Fr Pg 708

Fr Pg 709

Fr Pg 710

Fr Pg 711

Fr Pg 712

Fr Pg 713

Fr Pg 714

Fr Pg 715

Fr Pg 716

Fr Pg 717

Fr Pg 718

Fr Pg 719

Fr Pg 720

Fr Pg 721

Fr Pg 722

Fr Pg 723

Fr Pg 724

Fr Pg 725

Fr Pg 726

Fr Pg 727

Fr Pg 728

Fr Pg 729

Fr Pg 730

Fr Pg 731

Fr Pg 732

Fr Pg 733

Fr Pg 734

Fr Pg 735

Fr Pg 736

Fr Pg 737

Fr Pg 738

Fr Pg 739

Fr Pg 740

Fr Pg 741

Fr Pg 742

Fr Pg 743

Fr Pg 744

Fr Pg 745

Fr Pg 746

Fr Pg 747

Fr Pg 748

Fr Pg 749

Fr Pg 750

Fr Pg 751

Fr Pg 752

Fr Pg 753

Fr Pg 754

Fr Pg 755

Fr Pg 756

Fr Pg 757

Fr Pg 758

Fr Pg 759

Fr Pg 760

Fr Pg 761

Fr Pg 762

Fr Pg 763

Fr Pg 764

Fr Pg 765

Fr Pg 766

Fr Pg 767

Fr Pg 768

Fr Pg 769

Fr Pg 770

Fr Pg 771

Fr Pg 772

Fr Pg 773

Fr Pg 774

Fr Pg 775

Fr Pg 776

Fr Pg 777

Fr Pg 778

Fr Pg 779

Fr Pg 780

Fr Pg 781

Fr Pg 782

Fr Pg 783

Fr Pg 784

Fr Pg 785

Fr Pg 786

Fr Pg 787

Fr Pg 788

Fr Pg 789

Fr Pg 790

Fr Pg 791

Fr Pg 792

Fr Pg 793

Fr Pg 794

Fr Pg 795

Fr Pg 796

Fr Pg 797

Fr Pg 798

Fr Pg 799

Fr Pg 800

Fr Pg 801

Fr Pg 802

Fr Pg 803

Fr Pg 804

Fr Pg 805

Fr Pg 806

Fr Pg 807

Fr Pg 808

Fr Pg 809

Fr Pg 810

Fr Pg 811

Fr Pg 812

Fr Pg 813

Fr Pg 814

Fr Pg 815

Fr Pg 816

Fr Pg 817

Fr Pg 818

Fr Pg 819

Fr Pg 820

Fr Pg 821

Fr Pg 822

Fr Pg 823

Fr Pg 824

Fr Pg 825

Fr Pg 826

Fr Pg 827

Fr Pg 828

Fr Pg 829

Fr Pg 830

Fr Pg 831

Fr Pg 832

Fr Pg 833

Fr Pg 834

Fr Pg 835

Fr Pg 836

Fr Pg 837

Fr Pg 838

Fr Pg 839

Fr Pg 840

Fr Pg 841

Fr Pg 842

Fr Pg 843

Fr Pg 844

Fr Pg 845

Fr Pg 846

Fr Pg 847

Fr Pg 848

Fr Pg 849

Fr Pg 850

Fr Pg 851

Fr Pg 852

Fr Pg 853

Fr Pg 854

Fr Pg 855

Fr Pg 856

Fr Pg 857

Fr Pg 858

Fr Pg 859

Fr Pg 860

Fr Pg 861

Fr Pg 862

Fr Pg 863

Fr Pg 864

Fr Pg 865

Fr Pg 866

Fr Pg 867

Fr Pg 868

Fr Pg 869

Fr Pg 870

Fr Pg 871

Fr Pg 872

Fr Pg 873

Fr Pg 874

Fr Pg 875

Fr Pg 876

Fr Pg 877

Fr Pg 878

Fr Pg 879

Fr Pg 880

Fr Pg 881

Fr Pg 882

Fr Pg 883

Fr Pg 884

Fr Pg 885

Fr Pg 886

Fr Pg 887

Fr Pg 888

Fr Pg 889

Fr Pg 890

Fr Pg 891

Fr Pg 892

Fr Pg 893

Fr Pg 894

Fr Pg 895

Fr Pg 896

Fr Pg 897

Fr Pg 898

Fr Pg 899

Fr Pg 900

Fr Pg 901

Fr Pg 902

Fr Pg 903

Fr Pg 904

Fr Pg 905

Fr Pg 906

Fr Pg 907

Fr Pg 908

Fr Pg 909

Fr Pg 910

Fr Pg 911

Fr Pg 912

Fr Pg 913

Fr Pg 914

Fr Pg 915

Fr Pg 916

Fr Pg 917

Fr Pg 918

Fr Pg 919

Fr Pg 920

Fr Pg 921

Fr Pg 922

Fr Pg 923

Fr Pg 924

Fr Pg 925

Fr Pg 926

Fr Pg 927

Fr Pg 928

Fr Pg 929

Fr Pg 930

Fr Pg 931

Fr Pg 932

Fr Pg 933

Fr Pg 934

Fr Pg 935

Fr Pg 936

Fr Pg 937

Fr Pg 938

Fr Pg 939

Fr Pg 940

Fr Pg 941

Fr Pg 942

Fr Pg 943

Fr Pg 944

Fr Pg 945

Fr Pg 946

Fr Pg 947

Fr Pg 948

Fr Pg 949

Fr Pg 950

Fr Pg 951

Fr Pg 952

Fr Pg 953

Fr Pg 954

Fr Pg 955

Fr Pg 956

Fr Pg 957

Fr Pg 958

Fr Pg 959

Fr Pg 960

Fr Pg 961

Fr Pg 962

Fr Pg 963

Fr Pg 964

Fr Pg 965

Fr Pg 966

Fr Pg 967

Fr Pg 968

Fr Pg 969

Fr Pg 970

Fr Pg 971

Fr Pg 972

Fr Pg 973

Fr Pg 974

Fr Pg 975

Fr Pg 976

Fr Pg 977

Fr Pg 978

Fr Pg 979

Fr Pg 980

Fr Pg 981

Fr Pg 982

Fr Pg 983

Fr Pg 984

Fr Pg 985

Fr Pg 986

Fr Pg 987

Fr Pg 988

Fr Pg 989

Fr Pg 990

Fr Pg 991

Fr Pg 992

Fr Pg 993

Fr Pg 994

Fr Pg 995

Fr Pg 996

Fr Pg 997

Fr Pg 998

Fr Pg 999

Fr Pg 1000

Fr Pg 1001

Fr Pg 1002

Fr Pg 1003

Fr Pg 1004

Fr Pg 1005

Fr Pg 1006

Fr Pg 1007

Fr Pg 1008

Fr Pg 1009

Fr Pg 1010

Fr Pg 1011

Fr Pg 1012

Fr Pg 1013

Fr Pg 1014

Fr Pg 1015

Fr Pg 1016

Fr Pg 1017

Fr Pg 1018

Fr Pg 1019

Fr Pg 1020

Fr Pg 1021

Fr Pg 1022

Fr Pg 1023

Fr Pg 1024

Fr Pg 1025

Fr Pg 1026

Fr Pg 1027

Fr Pg 1028

Fr Pg 1029

Fr Pg 1030

Fr Pg 1031

Fr Pg 1032

Fr Pg 1033

Fr Pg 1034

Fr Pg 1035

Fr Pg 1036

Fr Pg 1037

Fr Pg 1038

Fr Pg 1039

Fr Pg 1040

Fr Pg 1041

Fr Pg 1042

Fr Pg 1043

Fr Pg 1044

Fr Pg 1045

Fr Pg 1046

Fr Pg 1047

Fr Pg 1048

Fr Pg 1049

Fr Pg 1050

Fr Pg 1051

Fr Pg 1052

Fr Pg 1053

Fr Pg 1054

Fr Pg 1055

Fr Pg 1056

Fr Pg 1057

Fr Pg 1058

Fr Pg 1059

Fr Pg 1060

Fr Pg 1061

Fr Pg 1062

Fr Pg 1063

Fr Pg 1064

Fr Pg 1065

Fr Pg 1066

Fr Pg 1067

Fr Pg 1068

Fr Pg 1069

Fr Pg 1070

Fr Pg 1071

Fr Pg 1072

Fr Pg 1073

Fr Pg 1074

Fr Pg 1075

Fr Pg 1076

Fr Pg 1077

Fr Pg 1078

Fr Pg 1079

Fr Pg 1080

Fr Pg 1081

Fr Pg 1082

Fr Pg 1083

Fr Pg 1084

Fr Pg 1085

Fr Pg 1086

Fr Pg 1087

Fr Pg 1088

Fr Pg 1089

Fr Pg 1090

Fr Pg 1091

Fr Pg 1092

Fr Pg 1093

Fr Pg 1094

Fr Pg 1095

Fr Pg 1096

Fr Pg 1097

Fr Pg 1098

Fr Pg 1099

Fr Pg 1100

Fr Pg 1101

Fr Pg 1102

Fr Pg 1103

Fr Pg 1104

A message will be displayed in the lower part of the screen according to the comparison results as follows:

When all data matches: "Check OK"

When inconsistencies continue on the next page: "Continue"

When the current screen is the last page: "Last page"

When inconsistent data is found, the data in the memory will be displayed in the upper row and the data at the node will be displayed in the lower row. “*” indicates that no corresponding data exists.

2. If the comparison results screen extends across more than one page, use the F4 (Pre Pg) and F5 (Nxt Pg) Keys to switch the screen and display the results. The Page Up and Page Down Keys can also be used to switch the screen.
3. After checking the comparison results, press the F10 (End) Key.

5-5-11 Deleting Routing Tables from a Node — D: Delete

“D: Delete” is used to delete the routing tables set at the specified node.



Caution

Once routing tables are removed from a PC, all CPU Bus Units at the node (except SYSMAC BUS/2 Master Units) will be reset. Before deleting the routing tables, always make sure that the equipment will not be affected.

- 1, 2, 3... 1. Select “D: Delete” from the Routing Table Menu. The following window will be displayed to prompt you to specify the node from which routing tables are to be deleted.

2. Specify the target node. Use the Cursor Keys to move the cursor to a desired field, then enter a numeric value with Numeric Keys. (Use Alphanumeric Keys to enter a PC ID.)

Press the Enter Key to register the entered value and move the cursor to the next field.

Item	Meaning
PC ID	Enter the PC ID of the node. Use this field only when a PC ID is to be used. If a PC ID is used, the network address and node address will be automatically input (see page 124).
Network address	Enter the network address of the node. The setting range is between 0 and 127. Network address 0 represents the local network (the address of the network containing the node to which the Controller Link Support Software is connected). (see note) For CS1-series, CVM1, and CV-series PCs with multiple Communications Units, specify the network address explicitly.
Node address	Enter the node address of the node. The setting range is between 0 and 126. Node address 0 represents the local node (the address of the node to which the Controller Link Support Software is connected).

Note For CVM1 or CV-series CPU Units manufactured before April 1996 (lot No.: □□46), always set routing tables. Specify in “Network address” the value (other than 0) specified in the routing tables. Refer to the *Controller Link Units Operation Manual (W309)* for details.

Press the F10 (End) Key to cancel the routing table delete processing.

3. Press the F6 (Execute) Key. A confirmation window for deletion will be displayed.
4. To delete the routing tables, press “Y” and then the Enter Key. The routing tables will be deleted.

To cancel the delete processing, press “N” and then the Enter Key.

5-5-12 Printing Routing Tables — P: Print

“P: Print” is used to print routing tables residing in the computer memory.

Note Select “Printer model” from the System Setup Menu and specify the printer model before using “P: Print.”

Select “P: Print” from the Routing Table Menu. Printing will start.

During printing, “Printing” will be displayed in the window.

When printing is completed, the window will close and the processing will terminate automatically.

The contents of the local network and relay network tables will be printed. The contents of these tables being printed are the same as those displayed on the Local Network Table and Relay Network Table Screens. See 5-5-5 *Creating and Editing Routing Tables* (page 88) for details.

Printing Example

< < <

Routing Table List

> > >

11/06/96

PAGE = 001

[Local Network table]

No.	Loc Netwk	SIOU unit #
1	001	01
2		
3		
4		
5		
6		
7		
8		

No.	Loc Netwk	SIOU unit #
9		
10		
11		
12		
13		
14		
15		
16		

[Relay Network table]

No.	End Netwk	PC ID	Relay Netwk	node
1	003		001	003
2	004		001	007
3	005		001	007
4				
5				
6				
7				
8				
9				
10				

No.	End Netwk	PC ID	Relay Netwk	node
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				


5-6 N: Echoback Test

“N: Echoback test” is used to conduct a communications test (echoback test) between the Controller Link Support Software and the specified node.

An echoback test is conducted by transmitting the specified bytes of data to the specified node and comparing the original data with the data returned from the node (echoback data). If the original data and the returned data are identical, the test will be successful. If they are different, the test will fail.

Note An echoback test can be conducted for any node that supports FINS commands.

- 1, 2, 3...** 1. Select “N: Echoback test” from the Main Menu. The following window will be displayed to prompt you to specify the target node for an echoback test.

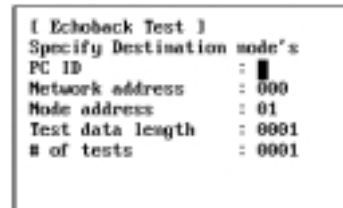

```

( Echoback Test )
Specify Destination node's
PC ID           : 
Network address : 000
Node address    : 01
Test data length : 0001
# of tests      : 0001
  
```

2. Specify the target node and the test conditions to be used. Use the Cursor Keys to move the cursor to the desired field, then enter a numeric value with Numeric Keys. (Use Alphanumeric Keys to enter a PC ID.)

Press the Enter Key to register the entered value and move the cursor to the next field.

Item	Meaning
PC ID	Enter the PC ID of the node. Use this field only when a PC ID is to be used. If a PC ID is used, the network address and node address will be automatically input (see page 124).
Network address	Enter the network address of the node. The setting range is between 0 and 127. Network address 0 represents the local network (the address of the network containing the node to which the Controller Link Support Software is connected). (see note) For CS1-series and CV-series PCs with multiple Communications Units, specify the network address explicitly.
Node address	Enter the node address of the node. The setting range is between 0 and 62. Node address 0 represents the local node (the address of the node to which the Controller Link Support Software is connected).
Test data length	Specify the number of bytes of data to be transmitted for the echoback test. The setting range is as follows: Controller Link Support Boards: 1 to 1,998 bytes Controller Link Units: 1 to 512 bytes
# of tests	Specify the number of echoback tests to be repeated. The setting range is between 1 and 9999. Alternatively, an asterisk (*) can be specified. If * is specified, an echoback test will be repeated until the F9 (Cancel) Key is pressed.

Note For CV-series CPU Units manufactured before April 1996 (lot No.: □□46), always set routing tables. Specify in "Network address" the value (other than 0) specified in the routing tables. Refer to the *Controller Link Units Operation Manual (W309)* for details.

3. Press the F6 (Execute) Key. A confirmation message will be displayed at the bottom of the window to ask you to determine whether the echoback test is to be started.
4. To start the test, press "Y" and then the Enter Key. The echoback test will be started.

To cancel execution of the test, press "N" and then the Enter Key.

The progress of the echoback test will be displayed in the following window. During the test, the values displayed in the "# tests," "# OK," and "Errors" fields will be updated.

```
[Echoback test Results]
<<Destination node>>
PC ID [      ]
Netuk [0001]
Node  [0011]
      # tests[0012/0012]
# OK   [0012] Errors [0000]
```

To cancel the test during execution, press the F9 (Cancel) Key. (The F9 Key is valid only during the echoback test.)

When the specified number of tests are completed, updating of the values in the above fields will stop and the function key display will change.

5. After confirming the test results, press the F9 (End) Key.

5-7 D: Broadcast Test

"D: Broadcast test" is used to broadcast a communications test from the Controller Link Support Software to all the nodes participating in the specified network.

In a broadcast test, the Controller Link Support Software simultaneously transmits the specified bytes of test data to all nodes the specified number of times. After test data has been transmitted, the Controller Link Support Software monitors the number of times the test data has been received by each node and determines the success count for each node. (The contents of each received test data will not be checked.) If the success count differs from the number of tests conducted for a node, the node has communications problems.

- 1, 2, 3... 1. Select "D: Broadcast test" from the Main Menu.

```
[ Broadcast test ]
Network address  : 000
Test data length : 0001
# of tests       : 0001
```

2. Specify the target network and the test conditions to be used. Use the Cursor Keys to move the cursor to the desired field, then enter a numeric value with Numeric Keys.

Press the Enter Key to register the entered value and move the cursor to the next field.

Item	Meaning
Network address	Enter the network address of the node. The setting range is between 0 and 127. Network address 0 represents the local network (the address of the network containing the node to which the Controller Link Support Software is connected). (see note) For CS1-series and CV-series PCs with multiple Communications Units, specify the network address explicitly.
Test data length	Specify the number of bytes of data to be transmitted for the echoback test. The setting range is as follows: Controller Link Support Boards: 1 to 1,998 bytes Controller Link Units: 1 to 512 bytes
# of tests	Specify the number of broadcast tests to be repeated. The setting range is between 1 and 9999.

Note For CV-series CPU Units manufactured before April 1996 (lot No.: □□46), always set routing tables. Specify in "Network address" the value (other than 0) specified in the routing tables. Refer to the *Controller Link Units Operation Manual (W309)* for details.

- Press the F6 (Execute) Key. A confirmation message will be displayed at the bottom of the window to ask you to determine whether a broadcast test is to be started.
- To delete the routing tables, press "Y" and then the Enter Key. The routing tables will be deleted. A broadcast test will be started.

To cancel execution of the test, press "N" and then the Enter Key.

The progress of the broadcast test will be displayed on the following screen. During the test, the value displayed in the "# tests" field will be updated.

To cancel the test during execution, press the F9 (Cancel) Key. (The F9 Key is valid only during a broadcast test.)

When the specified number of tests are completed, the success count will be displayed for each node and the function key display will also change.

Broadcast test

Netwk adrs =[000] # tests=[0020/0020] Data len =[0001]

Node	# OK	Node	# OK	Node	# OK	Node	# OK
1	0020	17		33		49	
2							
3							
4							
5							
6							
7							
8							
9							
10							
11							
12							
13							
14							
15							
16							
17	0000	33		49			
18							
19							
20							
21							
22							
23							
24							
25							
26							
27							
28							
29							
30							
31							
32							
33		49					
34							
35							
36							
37							
38							
39							
40							
41							
42							
43							
44							
45							
46							
47							
48							
49		62					
50							
51							
52							
53							
54							
55							
56							
57							
58							
59							
60							
61							
62							

1M menu 2 3 4 5 6 7 8 9 0 End

The progress of the broadcast test will be displayed in the "# tests" field as follows: Number of times test data was transmitted / Specified number of tests to be repeated.

The number of times the test data was received by each node will be displayed in the “# OK” column. Each node can be checked for communications problems by comparing the value in the “# OK” column with the number of times the test was repeated.

5. After confirming the test results, press the F9 (End) Key.

5-8 C: Monitor Network

“C: Monitor Network” is used to display the status of the specified Controller Link Network on the real-time basis.


The following information will be displayed.

Item	Meaning
Communications cycle time (Comm cycle time)	Displays the latest communications cycle time of the specified network.
Data link activity (DataLink)	Displays the data link operation status of the specified network.
Network participation (In netwk)	Displays the network participation status of each node as follows: YES: Participating in Network No display: Not participating in Network
Data link participation (DtLnk join)	Displays the data link participation status of each node as follows: YES: Participating in data links No display: Not Participating in data links This item is not displayed when the data links are inactive.
PC operating status (PC Run)	Displays the operation mode of each PC as follows: YES: User program is running on the PC No display: User program is not running on the PC This item is not displayed when the data links are inactive. The user program may stop when an error occurs in DATA LINK START or MONITOR mode. In this case, nothing will be displayed. YES is always displayed for the Controller Link Support Board.
PC error status (PC err)	Displays the PC error status of each node as follows: YES: Stopped due to an error No display: Operating normally This item is not displayed when the data links are inactive. Nothing is always displayed for the Controller Link Support Board.
Communications error status (Comm err)	Displays the communications error status of each node as follows: YES: Error or not participating in network No display: Operating normally This item is not displayed when the data links are inactive or the local node is not participating in the data links.

This monitoring is not possible when the PC to which the Controller Link Support Software is connected or the computer on which the Controller Link Support Software is running is not participating in the network.

Note The “Monitor Network” function can be used only for Controller Link Networks. If networks other than Controller Link are specified, network status will not be displayed normally.

- 1, 2, 3... 1. Select "C: Monitor Network" from the Main Menu.



2. Specify the address of the network for which the status is to be displayed. Enter the network address with Numeric Keys, then press the Enter Key.
3. Press the F6 (Execute) Key. The Network Monitor Screen will be displayed.

Network monitor											
Network address[000]			Comm cycle time[6.8]			DataLink[Active]			Polling[31]		
Node	In netwk	DtLnk join	PC Run	PC err	Comm err	Node	In netwk	DtLnk join	PC Run	PC err	Comm err
01	YES	YES				17					YES
02					YES	18					YES
03					YES	19					YES
04					YES	20					YES
05					YES	21					YES
06					YES	22					YES
07					YES	23					YES
08					YES	24					YES
09					YES	25					YES
10					YES	26					YES
11					YES	27					YES
12					YES	28					YES
13					YES	29					YES
14					YES	30					YES
15					YES	31	YES	YES		YES	
16					YES	32					YES
1M menu 2 3 4Pre Pg 5Nxt Pg 6 7 8 9Cancel 0 End											

Network monitor											
Network address[000]			Comm cycle time[6.8]			DataLink[Active]			Polling[31]		
Node	In netwk	DtLnk join	PC Run	PC err	Comm err	Node	In netwk	DtLnk join	PC Run	PC err	Comm err
33						48					
34						49					
35						50					
36						51					
37						52					
38						53					
39						54					
40						55					
41						56					
42						57					
43						58					
44						59					
45						60					
46						61					
47						62					
1M menu 2 3 4Pre Pg 5Nxt Pg 6 7 8 9Cancel 0 End											

Key	Function
F4 Key (Pre Pg) Page Up Key	Displays the previous screen.
F5 Key (Nxt Pg) Page Down Key	Displays the next screen.
F9 (Cancel)	Stops updating the display and changes the F9 Key function to "Start."
F9 (Start)	Restarts updating the display and changes the F9 Key function to "Cancel."

4. To close the screen, press the F10 (End) Key.

5-9 E: Display Error Log

Use "E: Error log" to display, clear, save and print error logs.

“E: Error log” has the following menu.

Menu item	Function	Page
R: Read	Reads and displays the error log recorded at the specified node. Can also be used to clear the error log currently displayed.	106
L: Retrieve	Reads error logs saved in files to computer memory.	108
S: Save	Saves error logs in computer memory as files.	108
P: Print	Prints the error log currently in computer memory.	108

5-9-1 About Error Logs

The Controller Link Unit and the Controller Link Support Board both have an error logging function, which records error types, error details, and the date and time of error occurrence for all errors that occurred during communications. Reading the error log recorded in the Controller Link Unit or Controller Link Support Board allows you to check the errors that occurred in the past and detect network problems.

The Controller Link Support Software displays the error log information in the table below in chronological order. It can also clear the currently displayed error log, or save it as a file, and read and display error log files.

Item	Meaning
Err	Displays an error code that indicates an error type. Refer to the <i>Controller Link Units Operation Manual (W309)</i> or <i>Controller Link Support Boards Operation Manual (W307)</i> for details.
Details	Displays a code that indicates error details. Refer to the <i>Controller Link Units Operation Manual (W309)</i> or <i>Controller Link Support Boards Operation Manual (W307)</i> for details.
Time of error	Displays the date and time the error occurred.


Note Some Units other than the Controller Link Unit and Controller Link Support Board also have an error logging function. Error logs can be displayed for Units that have an error log and support FINS commands using the Controller Link Support Software.

5-9-2 Data Formats for Error Log Files

Error logs can be saved as text files using the Controller Link Support Software. Error log files can be read and edited using standard text editors enabling the data to be used in other applications, such as network maintenance. Details about the data formats for error log files are provided here.

Note The extension for error log files is .CLG.

The structure of error log files is as shown below.

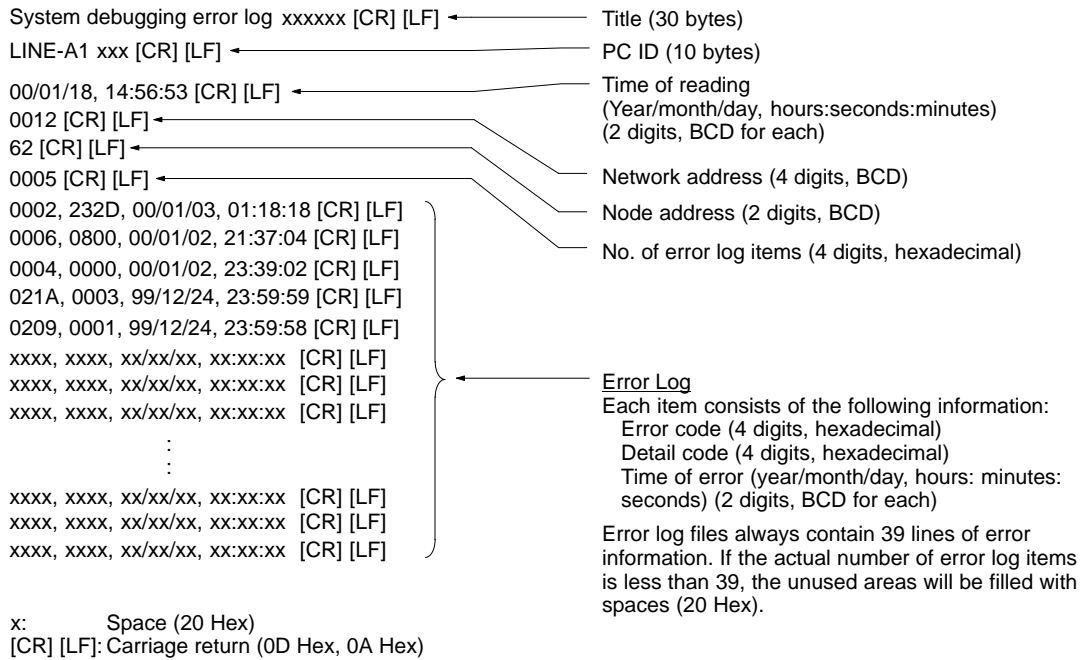


- Unused parts of the title and PC ID lines are filled with spaces.
- The year is indicated by just the last 2 digits.

Files that are not in the above format cannot be displayed correctly. When editing error log files, be sure to keep to this format.

5-9-3 Displaying the Error Log Menu

To read, display, save, load or print error logs, first select the required function from the Error Log Menu. Explanations for each of the functions appear on the following pages. The method for displaying the Error Log Menu is given below.

- 1, 2, 3... 1. Select "E: Display Error log" from the Main Menu. The Error Log Menu will be displayed.

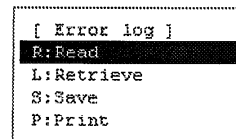


The Error Log Menu can be displayed from the Error Log Screen by pressing the F2 (Submenu) Key.

5-9-4 Reading Error Logs — R: Read

"R: Read" is used to read and display the error log recorded for a specified node. It can also be used to clear the error log currently displayed.

- 1, 2, 3... 1. Select "R: Read" from the Error Log Menu. The following window will be displayed to prompt you to specify the node to be read.

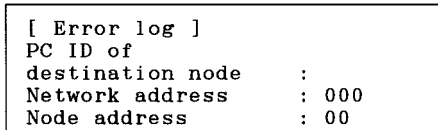

2. Specify the target node. Use the Cursor Keys to move the cursor to the desired field, then enter a numeric value with Numeric Keys. (Use Alphanumeric Keys to enter a PC ID.)

Press the Enter Key to register the entered value and move the cursor to the next field.

Item	Meaning
PC ID (PC ID)	Enter the PC ID of the node. Use this field only when a PC ID is to be used. If a PC ID is used, the network address and node address will be automatically input (see page 124).
Network address (Netwk adrs)	Enter the network address of the node. The setting range is between 0 and 127. Network address 0 represents the local network (the address of the network containing the node to which the Controller Link Support Software is connected). (see note) For CS1-series and CV-series PCs with multiple Communications Units, specify the network address explicitly.
Node address (Node adr)	Enter the node address of the node. The setting range is between 0 and 32. Node address 0 represents the local node (the address of the node to which the Controller Link Support Software is connected).

Note For CV-series CPU Units manufactured before April 1996 (lot No.: □□46), always set routing tables. Specify in "Network address" the value (other than 0) specified in the routing tables. Refer to the *Controller Link Units Operation Manual (W309)* for details.

Press the F10 (End) Key to close the error log window.

- Press the F6 (Execute) Key. The error log will be read from the specified node and displayed on the Error Log Screen.

Error log

PC ID=[] Netwk adrs =[000] Node adr =[031] 23/10/1999 13:03:09

Err	Details	Time of error	Err	Details	Time of error
000D	FFFF	00/00/2000 00:00:00			
0207	2001	23/10/1999 10:02:52			
0208	011F	23/10/1999 10:02:53			
0206	2001	23/10/1999 10:02:53			
0207	2001	23/10/1999 10:02:53			
0206	2001	23/10/1999 10:02:56			
0207	2001	23/10/1999 10:02:56			
0206	2001	23/10/1999 10:02:57			
0207	2001	23/10/1999 10:02:57			
0206	2001	23/10/1999 10:02:59			
0207	2001	23/10/1999 10:02:59			

1M menu 2S menu 3 4Pre Pg 5Nxt Pg 6 7 Clear 8 9 0 End

- To clear the error log, press the F7 (Clear) Key. A confirmation message will be displayed at the bottom of the screen to ask you to determine whether the error log is to be cleared.

To clear the error log, press "Y" and then the Enter Key. Both the error log at the node and the error log displayed on the screen will be cleared.

To cancel the processing, press "N" and then the Enter Key.

The screen can be switched by pressing the F4 (Pre Pg), F5 (Nxt Pg), Page Up, or Page Down Key.

- To close the screen, press the F10 (End) Key.

5-9-5 Reading Error Logs from a File — L: Retrieve

“L: Retrieve” is used to read error logs from files.

Note When error logs are read, the error log data currently in computer memory will be lost.

- 1, 2, 3... 1. Select “L: Retrieve” from the Error Log Menu. The following window will be displayed to prompt you to specify the file to be read.

```
[ Retrieve Error Log      ]
Input file name to retrieve.
C:Y
```

2. Specify the file name (including the directory) of the file to be read. Enter the file name with Alphanumeric Keys, then press the Enter Key.

When this window appears, the data directory specified in the System Setup will be displayed as the destination. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

You can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen.

Press the Enter Key to read the file.

5-9-6 Saving Error Logs as a File — S: Save

“S: Save” is used to save error logs as a file.

- Note**
- 1) Unless saved, all error log data will be lost when the Controller Link Support Software is exited.
 - 2) The error log data saved with this operation is already in the computer memory. To save error logs recorded at actual nodes, first read the error log to the computer memory using “R: Read” from the Error Log Menu.

- 1, 2, 3... 1. Select “S: Save” from the Error Log Menu.

```
[ Save Error Log      ]
Input file name to save.
C:Y
```

2. Specify the file name (including the directory) of the file to be saved. Enter the file name with Alphanumeric Keys, then press the Enter Key.

The extension of the file name to be saved must be .CLG. If the extension is omitted, .CLG will be automatically assigned as an extension.

When this window appears, the data directory specified in the System Setup will be displayed as the destination. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

You can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen.

If an existing file name is specified, a confirmation message will be displayed asking you to specify whether the file is to be overwritten. Press “Y” to overwrite the file or press “N” to cancel the save processing, then press the Enter Key.

3. Enter a title for the file. Enter the title with Alphanumeric Keys. Up to 30 characters can be entered as the title. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

Press the Enter Key to save. (If no title is required, just press the Enter Key without entering a title.)

5-9-7 Printing Error Logs — P: Print

“P: Print” is used to print the error log currently in computer memory.

Note For the Controller Link Support Software for DOS, select "Printer model" from the System Setup Menu and specify the printer model before using "P: Print."

- 1, 2, 3...** 1. Select "P: Print" from the Error Log Menu. The error log will be printed and the print status window will be displayed.

During printing, "Printing" will be displayed in the window.

To cancel the printing, press the F9 (Cancel) Key. When printing for the error log has been completed, the print status display window will close and the processing will automatically terminate.

The contents of the error log being printed are the same as those displayed on the Error Log Screen.

```
<<<          Controller Link Error Log List          >>>          01/05/2000    PAGE = 0001
PC ID=[      ] Netwk addr =[063] Node addr=[009] 01/05/2000 09:13:42
```

Err	Details	Time of error
021D	F200	14/12/2000 08:46:45
021D	F200	14/12/2000 10:46:51
021D	AC72	14/12/2000 10:46:56
021D	F200	14/12/2000 10:51:59
021D	F200	14/12/2000 11:30:16
021D	BA41	14/12/2000 11:35:51
021D	BE41	14/12/2000 12:04:39
021D	BE41	14/12/2000 16:10:17
021D	BD7E	14/12/2000 16:14:02
021D	ED72	14/12/2000 16:45:30
021D	ED00	15/12/2000 08:51:12
021D	BD7E	15/12/2000 09:06:19
021D	9557	15/12/2000 12:55:01
021D	9459	15/12/2000 12:55:24
021D	9557	15/12/2000 12:55:29
021D	8344	15/12/2000 12:56:25
021D	8243	15/12/2000 12:57:50
021D	8142	15/12/2000 12:58:13
021D	BE42	15/12/2000 12:58:20
021D	AC6D	15/12/2000 15:19:43
021D	BE41	16/12/2000 13:11:00
021D	BE41	16/12/2000 14:56:17
021D	B941	16/12/2000 14:56:22
021D	BE41	16/12/2000 14:56:32
021D	B277	17/12/2000 03:51:42
021D	B27B	17/12/2000 03:51:58
021D	B073	17/12/2000 11:04:11

5-10 S: Display Node Status

"S: Display Node status" is used to display the operation status and error status of the Controller Link Unit or Controller Link Support Board for the specified node.

The following information is displayed.

Item	Meaning
Data link (DataLnk)	Displays the data link operation status.
Error message (Error msg)	Displays the setting error status. Error: o No error:—
Communications controller error (Com controller err)	Displays the error status of the communications controller of the Controller Link Unit or Controller Link Support Board. Error: o No error:—
Backup status	Displays the error information recorded in the Controller Link Unit or Controller Link Support Board. Error: o No error:—
Logging status	Displays the presence or absence of the error log in the Controller Link Unit or Controller Link Support Board. Error log exists: Y No error log exists: N
Setting information (see note 1)	Displays the terminating resistor setting status, baud rate setting status, and external power supply status of the Controller Link Unit or Controller Link Support Board. Terminating resistor switch (for CS1W-CLK21-E only) ON (with terminating resistor): ON OFF (without terminating resistor): OFF Baud rate (bps) (for CS1W-CLK21-E only) 2 Mbps: 2M 1 Mbps: 1M 500 kbps: 500K Power supply status (for optical type only) Power is supplied: Y Power is not supplied: N

Note 1) Setting information is displayed only when the status of the following nodes is read.

- Controller Link Unit for CS1-series PCs: CS1W-CLK21 (wired)
- Controller Link Unit for CS1-series PCs: CS1W-CLK11 (optical)
- Controller Link Unit for CS1-series PCs: CS1W-CLK12 (optical ring)
- Controller Link Support Board for IBM PC/AT or compatible computers: 3G8F5-CLK11-E (optical)

2) The “Display Node status” function can be used only for the Controller Link Network. If networks other than Controller Link are specified, the node status will not be displayed normally.

1, 2, 3... 1. Select “S: Display Node status” from the Main Menu.



2. Specify the target node. Use the Cursor Keys to move the cursor to the desired field, then enter a numeric value with Numeric Keys. (Use Alphanumeric Keys to enter a PC ID.)

Press the Enter Key to register the entered value and move the cursor to the next field.

Item	Meaning
PC ID	Enter the PC ID of the node. Use this field only when a PC ID is to be used. If a PC ID is used, the network address and node address will be automatically input (see page 124).
Network address	Enter the network address of the node. The setting range is between 0 and 127. Network address 0 represents the local network (the address of the network containing the node to which the Controller Link Support Software is connected). (see note) For CS1-series and CV-series PCs with multiple Communications Units, specify the network address explicitly.
Node address	Enter the node address of the node. The setting range is between 0 and 62. Node address 0 represents the local node (the address of the node to which the Controller Link Support Software is connected).

Note For CV-series CPU Units manufactured before April 1996 (lot No.: □□46), always set routing tables. Specify in "Network address" the value (other than 0) specified in the routing tables. Refer to the *Controller Link Units Operation Manual (W309)* for details.

Press the F10 (End) Key to close the Node Status window.

3. Press the F6 (Execute) Key. The node status of the specified node will be read and displayed on the Node Status Screen.

Wired System

Node status

PC ID=[] Netwk =[000] Node=[031] DataLnk[Active] o:err , -:OK

Error msg		Com controller err		Backup status	
Node adrs set err	-	Hardware err	-	Network param err	-
Dup Node adrs err	-	Tx err	-	DataLink table err	-
Net param mismatch	-			Routing table err	-
PC model err	-			EEP-ROM err	-
				System setting err	-
Logging status		Setting Information			
Current error log	Y	Max node address	32		

Model : C200HW-CLK21 Version : Vi.00 Vi.00
 1M menu 2 3 4 5 6 7 8 9 0 End

Optical System

Node status

PC ID=[] Netwk =[000] Node=[001] DataLnk[Active] o:err , -:OK

Error msg		Com controller err		Backup status	
Node adrs set err	-	Hardware err	-	Network param err	-
Dup Node adrs err	-	Tx err	-	DataLink table err	-
Net param mismatch	-			Routing table err	-
PC model err	-			EEP-ROM err	-
				System setting err	-
Logging status		Setting Information			
Current error log	No	Pwr stat	No		
		Max node address	82		
		Connection mode	Ring		

Model : CVM1-CLK21 Version : Vi.00 Vi.00
 1M menu 2 3 4 5 6 7 8 9 0 End

4. To close the screen, press the F10 (End) Key.

5-11 M: Maintenance

“M: Maintenance” is used to back up the contents of EEPROM in the Controller Link Unit or Controller Link Support Board and initialize the network parameters. Use this function for system maintenance, such as replacing faulty Units or Boards.

“M: Maintenance” has the following menu.


Menu item	Function	Page
U: Unit Backup	Reads the contents of the EEPROM in the Controller Link Unit for SYSMAC C200HX/HG/HE PCs and saves it as a file or writes the contents of a file to the EEPROM in the Unit.	113
C: Initialize Network parameters	Initializes the network parameters used to specify Controller Link Network operation. Use this item when the Controller Link Network fails to start.	114

Note When replacing the Controller Link Unit or Controller Link Support Board, always refer to the *Controller Link Units Operation Manual (W309)* or *Controller Link Support Boards Operation Manual (W307)*. After replacing the Unit or Board, write the data to the EEPROM with the communications cable disconnected. If the power is turned on or the Controller Link Support Software is started with the communications cable connected, the Unit or Board may fail to operate normally.

5-11-1 Displaying the Maintenance Menu

To use a maintenance function, select the corresponding item from the Maintenance Menu. Each function is described on the following pages. The Maintenance Menu can be displayed as follows:

Select "M: Maintenance" from the Main Menu. The Maintenance Menu will be displayed.



5-11-2 Backing Up Unit EEPROM — U: Unit Backup


"U: Unit Backup" is used to read the contents of the EEPROM in C200HX/HG/HE Controller Link Units and save it as a file or write the contents of a file back to the EEPROM. Since EEPROM contains all settings other than the hardware switch settings, always save the contents of the EEPROM in the Controller Link Unit before replacing the Unit and then write the data to a new Unit. This will save you the trouble of setting up the new Unit.

Note This function can be used only when the Controller Link Support Software is directly connected to a C200HX/HG/HE PC (or connected via modems). It is not required for CS1-series or CV-series PCs because the Controller Link Unit settings are also stored in the SRAM (for CS1-series PCs) or EEPROM (for CV-series PCs) in the PC.

Saving EEPROM — S: Unit → Computer

Use the following procedure to write the contents of EEPROM from the Unit to a file on the computer.

- 1, 2, 3... 1. Select "U: Unit Backup" from the Maintenance Menu. If a CV-series or CS1-series PC is set as the destination PC in the System Setup, "Wrong PC" will be displayed.
The Backup Unit Menu will be displayed.



2. Select "S: Unit → Computer" from the menu.



3. Specify the file name (including the directory) of the file in which the contents of the EEPROM are to be saved. Enter the file name with Alphanumeric Keys, then press the Enter Key.

The extension of the file name to be saved must be .CLU. If the extension is omitted, .CLU will be automatically assigned as an extension.

When this window appears, the data directory specified in the System Setup will be displayed as the destination. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

You can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen.

Press the Enter Key to save the file.


If an existing file name is specified, a confirmation message will be displayed to ask you to determine whether the file is to be overwritten. Press "Y"

to overwrite the file or press “N” to cancel the save processing, then press the Enter Key.

Writing EEPROM — L: Computer → Unit

Use the following procedure to write the contents of a file on the computer to the EEPROM in the Unit.

- 1, 2, 3... 1. Select “U: Unit Backup” from the Maintenance Menu. If a CV-series or CS1-series PC is set as the destination PC in the System Setup, “Wrong PC” will be displayed.
The Backup Unit Menu will be displayed.



2. Select “L: Computer → Unit” from the menu.



3. Specify the file name (including the directory) of the file to be written to the EEPROM. Enter the file name with Alphanumeric Keys, then press the Enter Key.
When this window appears, the data directory specified in the System Setup will be displayed as the destination. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.
You can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen.
4. Press the Enter Key to write the EEPROM.

5-11-3 Initializing Network Parameters — C: Initialize Network Parameters

“C: Initialize Network parameters” is used to initialize the network parameters for the Controller Link Unit installed in the PC connected to the Controller Link Support Software or for the Controller Link Support Board installed in the computer on which the Controller Link Support Software is running.

Use this function when the Controller Link Network fails to start.

Execute this function for the Controller Link Units or Controller Link Support Boards that have been set as polling nodes.

Initializing the network parameters returns the settings to the following defaults.


Parameters	Default
Max node address	62 (see note 1)
# of Event-frames per comm cycle	35
# of Polled nodes per comm cycle	4

- Note**
- 1) The default setting for the maximum node address for Controller Link Units other than Optical Ring type Controller Link Units is 32.
 - 2) Even if the network parameters are initialized, the current parameter settings will not be changed during the operation.
 - 3) If the Controller Link Support Software is connected to a C200HX/HG/HE PC, the Unit specified in “PC interface” of the System Setup Menu will be initialized.


- 1, 2, 3... 1. Select “C: Initialize Network parameters” from the Maintenance Menu.
If a CV-series or CS1-series PC is specified as the destination PC in the System Setup, the following window will be displayed to prompt you to specify a

Unit number. Otherwise, a confirmation window for initialization will be displayed immediately.

Enter the desired Unit number with Numeric Keys, then press the Enter Key.



The following confirmation window will be displayed to ask you to confirm whether the network parameters are to be initialized.



2. To initialize the network parameters, press “Y” and then the Enter Key. The network parameters will be initialized.

To cancel the initialization processing, press “N” and then the Enter Key.

5-12 K: Connection Information

Use “K: Connection Information” to display information on node configurations, connection order, and the number of communications errors for the Optical Ring Controller Link Network.

“K: Connection Information” has the following menu.

Item	Function	Page
R: Read	Reads and displays the connection information for the specified node. Can also be used to clear the connection information (disconnection information) currently displayed.	119
L: Retrieve	Reads connection information saved in files to computer memory.	122
S: Save	Saves connection information in computer memory to files.	122
P: Print	Prints connection information currently in computer memory.	123

Note These functions can only be used with Optical Ring Controller Link Networks.

5-12-1 About Connection Information

Connection information is collected from all nodes in a specified Optical Ring Controller Link Network, and includes data about node configurations and the number of errors.

Information Displayed

There are 2 display screens for connection information. The information displayed is different for the 2 screens as shown in the following table.

Screen	Information displayed
Frame Information Screen	<ul style="list-style-type: none"> • Disconnect detection node data • Backup power supply status (for each node) • Time when disconnect data recording commenced (for each node) • Local node disconnect detection status (for each node; "Yes": detected; No display: nothing detected) • Number of frame drop-outs (for each node and connector) • Number of frame breaks detected (for each node and connector) • Number of CRC errors detected (for each node and connector) • Controller Link Unit model (for each node)
Connection Information Screen	<ul style="list-style-type: none"> • Disconnect detection node data • Backup power supply status (for each node) • Time when disconnect data recording commenced (for each node) • Local node disconnect detection status (for each node) • Number of node/network separations (for each node) • Number of network disconnections (for each node) • Number of local node disconnections (for each node) • Maximum number of consecutive disconnect cycles (for each node)

Note For details of the above items, refer to the explanations for the NETWORK DISCONNECT DATA READ command in *Section 6* of the *Optical Ring Controller Link Units Operation Manual (W370)*.

Node Display Order

The node information in the Network Configuration Screens can be displayed in either of the orders given below.

Display order	Description
Node address order	Displays information based on the network participation status recorded in specified nodes in increasing order of node address. Nodes for which the network participation status is to be read are specified while the display order is connection order. For this reason, when this Network Configuration Screen is displayed for the first time after starting up the Controller Link Support Software, only the information for the node to which the Controller Link Support Software is connected will be displayed.
Connection order	Displays information starting with the specified node in order of connection (i.e., going in the direction of the SL2 connector side of the specified node). Pairs of connectors (SL1/SL2) that are connected are indicated by the same color. When this Network Configuration Screen is displayed for the first time after starting up the Controller Link Support Software, the node to which the Controller Link Support Software is connected will be displayed at the top of the screen.

Display Example

Display order	Frame Information Screen	Connection Information Screen																																																																																																																																																																																
Node address order	<div><div><Frame info> Nid# order Netwk addr=[000] Displayed at:08/10/1999 15:46:10 Normal Ring(Logged: Node68:SL1 Node47:SL2)</div><table><thead><tr><th>Node Power</th><th>Start time of measure</th><th>Detect of discon</th><th>Cable discon</th><th>Lost frames</th><th>Broken frames</th><th>CRC errors</th><th>Model</th></tr></thead><tbody><tr><td>01</td><td>08/10/1999</td><td>SL1</td><td>57739</td><td>0</td><td>1177</td><td>CVMI-CLK12</td><td></td></tr><tr><td>No</td><td>14:25:10</td><td>SL2</td><td>63744</td><td>0</td><td>77</td><td></td><td></td></tr><tr><td>02</td><td>08/10/1999</td><td>SL1</td><td>7374</td><td>0</td><td>978</td><td>CVMI-CLK12</td><td></td></tr><tr><td>No</td><td>14:23:10</td><td>SL2</td><td>48885</td><td>0</td><td>81</td><td></td><td></td></tr><tr><td>03</td><td>08/10/1999</td><td>SL1</td><td>23241</td><td>0</td><td>789</td><td>CVMI-CLK12</td><td></td></tr><tr><td>No</td><td>14:17:52</td><td>SL2</td><td>23850</td><td>0</td><td>89</td><td></td><td></td></tr><tr><td>04</td><td>08/10/1999</td><td>SL1</td><td>37505</td><td>0</td><td>820</td><td>CVMI-CLK12</td><td></td></tr><tr><td>No</td><td>14:17:53</td><td>SL2</td><td>18768</td><td>0</td><td>81</td><td></td><td></td></tr><tr><td>05</td><td>08/10/1999</td><td>SL1</td><td>52735</td><td>0</td><td>455</td><td>CVMI-CLK12</td><td></td></tr><tr><td>No</td><td>14:17:53</td><td>SL2</td><td>3007</td><td>0</td><td>81</td><td></td><td></td></tr></tbody></table><div>1M menu 2S menu 3Cn ord4Pre Pg 5Nxt Pg 6Execute7 Clear 8Connect9 0 End</div></div>	Node Power	Start time of measure	Detect of discon	Cable discon	Lost frames	Broken frames	CRC errors	Model	01	08/10/1999	SL1	57739	0	1177	CVMI-CLK12		No	14:25:10	SL2	63744	0	77			02	08/10/1999	SL1	7374	0	978	CVMI-CLK12		No	14:23:10	SL2	48885	0	81			03	08/10/1999	SL1	23241	0	789	CVMI-CLK12		No	14:17:52	SL2	23850	0	89			04	08/10/1999	SL1	37505	0	820	CVMI-CLK12		No	14:17:53	SL2	18768	0	81			05	08/10/1999	SL1	52735	0	455	CVMI-CLK12		No	14:17:53	SL2	3007	0	81			<div><div><Connect info> Nid# order Netwk addr=[000] Displayed at:08/10/1999 15:46:10 Normal Ring(Logged: Node68:SL1 Node47:SL2)</div><table><thead><tr><th>Node Power</th><th>Start time of measure</th><th>Detect of discon</th><th>Cable discon</th><th>Quits network</th><th>Network disconnect</th><th>own node disconnect</th><th>Max cycles in disnet</th></tr></thead><tbody><tr><td>01</td><td>08/10/1999</td><td>SL1</td><td>0</td><td>0</td><td>7</td><td>0</td><td>5588</td></tr><tr><td>No</td><td>14:23:10</td><td>SL2</td><td>0</td><td>0</td><td>7</td><td>0</td><td>5448</td></tr><tr><td>02</td><td>08/10/1999</td><td>SL1</td><td>0</td><td>0</td><td>7</td><td>0</td><td>4905</td></tr><tr><td>No</td><td>14:23:10</td><td>SL2</td><td>0</td><td>0</td><td>7</td><td>0</td><td>4769</td></tr><tr><td>03</td><td>08/10/1999</td><td>SL1</td><td>0</td><td>0</td><td>7</td><td>0</td><td>4905</td></tr><tr><td>No</td><td>14:17:52</td><td>SL2</td><td>0</td><td>0</td><td>7</td><td>0</td><td>4769</td></tr><tr><td>04</td><td>08/10/1999</td><td>SL1</td><td>0</td><td>0</td><td>7</td><td>0</td><td>4769</td></tr><tr><td>No</td><td>14:17:53</td><td>SL2</td><td>0</td><td>0</td><td>7</td><td>0</td><td>4769</td></tr><tr><td>05</td><td>08/10/1999</td><td>SL1</td><td>0</td><td>0</td><td>7</td><td>0</td><td>4905</td></tr><tr><td>No</td><td>14:17:53</td><td>SL2</td><td>0</td><td>0</td><td>7</td><td>0</td><td>4905</td></tr></tbody></table><div>1M menu 2S menu 3Cn ord4Pre Pg 5Nxt Pg 6Execute7 Clear 8 Frame 9 0 End</div></div>	Node Power	Start time of measure	Detect of discon	Cable discon	Quits network	Network disconnect	own node disconnect	Max cycles in disnet	01	08/10/1999	SL1	0	0	7	0	5588	No	14:23:10	SL2	0	0	7	0	5448	02	08/10/1999	SL1	0	0	7	0	4905	No	14:23:10	SL2	0	0	7	0	4769	03	08/10/1999	SL1	0	0	7	0	4905	No	14:17:52	SL2	0	0	7	0	4769	04	08/10/1999	SL1	0	0	7	0	4769	No	14:17:53	SL2	0	0	7	0	4769	05	08/10/1999	SL1	0	0	7	0	4905	No	14:17:53	SL2	0	0	7	0	4905
Node Power	Start time of measure	Detect of discon	Cable discon	Lost frames	Broken frames	CRC errors	Model																																																																																																																																																																											
01	08/10/1999	SL1	57739	0	1177	CVMI-CLK12																																																																																																																																																																												
No	14:25:10	SL2	63744	0	77																																																																																																																																																																													
02	08/10/1999	SL1	7374	0	978	CVMI-CLK12																																																																																																																																																																												
No	14:23:10	SL2	48885	0	81																																																																																																																																																																													
03	08/10/1999	SL1	23241	0	789	CVMI-CLK12																																																																																																																																																																												
No	14:17:52	SL2	23850	0	89																																																																																																																																																																													
04	08/10/1999	SL1	37505	0	820	CVMI-CLK12																																																																																																																																																																												
No	14:17:53	SL2	18768	0	81																																																																																																																																																																													
05	08/10/1999	SL1	52735	0	455	CVMI-CLK12																																																																																																																																																																												
No	14:17:53	SL2	3007	0	81																																																																																																																																																																													
Node Power	Start time of measure	Detect of discon	Cable discon	Quits network	Network disconnect	own node disconnect	Max cycles in disnet																																																																																																																																																																											
01	08/10/1999	SL1	0	0	7	0	5588																																																																																																																																																																											
No	14:23:10	SL2	0	0	7	0	5448																																																																																																																																																																											
02	08/10/1999	SL1	0	0	7	0	4905																																																																																																																																																																											
No	14:23:10	SL2	0	0	7	0	4769																																																																																																																																																																											
03	08/10/1999	SL1	0	0	7	0	4905																																																																																																																																																																											
No	14:17:52	SL2	0	0	7	0	4769																																																																																																																																																																											
04	08/10/1999	SL1	0	0	7	0	4769																																																																																																																																																																											
No	14:17:53	SL2	0	0	7	0	4769																																																																																																																																																																											
05	08/10/1999	SL1	0	0	7	0	4905																																																																																																																																																																											
No	14:17:53	SL2	0	0	7	0	4905																																																																																																																																																																											
Connection order	<div><div><Frame info> Head Nid#(01) Netwk addr=[000] Displayed at:08/10/1999 15:46:10 Normal Ring(Logged: Node68:SL1 Node47:SL2) Recorded at:08/10/1999 15:44:10</div><table><thead><tr><th>Node Power</th><th>Start time of measure</th><th>Detect of discon</th><th>Cable discon</th><th>Lost frames</th><th>Broken frames</th><th>CRC errors</th><th>Model</th></tr></thead><tbody><tr><td>01</td><td>08/10/1999</td><td>SL1</td><td>57739</td><td>0</td><td>1177</td><td>CVMI-CLK12</td><td></td></tr><tr><td>No</td><td>14:25:10</td><td>SL2</td><td>63744</td><td>0</td><td>77</td><td></td><td></td></tr><tr><td>51</td><td>01/00/2000</td><td>SL2</td><td>10051</td><td>0</td><td>44</td><td>CS1W-CLK12</td><td></td></tr><tr><td>No</td><td>00:00:00</td><td>SL1</td><td>47599</td><td>0</td><td>8</td><td></td><td></td></tr><tr><td>52</td><td>01/00/2000</td><td>SL2</td><td>7553</td><td>0</td><td>14746</td><td>CS1W-CLK12</td><td></td></tr><tr><td>No</td><td>00:00:00</td><td>SL1</td><td>30020</td><td>0</td><td>30</td><td></td><td></td></tr><tr><td>53</td><td>01/00/2000</td><td>SL2</td><td>58135</td><td>0</td><td>14753</td><td>CS1W-CLK12</td><td></td></tr><tr><td>No</td><td>00:00:00</td><td>SL1</td><td>45835</td><td>0</td><td>30</td><td></td><td></td></tr><tr><td>54</td><td>01/00/2000</td><td>SL2</td><td>42802</td><td>0</td><td>14572</td><td>CS1W-CLK12</td><td></td></tr><tr><td>No</td><td>00:00:00</td><td>SL1</td><td>81232</td><td>0</td><td>31</td><td></td><td></td></tr></tbody></table><div>#Logical Error *Verify Error 1M menu 2S menu 3Nd ord4Pre Pg 5Nxt Pg 6Execute7 Clear 8Connect9 Help 0 End</div></div>	Node Power	Start time of measure	Detect of discon	Cable discon	Lost frames	Broken frames	CRC errors	Model	01	08/10/1999	SL1	57739	0	1177	CVMI-CLK12		No	14:25:10	SL2	63744	0	77			51	01/00/2000	SL2	10051	0	44	CS1W-CLK12		No	00:00:00	SL1	47599	0	8			52	01/00/2000	SL2	7553	0	14746	CS1W-CLK12		No	00:00:00	SL1	30020	0	30			53	01/00/2000	SL2	58135	0	14753	CS1W-CLK12		No	00:00:00	SL1	45835	0	30			54	01/00/2000	SL2	42802	0	14572	CS1W-CLK12		No	00:00:00	SL1	81232	0	31			<div><div><Connect info> Head Nid#(01) Netwk addr=[000] Displayed at:08/10/1999 15:46:10 Normal Ring(Logged: Node68:SL1 Node47:SL2) Recorded at:08/10/1999 15:44:10</div><table><thead><tr><th>Node Power</th><th>Start time of measure</th><th>Detect of discon</th><th>Cable discon</th><th>Quits network</th><th>Network disconnect</th><th>own node disconnect</th><th>Max cycles in disnet</th></tr></thead><tbody><tr><td>01</td><td>08/10/1999</td><td>SL1</td><td>0</td><td>0</td><td>7</td><td>0</td><td>5588</td></tr><tr><td>No</td><td>14:23:10</td><td>SL2</td><td>0</td><td>0</td><td>7</td><td>0</td><td>5448</td></tr><tr><td>51</td><td>01/00/2000</td><td>SL2</td><td>0</td><td>0</td><td>7</td><td>1</td><td>4975</td></tr><tr><td>No</td><td>00:00:00</td><td>SL1</td><td>0</td><td>0</td><td>7</td><td>0</td><td>4988</td></tr><tr><td>52</td><td>01/00/2000</td><td>SL2</td><td>0</td><td>0</td><td>7</td><td>0</td><td>4988</td></tr><tr><td>No</td><td>00:00:00</td><td>SL1</td><td>0</td><td>0</td><td>7</td><td>0</td><td>4988</td></tr><tr><td>53</td><td>01/00/2000</td><td>SL2</td><td>1</td><td>7</td><td>7</td><td>0</td><td>4988</td></tr><tr><td>No</td><td>00:00:00</td><td>SL1</td><td>1</td><td>7</td><td>7</td><td>1</td><td>4988</td></tr><tr><td>54</td><td>01/00/2000</td><td>SL2</td><td>1</td><td>7</td><td>7</td><td>1</td><td>4988</td></tr><tr><td>No</td><td>00:00:00</td><td>SL1</td><td>1</td><td>7</td><td>7</td><td>1</td><td>4988</td></tr></tbody></table><div>#Logical Error *Verify Error 1M menu 2S menu 3Nd ord4Pre Pg 5Nxt Pg 6Execute7 Clear 8 Frame 9 Help 0 End</div></div>	Node Power	Start time of measure	Detect of discon	Cable discon	Quits network	Network disconnect	own node disconnect	Max cycles in disnet	01	08/10/1999	SL1	0	0	7	0	5588	No	14:23:10	SL2	0	0	7	0	5448	51	01/00/2000	SL2	0	0	7	1	4975	No	00:00:00	SL1	0	0	7	0	4988	52	01/00/2000	SL2	0	0	7	0	4988	No	00:00:00	SL1	0	0	7	0	4988	53	01/00/2000	SL2	1	7	7	0	4988	No	00:00:00	SL1	1	7	7	1	4988	54	01/00/2000	SL2	1	7	7	1	4988	No	00:00:00	SL1	1	7	7	1	4988
Node Power	Start time of measure	Detect of discon	Cable discon	Lost frames	Broken frames	CRC errors	Model																																																																																																																																																																											
01	08/10/1999	SL1	57739	0	1177	CVMI-CLK12																																																																																																																																																																												
No	14:25:10	SL2	63744	0	77																																																																																																																																																																													
51	01/00/2000	SL2	10051	0	44	CS1W-CLK12																																																																																																																																																																												
No	00:00:00	SL1	47599	0	8																																																																																																																																																																													
52	01/00/2000	SL2	7553	0	14746	CS1W-CLK12																																																																																																																																																																												
No	00:00:00	SL1	30020	0	30																																																																																																																																																																													
53	01/00/2000	SL2	58135	0	14753	CS1W-CLK12																																																																																																																																																																												
No	00:00:00	SL1	45835	0	30																																																																																																																																																																													
54	01/00/2000	SL2	42802	0	14572	CS1W-CLK12																																																																																																																																																																												
No	00:00:00	SL1	81232	0	31																																																																																																																																																																													
Node Power	Start time of measure	Detect of discon	Cable discon	Quits network	Network disconnect	own node disconnect	Max cycles in disnet																																																																																																																																																																											
01	08/10/1999	SL1	0	0	7	0	5588																																																																																																																																																																											
No	14:23:10	SL2	0	0	7	0	5448																																																																																																																																																																											
51	01/00/2000	SL2	0	0	7	1	4975																																																																																																																																																																											
No	00:00:00	SL1	0	0	7	0	4988																																																																																																																																																																											
52	01/00/2000	SL2	0	0	7	0	4988																																																																																																																																																																											
No	00:00:00	SL1	0	0	7	0	4988																																																																																																																																																																											
53	01/00/2000	SL2	1	7	7	0	4988																																																																																																																																																																											
No	00:00:00	SL1	1	7	7	1	4988																																																																																																																																																																											
54	01/00/2000	SL2	1	7	7	1	4988																																																																																																																																																																											
No	00:00:00	SL1	1	7	7	1	4988																																																																																																																																																																											

Reading and Displaying Information from Nodes

The way in which the information displayed in the Network Configuration Screens is read from the nodes, is given below.

Reading Process

The information is obtained according to the following process.

1, 2, 3...

1. Reading the Connection Mode from the Base Node

This is performed by sending the CONTROLLER DATA READ command. If not in token ring mode, an error will occur, and an error message will be displayed.

The base node is the node that reads the connection mode and network participation status, and checks the integrity of the connection order read from the nodes.

The base node is specified as the "Nd# order" when the nodes are displayed in connection order. When connection information is displayed for the first time, the base node is the node to which the Controller Link Support Software is connected.

2. Reading the Network Participation Status from the Base Node

This is performed by sending the CONTROLLER STATUS READ command. The nodes that are participating in the network are identified from this information, and a Network Participation List is created. When reading information from "all" nodes, reading is, in fact, executed only for nodes that are registered on this list.

3. Reading Information from All Nodes

This is performed by sending the CONNECTION DATA READ, NETWORK DISCONNECT DATA READ, and CONTROLLER DATA READ commands. All the information required for the Network Configuration Screens is read.

Screen Display when Information is not Concurrent

While a node is participating in a Controller Link Network, its network participation status is constantly being updated. If the network is in token ring mode and there is a normal ring connection status, the connection information, along with the time at which it was created, is updated with every communications cycle. If the ring becomes disconnected, the information updated immediately before the disconnection will be maintained. If there is disconnection in only one place, information can still be read in the normal way, but if a node is separated or added during disconnection, the information will not be concurrent.

• Non-participating Nodes

A non-participating node is a node that is not in the Network Participation List, but is in the connection order information for the base node. This kind of node was separated from the network after the connection information for the base node had been created. "Read error" will be displayed in "Start time of measure" for any such node. Information will not be read for any non-participating nodes, and there will be nothing displayed for any of the information items. When a Network Configuration Screen is displayed in connection order, the node will be displayed according to the order recorded in the base node. This situation is caused in token ring mode by a node leaving the network while the line is disconnected.

• Logical Error

A logical error will occur when there is a node that is in the Network Participation List, but not in the connection order information for the base node. This kind of node entered the network after the connection information for the base node has been created. The node address of any node with a logical error will be displayed with a "#" sign attached to it. Because it exists in the Network Participation List, all information is displayed. When a Network Configuration Screen is displayed in connection order, the order of connection is unclear, so the node will be displayed at the end (with no color differentiation for SL1 and SL2). This situation is caused in token ring mode by a node joining the network while the line is disconnected.


• Verify Error

A verify error will occur when there is a node that is in the Network Participation List and in the connection order information for the base node but for which there is a discrepancy in the connection order information. The node address for any node with a verify error will be displayed with an asterisk. All information is displayed, and the information on a Network Configuration Screen will be displayed in the connection order recorded in the base node. SL1 and SL2,

however, will not be highlighted in different colors. This situation is caused by repeated disconnection and reconnection in token ring mode resulting in discrepancies in the connection information collected from the nodes.

Screen Display for Disconnected Nodes

Above the tables in the Network Configuration Screens, the status of disconnections at that time, and the disconnection log (information on detected node disconnections) recorded in the base node are displayed in the following way.

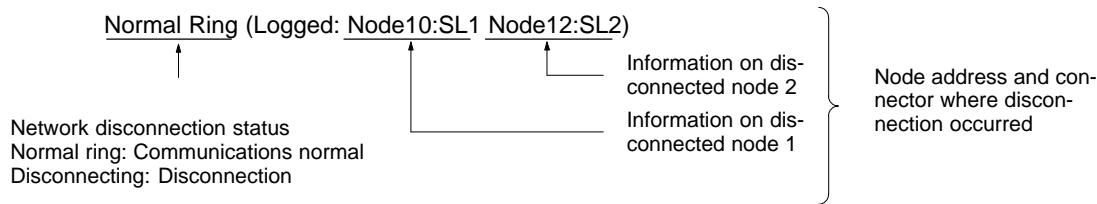


Information on disconnected nodes is not cleared when connection is restored. For this reason, there may be times when a log is displayed even though the network disconnection status indicates normal communications.

Note If there is a disconnection in one place only, the connection information may not be concurrent, but there will be no adverse effect on data communications. In this case, identify the location of the disconnection using the disconnection log, and remove the cause of the disconnection. For details, refer to information on notification and countermeasures for network disconnections in the *Optical Ring Controller Link Units Operation Manual (W370)*.

5-12-2 Displaying the Connection Information Menu (Network Configuration)

To read, display, save, load and print connect information, select the required function from the Connection Information (Network Configuration) Menu and perform the relevant procedure. These procedures are explained over the next few pages. The method for displaying the Connection Information (Network Configuration) Menu is given here.

- 1, 2, 3...
1. Select "K: Connection Information" from the Main Menu. The Connection Information (Network Configuration) Menu will be displayed.

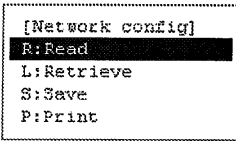


The Connection Information (Network Configuration) Menu can be displayed from a Network Configuration Screen by pressing the F2 (Submenu) Key.

5-12-3 Reading Connection Information — R: Read

"R: Read" is used to read and display the connection information for a specified network.

- 1, 2, 3...
1. Select "R: Read" from the Connection Information (Network Configuration) Menu. The following window will be displayed to prompt you to specify the network to be read.



2. Specify the target network. Enter a numeric value with Numeric Keys.

Item	Meaning
Network address	<p>Enter the network address.</p> <p>The setting range is between 0 and 127.</p> <p>Network address 0 represents the local network (the address of the network containing the node to which the Controller Link Support Software is connected). (see note)</p> <p>For CS1-series and CV-series PCs with multiple Communications Units, specify the network address explicitly.</p>

Note For CV-series CPU Units manufactured before April 1996 (lot No.: □□46), always set routing tables. Specify in "Network address" the value (other than 0) specified in the routing tables. Refer to the *Controller Link Units Operation Manual (W309)* for details.

The Network Configuration Screen can be closed by pressing the F10 (End) Key.

3. Press the F6 (Execute) Key. The connection information will be read from the specified network and displayed on the screen.

Network config

<Frame info> Nd# order Netwk addr=[000] Displayed at:08/10/1999 15:46:10
Normal Ring(Logged; Node58:SL1 Node47:SL2)

Node Power	Start time of measure	Detect discon		Lost frames	Broken frames	CRC errors	Model
01 No	08/10/1999 14:23:10		SL1 SL2	57729 63744	0 0	1177 77	CVM1-CLK12
02 No	08/10/1999 14:23:10		SL1 SL2	7374 48685	0 0	978 81	CVM1-CLK12
03 No	08/10/1999 14:17:52		SL1 SL2	22241 33850	0 0	789 80	CVM1-CLK12
04 No	08/10/1999 14:17:53		SL1 SL2	37505 18766	0 0	620 81	CVM1-CLK12
05 No	08/10/1999 14:17:53		SL1 SL2	52735 3607	0 0	455 81	CVM1-CLK12

1M menu 2S menu 3Cn ordr4Pre Pg 5Nxt Pg 6Execute7 Clear 8Connect9 0 End

While information is being read from a node, the node number is displayed at the bottom of the screen.

Reading of connection information can be stopped by pressing the F10 (End) Key.

If the nodes are displayed in connection order, the first node can be specified by moving the cursor to "Nd# order" at the top of the screen and inputting a node address. (This node will then become the "base node.")

Key	Function
F3 (Nd ordr)	Switches the display to node address order. Once the display has changed to node address order, the display for this key changes to "Cn order."
F3 (Cn ordr)	Switches the display to connection order. Once the display has changed to connection order, the display for this key changes to "Nd ordr."
F4 (Pre Pg)	Displays the previous screen.
F5 (Nxt Pg)	Displays the next screen.
F6 (Execute)	<p>Refreshes the connection information displayed.</p> <p>When the display is in connection order, if this key is pressed after changing the base node, the display will change so that this node is displayed at the top.</p> <p>In other cases, this key can be used to re-execute a command and refresh the display. In this case, if information that is read from the network is not saved, a confirmation message will be displayed. Press "Y" and then the Enter Key to start reading and displaying the information. To cancel the operation, press "N" and then the Enter Key.</p>
F7 (Clear)	Clears all the connection information at a specified node. (Refer to <i>Clearing Connection Information</i> below.)
F8 (Connect)	Switches to the Connection Information Screen. Once the screen has changed, the display for this key changes to "Frame."
F8 (Frame)	Switches to the Frame Information Screen. Once the screen has changed, the display for this key changes to "Connect."
F9 (Help)	Displays a help window for comparison errors and logic errors. Only available when the display is in connection order.
F9 (Cancel)	The display for this key changes to "Cancel" when the F6 (Execute) Key is pressed. Use this key to cancel reading of node information executed by pressing the F6 (Execute) Key. This key can also be used to cancel execution when a confirmation window is displayed after F6 (Execute) is pressed.
F10 (End)	Cancels reading of information from nodes and clearing of information, and exits the Network Configuration Screen.

Clearing Connection Information

When a Network Configuration Screen is displayed, it is possible to clear the connection information (disconnection information) recorded in several nodes in one operation.

When a Network Configuration Screen is displayed, press F7 (Clear) to display the following window. This window is for selecting the nodes for which information is to be cleared.

```

<Connect info> Head Nd#[01] Netwk addr=[000] Clear Errors Network config
Normal Ring(Logged; Node58:SL1 Node47:SL2) Displayed at:08/10/1999 15:48:10
Recorded at:08/10/1999 15:44:10
  
```

Node	Power	[Clear Error Informations]															
Specify node address to clear error informations																	
No	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node	Dsgn	Node
01	No	01	YES	11	YES	21		31		41	YES	51	YES	61	YES		
51	No	02	YES	12		22		32	YES	42		52	YES	62	YES		
		03	YES	13		23		33		43		53					
		04		14		24	YES	34	YES	44	YES	54					
52	No	05	YES	15		25	YES	35		45	YES	55					
		06	YES	16		26	YES	36	YES	46		56					
		07		17		27	YES	37		47		57					
53	No	08		18		28	YES	38	YES	48	YES	58	YES				
		09	YES	19	YES	29		39		49	YES	59	YES				
		10	YES	20	YES	30		40	YES	50		60	YES				
54	No																
		00:00:00		SL1													

#:Logical Error *:Verify Error

1M menu 2S menu 3 4 5 6Execute7 8 9 0 End

Select nodes for which connection information is to be cleared by moving the cursor to that node and pressing the Enter Key. "YES" indicates that information will be cleared for this node whereas no display indicates that information will not be cleared. If the cursor is moved to a "YES" and the Enter Key is pressed, the "YES" will disappear.

Press the F6 (Execute) Key. A window for confirming whether the information should be cleared or not will be displayed. Press either "Y" (to clear) or "N" (to cancel) and press the Enter Key. The operation can also be cancelled by pressing the F9 (Cancel) Key.

5-12-4 Reading Connection Information from a File — L: Retrieve

"L: Retrieve" is used to read connection information from files to computer memory.

Note When connection information is read from a file, any connection information currently in computer memory will be lost.

- 1, 2, 3... 1. Select "L: Retrieve" from the Connection Information (Network Configuration) Menu. The following window will be displayed to prompt you to specify the file to be read.

```

[Retrieve Network configurations]
Input file name to retrieve.
C:\
  
```

2. Specify the file name (including the directory) of the file to be read. Enter the file name with Alphanumeric Keys, then press the Enter Key.

When this window appears, the data directory specified in the System Setup will be displayed as the destination. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

You can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen.

Press the Enter Key to read the file.

5-12-5 Saving Connection Information as a File — S: Save

"S: Save" is used to save connection information as a file.

- Note**
- 1) Unless saved, all connection information will be lost when the Controller Link Support Software is exited.
 - 2) The connection information saved with this operation is already in the computer memory. To save connection information recorded at actual nodes, first read the connection information to the computer memory using "R: Read" from the Connection Information (Network Configuration) Menu.

- 1, 2, 3...**
1. Select "S: Save" from the Connection Information (Network Configuration) Menu.

[Save Network configurations]
Input file name to save.
C:\

2. Specify the file name (including the directory) of the file to be saved. Enter the file name with Alphanumeric Keys, then press the Enter Key.

The extension of the file name to be saved must be .CNI. If the extension is omitted, .CNI will be automatically assigned as an extension.

When this window appears, the data directory specified in the System Setup will be displayed as the destination. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

You can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen.

If an existing file name is specified, a confirmation message will be displayed asking you to specify whether the file is to be overwritten. Press "Y" to overwrite the file or press "N" to cancel the save processing, then press the Enter Key.

3. Enter a title for the file. Enter the title with Alphanumeric Keys. Up to 30 characters can be entered as the title. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

Press the Enter Key to save. (If no title is required, just press the Enter Key without entering a title.)

5-12-6 Printing Connection Information — P: Print

"P: Print" is used to print the connection information currently in computer memory.

- Note** For the Controller Link Support Software for DOS, select "Printer model" from the System Setup Menu and specify the printer model before using "P: Print."

- 1, 2, 3...**
1. Select "P: Print" from the Connection Information (Network Configuration) Menu. The error log will be printed and the print status window will be displayed.

During printing, "Printing" will be displayed in the window.

To cancel the printing, press the F9 (Cancel) Key. When printing for the error log has been completed, the print status display window will close and the processing will automatically terminate.

The order (i.e., connection order or node address order) in which the information is printed will be the same as the current display. Frame error

information and cable disconnection information are printed simultaneously.

Node Address Order

<<< Controller Link Network Configurations List >>> 01/05/2000 PAGE = 0001
 Nd# order Netwk addr=[063] Displayed at:01/05/2000 09:27:31

Normal Ring											
Node Power	Start Time of measure	Detect discon		Lost frames	Broken frames	CRC frames	Quits network	Netwk disconnect	Own node disconnect	Max cycles in discnct	Model
01	05/01/2000		SL1	909	0	0	0	1	0	3	CVM1-CLK12
No	09:06:08		SL2	7390	0	10					
02	05/01/2000		SL1	1571	0	0	0	1	0	3	CVM1-CLK12
No	09:01:07		SL2	6735	0	10					
03	05/01/2000		SL1	2234	0	0	0	1	0	9	CVM1-CLK12
No	09:01:27		SL2	6037	0	9					
04	05/01/2000		SL1	2895	0	0	0	1	2	3	CVM1-CLK12
No	09:03:00		SL2	2093	0	2					
05	05/01/2000		SL1	6934	0	2	0	1	0	9	CVM1-CLK12
No	09:00:25		SL2	1437	0	2					
06	05/01/2000		SL1	7598	0	2	0	1	0	9	CVM1-CLK12
No	09:01:17		SL2	782	0	2					
07	05/01/2000		SL1	3256	0	3	0	1	3	7	CVM1-CLK12
No	08:59:57		SL2	126	0	1					
09	05/01/2000		SL1	1823	0	2	2	0	7	0	CVM1-CLK12
No	08:55:50		SL2	2868	0	3					
10	01/01/2000		SL1	245	0	0	0	1	5	7	CVM1-CLK12
No	00:00:00		SL2	3055	0	10					

Connection Order

<<< Controller Link Network Configurations List >>> 01/05/2000 PAGE = 0001
 HeadNd#[09] Netwk addr=[063] Displayed at:01/05/2000 09:27:31
 Normal Ring Recorded at:01/05/2000 09:13:45

Node Power	Start Time of measure	Detect discon		Lost frames	Broken frames	CRC frames	Quits network	Netwk disconnect	Own node disconnect	Max cycles in discnct	Model
09	05/01/2000		SL1	1823	0	2	2	0	7	0	CVM1-CLK12
No	08:55:50		SL2	2868	0	3					
07	05/01/2000		SL1	3256	0	3	0	1	3	7	CVM1-CLK12
No	08:59:57		SL2	126	0	1					
06	05/01/2000		SL1	7598	0	2	0	1	0	9	CVM1-CLK12
No	09:01:17		SL2	782	0	2					
05	05/01/2000		SL1	6934	0	2	0	1	0	9	CVM1-CLK12
No	09:00:25		SL2	1437	0	2					
04	05/01/2000		SL1	2895	0	0	0	1	2	3	CVM1-CLK12
No	09:03:00		SL2	2093	0	2					
03	05/01/2000		SL1	2234	0	0	0	1	0	9	CVM1-CLK12
No	09:01:27		SL2	6037	0	9					
02	05/01/2000		SL1	1571	0	0	0	1	0	3	CVM1-CLK12
No	09:01:07		SL2	6735	0	10					
01	05/01/2000		SL1	909	0	0	0	1	0	3	CVM1-CLK12
No	09:06:08		SL2	7390	0	10					
10	01/01/2000		SL1	245	0	0	0	1	5	7	CVM1-CLK12
No	00:00:00		SL2	3055	0	10					

#:Logical Error *:Verify Error

5-13 W: Edit PC ID

“W: Edit PC ID” is used to assign a PC ID to nodes on the Controller Link Network. This section describes how to register and use PC IDs.

“W: Edit PC ID” has the following menu.

Menu item	Function	Page
S: Save PC ID	Saves PC ID data as a file.	129
L: Retrieve PC ID	Reads PC ID data from a file into the memory. No PC IDs are set when the Controller Link Support Software is started. To use PC IDs, the PC ID file must be read into the memory.	129
F: FILL	Writes the same data into the specified range of nodes displayed on the PC ID Edit Screen. This item can be used to specify the same network address for multiple nodes at a time or to specify similar PC IDs for multiple nodes.	130
C: Clear	Clears data in the specified range of nodes displayed on the PC ID Edit Screen.	131
P: Print	Prints PC ID data.	131
K: Check	Checks PC ID data for errors or inconsistencies and displays any errors.	132
O: Sort	Sorts PC ID data on the PC ID Edit Screen in the following sequence: Numeric → uppercase → lowercase	133
R: Find	Searches the specified PC ID data. The node corresponding to the specified PC ID or the PC ID corresponding to the specified node can be found.	134

5-13-1 About PC IDs


A PC ID is a name assigned to a node on the Controller Link Network.

If a PC ID is registered, the node can be specified using the PC ID instead of the network and node addresses.

- Note**
- 1) PC IDs are set only for convenience in using the Controller Link Support Software and are not set at the nodes themselves.
 - 2) PC ID files for the Controller Link Support Software are compatible with those for the SYSMAC Support Software and the SYSMAC LINK Support Utility. Therefore, PC ID files can be transferred between them.

Specifying PC IDs

Assign an easy-to-remember PC ID to each node, such as in the following example.

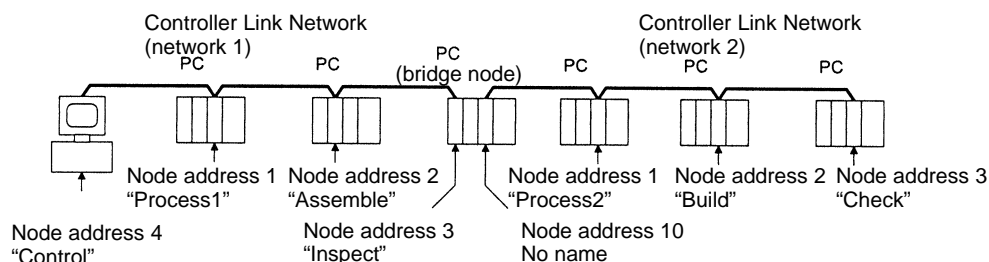

PC IDs are registered in the following format.

R	Netuk	Node	PC ID
001	001	001	Process1
002	001	002	Assemble
003	001	003	Inspect
004	001	004	Control
005	002	001	Process2
006	002	002	Build
007	002	003	Check
008			
009			
010			
011			
012			
013			
014			
015			
016			
017			

Up to eight alphanumeric characters can be specified as a PC ID, and PC IDs are case-sensitive.

Up to 500 PC IDs can be registered in the Controller Link Support Software.

Only one PC ID can be assigned to each node and the same PC ID cannot be assigned to more than one node.

Note More than one PC ID can be assigned to a PC node (such as a bridge node) in which multiple Communications Units are installed. To avoid confusion, however, avoid doing so wherever possible.

Using PC IDs

If the current window contains a PC ID input field when you specify a node, specify the PC ID in the field, then press the Enter Key. The network and node addresses corresponding to the specified PC ID will be automatically entered.

[Transfer Routing table]

Specify network address, node address to transfer.

PC ID :

Network address : 000

Node address : 000

➔

[Transfer Routing table]

Specify network address, node address to transfer.

PC ID : Inspect

Network address : 003

Node address : 003

Enter "Inspect" in the PC ID input field.

5-13-2 Displaying the PC ID Edit Screen

Select "W: Edit PC ID" from the Main Menu. The PC ID Edit Screen will be displayed.

Head
Edit PC ID

PAGE 001/001

R	Netuk	Node	PC ID	R	Netuk	Node	PC ID
001				018			
002				019			
003				020			
004				021			
005				022			
006				023			
007				024			
008				025			
009				026			
010				027			
011				028			
012				029			
013				030			
014				031			
015				032			
016				033			
017				034			

F1 menu
F2 menu
F3 Write
F4 Read
F5 Change
F6 Page
F7 Row No.
F8
F9 End

The “W: Edit PC ID” function provides the following three modes.

Mode	Function
Read	Displays all registered PC IDs. Press the F4 (Read) Key to enter read mode.
Write	Registers PC IDs. Press the F3 (Write) Key to enter write mode.
Change	Changes registered PC IDs. Press the F5 (Change) Key enter change mode.

5-13-3 Creating and Editing PC IDs

Reading PC IDs (Read Mode)

Press the F4 (Read) Key at the PC ID Edit Screen. Read mode will be entered.

Read

Edit PC ID

PAGE 001/001

R	Netuk	Node	PC ID	R	Netuk	Node	PC ID
001				018			
002				019			
003				020			
004				021			
005				022			
006				023			
007				024			
008				025			
009				026			
010				027			
011				028			
012				029			
013				030			
014				031			
015				032			
016				033			
017				034			

1 Menu 2 Sub menu 3 Write 4 Read 5 Change 6 Page 7 Row No. 8 End

If you press the F4 (Read) Key in read or change mode, the first page of the PC ID Edit Screen will be displayed when read mode is entered.

To display the desired page, press the F6 (Page) Key, enter the page number, then press the Enter Key.

To move the cursor to the desired line, press the F7 (Row No.) Key, enter the line number, then press the Enter Key.

Writing PC IDs (Write Mode)

1, 2, 3...

1. Press the F3 (Write) Key at the PC ID Edit Screen. Write mode will be entered.

Write

Edit PC ID

PAGE 001/001

R	Netuk	Node	PC ID	R	Netuk	Node	PC ID
001				018			
002				019			
003				020			
004				021			
005				022			
006				023			
007				024			
008				025			
009				026			
010				027			
011				028			
012				029			
013				030			
014				031			
015				032			
016				033			
017				034			

Netuk (7000) Mode() PC ID()

1 Menu 2 Sub menu 3 Write 4 Read 5 Change 6 Page 7 Row No. 8 End

The cursor will be positioned on the first blank line.

The three input fields will be displayed in the lower part of the screen. Press the Escape Key to return to the previous input field.

2. Specify the desired network address in the input field. Enter the network address with Numeric Keys, then press the Enter Key. The setting range is between 0 and 127. "0" represents the local network.
3. Specify the desired node address in the input field. Enter the network address with Numeric Keys, then press the Enter Key. The setting range is between 0 and 126. "0" represents the local node. However, 0 can be specified as the node address only when 0 is specified as the network address.
4. Specify the desired PC ID in the input field. Enter the PC ID with Alphanumeric Keys, then press the Enter Key. Up to eight characters can be specified as a PC ID. Press the Enter Key to write the entered data on the cursor line and move the cursor to the next line.

The Insert, Backspace, and Delete Keys can be used to correct the characters displayed. Then, you can write the next data as required.

Changing PC IDs (Change Mode)

1, 2, 3...

1. Press the F5 (Change) Key at the PC ID Edit Screen. Change mode will be entered.

To display the desired page, press the F6 (Page) Key, enter the page number (screen number), then press the Enter Key.

To move the cursor to the desired line, press the F7 (Row No.) Key, enter the line number, then press the Enter Key.

The first page can be displayed by pressing the Escape Key while holding down the Shift Key.

2. Use the Cursor Keys to move the cursor to the data to be changed, then press the Enter Key. The data on the cursor line will be displayed in the input fields in the lower part of the screen, and you can change the value in each input field.

Change				Edit PC ID			
				PAGE 001/001			
R	Netuk	Node	PC ID	R	Netuk	Node	PC ID
001	001	001	Process1	018			
002	001	002	Assemble	019			
003	001	003	Inspect	020			
004	001	004	Control	021			
005	002	001	Process2	022			
006	002	002	Build	023			
007	002	003	Check	024			
008				025			
009				026			
010				027			
011				028			
012				029			
013				030			
014				031			
015				032			
016				033			
017				034			

The three input fields will be displayed in the lower part of the screen. Press the Escape Key to return to the previous input field.

3. Change the network address, node address, and PC ID as required. The input method is the same as for write mode.

Press the Enter Key in the PC ID input field to write the entered values on the cursor line. You can now go back to step 1. and move the cursor on the screen.

Then, you can change the next data as required.

5-13-4 Displaying the Edit PC ID Menu

To use an Edit PC ID function, select the corresponding item from the Edit PC ID Menu. Each function is described on the following pages. The Edit PC ID Menu can be displayed as follows:

Press the F2 (Menu) Key at the PC ID Edit Screen. The Edit PC ID Menu will be displayed.



5-13-5 Saving PC ID Data as a File — S: Save PC ID

“S: Save PC ID” is used to save created or edited PC ID data as a file.

- Note**
- 1) Unless saved, all PC ID data will be lost when the Controller Link Support Software is exited.
 - 2) If PC ID data has been modified but has not yet been saved as a file, a confirmation message will be displayed when you attempt to exit the Controller Link Support Software.
 - 3) PC ID files for the Controller Link Support Software are compatible with those for the SYSMAC Support Software. Therefore, PC ID files can be transferred between them.

- 1, 2, 3...**
1. Select “S: Save PC ID” from the Edit PC ID Menu.



2. Specify the file name (including the directory) to be saved. Enter the file name with Alphanumeric Keys, then press the Enter Key.

The extension of the file name to be saved must be .PCN. If the extension is omitted, .PCN will be automatically assigned as an extension.

When this window appears, the data directory specified in the System Setup will be displayed as the destination. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

You can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen.

If an existing file name is specified, a confirmation message will be displayed to ask you to determine whether the file is to be overwritten. Press “Y” to overwrite the file or press “N” to cancel the save processing, then press the Enter Key.

3. Enter a title for the file. Enter the title with Alphanumeric Keys. Up to 30 characters can be entered as the title. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

If no title is required, just press the Enter Key.

Press the Enter Key to save.

5-13-6 Reading PC ID Data from a File — L: Retrieve PC ID

“L: Retrieve PC ID” is used to read PC ID data from a file.

No PC IDs are set when the Controller Link Support Software is started. To use PC ID data that has been created before, the PC ID data must be read from the file beforehand.

- Note**
- 1) If PC ID data is read from the file, the current PC ID data will be lost. To save the PC ID data, execute "S: Save PC ID" on the Edit PC ID Menu (page 129).
 - 2) If PC ID data has been modified, a confirmation message will be displayed when you attempt to read another PC ID data from the file.
 - 3) PC ID files for the Controller Link Support Software are compatible with those for the SYSMAC Support Software. Therefore, PC ID files can be transferred between them.

- 1, 2, 3...**
1. Select "L: Retrieve PC ID" from the Edit PC ID Menu. Then, if PC ID data has been modified, a confirmation window will be displayed to ask you whether the read processing is to be continued. Press "Y" to continue the read processing or press "N" to cancel the processing, then press the Enter Key.

If the PC ID data has not been modified or "Y" is pressed to continue the read processing, the following window will be displayed to prompt you to specify the file to be read.

```
[ Retrieve PC ID ]
Input file name to retrieve.
C:\
```

2. Specify the file name (including the directory) to be read. Enter a title with Alphanumeric Keys.

When this window appears, the data directory specified in the System Setup will be displayed as the destination. The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

You can press the F8 (Files) Key to display the File Name List Screen and then select a file name from the screen.

Press the Enter Key to read.

5-13-7 Specifying Multiple Nodes — F: FILL

"F: FILL" is used to batch set the same data for the specified range of nodes displayed on the PC ID Edit Screen.

Batch setting can be used to specify only one input field (network address, node address, or PC ID) at a time.

Batch setting can be used to specify the same network address for multiple nodes or specify similar PC IDs for multiple nodes.

- 1, 2, 3...**
1. Select "F: FILL" from the Edit PC ID Menu.

```
[ FILL ]
Input type to fill:
  0:Netuk  1:node  2:PC ID
Specify range to fill:
  Begin
  End
Input data to fill:
```

2. Specify the data type, range, and data, then press the Enter Key.


Item	Meaning
Input type to fill	Use a Numeric Key to specify one of the following items. 0: Network address 1: Node address 2: PC ID
Specify range to fill	Specify the first and last line numbers of the range of nodes for which the data is to be set. The setting range is between 1 and 500.
Input data to fill	Specify the data to be set for the specified item. The setting range differs according to the item to be set. See Writing PC IDs (Write Mode).

Press the Enter Key or F6 (Execute) Key with the cursor in the “Input data to fill” field to execute the batch setting.

5-13-8 Clearing Multiple PC IDs — C: Clear

“C: Clear” is used to clear (or delete) the specified range of PC ID data on the PC ID Edit Screen.

- 1, 2, 3...** 1. Select “C: Clear” from the Edit PC ID Menu.

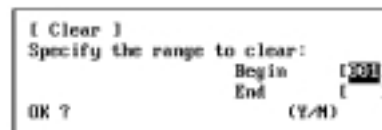

2. Specify the first and last line numbers of the range of PC ID data to be cleared. Specify the first and last line numbers with Numeric Keys, then press the Enter Key. The setting range is between 1 and 500.

When the Enter Key is pressed with the cursor in the last line number input field, a confirmation message will be displayed to ask you to confirm whether the PC ID data is to be cleared.

3. To clear the PC ID data, press “Y” and then the Enter Key. The specified range of PC ID data will be cleared and the lines following the cleared lines will be moved up to fill the gap.

To cancel the processing, press “N” and then the Enter Key.

5-13-9 Printing PC ID Data — P: Print

“P: Print” is used to print PC ID data.

Note For the Controller Link Support Software for DOS, select “Printer model” from the System Setup Menu and specify the printer model before using “P: Print.”

- 1, 2, 3...** 1. Make sure that the computer on which the Controller Link Support Software is currently running is connected to the printer and the printer is ready to operate.
2. Select “P: Print” from the Edit PC ID Menu. The PC ID data will be printed and the print status window will be displayed.

During printing, “Printing” will be displayed in the window.

To cancel the printing, press the F9 (Cancel) Key. After the data that has already been sent to the printer buffer is printed, printing will stop.

The PC ID data being printed is the same as that displayed on the PC ID Edit Screen. The PC ID data will be printed sequentially from the first line.

Printing Example

PC ID Data List				11/12/96				PAGE = 001			
Line	Netwk	node	PC ID	Line	Netwk	node	PC ID	Line	Netwk	node	PC ID
001	001	001	Process1	051				101			
002	001	002	Assemble	052				102			
003	001	003	Inspect	053				103			
004	001	004	Control	054				104			
005	002	001	Process2	055				105			
006	002	002	Build	056				106			
007	002	003	Check	057				107			
008				058				108			
009				059				109			
010				060				110			
011				061				111			
012				062				112			
013				063				113			
014				064				114			
015				065				115			
016				066				116			
017				067				117			
018				068				118			
019				069				119			
020				070				120			
021				071				121			
022				072				122			
023				073				123			
024				074				124			
025				075				125			
026				076				126			
027				077				127			
028				078				128			
029				079				129			
030				080				130			
031				081				131			
032				082				132			
033				083				133			
034				084				134			
035				085				135			
036				086				136			
037				087				137			
038				088				138			
039				089				139			
040				090				140			
041				091				141			
042				092							
043				093							
044				094							
045				095							
046				096							
047				097							
048				098							
049				099							
050				100							

5-13-10 Checking PC ID Data — K: Check

“K: Check” is used to check the PC ID data for duplicate entries.

- 1, 2, 3...
1. Select “K: Check” from the Edit PC ID Menu. PC ID data check processing will start and a message will appear to indicate the check is being performed. When the check processing is completed, the check result screen will be displayed.

Check					Edit PC ID
#	Netwk	Node	PC ID	Error message	
001	001	001	Process1	Dup node	
008	001	001	Process3	Dup node	
006	002	002	Build	Dup node	
011	002	002	Fast	Dup node	
007	002	003	Check	Dup PC ID	
012	003	001	Check	Dup PC ID	
009	000	000	1	Dup node	
010	000	000	1	Dup node	
End					
End					End

A message will be displayed in the lower part of the screen according to the check results as follows:

When no error has been detected: “Check OK”

When errors were found: “Check complete”

2. When errors are displayed on multiple screens, use the F4 (Pre Pg) Key, the F5 (Nxt Pg) Key, the Page Up Key, or the Page Down Key to switch the screen and display the check results.
3. After confirming the check results, press the F10 (End) Key.
If errors have been found, correct the faulty data on the PC ID Edit Screen in change mode and check the PC ID data again.

5-13-11 Sorting PC ID Data — O: Sort

“O: Sort” is used to sort PC ID data. It can sort PC ID data that has been arranged in disorganized order due to repeated editing.

Select “O: Sort” from the Edit PC ID Menu. Sort processing will be performed as follows:

- 1, 2, 3...
 1. PC ID data will be sorted in ascending order of network address.
 2. PC ID data with the same network address will be sorted in ascending order of node address.
 3. PC ID data with the same network and node addresses will be sorted in the following order of PC ID:
Numbers → uppercase characters → lowercase characters

5-13-12 Searching PC ID Data — R: Find

“R: Find” is used to search the specified PC ID data.

- 1, 2, 3...**
1. Select “R: Find” from the Edit PC ID Menu.
 2. Use the Cursor Keys to move the cursor to the desired search item, enter the data to be searched for in the applicable field (Netwk, Node, or PC ID), and then press the Enter Key.

[Find]
Netwk []
Node []
PC ID []
Input only item to find

3. Press the F6 (Execute) Key. Searching will start and the cursor will move to the line that matches the specified data.

Find

Edit PC ID

PAGE 001/001

R	Netuk	Node	PC ID	R	Netuk	Node	PC ID
001	001	001	Process1	018			
002	001	002	Assemble	019			
003	001	003	Inspect	020			
004	001	004	Control	021			
005	002	001	Process2	022			
006	002	002	Build	023			
007	002	003	Check	024			
008				025			
009				026			
010				027			
011				028			
012				029			
013				030			
014				031			
015				032			
016				033			
017				034			

17 0001 28 0001 3 4 5 Executed 3 2 3 End

If the specified data is not found, “No such data” will be displayed in the upper left part of the screen and searching will terminate.

4. Press the F6 (Execute) Key again to search for the next occurrence of the specified data. Search processing can be continued until all the lines that match the specified data are found.

To cancel searching, press the F10 (End) Key.

5-14 I: System Setup

“I: System Setup” is used to set the communications between the Controller Link Support Software and the PC, service conditions for the Controller Link Support Software, and so on.

5-14-1 About the System Setup

The System Setup Menu has the following functions.


Item	Function	Page
C: PC interface	Sets the type of the PC to be connected, and the communications method and communication parameters to be used when the Controller Link Support Software connects to the PC. This item must be set when the Controller Link Support Software connects to a PC.	137
T: Watchdog Timer	Sets the maximum node response time within which the node must send a response to an instruction sent by the Controller Link Support Software. If the Controller Link Support Software does not receive a response from the node within the specified time, a response timeout error will occur.	140
P: Printer model	Sets the printer model to be connected to the Controller Link Support Software.	141
D: Data disk drv	Sets the drive and directory to/from which data is to be written or read. The specified drive and directory will be used as the default drive and directory for file operations.	141

The settings in the System Setup Menu will be automatically saved as a file and stored in the directory in which the Controller Link Support Software was installed. Once the System Setup Menu is set, it need not be reset until the destination PC or printer is changed.

Note The current settings will be displayed on the right side of each item in the System Setup Window.

Screen Transitions


Screen transitions are shown below.

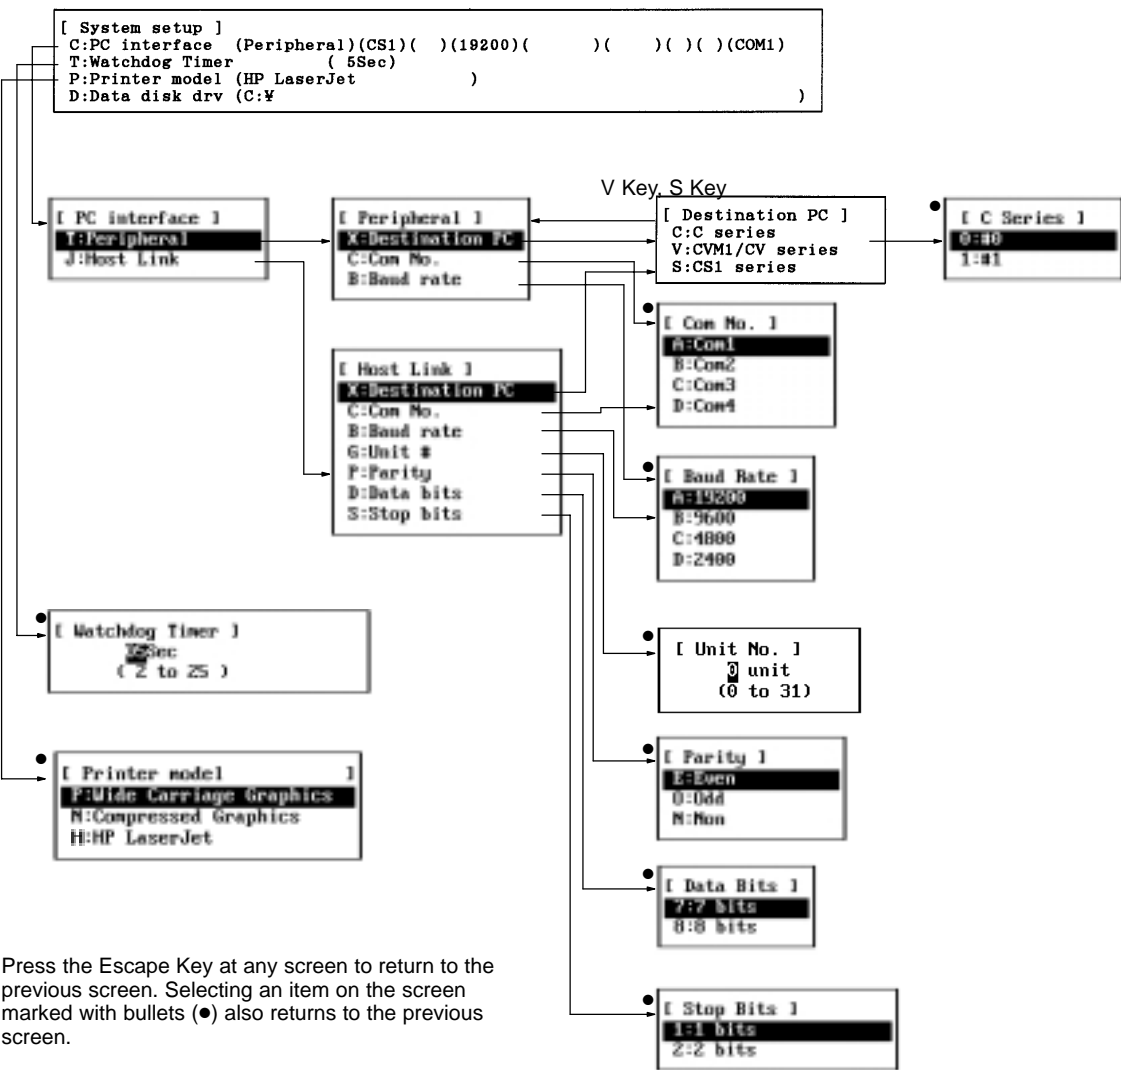

5-14-2 Displaying the System Setup — I: System Setup

To perform System Setup, select the desired item from the System Setup window. Each item is described on the following pages. The System Setup window can be displayed as follows:

Select “I: System Setup” from the Main Menu. The System Setup window will be displayed.

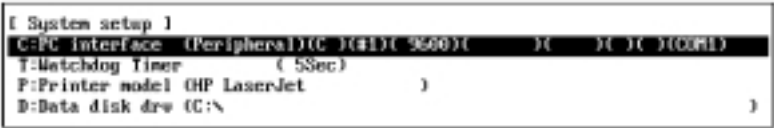

5-14-3 Setting PC Communications — C: PC Interface

“C: PC interface” is used to set the PC to be connected, the communications method, and the communication conditions to be used when the Controller Link Support Software connects to the PC.

Normally, the Controller Link Support Software uses the settings only when it connects to the PC. However, it also refers to the settings of the destination PC Menu when Maintenance functions are used. Therefore, set the PC interface correctly before transferring data between the Controller Link Support Software and a node or before using Maintenance functions.

Note For settings on the PC, see 3-3-2 *PC Settings* (page 25).

Settings

The setting items in “PC interface” are shown in the following table


Setting	Description	Peripheral	Host Link
C: PC interface	<p>Select the method of communications with the PC. The communications parameters to be used differ according to the selected communications method.</p> <p>Peripheral Bus</p> <p>If the Controller Link Support Software is to be connected to the peripheral port on the CPU Unit, select “Peripheral.” Peripheral port communications parameters can be specified for C200HX/HG/HE, CQM1H PCs. When the Controller Link Support Software is connected to the peripheral port, always select the standard settings.</p> <p>Host Link</p> <p>If the Controller Link Support Software is to be connected to the RS-232C or RS-422A port on the CPU Unit or a Host Link Unit, select “Host Link.”</p>	—	—
Destination PC	<p>Specify the PC to be connected to the Controller Link Support Software.</p> <p>C-series PCs</p> <p>If the Controller Link Support Software is to be connected to a C200HX/HG/HE, CQM1H PC, select “C series,” and then select either operating level 0 or operating level 1. Set the same operating level as the Controller Link Unit installed in the PC. Be sure to select operating level 0 if it is to be connected to a CQM1H PC.</p> <p>CV-series PCs</p> <p>If the Controller Link Support Software is to be connected to a CV-series PC, select “CVM1/CV series.”</p> <p>CS1 Series</p> <p>If the Controller Link Support Software is to be connected to a CS1 PC, select “CS1 series.”</p>	Set	Set
Communications port	Select the RS-232C port to be used (COM1 to COM4).	Set	Set
Baud rate	<p>Select the baud rate to be used for communications with the PC.</p> <p>Set the same baud rate as the setting at the PC.</p> <p>If the Controller Link Support Software is to be connected to a CVM1 or CV-series PC, set a baud rate of at least 4,800 bps, and if it is to be connected to a CS1-series PC, set a baud rate of at least 9,600 bps.</p>	Set	Set
Unit No.	<p>Specify the Host Link Unit number of the remote node.</p> <p>The unit number is used to identify the Host Link Unit when multiple Host Link Units are connected to the Controller Link Support Software. If the Controller Link Support Software is connected to a Host Link Unit on the one-to-one basis, “00” can be specified. If the Host Link Unit number of the remote node is not 00, specify the same Unit number as that of the remote node.</p>	Not set	Set
Parity	<p>Select the parity check method to be used for communications data error detection.</p> <p>Specify the same parity check method as that set at the PC.</p>	Not set	Set
Data length	<p>Select the bit length of communications data.</p> <p>Specify the same data length as that set at the PC.</p>	Not set	Set
Stop bits	<p>Select the stop bit length to be used to identify data boundaries.</p> <p>Specify the same stop bit length as that set at the PC.</p>	Not set	Set

Peripheral Bus

- 1, 2, 3... 1. Select "P: PC interface" from the System Setup window.




2. Select "T: Peripheral" The Peripheral Bus Window will be displayed.




3. Select the item to be changed. The window corresponding to the item to be changed will be displayed.


Destination PC



Communications Port

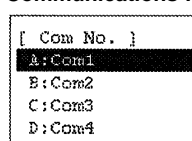


Baud Rate

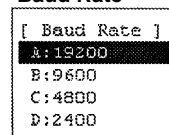

If the Controller Link Support Software is to be connected to a CVM1 or CV-series PC, set a baud rate of at least 4,800 bps, and if it is to be connected to a CS1-series PC, set a baud rate of at least 9,600 bps.

4. Select the desired setting from the window.
5. If a C-series PC is selected as the destination PC, the following window will be displayed to prompt you to select the operating level of the Controller Link Unit to be used.


If a CQM1H is selected as the PC, be sure to select operation level 0.



6. If another item is also to be set, press the Escape Key to return to the previous screen.

Host Link


- 1, 2, 3... 1. Select "C: PC interface" from the System Setup Window.



2. Select "J: Host Link." The Host Link window will be displayed.




3. Select the item to be changed. The window corresponding to the item to be changed will be displayed.

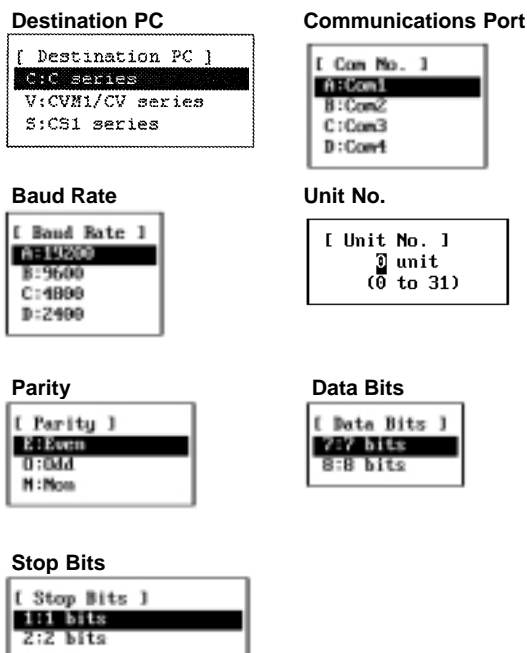

If the Controller Link Support Software is to be connected to a CVM1 or CV-series PC, set a baud rate of at least 4,800 bps, and if it is to be connected to a CS1-series PC, set a baud rate of at least 9,600 bps.

4. Select the desired setting from the window. In the Unit No. Window, use Numeric Keys to enter a number between 00 and 31, then press the Enter Key. In windows other than the Unit No. Window, select one of the settings.
5. If a C-series PC is selected as the destination PC, the following window will be displayed to prompt you to select the operating level of the Controller Link Unit to be used.

If a CQM1H is selected as the PC, be sure to select operation level 0.



6. If another item is also to be set, press the Escape Key to return to the previous screen.


5-14-4 Setting the Node Response Time — T: Watchdog Timer

If an error occurs during communications between the Controller Link Support Software and a node, the node may not be able to send a response to a request sent by the Controller Link Support Software. "T: Watchdog timer" is used to set the maximum node response time to be monitored. Failure to send a response within this time will be treated as an error.

- Note**
- 1) If the node does not send a response within the maximum node response time, a response timeout error will occur and an error message will be displayed.
 - 2) Normally, the maximum node response time can be set to the default (5 seconds). If, however, a response timeout error frequently occurs, take one of the following actions:
 - Increase the maximum node response time.

- Increase the value specified in the “# of Event-frames per comm cycle” field in the Set Network Parameters Window.
- Review the node configuration and the communications intervals to reduce the volume of traffic on the entire network.

- 1, 2, 3... 1. Select “T: Watchdog timer” from the System Setup window.



2. Specify the maximum node response time. Use Numeric Keys to enter a value in Units of second, then press the Enter Key. The setting range is between 2 and 25.

If another item is also to be set, press the Escape Key to return to the previous screen.

5-14-5 Setting the Printer Model — P: Printer Model

“P: Printer model” is used to specify the printer model (or printer control code type) to be used with the Controller Link Support Software.

The following printers can be used according to the type of the personal computer used. Use a printer that can execute the following emulation.

Printer	Printer specification	Printer model
HP Laser Jet 4P	PCL2	HP Laser Jet
IBM 4202-003	IBM	Wide Carriage Graphics Compressed Graphics
EPSON MJ-500	ESC/P	Compressed Graphics

- 1, 2, 3... 1. Select “P: Printer model” from the System Setup window. The printer model window will be displayed.



2. Select the desired setting from the window.
3. If another item is also to be set, press the Escape Key to return to the previous screen.

5-14-6 Setting the Data Directory — D: Data Disk Drive

“D: Data disk drv” is used to specify the drive and directory from/to which the Controller Link Support Software is to read and write file data.

The specified drive and directory will be used as the default drive and directory from/to which data is to be read or written. (You can also specify another drive or directory when writing or reading data.) If a nonexistent drive or directory is specified, an error will occur when you attempt to write or read data.

- 1, 2, 3... 1. Select “D: Data disk drv” from the System Setup window. The following window will be displayed to prompt you to specify the default drive and directory.



2. Specify the drive and directory names of the default data directory. Enter the drive and directory names with Alphanumeric Keys, then press the Enter Key. Up to 66 characters can be specified as a directory name (including the drive name).

The Insert, Backspace, and Delete Keys can be used to correct the characters displayed.

Example: Inputting "C:\CLK\DATA" as the data directory name



```
[ Data Disk Drive 1  
C:\CLK\DATA
```

5-15 Q: Exit to DOS

"Q: Exit to DOS" is used to quit the Controller Link Support Software.

Note If data link table, routing table, or PC ID data has been modified but has not yet been saved, a confirmation window will be displayed when you attempt to quit the Controller Link Support Software. If the Controller Link Support Software is quit without saving data in the memory, all the data will be cleared. To save the data, execute one of the following save functions before quitting the Controller Link Support Software.

Data link tables: "S: Save table" of "L: Data Link" in Main Menu

Routing table: "S: Save" of "R: Routing table" in Main Menu

PC ID data: "S: Save PC ID" of "W: Edit PC ID" in Main Menu

Error logs: "S: Save" of "E: Display Error log" in Main Menu

Connection information: "S: Save" of "K: Connection Information" in Main Menu.

Select "Q: Exit to DOS" from the Main Menu. If data link table, routing table, or PC ID data in the memory has been modified, a confirmation window will be displayed.

Press "Y" to quit the Controller Link Support Software without saving the data or press "N" to cancel quitting, then press the Enter Key.

SECTION 6

Troubleshooting

This section describes troubleshooting methods for some of the problems that can occur with the Controller Link Support Software.

Problem	Possible cause	Action to be taken
The Controller Link Support Software is connected to a CV-series PC and “No unit 0202” is displayed.	The CV-series CPU Unit was manufactured before April 1996.	Set routing tables and set the network address to the value set in the routing tables (other than 0).
A data link table is transferred to a C200HX/HG/HE Controller Link Unit and “Comm err 1104” is displayed.	Word addresses between CIO 236 and CIO 299 (words that cannot be specified) are set in the data link table.	Correct the data link table.
The routing tables are transferred to a C200HX/HG/HE Controller Link Unit and “Can’t run 2608” is displayed.	The Routing Table Enabled Bit in the DM Parameter Area for a C200HX/HG/HE Controller Link Unit is set to OFF (disabled).	Turn ON the Routing Table Enabled Bit in the DM parameter area (enabled).
Characters are printed abnormally.	The correct printer model is not set.	Check whether the printer model in the System Setup is correct.
	The printer settings are incorrect.	Check the printer settings.
Printing is not possible from Windows 95.	The property settings of the Controller Link Support Software are incorrect.	Open the Controller Link Support Software properties window and check the Print Screen check box in the windows shortcut keys under “Others” to see if it is selected.
The Controller Link Support Software is being operated under Windows 95 and communications errors such as “Wrong network” are displayed.	Other applications are running in the background under Windows 95.	Close other applications running under Windows 95. <i>See Appendix D Running Under Windows 95 for details.</i>

Appendix A

Error Messages

Error message	Cause	Action to be taken
1st page	The displayed screen is the first screen.	There are no more screens before this screen.
A required file could not be found. Please reinstall.	The required file has not been installed or damaged.	Reinstall the file.
Address range err	The specified bit or word address is incorrect.	Check the PC model and specify the correct address.
Cannot join network	The local node is not participating in the network.	Check the node participation status of the network.
Can't write	The specified area is read-only.	Check the specified area.
Comm err	Communications were not executed normally.	Check the communications cables.
DataLink active – can't run	Cannot be executed because the data links are active.	After stopping the data link, execute again.
DataLink internal setting	The data links are set to automatic setting.	Set the data link to optional setting.
DataLink stopped – can't run	Cannot be executed because the data links are inactive.	After starting the data link, execute again.
DataLink table err – can't run	Cannot be executed because the data link table has not been registered.	Register the data link table.
Drive device err	The specified drive does not exist. The floppy disk has not been formatted.	Check the drive name of the data disk, memory card, or hard disk. Format the floppy disk before saving the file.
Echoback comm err	The network has communications problems.	Check the network.
EEPROM error	Data in the EEPROM in the Controller Link Unit or Controller Link Support Board is damaged.	Reset the data link tables, network parameters, and routing tables.
Executing – Can't run	PC is in monitor or run mode.	Change the PC mode to program mode.
FAT is destroyed	The floppy disk, memory card, or hard disk is corrupted.	Replace the floppy disk, memory card, or hard disk.
File access error	The floppy disk file cannot be read or written.	Re-create the data to be read or written.
File does not exist	The specified file does not exist on the specified data disk, memory card, or hard disk.	Press the F8 (Files) Key to display the file name list, and check the file name.
File error	The floppy disk, memory card, or hard disk has an error.	Use a new floppy disk, memory card, or hard disk after formatting them.
Floppy not loaded	No floppy disk, memory card, or hard disk exists in the specified drive.	Insert a floppy disk or memory card in the specified drive or check the specified drive name.
Insuff disk capacity	The data disk, memory card, or hard disk capacity is insufficient.	Prepare another floppy disk or memory card.
Invalid table	The data link table has not been set correctly.	Set the data link table correctly.
Last page	The displayed screen is the last page.	There are no more screens after this page.
Network does not exist	The specified network does not exist.	Check the specified network address and specify the correct network address.

Error message	Cause	Action to be taken
No CLK board/driver	A Controller Link Support Board is not installed in the computer or the driver is not set correctly.	Install a Controller Link Support Board or set the driver correctly, then start again.
No DataLink table – can't run	Cannot be executed because the data link table has not been registered.	Register the data link table.
No drive	No floppy disk, memory card, or hard disk exists in the specified drive.	Insert a floppy disk or memory card into the specified drive or check the specified drive name.
No part of DataLink	The specified node is not participating in the data links.	Check all nodes that are participating in the data links.
No polling node – can't run	Cannot be executed because the specified node is not a polling node.	Check the node on the network.
No print data	The specified data cannot be processed.	Specify the correct data.
No space	The file cannot be saved because of insufficient free space on the data disk, memory card, or hard disk.	Delete unnecessary files from the data disk, memory card, or hard disk or use a new data disk or memory card.
No such data	The specified search data does not exist.	Enter the correct search data.
No such PC ID	The specified PC ID does not exist.	Check the specified PC ID and specify the correct PC ID.
		Check the specified PC ID and the PC ID registered in the computer.
No unit	The specified unit does not exist.	Check the I/O configuration and the network configuration.
No write area – can't write	The write area (transmission area) for the local node does not exist.	Check the data link tables set for the local node.
Not in DataLink – can't monitor	The data link table has not been set or the local node is not participating in the data links.	Check the data link table set for the local node.
Not in DataLink – can't write	The data link table has not been set or the local node is not participating in the data links.	Check the data link table set for the local node.
Not in network	The specified node is not participating in the network.	Check all nodes on the network.
Not initialized	The floppy disk or memory card has not been formatted. Files cannot be saved on unformatted floppy disks or memory cards.	Format the floppy disk or memory card before saving the files.
Out of range	The specified word address is above the maximum limit.	Specify a word address within the allowable range.
Parameter err	The specified parameter is incorrect.	Specify the correct parameter.
Printer err	The Controller Link Support Software is not correctly connected to the printer.	Press the Escape Key first, then check whether the cable between the Controller Link Support Software and the printer is correctly connected.
	The printer is not in ready status.	Check whether the printer is in ready status.
	The printer or printer cable is faulty.	Check the printer and printer cable.
Receive time-out	A receive timeout error has occurred.	Increase the maximum node response time and then execute again.
Relay err Netwk(???) Node (???)	An error has occurred in the PC for relaying between networks.	Check the PC for relaying between networks.
Response time out	A timeout error has occurred because a response to the communications command was not received from the destination unit.	Check the destination unit.
Routing table error	The routing tables are set incorrectly.	Check the routing tables.

Error message	Cause	Action to be taken
Send time-out	A transmission wait timeout error has occurred.	Increase the maximum node response time and execute again.
That name exists	The same file name exists on the data disk, memory card, or hard disk. English characters are not case-sensitive (for example, LAN and lan are recognized as the same name).	Specify another file name or save the file on another data disk, memory card, or hard disk (directory).
Unable to start due to insufficient memory capacity. Processing stopped. Press any key.	The amount of free memory space is insufficient.	Check the amount of free memory space and review the values set in FILES and other parameters in CONFIG.SYS.
Write protected	The data disk is write-protected (the hole in the corner of the disk is uncovered).	Always use the data disk in write-enabled state (with the hole covered).
Wrong drive	The specified drive name is incorrect.	Check the drive name of the data disk, memory card, or hard disk.
Wrong file name	The specified file name is incorrect.	Check the file name including the extension, then specify the correct file name.
Wrong key	The entered data is wrong.	Enter the correct data.
	An invalid key was pressed.	Press the correct key.
Wrong netwk number	The number of networks specified in the routing table is incorrect.	Specify the correct number of networks.
Wrong network type	The specified network is not Controller Link.	The specified network is not Controller Link.
	If the Controller Link Support Software is running under Windows 95, there are too many active applications running in the background.	If the Controller Link Support Software is running under Windows 95, there are too many active applications in background mode.
Wrong path	The specified path name is incorrect. The data drive name specified in "Data disk drv" of the System Setup is incorrect.	Check the path name of the data disk, memory card, or hard disk.
Wrong position	The cursor is in the wrong position.	Move the cursor to the correct position.
Wrong setting	The entered data is incorrect.	Enter the correct data.

Appendix B

Using Modems

This section describes how to use modems to connect the Controller Link Support Software to a remote PC via telephone lines.

Outline

This section describes restrictions on communication methods, modem conditions, system configurations, and setup procedures.

Conditions for Online Connection via Modems

Online connection via modems is possible only when the following PCs and communications methods are used.

Restrictions on Methods of Communications with PCs

The following are the PCs and communications methods that can be used for online connection via modems.

- Connection to the built-in Host Link port on a C200HX/HG/HE(-ZE), CV-series, CS1-series, or CQM1H PC.
- Connection to the peripheral port on a C200HX/HG/HE(-ZE) or CS1-series PC.
- Connection to a Host Link Unit (CV500-LK201) installed in a CVM1 or CV-series PC.
- Connection in Host Link mode to a Serial Communications Board (CS1W-SCB21/41) or Serial Communications Unit (CS1W-SCU21) installed in a CS1-series PC.




Modem Conditions


The modems in which the following items can be specified are required to allow online connection.

Item	Setting details
Baud rate	2,400, 4,800, 9,600, or 19,200 bps
Data bit length	7 bits
Parity	Even
Stop bits	1 bit
Data error correction and data compression	Data error correction enabled and data compression disabled. MNP class 4, or V.42, etc.
Flow control	Disabled (CS/RS control disabled and Xon/Xoff control disabled)
Automatic reception	Enabled (at PC)
ER signal	Always ON
Fixed terminal line speed mode	Disabled
Abort timer	Set to 10 minutes (example value)

System Configuration

Online connection via modems allows the Controller Link Support Software to connect to PCs on the Controller Link Network as shown below.

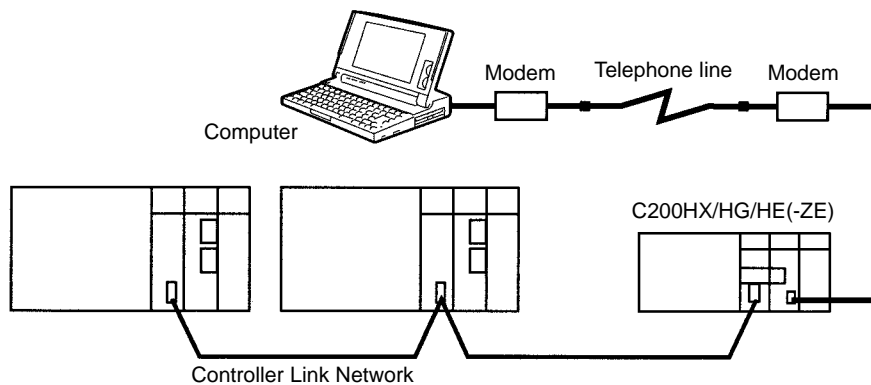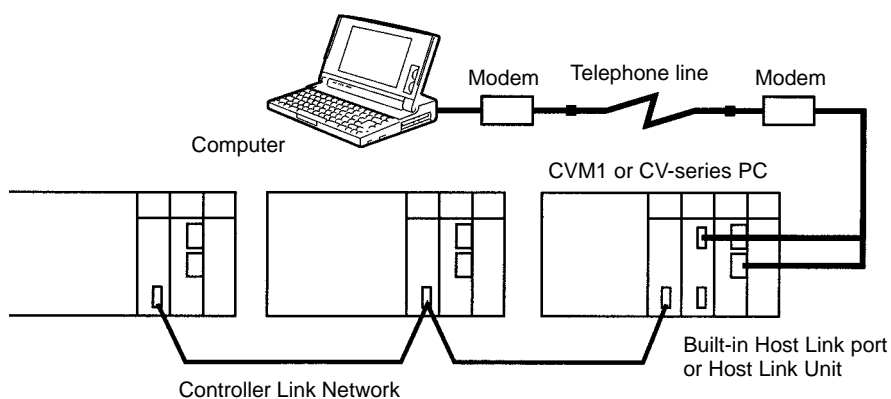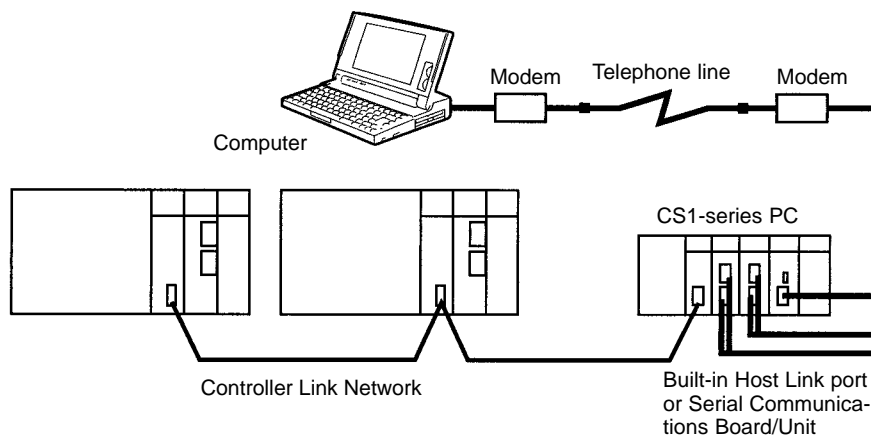Connecting to a C200HX/HG/HE(-ZE) PC**Connecting to a CVM1 or CV-series PC****Connecting to a CS1-series PC**

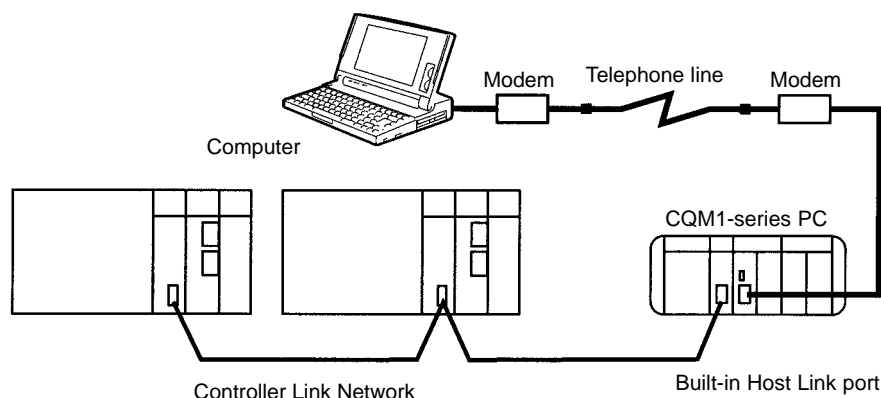Connecting to a CQM1H PC**Setup Procedures**

The following are the setup procedures for online connection via modems.

1. PC Settings (PC Setup and so on)

- When connecting to the built-in Host Link port on a C200HX/HG/HE(-ZE) PC
- When connecting to the built-in Host Link port on a CVM1 or CV-series PC
- When connecting to the Host Link Unit installed in a CVM1 or CV-series PC
- When connecting to the built-in Host Link port on a CS1-series PC
- When connecting to the Serial Communications Board/Unit installed in a CS1-series PC
- When connecting to the built-in Host Link port on a CQM1H PC

2. Setting Up Modems

3. Preparing and Connecting Cables

4. Operation

- Dialing from the communications software
- Setting up the Controller Link Support Software (System Setup)
- Connecting online to the Controller Link Support Software

C200HX/HG/HE(-ZE) PC Setup for Built-in Host Link Port

This section describes how to set the DIP switch on the PC and set up the Host Link port (RS-232C port) using the PC Setup.

DIP Switch

Turn the CPU Unit OFF and set the DIP switch on the front panel as follows:


Pin No.	Setting	Setting details
1	—	Write processing executed from the peripheral device to the user program memory area and DM 6144 to DM 6655
2	—	Automatic transfer of the contents of the memory cassette to the PC when power is turned on
3	—	Switching the Programming Console messages between Japanese and English
4	—	Default settings of expansion instructions
5	OFF	Default settings for RS-232C port
6	—	AR0712 control

For online connection via modems, always set pin 5 of the DIP switch to OFF (RS-232C port is not used with default setting). Set other pins according to your needs.

PC Setup

Set up the RS-232C port on the PC using RS-232C Port Setup in the PC Setup from a Programming Device for the PC. Set the RS-232C port as follows:

Example: Setting the baud rate to 9,600 bps

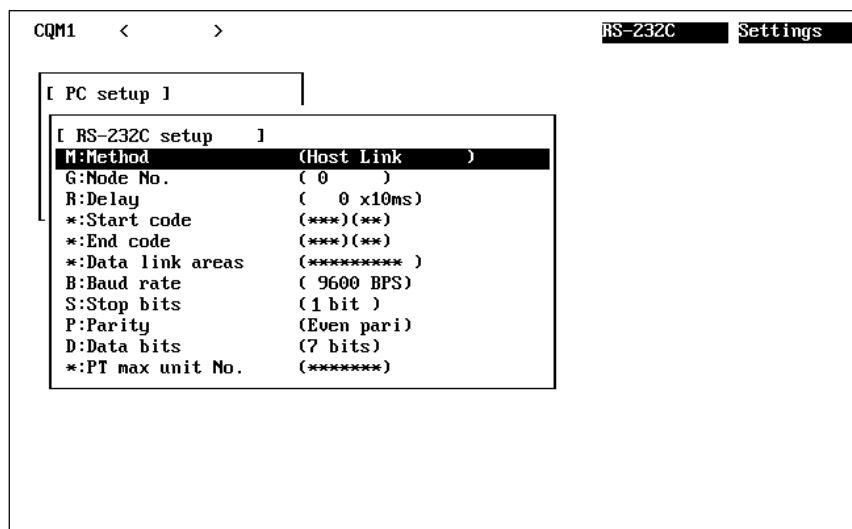

```

CQM1  <  >  RS-232C  Settings

[ PC setup ]
[ RS-232C setup ]
R:Method      (Host Link )
G:Node No.    ( 0 )
R:Delay       ( 0 x10ms)
*:Start code   (***)(**)
*:End code     (***)(**)
*:Data link areas (***** )
B:Baud rate    ( 9600 BPS)
S:Stop bits    (1 bit )
P:Parity       (Even pari)
D:Data bits    (7 bits)
*:PT max unit No. (***** )
  
```

Set a unit number between 0 and 31. Other items must be set exactly as shown above.

CVM1 and CV-series PC Setup for Built-in Host Link Port

This section describes how to set the communications path selector switch and the DIP switch for CVM1 and CV-series PCs and set up the Host Link port (RS-232C port) in the PC Setup.

Always turn the PC OFF before setting the communications path selector switch and the DIP switch.

Communications Path Selector Switch

Set the communications path selector switch on the front panel of the PC to RS-232C.

DIP Switch

Open the cover of the Memory Card storage section on the front panel of the PC and set the DIP switch as follows:


Pin No.	Setting	Setting details				
1	—	Baud rate of peripheral bus connector				
2	—					
		Pin	50 Kbps	19.2 Kbps	9600 bps	4800 bps
		1	OFF	ON	OFF	ON
		2	OFF	OFF	ON	ON
3	OFF	The value set for Host Link is used.				
4	OFF	The communications conditions for Host Link connector are set in the PC Setup.				
5	—	(Automatic transfer of programs and settings at power-up)				
6	OFF	No terminator				

Set pins 1, 2, and 5 according to your needs. Other pins must be set exactly as shown above.

PC Setup

Set up the RS-232C port on the PC using the RS-232C Port Setup in PC Setup from a Programming Device for the PC. Set the RS-232C port as follows:

Example: Setting the baud rate to 9,600 bps

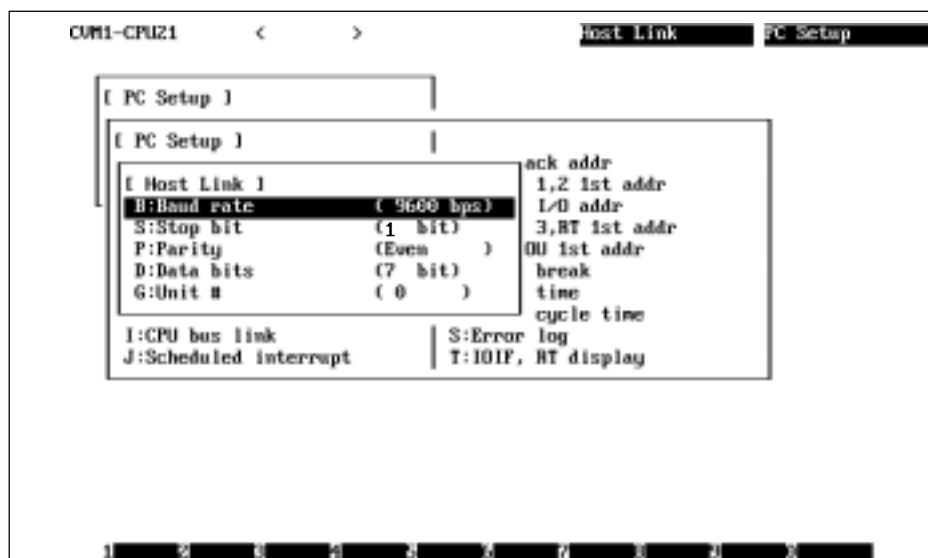

Set a unit number between 0 and 31. Other items must be set exactly as shown above.

Note CV-series PCs cannot be set up using the SYSMAC Support Software. Use the CV Support Software or the Programming Console to set up CV-series PCs.

Host Link Port Setup for Connection to a Host Link Unit Installed in a CVM1 or CV-series PC

This section describes how to set up the Host Link port (RS-232C port) using the rotary switches and DIP switch on the Host Link Unit and the CPU Bus Unit Setup for the PC.

Note Before starting this setup procedure, create an I/O table to make the Host Link Unit ready for operation.

Rotary Switches on Host Link Unit

Use the rotary switches (SW1 to SW4) on the front panel of the Host Link Unit to set the CPU Bus Unit number, and the unit number used in the Host Link system.

Set each rotary switch within the following setting range.

Rotary switch	Setting details	Setting range
SW1	Second digit of CPU Bus Unit number	00 to 15 (decimal number)
SW2	First digit of CPU Bus Unit number	
SW3	Second digit of the unit number of communications port 2	00 to 31 (decimal number)
SW4	First digit of the unit number of communications port 2	

Specify a CPU Bus Unit number that is different from the numbers of other CPU Bus Units installed in the same PC (including those on Expansion CPU Racks).

Specify a unit number that is different from the unit numbers of other Host Link Units within the same Host Link network. (The unit number of communications port 1 is fixed at 0.)

DIP Switch on Host Link Unit

Open the cover on the front panel of the Host Link Unit and set the DIP switch as follows:

Pin No.	Setting	Setting details
1	OFF	The communications conditions for the communications port are as specified in the CPU Bus Unit System Setup. (The default setting is not used.)
2	ON	CTS signal at communications port 1 is always set to ON (0 V fixed).
3	ON	CTS signal at communications port 2 is always set to ON (0 V fixed).
4	OFF	Reserved for system use (must be always set to OFF)
5	OFF	Normal operation (when this pin is set to ON, a loopback test will be conducted)
6	—	Test port setting

Set pin 6 of the DIP switch according to your needs. Other pins must be set exactly as shown above. Pins 2 and 3 have only to be set for the ports used for modem connection.

CPU Bus Unit System Setup in the PC

This section describes how to set up the Host Link ports using the CPU Bus Unit System Setup under the Communications and CPU Bus Unit System Setup from a Programming Device for the PC.

Note In the CPU Bus Unit System Setup screen for the Host Link Unit, “+0” to “+9” are used to set up communications port 1 and “+10” to “+19” are used to set up communications port 2.

Set each value on the screen as shown below.

[CPU SIOU Unit System Setup]							
Unit # 00 LK							
BYTE	b7	b0	HEX	BYTE	b7	b0	HEX
+ 0	[1001	0000]	90	+ 10	[1001	0000]	90
+ 1	[0000	0000]	00	+ 11	[0000	0000]	00
+ 2	[0001	0011]	13	+ 12	[0001	0011]	13
+ 3	[0001	0001]	11	+ 13	[0001	0001]	11
+ 4	[0000	0000]	00	+ 14	[0000	0000]	00
+ 5	[0000	0000]	00	+ 15	[0000	0000]	00
+ 6	[0000	0000]	00	+ 16	[0000	0000]	00
+ 7	[0000	0000]	00	+ 17	[0000	0000]	00
+ 8	[0000	0000]	00	+ 18	[0000	0000]	00
+ 9	[0000	0000]	00	+ 19	[0000	0000]	00

You need to set only the port to be used for online connection via modems.

CS1-series PC Setup for Built-in Host Link Port

This section describes how to set the DIP switch on the PC and set up the Host Link port (RS-232C port) using the PC Setup.

DIP Switch

Turn the CPU Unit OFF and set the DIP switch on the front panel as follows:

Pin No.	Setting	Setting details
1	—	ON: Writing disabled for user program memory. OFF: Writing enabled for user program memory.
2	—	ON: The user program is automatically transferred and executed when power is turned ON. OFF: The user program is automatically transferred but not executed when power is turned ON.
3	—	ON: Programming Console messages displayed in English. OFF: Programming Console messages displayed in the language stored in system ROM.
4	—	ON: The peripheral port communications parameters set in the PC Setup is used. OFF: Peripheral port communications parameters set using Programming Console or CX-Programmer (Peripheral bus only) are used.
5	OFF	ON: RS-232C port communications parameters set using a CX-Programmer (Peripheral bus only) are used. OFF: The RS-232C port communications parameters set in the PC Setup is used.
6	—	ON: User defined pin. Turns OFF the User DIP Switch Pin Flag. OFF: User defined pin. Turns ON the User DIP Switch Pin Flag.
7	—	Always OFF.
8	—	Always OFF.

For online connection via modems, always set pin 5 of the DIP switch to OFF (RS-232C port is not used with default setting). Set other pins according to your needs.

PC Setup

Set up the RS-232C port on the PC using Host Link Port Setup in the PC Setup using CX-Programmer. Set the RS-232C port as follows:

Example: Setting the baud rate to 9,600 bps

Host Link port		
Mode setting	Host Link	
Baud rate	9,600	Bits/s
Data length	7	Bits
Stop bits	1	Bits
Parity	Even	
Unit No.	0	
Transmission delay	0	× 10 ms

Set a unit number between 0 and 31. Other items must be set exactly as shown above.

Serial Communications Port Setup for Connection to a Serial Communications Board/Unit Installed in a CS1-series PC

This section describes how to set up the serial communications ports for the Serial Communications Boards/Units using the software switch settings at the PC.

Software Switch Settings

In the software switch settings for the Serial Communications Board/Unit registered in the CX-Programmer I/O table, make the RS-232C settings for the serial communications port to be used for connection.

Make the following settings:

Example: Setting the baud rate to 9,600 bps

Host Link port		
Mode setting	Host Link	
Baud rate	9,600	Bits/s
Data length	7	Bits
Stop bits	1	Bits
Parity	Even	
Unit No.	0	
Transmission delay	0	× 10 ms
CS control	None	

Set a unit number between 0 and 31. Other items must be set exactly as shown above.

CQM1H PC Setup for Built-in Host Link Port

This section describes how to set the DIP switch on the PC and set up the Host Link port (RS-232C port) using the PC Setup.

DIP Switch

Turn the CPU Unit OFF and set the DIP switch on the front panel as follows:

Pin No.	Setting	Setting Details
1	—	ON: Writing disabled for user program memory. OFF: Writing enabled for user program memory.
2	—	ON: The user program is automatically transferred and executed when power is turned ON. OFF: The user program is automatically transferred but not executed when power is turned ON.
3	—	ON: Programming Console messages displayed in English. OFF: Programming Console messages displayed in the language stored in system ROM.
4	—	ON: Expansion instructions set by user. OFF: Expansion instructions set to defaults.
5	OFF	ON: Peripheral port and RS-232C port communications settings determined by default settings. OFF: Peripheral port and RS-232C port communications settings determined by PC Setup.
6	—	ON: User defined pin. Turns OFF the User DIP Switch Pin Flag. OFF: User defined pin. Turns ON the User DIP Switch Pin Flag.
7	—	ON: Programming Devices other than a Programming Console can be connected to the peripheral port. OFF: Only a Programming Console can be connected to the peripheral port.
8	—	ON: Use CX-Protocol in protocol macro mode.

For online connection via modems, always set pin 5 of the DIP switch to OFF (RS-232C port is not used with default setting). Set other pins according to your needs.

PC Setup

Set up the RS-232C port on the PC using Host Link Port Setup in the PC Setup from CX-Programmer. Set the RS-232C port as follows:

Example: Setting the baud rate to 9,600 bps

DM 6645 0001 Hex	Mode setting 1:1 Link area CTS control setting Standard communications conditions	According to DM 6646 settings	
DM 6646 0003 Hex	Baud rate Data length Stop bits Parity Unit No.	9,600 7 1 Even 0	Bits/s Bits Bits
DM 6647 0000 Hex	Transmission delay	0	× 10 ms

Set a unit number between 0 and 31. Other items must be set exactly as shown above.

Modem Settings

This section describes example modem settings. Perform an equivalent setup by referring to the user's manual for your modem.

- Note**
1. For the modem at the PC, always store the settings in the nonvolatile memory in the modem.
 2. In this section, the procedure for storing the settings in the nonvolatile memory in the modem is described. This procedure does not necessarily have to be performed for the modem at the computer. If, however, the settings are not stored in the nonvolatile memory, the modem will need to be set up using AT commands from the communications software each time a communications procedure is started.

Setting Items

The items shown in the following table must be always set.

Other setting items differ according to the telephone line type, modem type, and so on.
Set each item according to your system as described for specific modems.

Item	Setting details
Baud rate	2,400, 4,800, 9,600, or 19,200 bps
Data bits	7 bits
Parity	Even
Stop bit	1 bit
Data error correction and data compression	Data error correction enabled Data compression disabled MNP class 4, or V.42, etc.
Flow control	Disabled (CS/RS control disabled and Xon/Xoff control disabled)
Automatic reception	Enabled (at PC)
ER signal	Always ON
Fixed terminal line speed mode	Disabled
Abort timer	Set to 10 minutes (example value)

Preparing and Connecting Cables


The cable connector wiring method differs according to the communications port to be used. Prepare an appropriate cable for the system being used.

Connecting the Modem to the Computer

Using the cable provided with the modem, connect the modem to COM1 or COM2 of the personal computer.

Connecting the Modem to the Host Link Port on the PC


Prepare a cable for wiring the connectors as shown below.

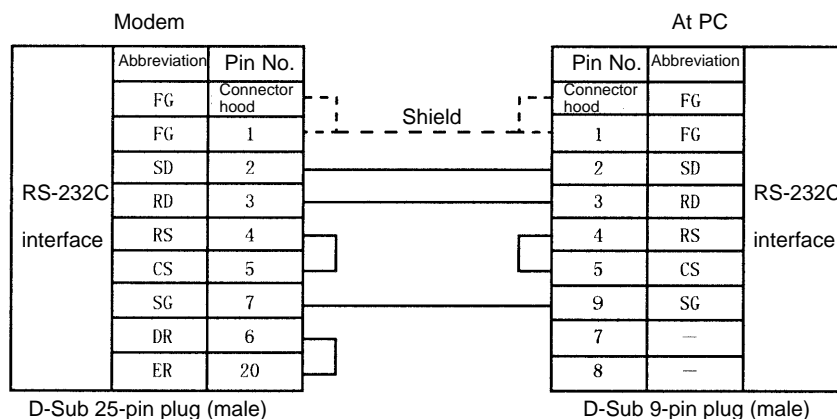


Connect to the built-in Host Link port on C200HX/HG/HE(-ZE), CVM1, CV-series, CS1-series, or CQM1H PCs, or connect to the Host Link port on a Serial Communications Board/Unit for CS1-series PCs.

Connecting the Modem to the Peripheral Port on PC

When the modem is to be connected to the peripheral port on the PC, connect a CQM1-CIF01 Peripheral Interface Cable to the PC as shown below and connect the other connector to the cable prepared to connect the modem.

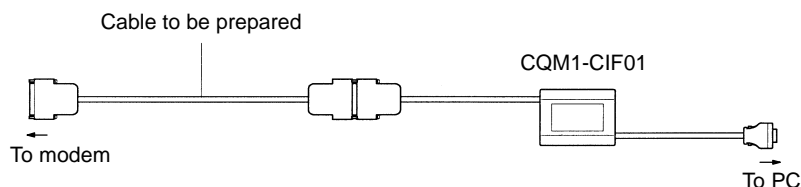


Prepare a cable for wiring the connectors as shown below.

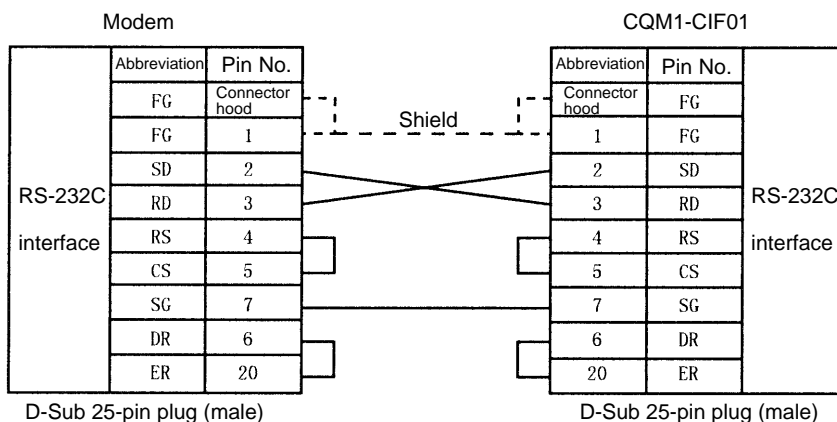

Connecting the Modem to the Host Link Unit

Prepare a cable for wiring the connectors as shown below.

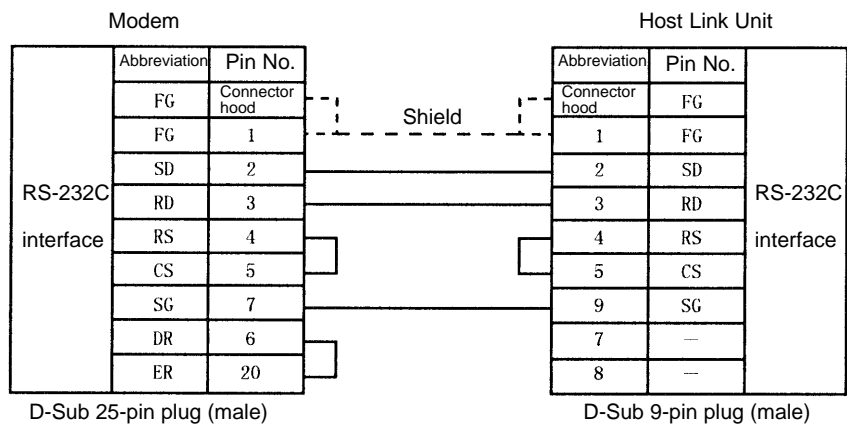

Connecting the Cables

Use the prepared cables to connect the computer to the modem and the modem to the PC.

Connecting Online via Modems

This section describes how to connect online via modems. Be sure to set up and connect the modem before starting the following procedure.

1. Start the communications software from the computer.
2. Dial the other party's phone number from the communications software.
From the communications software in terminal mode, enter the other party's phone number following "ATDT" (underlined section).

Example: Using tone dialing

```
ATDT045-123-4567
OK
```

Wait until the modem connects to the modem at the PC.

When the line is connected, "CONNECT" will be displayed as shown below.

```
CONNECT
```

3. With the line connected, quit the communications software.
4. Enter the following command (underlined section) to start the Controller Link Support Software.

```
C:\CLK>CLKSS
```

5. Set the following communications parameters using the System Setup of the Controller Link Support Software.

Item	Setting details
Baud rate	2,400, 4,800, 9,600, or 19,200 bps
Stop bit	1 bit
Parity	Even
Data bits	7 bit
Unit No.	Node number 0 (see note)
Destination PC	C, CV, or CS1 (see note)
Operating level	Level 0 or 1 (see note)
Maximum node response time (watchdog timer)	10 seconds (see note)

Note Set these items according to the system being used.

6. Operate the Controller Link Support Software as usual.

Terminating the Online Connection

When PC operations are completed, disconnect the line according to the following procedure.

Press the PHONE button on the modem or turn the modem OFF to disconnect the line.

Connecting Online without Communications Software

This section describes how to connect online via modems without using communications software.

Registering RS-232C Interface Driver in CONFIG.SYS

Use a text editor or word processing software to add the following line to CONFIG.SYS.

```
DEVICE=A:\DOS\RSDRV.SYS
```

Specify in the underlined section the drive and directory in which the RSDRV.SYS file resides. In this example, the file resides in directory DOS in drive A.

Creating and Executing a Batch File

Create a batch file for setting the computer communication conditions, modem, telephone number, and dial-up.

A sample batch file for the ME2814B III is shown below. These files can be created using a text editor. In this example, the baud rate is 9,600 bps and the dialing method is tone dialing.

```
@ECHO OFF
MODE COM1:96,E,7,1
ECHO ATY0X3&H0&K0&M4&N6S0=1S15=128S19=10&D0&W0DT045-123-4567 > AUX
ECHO ON
```

The underlined section indicates the other party's telephone number.

For the meaning of each AT command, refer to *Modem Settings* earlier in this appendix.

Execute the batch file at the DOS prompt to connect the line, then operate the Controller Link Support Software as usual.

Note Before starting the Controller Link Support Software, always make sure that the line is connected.

Appendix C

Registering the Controller Link Support Software in the SYSMAC Support Software

If the Controller Link Support Software is to be used on the same personal computer as the SYSMAC Support Software, it is better to register the Controller Link Support Software in the SYSMAC Support Software's Option Menu. This section describes how to register the Controller Link Support Software in the SYSMAC Support Software.

1. Select the Option Menu in the SYSMAC Support Software.

Option

Option 1
Y:Start up DOS
Z:Add new facility

1 2 3 4 5 6 7 8 9 0

2. Select "Z: Add new facility" from the Option Menu.
The utility registration screen will appear.

Reg/Del Option

No	The facility name	Program name
A		
B		
C		
D		
E		
F		
G		
H		
I		
J		
K		
L		
M		
N		
O		
P		

1 Del 2 3 4 5 6 7 8 9 0

3. Move the cursor to the letter where the utility is to be registered, then press the Enter Key.
The following window will be displayed to prompt you to enter a utility name and an executable program name.

The utility name

Program

Up to 30 characters can be entered as the utility name. Up to 120 characters can be entered as an executable program name.

4. Enter a utility name in the first input area and an executable program name in the second input area, then press the Enter Key.

The utility name

Controller Link Support Software

Program

A: \CLK\CLKSS.BAT /OA:\SYSMATE

After registration processing is completed, the window will return to the utility registration screen. If you go back to the Option Menu, you can confirm that the Controller Link Support Software has been registered.

Option

[Option 1

A:ControllerLinkSupportSoftware

Y:Start up DOS

Z:Add new facility

- Note** 1. Perform registration in the SYSMAC Support Software after installing Controller Link Support Software.
2. When calling up Controller Link Support Software from the SYSMAC Support Software, the path must be set in the desired line of the AUTOEXEC.BAT file, as shown below. Be sure to check this.

```
PATH=%PATH%;C:\CLK
```

The “C:\CLK” refers to the directory in which the Controller Link Support Software is installed. If the directory in which the Controller Link Support Software is installed is not “C:\CLK,” make sure that the correct directory is specified.

Appendix D

Running the Controller Link Support Software under Windows 95

The Controller Link Support Software can be set up and run under Windows 95 only when it is to be used for the Controller Link Unit (for connecting to a PC).

This section describes how to set up and start the Controller Link Support Software under Windows 95. It also presents some notes on running the Controller Link Support Software under Windows 95.

- Note**
1. The Controller Link Support Software for the Controller Link Support Board (for running on a computer node of the network) cannot be run under Windows 95.
 2. The Controller Link Support Software cannot be run under Windows 3.1 or Windows NT.

Setting Up the Controller Link Support Software

Note Before starting the setup procedure, be sure to close all active programs.

In the following descriptions, drive C and drive A are the hard disk drive and the floppy disk drive, respectively. If this system configuration is different from that of your computer, treat drive C and drive A as the hard disk drive and floppy disk drive in your computer.

1. Start Windows 95.
2. Insert the Controller Link Support Software floppy disk into drive A.
3. Click on the start button on the lower left of the screen.
4. Select Run from the Start menu.
5. Enter A:\SETUP and then click on the OK button. The Controller Link Support Software setup procedure will start. Follow the instructions displayed on the screen.
6. When the setup procedure is completed, a message will appear on screen indicating that the setup has been completed.
7. Click on the OK button.
This completes the setup procedure.

Starting the Controller Link Support Software

Note Always run the Controller Link Support Software in full-screen mode. It cannot be run in window mode. Also, avoid switching to another programs while the Controller Link Support Software is running.

Starting the Controller Link Support Software from Windows 95

1. Click on the start button. The start menu will appear. Then, move the mouse cursor to Program.
2. When the mouse cursor is positioned on Program, the next menu will immediately appear. Then, move the mouse cursor to SYSMAC.
3. The Controller Link Support Software menu item will appear. Then, click on the menu item.
The Controller Link Support Software will be started.

Starting the Controller Link Support Software in DOS Mode

1. Invoke DOS mode from Windows 95 as follows:
Click on the Start button, select Exit Windows, select Reboot in DOS Mode, then click on the Yes button.
The system will enter DOS mode.
2. While in DOS mode, switch to the directory in which the Controller Link Support Software was installed, then enter CLKSS and press the Enter Key. The Controller Link Support Software will be started.

Example: Controller Link Support Software in directory CLK in drive C

```
C:\>CD \CLK
```

```
C:\CLK>CLKSS
```

Precautions

If Windows 95 automatically writes data on the hard disk in the background or other applications are running under Windows 95 during communications with a PC, communications errors (such as “Wrong network type”) may occur. In particular, when a Host Link port is used, communications errors are more likely to occur depending on the communications protocol being used.

If such communications errors occur, the frequency of error occurrence can be reduced by changing the performance or reception buffer performance for communications port settings on the Control Panel.

Setting Delayed Writing for Drives

Set delayed writing for drives under the file system settings for system performance on the Control Panel.

Setting the Reception Buffer for the Communications Port

Reduce the current reception buffer size under the communications port settings for the device manager for system settings on the Control Panel.

If communications errors recur even after the above settings have been changed, close other applications running under Windows 95.

- Note**
1. If the same problem occurs even after the settings have been changed, run the Controller Link Support Software in DOS mode.
 2. For computers with Windows Keys, never press a Windows Key during online connection with a PC. Otherwise, the line may be disconnected or Windows 95 may hang up.
 3. Never switch to another application by pressing the Escape or Tab Key while holding down the Alt Key. Otherwise, the line may be disconnected or Windows 95 may hang up.
 4. If an echoback test is to be executed, always execute it in DOS mode. Otherwise, the correct test results may not be obtained.

Computers with Infrared Port Communications

In the Controller Link Support Software, the serial port must be enabled.

If you are using an infrared port, disable it or set the serial and infrared ports so that they do not overlap.

Appendix E

Editing the Device Information Setting File

Controller Link Support Software Version 1.0□ does not display the latest PC models in the model list when “I: Device Info set” is selected from the Data Link Menu. In this situation, these new PC models can be registered in the Controller Link Support Software by editing the device information setting file (CLKTYPE.TXT) with a text editor.

This Appendix describes the contents of the device information setting file and the procedure for registering the latest PC models in the file.

About Device Information Setting File

The device information setting file (CLKTYPE.TXT) contains the following information for each PC model.

- Maximum number of data link words per node
- Maximum number of words in the CIO relay area
- Maximum number of words in the link relay (LR) area
- Maximum number of words in the data memory (DM) area
- Maximum number of words in the extended data memory (EM) area
- Maximum number of banks in the extended data memory (EM) area

The Controller Link Support Software checks the data link tables and data consistency according to the contents of the device information setting file.

Note The device information setting file (CLKTYPE.TXT) resides in the directory in which the Controller Link Support Software was installed.

Editing the Device Information Setting File

A new PC can also be temporarily registered by setting “Others” in “I: Device Info set” in the Data Link Menu. In this case, however, the maximum number of banks and words that can be handled by the Controller Link Support Software will be registered, and so it will not be possible to perform checks based on the actual PC model. In order to check data link tables for PCs that are added with the Controller Link Support Software, it is necessary to edit the device information setting file in the way shown below.


Note The device information setting file (CLKTYPE.TXT) is a text file and can be edited using any text editor.

Contents of Device Information Setting File

The contents of the Controller Link Support Software's device information setting file (CLKTYPE.TXT) are as shown below.

```
1:C200HE(-Z)=8000,512,64,6000,0,0
2:C200HG(-Z)=8000,512,64,6000,6144,1
3:C200HX=8000,512,64,6000,6144,3
4:C200HX-85Z=8000,512,64,6000,6144,16
5:CVM1-CPU21=8000,2556,200,24576,32766,8
6:CVM1-CPU11=8000,2556,200,24576,0,0
7:CVM1-CPU01=8000,2556,200,8192,0,0
8:CV2000=8000,2556,200,24576,32766,8
9:CV1000=8000,2556,200,24576,32766,8
10:CV500=8000,2556,200,8192,0,0
11:CLK Board=32000,65535,65535,65535,65535,16
12:Others=32000,65535,65535,65535,65535,16
```

The meaning of each line component is as follows:

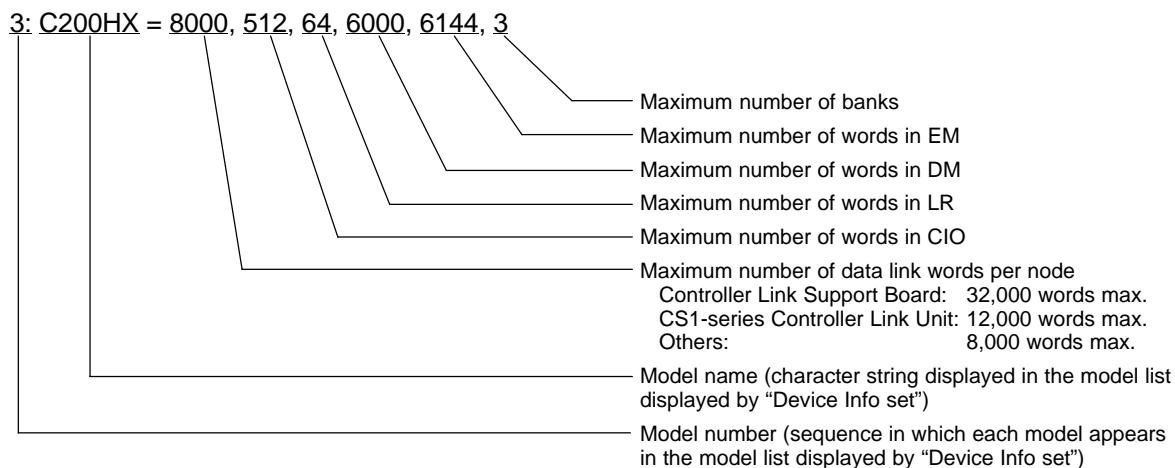

When editing the device information setting file, note the following restrictions.

- Up to 10 alphanumeric characters can be specified as a model name. Model names are case-sensitive. For all other items, specify decimal numbers.
- Always place a colon (:) after each model number.
- Always place a equal sign (=) after each model name.
- Separate each item following the "maximum number of data link words per node" item with a comma. No items can be omitted.

- Note**
1. Before editing the device information setting file (CLKTYPE.TXT), save it as a different name to create a backup file.
 2. Before adding or changing items, carefully check the areas in the PC to be used. If incorrect values are specified, an error may occur during a data link table check even if the data link tables are correct.

Appendix F

Data Link Setting Forms

The forms on the next two pages can be copied and used to design data links. They are described in more detail in the body of this manual.

<div>Controller Link Support Software</div> <div>Data Link Setting Form 1</div>				<div>Date</div> <div>System</div> <div>Drawing No.</div>	<div>Comments:</div>
<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>
<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>
<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>
<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>
<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>	<div>Link start word</div> <div>[]</div>
<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>	<div>Node #</div> <div>[]</div>

Comments:

Date _____

System

Drawing No.

Comments:

Node # [2]
Area: 1 2

Link start word []

Link start word []

[illegible][illegible]

Index

B—C

- baud rate, 26
 - setting, 30
- broadcast test, 38
- cables
 - connection, 159
 - preparing and connecting, 158
- CLKTYPE.TXT, 167
- communications
 - range, 87
 - setting standard parameters, 26, 29
- communications path selector switch, 152
- computers
 - compatible, 7
 - requirements, 7
- connection information
 - clearing, 122
 - displaying menu, 119
 - printing data, 123
 - reading, 119
 - reading data from a file, 122
 - saving data as a file, 122
- Connection Information Screen. *See* Network Configuration Screens
- CPU Bus Unit, system setup, 33, 154

D

- data directory, setting, 141
- data link
 - areas, 46
 - creating, 56
 - menu, displaying, 51
 - setting forms, 49
 - status, 48
 - displaying, 78
 - tables, 46
 - checking, 61
 - comparing, 71
 - copying, 59
 - creating and editing, 52
 - deleting from nodes, 74
 - edit screens, 46
 - Function Keys, 54
 - initializing, 60
 - printing, 75
 - reading from a file, 66
 - reading from nodes, 67
 - saving as a file, 64
 - setting, 47, 51
 - transferring, 67
 - writing to nodes, 69

- data links
 - automatically set, 39
 - manually set, 38
 - starting, 38
 - starting and stopping, 77
- device information setting file, 167, 168
- DIP switch, 151
 - modem settings
 - CQM1H PCs, 156
 - CS1-series PCs, 154
 - CVM1 and CV-series PCs, 152
- DIP switch settings, CV-series Host Link Unit, 31

E

- echoback test, 38
- EEPROM, Unit
 - backing up, 113
 - saving, 113
 - writing, 114
- error logs
 - displaying menu, 106
 - file formats, 105
 - printing data, 108
 - reading, 106
 - reading data from a file, 108
 - saving data as a file, 108
- error messages, 63, 145
 - local network table, 92
 - relay network table, 92
- exiting, CLSS, 18

F—L

- features, 2
- file list
 - displaying, 22
 - screen, 22
 - selecting a file, 22
- Frame Information Screen. *See* Network Configuration Screens
- Function Keys, 54
- functions, 3
- Host Link port (built-in)
 - C200HX/HG/HE(-ZE) setup, 151
 - CQM1H PC setup, 156
 - CS1-series PC setup, 154
 - CV-series PC setup, 152
- Host Link Unit
 - connection to a CV-series PC, 153
 - DIP switch, 154
 - rotary switches, 153
- installation
 - creating backup disk, 12
 - preparation, 12
 - procedure, 13
- keyboard, operation, 43
- logical error, 118

M

- main menu, 43
 - C: Monitor Network, 103
 - D: Broadcast Test, 101
 - E: Display Error Log, 104
 - I: System Setup, 135
 - K: Connection Information, 115
 - L: Data Link, 45
 - M: Maintenance, 112
 - N: Echoback Test, 100
 - P: Set Network Parameters, 83
 - Q: Exit to DOS, 142
 - R: Routing Table, 85
 - S: Display Node Status, 109
 - W: Edit PC ID, 124
- maintenance menu, displaying, 113
- menu
 - hierarchy, 10
 - item selection, 20
- modems, 149
 - conditions, 149
 - connection online, 160
 - without communications software, 161
 - connection to computer, 158
 - connection to Host Link port, 158
 - connection to Host Link Unit, 159
 - connection to peripheral port, 158
 - settings, 157
 - setup procedures, 151
 - system configuration, 149
 - terminating online connection, 160

N

- network
 - connection, 5
 - initializing parameters, 114
 - starting, 38
- Network Configuration Screens, 116
 - display order, 117
- networks, interconnecting, 39
- node, connection method, 23
- node models, specifying, 81
- node number, setting, 30
- node response time, setting, 140
- non-participating nodes, 118

O

- offsets, 50
- online connection
 - terminating, 160
 - via modems, 160
- operating procedures, 41
- operation
 - basic, 19
 - overall flow, 9

P

- PC communications, 137
 - Host Link, 139
 - Peripheral Bus, 139
 - settings, 138
- PC ID, 38, 125
 - changing, 128
 - checking data, 132
 - clearing multiple PC IDs, 131
 - creating and editing, 127
 - displaying edit screen, 126
 - displaying the edit menu, 129
 - printing data, 131
 - reading, 127
 - reading data from a file, 129
 - saving data as a file, 129
 - searching data, 134
 - sorting data, 133
 - specifying, 125
 - specifying multiple nodes, 130
 - using, 126
 - writing, 127
- PC settings, 25
 - host link, 27
 - peripheral bus, 25
- precautions, general, xi
- printers, 8
 - setting model, 141

R

- routing table, displaying the menu, 88
- routing tables
 - checking, 91
 - comparing, 96
 - creating and editing, 88
 - deleting from a node, 98
 - initializing, 93
 - outline, 86
 - printing, 99
 - reading from a file, 94
 - reading from a node, 95
 - saving a file, 93
 - setting, 87
 - transferring, 94
 - writing to nodes, 96

S–W

- screen displays, 19
- screens, printing, 23
- Serial Communications Board/Unit, connection to a CS1-series PC, 155
- starting, CLSS, 16
- startup, options, 17
- system setup, 38, 135
 - displaying, 136
 - transmission frame format, setting, 30
 - troubleshooting, 143
 - verify error, 118
 - warnings, 64
- Windows 95, 165
 - computers with infrared port communications, 166
 - precautions, 166
 - starting CLSS, 165
- word addresses, entering, 20
 - CIO, LR, DM, 20
 - EM, 21

Revision History

A manual revision code appears as a suffix to the catalog number on the front cover of the manual.

Cat. No. W369-E1-1

↑
Revision code

The following table outlines the changes made to the manual during each revision. Page numbers refer to the previous version.

Revision code	Date	Revised content
1	March 2000	Original production