OMRON

CJ Series Programmable Controllers

CJ1G-CPU P Loop-control CPU Unit

CJ1 Special I/O Units

Process Analog Input Units (Isolated Units with Fully Universal Inputs) CJ1W-PH41U (High-resolution Unit) and CJ1W-AD04U (General-purpose Unit)

Fully Integrated Sequence and Loop Control New Built-in Loop Controller





Introducing the New Style of Loop Control Advanced controller functions integrated with the same CJ-series functionality and high-speed capabilities

> Downsizing

- Ultra-small size fits in most devices
- Backplane-free structure provides the functions you need in minimum space.
- Low-cost solution for controlling multiple loops

 Function block programming for easy engineering

- Seamless integration of sequence control and loop control.
- HMI windows can be simply generated from function blocks automatically.


SMARTPROCESS CONTROL

Easy Engineering Control functions have the added ability to control multiple loops.
 Consolidating the proven CSseries loop-control technology
 Effective maintenance functions

High Reliability

Integrated Loop Control and Sequence Control


An engine for controlling analog quantities (e.g., temperature, pressure, flowrate) is built into the CPU Unit together with the engine for executing sequence control, delivering high-speed sequence control and high-speed, advanced analog quantity control in a single Unit.

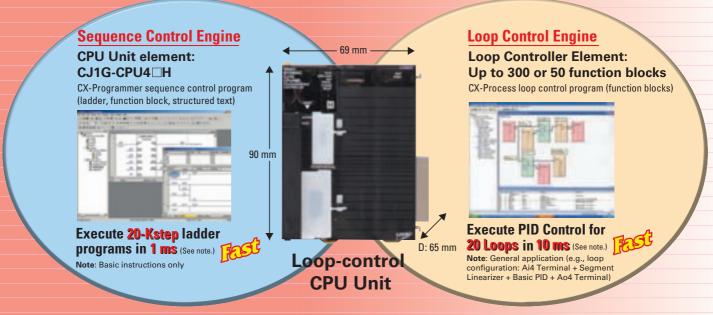

Down-sizing

Small Super compact: Only 90 mm High and 65 mm Deep, and Backplane-free structure enables flexible width design.


Compact PLC Aids Machine Downsizing by Fitting Just About Anywhere. Wide Array of I/O Units, Special I/O Units, and CPU Bus Units Are Available to Suit Your Application.

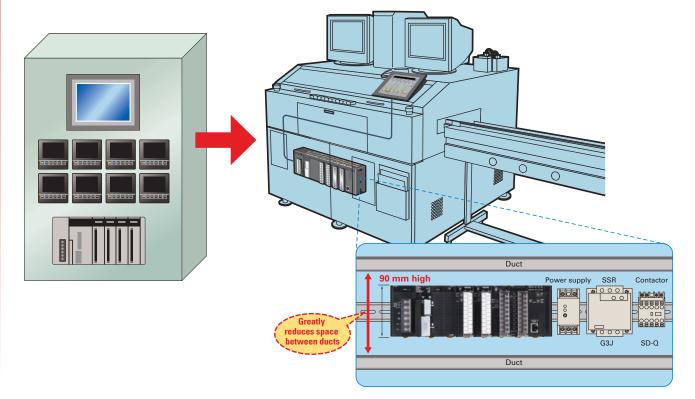

High-speed sequence control functions can be used directly for high-speed, advanced loop control.


• Sequence control: Executes 20-Kstep ladder programs in 1 ms (with basic instructions only). PCMIX = 7.4 LD or OUT executed in 40 ns

• Loop control: Executes PID operations for 20 loops in up to 10 ms. This is a guide for general applications. (See note.)

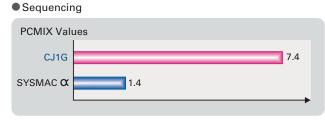

Fa

Note: Loop configuration: Ai4 Terminal + Segment Linearizer + Basic PID + Ao4 Terminal The external I/O response time in the overall system refers to the conversion time.

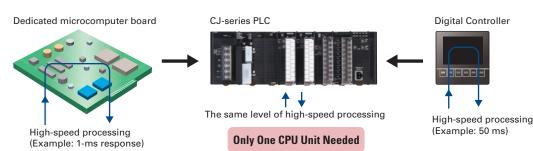


Easy Engineering


Function blocks make loop-control programming easy. You can also create CX-Process Tool tuning windows to help adjust loops. Controller faceplates can be created automatically for touch panel displays.

- Sequence control programs: Standardize and simplify programs using structured programming. Special I/O
 Unit and CPU Bus Unit settings are easy with function blocks (using ladder programming language or
 structured text).
- Loop control programs: By combining function blocks, a wide array of control methods can be easily configured, from basic PID control used by Temperature Controllers to program, cascade, and feed-forward control. Easily display values, such as temperatures, in engineering units, allowing you to check operation.

• Engineering Example: Program Control

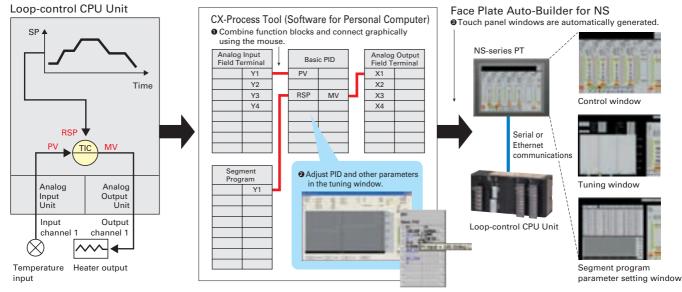


Lineup includes low-cost models that use up to 50 function blocks and models that allow up to 300 blocks designed for large-scale systems and complicated operations.

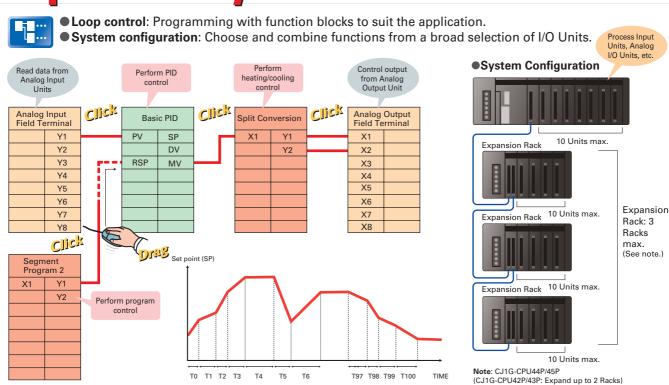

4

6

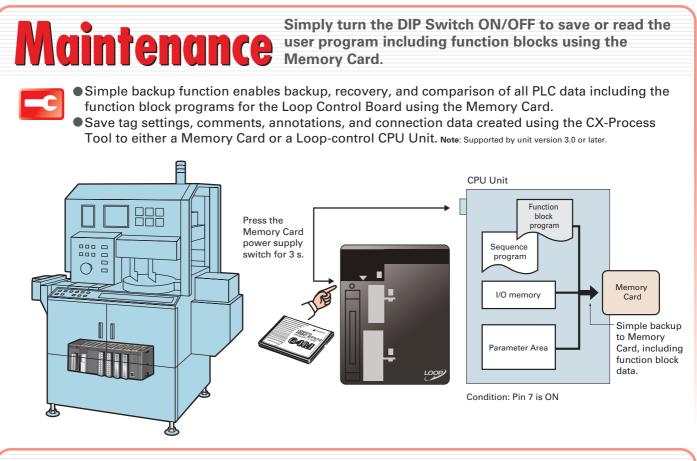

Consolidating OMRON's expertise in temperature and process control cultivated over many years to provide you with effortless solutions using proven algorithms.



• Loop control: Proven functionality of Temperature Controllers and CS-series Loop Control Boards (see note 1) in a compact size.

New Algorithm Further Enhances Control Stability

Disturbance Overshoot Adjustment


This function restrains overshoot when a disturbance is generated, allowing faster stabilization. [Example]

- Temperature drops when adding objects to a furnace
- · Control disturbances when retooling

Optimum Tuning to Suit the Application Fine Tuning

Adjust PVs, SPs, and MVs while monitoring, and save data as CSV files from the software tuning window. Autotuning (AT) and fine-tuning functions can also be used for automatically calculating PID constants (see note 2).

- Note 1: For details on CS-series Loop Control Boards, refer to the PLC-based Process Control Catalog (Cat. No. P051).
 - 2: Control can be fine-tuned by automatically tuning PID parameters using previous control parameters and three user-set requirements to execute fuzzy logic.

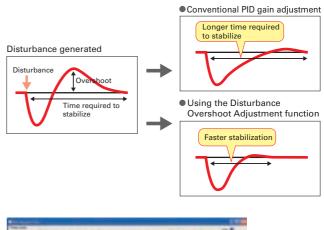





CS-Process Tool Tuning Window

Applications

The Loop-control CPU Unit Provides You with Solutions for the Complex and Advanced Functions Demanded by Control Devices in an Increasingly Diverse Range of Equipment.

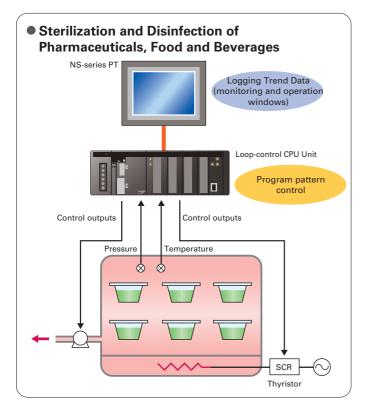

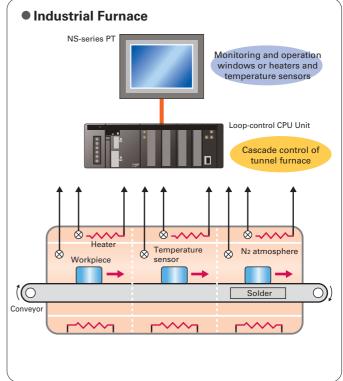


Gradient Temperature Control for Planar Temperature Control Across Multiple Points

Note: CJ1G-CPU45P-GTC only.

Gradient temperature control equalizes the temperatures at multiple points, providing high-quality heat processing, reducing energy loss until temperatures stabilize, and saving labor in adjustments due to interference between heaters.

For details, refer to the SYSMAC CS/CJ Series Controllers for Gradient Temperature Control Catalog (R141).

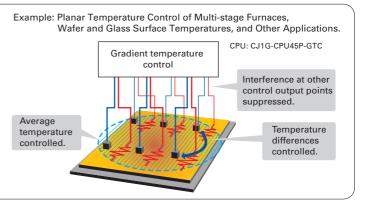

Providing Solutions to Other Problems

Electrical parts equipment requiring high-speed temperature control for higher precision and improved tact time.



Diffusion furnaces that perform cascade control of heater temperatures and internal chamber temperatures.

nal chamber ures. other machines requiring multipoint temperature control.




Food machines.


and

semi-conductor devices

Fermentation equipment requiring temperature, pressure, flowrate, and pH control.

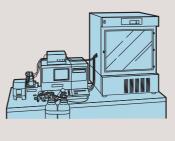

Testing devices that frequently change setting conditions and program settings.

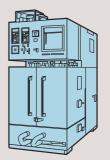

Loop Control Machines and Product Variations

Model Selection


Compact CJ-series Loop-control CPU units are ideal for equipment with built-in applications. CS-series and CS1D models designed for duplex systems are also available for processing equipment that requires high reliability.



Note 1: The Temperature Control Unit integrates control and I/O for either 2 loops or 4 loops.

Temperature control is achieved simply by setting parameters. (CX-Process cannot be used.) 2: For details on CS-series Loop Control Boards and Process-control CPU Units, refer to the PLC-based Process Control Catalog (Cat. No. P051).

System Configuration Example

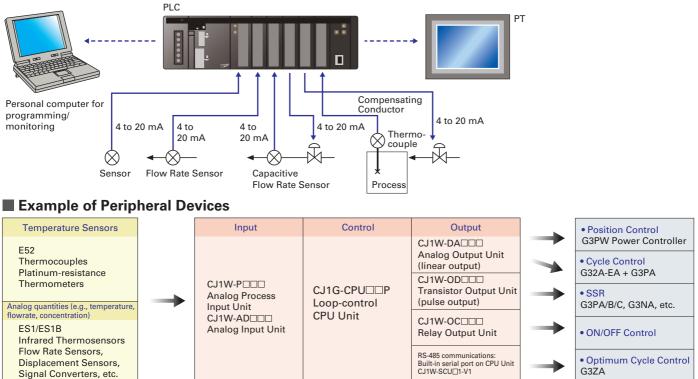

Peripheral Devices

Input Devices

E52-series Temperature Controllers

Plenty of Variation to Suit an Extensive Range of Applications

- Select from a variety of choices in number of elements, shape, protective tubing length, and terminal type.
- •Economical models and special models are available as well as generalpurpose models. Select from a diverse range of models to suit the application: Models for high temperatures, metal patterns, surface measurement, and room temperatures, waterproof and anti-corrosive models, models for moving parts, and models with double elements.

Model Structure

E52-(1)(2)(3) D=(4) (5) M

Example: E52-CA15A D:3.2 2M

① Element type ④ Protective tubing model 2 Protective tubing length 5 Lead wire length ③ Terminal type

ES1/ES1B-series Infrared Thermosensors

Hygienic temperature measurement without damaging the workpiece. Ideal for workpieces on conveyors or other applications in which contact measurement is difficult.

- •ES1 Series: Designed for high-precision, small-spot, high-temperature measurements.
- •Two types of small spot: 3-mm dia. and 8-mm dia.
- High-precision and high-speed measurement with a repeatability of ±0.5 C and response speed of 0.4 s (95%).
- Models are available for medium (-500 to 500 C), mid-low (-50 to 500 C), and high (0 to 1000 C) temperature ranges.





Output Devices

G3PF Solid-state Relay with Built-in **Current Transformer (CT)**


Built-in current transformer is provided and heater burnouts and SSR shortcircuits can be detected.


- Built-in current transformer reduces wiring work.
- Detects the burnout of any one of multiple heaters.
- Detects burnouts in 3-phase heaters.
- Detects SSR short-circuits.
- •Error detection level can be easily set with a switch.
- Can be mounted to a DIN Track or with screws.
- •Three types of input terminals are available: M3 terminals, screwless clamp terminals (detachable), or compact slotted terminals (detachable).

G3ZA Multi-channel Power Controller

Optimum Cycle Control for High-precision Control with Low Noise Smaller than power conditioners.

- Power control with little noise is enabled by combining the Power Controller with zero-cross SSRs. (See note.)
- One Controller can control up to 8 SSRs.
- •RS-485 communications can be used to set output values and heater burnout detection.
- •The G3ZA Smart FB Library is also available.
- •A soft-start function that can be used for lamp heaters has been added. (See note.)
- A 3-phase optimum cycle control function has been added for use with 3-cycle heaters.
- Detection of 150-A currents has been added along with a special current transformer.

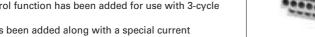

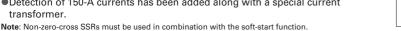



New Products

CJ1W-PH41U Process Analog I/O Unit (High-resolution Unit with Fully Universal Inputs)

CJ1W-AD04U Process Analog I/O Unit (General-purpose Unit with Fully Universal Inputs)

A single Unit handles all types of inputs, including temperature sensor inputs (e.g., thermocouple or platinum resistance thermometer), analog signal inputs (e.g., 4 to 20 mA or 1 to 5 V), and potentiometer inputs.

• Fully Universal Inputs, Including Thermocouple Inputs, Platinum Resistance Thermometer Inputs, and DC/Voltage Inputs

The input type can be selected for each input channel, saving space and reducing costs for compact devices that use a mix of input types. And trouble-free selection of input types improves inventory control and maintenance.

General-purpose Models for Great Cost Performance and High-resolution Models for Applications Such as Semiconductor Production Equipment

These compact CJ-series Units provide four isolated input channels per Unit. Depending on the application, choose either the high-resolution CJ1W-PH41U, which provides a selection of combinations of resolutions and conversion speeds in addition to a PLC-first 1/1,000 C range (0.000 to 50.000 C, 4-wire Pt100), or the general-purpose CJ1W-AD04U, which provides superior cost performance. (See note.)

Note: According to OMRON investigation.



Resolutions and Sampling Speeds for High-resolution Models

Resolution: 1/256,000	Resolution: 1/64,000	Resolution: 1/16,000
60 ms/4 points	10 ms/4 points	5 ms/4 points

Loop-control CPU Units

Loop-control CPU Units

Model		CPU Unit element			Loop Controller	
	I/O capacity	Program capacity	Data memory capacity	Programming software	Number of function blocks	Programming software
CJ1G-CPU45P	1,280 points	60 Ksteps		CX-Programmer,	300 blocks	CX-Process
CJ1G-CPU45P- GTC	(Up to 3 Expansion Racks)		EM: 32 K words × 3 banks)	CX-Simulator, etc.		
CJ1G-CPU44P		30 Ksteps	64 K words (DM: 32 K words,			
CJ1G-CPU43P	960 points (Up to 2	20 Ksteps	EM: 32 K words \times 1 bank)			
CJ1G-CPU42P	Expansion Racks)	10 Ksteps]		50 blocks	

Loop Controller Element Specifications

	Item	Specification
Name		Loop-control CPU Unit
Model Number		CJ1G-CPU P(-GTC)
Applicable PLCs		CJ-series PLCs
Area for data CPU Unit's exchange Auxiliary Area with CPU Unit		 Loop Controller element-to-CPU Unit element: Run Status Flag, PV Error Input Flag, MV Error Input Flag, Execution Error Flag, Function Block Database (RAM) Error Flag, Automatic Cold Start Execution Flag, Backup during Operation Flag, Function Block Changed Flag, etc. CPU Unit element-to-Loop Controller element: Start Mode at Power ON: Hot/Cold Start bit.
	User allocations in I/O Memory	User link tables are used to allocate function block ITEM data in any part of I/O memory in the CPU Unit. (CIO, Work, Holding, or DM Areas, or EM Area bank 0)
	Allocations for all data	HMI function used to allocate function block ITEM data for Control, Operation, External Controller, and System Common blocks in the specified bank of the EM Area in the CPU Unit.
Settings		None
Indicators		Two LED indicators: RUN and ready
Super capacito	or backup data	All function block data (including sequence tables, step ladder program commands), stored error log data
Super capacito	or backup time	5 minutes at 25°C
Data stored in	flash memory	Function block data
Backup from R	AM to flash memory	Executed from CX-Process Tool (as required).
Recovery from flash memory to RAM		Automatically transferred when power to CPU Unit is turned ON if startup mode is set for a cold start, or executed from CX-Process Tool (as required).
Influence on C	PU Unit cycle time	0.8 ms max. (depends on function block data contents)
Current consumption (supplied from Power Supply Unit)		1.06 A for 5 VDC (current consumption for Loop-control CPU Unit including CPU Unit element and Loop Controller element)
		Note: Increased by 150 mA when NT-AL001 Link Adapter is used.

Loop Controller Element Specifications

Loop Controller Element Specifications

	Iten	n		Specifi	cations	
Model			CJ1G-CPU42P CJ1G-CPU43/44/45P(-GTC)			
Operation met	hod		Function block meth	nod		
Loop Controlle			LCB01		LCB03	
Function block analog operations	Control and operation blocks	PID and other control functions, square root op- eration, time operations, pulse train operation, and other operation functions for various processes.	50 blocks max.		300 blocks max	
Sequence control	Step ladder program blocks	Logic sequence and step sequence functions	20 blocks max.200 blocks max.2,000 commands total4,000 commands total100 commands max. per block100 commands max. per blockSeparable into 100 steps max.Separable into 100 steps max.		ds total max. per block	
I/O blocks	Field terminal blocks	Analog I/O function with Analog I/O Unit, contact I/O function with Basic I/O Unit	30 blocks max.			: 30 blocks max. 5P: 40 blocks max.
	User link tables	Analog data I/O and con- tact data I/O function for CPU Unit	2,400 data items m	ax.		
	HMI function	I/O function for the speci- fied bank of the EM Area in the CPU Unit for func- tion block ITEM data used for Control, Operation, External Controller, and System Common blocks for the HMI function.	Area anc- used Operation and Control blocks: Operation and Control blocks: 50 blocks max. × 20 send/receive words 300 blocks max. × 300 blocks max. × System Common blocks: System Common 20 send/receive words		Control blocks: . × 20 send/receive words on blocks:	
	System Common block	System common opera- tion cycle setting, run/ stop command, load rate monitor, etc.				
Method for cre	eating and trans	sferring function blocks	Created using CX-Process Tool (purchased separately) and transferred to Loop Controller.			
External I/O re	sponse time		The time from external input of analog signals up to external output of analog sig- nals on a single control loop depends on the function block's operation cycle and the CPU Unit's cycle time.			
Operation cyc	le		Can be set for each	1, 0.2, 0.5, 1, or 2 s (d i function block. nd 0.05 s cannot be se		,
Internal opera	tion	Number of control loops	standard applicati		oop consisting o	CB load rate is 80% for a of one Ai4 Terminal, Seg- in the following table.
			Operation cycle	Maximum number of loops	Operation cycle	Maximum number of loops
			0.01 s	20 loops	0.2 s	150 loops
			0.02 s	35 loops (see note)	0.5 s	(See note.)
			0.05 s	70 loops (see note)	1 s	
			0.1 s	100 loops (see note)	2 s	
			Note: Loop Control	ler element LCB01: 2	5 loops max.	
Control metho	d	PID control method	PID with 2 degrees of freedom			
		Control combinations	Basic PID control, of dead time compense		forward control, a trol with differen	sample PI control, Smith tial gap, override control,
Alarms		PID block internal alarms	4 PV alarms (upper upper-limit, upper limit, lower limit, lower lower-limit) and 1 deviation alarm per PID block			wer lower-limit) and 1
		Alarm blocks	High/low alarm bloc	ks, deviation alarm bl	ocks	

List of Function Blocks

List of Function Blocks

System Common Block

Туре	Block Name	Function
	System Common	Makes settings common to all function blocks and outputs signals for the system.

Control Blocks

Туре	Block Name	Function
Controller	2-position ON/OFF (See note 1.)	2-position type ON/OFF controller
	3-position ON/OFF (See note 1.)	3-position type ON/OFF controller for heating/cooling ON/OFF control
	Basic PID (See note 1.)	Performs basic PID control.
	Advanced PID (See note 1.)	Performs advanced PID control for enabling deviation/MV compensation, MV tracking, etc.
	Blended PID (See note 2.)	Performs PID control on the cumulative value (cumulative deviation) between the accumulated value PV and accumulated value Remote Set Point.
	Batch Flowrate Capture (See note 2.)	Functions to open the valve at a fixed opening until a fixed batch accumulated value is reached.
	Fuzzy Logic (See note 2.)	Outputs up to 2 analog outputs based on fuzzy logic performed on up to 8 analog inputs.
	Indication and Setting (See note 1.)	Manual setter with PV indication and SP setting functions
	Indication and Opera- tion (See note 1.)	Manual setter with PV indication and MV setting functions
	Ratio Setting (See note 1.)	Ratio and bias setter with PV indication and ratio setting function
	Indicator (See note 1.)	PV indicator with PV alarm

Note: 1. The Function Blocks dealing with high-speed operation (operation cycle: 0.01, 0.02, and 0.05 seconds is possible).

2. Cannot be used with the CJ1G-CPU45P-GTC.

Operation Blocks

Туре	Block Name	Function
Alarm/Signal restrictions/ Hold	High/Low Alarm (See note 1.)	Provides the alarm contact outputs for the high and low limits of single analog signals.
T IOIG	Deviation Alarm (See note 1.)	Provides the alarm contact outputs for the devia- tion of two analog signals.
	Rate-of-change Opera- tion and Alarm (See note 1.)	Provides the alarm contact outputs for the high and low limits of rate-of-change operation when the analog signal rate-of-change is output.
	High/Low Limit (See note 1.)	Limits the high and low limits of single analog signals.
	Deviation Limit (See note 1.)	Calculates the deviation between two analog signals, and limits the deviation within that range.
	Analog Signal Hold (See note 1.)	Holds the maximum, minimum or instantaneous value of single analog signals.
Arithmetic	Addition or Subtraction (See note 1.)	Performs addition/subtraction with gain and bias on up to 4 analog signals.
	Multiplication (See note 1.)	Performs multiplication with gain and bias on up to 2 analog signals.
	Division (See note 1.)	Performs division with gain and bias on up to 2 analog signals.
	Arithmetic Operation (See note 1.)	Performs various math operation (trigonometric, logarithmic, etc.) on floating-point decimal values converted (to industrial units) from up to 8 analog inputs.
	Range Conversion (See note 1.)	Easily converts up to 8 analog signals simply by inputting the 0% and 100% input values and 0% and 100% output values.
Functions	Square Root (See note 1.)	Performs square root extraction (with low end cutout) on single analog signals.
	Absolute Value (See note 1.)	Outputs the absolute value of single analog sig- nals.
	Non-linear Gain (Dead Band) (See note 1.)	Performs non-linear (3 gain values) operation on single analog signals. Analog signals can also set as a dead band (with different gap).
	Low-end Cutout (See note 1.)	Sets output to zero close to the zero point of single analog signals.
	Segment Linearizer (See note 1.)	Converts single analog signals to 15 segments before the signals are output.
	Temperature and Pressure Correction (See note 1.)	Performs temperature and pressure correction.
Time Function	First-order Lag (See note 1.)	Performs first-order lag operation on single analog signals.
	Rate-of-change Limit (See note 1.)	Performs rate-of-change restriction on single analog signals.
	Moving Average (See note. 1)	Performs moving average operation on single analog signals.
	Lead/Delay (See note 1.)	Performs lead/delay operation on single analog signals.
	Dead Time (See note 1.)	Performs dead time and first-order lag operations on single analog signals.
	Dead Time Compensa- tion	Used for Smith's dead time compensation PID control.
	Accumulator for instanta- neous value input	Accumulates analog signals, and outputs 8-digit accumulated value signals.
	Run Time Accumulator	Accumulates the operating time, and outputs the pulse signal per specified time.
	Time Sequence Data Statistics (See note 1.)	Records time sequence data from analog signals and calculates statistics, such as averages and standard deviations.
	Ramp Program	Ramp program setter for combining ramps for time and hold values.
	Segment Program	Segment program setter setting the output values with respect to time.
	Segment Program 2	Segment program setting with wait function for
	Segment Program 3	setting the output values with respect to time.

List of Function Blocks

Signal Selection (See note 1.) Selects the rank of up to 8 analog signals. Signal Selection (See note 1.) Selects the specified analog signals specified by the contact signal from up to 8 analog signals. 3-input Selector (See note 1.) Selects and outputs one analog input signal in three switched (See note 1.) Constant Selector (See note 1.) Outputs one analog input signal in three switched (See note 1.) Constant Generator (See note 1.) Outputs 8 independent constants. Ramped Switch Switches two analog inputs (or constants) with a ramp. Bank Selector Records the PID parameters (SP, P, I, D, MH, ML) in up to 8 sets in advance, and switches the PID parameter for Basic/Advance/Bieleder PID Blocks according to the analog input range (zone) or input bls. Split Converter Inputs the MV from the Basic PID block or Ad- vanceer PID block, converts the WV into two analog outputs for V characteristics or parallel characteristics (e.g., MV from tang or cooling) and outputs from and contract. Variable ITEM Setting (See note 1.) Writes the analog signal to the specified ITEM at the rising edge of the send command contact. Batch Data Collector (See note 1.) Stores each of max. 8 analog inputs to buffer by a containt timing within sequential processing. Accumulated Value In- put Adder Adds up to four accumulated value signals. Accumulated Value In- put Adder Converts 4-digit accumulated value signals.	Туре	Block Name	Function
Input Selector (See note 1.) Selects the specified nation ginals specified by the contact signal from up to 8 analog signals. 3-input Selector (See note 1.) Selects and outputs one analog input signals. 3-output Selector (See note 1.) Outputs one analog input signal in three switched directions. Constant Selector (See note 1.) Outputs 8 independent constants. Ramped Switch Switches two analog inputs (or constants) with a ramp. Bank Selector Records the PID parameters (SP, P, I, D, MH, ML) in up to 8 sets in advance, and switches the PID parameter for Basic Advanced/Blended PID Blocks according to the analog input range (cone) or input bits. Split Converter Inputs the MV from the Basic PID block or Ad- vanced PID block, converts the MV into two analog outputs for VaracetarSize or parallel and outputs them. Constant ITEM Setting (See note 1.) Writes the constant to the specified ITEM at the rising edge of the send command contact. Batch Data Collector (See note 1.) Stores each of max. 8 analog signals. Constant ITEM Setting Variable ITEM Setting (See note 1.) Multiplies analog signals to the specified ITEM at the rising edge of the send command contact. Accumulated Value An- alog Multiplier Acdumulated Value An- alog Multiplier Constant comparison countact wate signals. Accumulated Value In- put/Contact Dutyput Constant comparison results as contacts. <t< td=""><td>Signal Selec-</td><td></td><td>Selects the rank of up to 8 analog signals.</td></t<>	Signal Selec-		Selects the rank of up to 8 analog signals.
3-input Selector (See note 1.) Selects and outputs one of three analog input signals. 3-output Selector (See note 1.) Outputs one analog input signal in three switched directions. Constant Selector (See note 1.) Outputs 8 independent constants. Ramped Switch Switches two analog inputs (or constants) with a namp. Bank Selector Records the PID parameters (SP, P, I, D, MH, ML) in up to 8 sels in advance. and switches the PID parameter for Basic Advanced/Biended PID gromo or input bits. Split Converter Imputs the MV form. Imputs the MV form. Bank Selector Constant ITEM Setting (See note 1.) Writes the constant to the specified ITEM at the rising edge of the send command contact. Constant ITEM Setting (See note 1.) Writes the analog signal to the specified ITEM at the rising edge of the send command contact. Batch Data Collector (See note 1.) Stores each of max. 8 analog inputs to buffer by a certain timing within sequential processing. Pulse Train Operation Accumulated Value In- ourd Adder Converts 4-digit accumulated value signals to 8 digits. Accumulated value in- ourd Adder of the parameter for lawice, Canalog signals to pul/Contact Output Contact pulses, and outputs e-digit accumulated value signals to pul/Contact Output Contact Distributor Connect contact signals betwen function blocks in a 1: connection.	tion/Switching	Input Selector	Selects the specified analog signals specified by
3-output Selector (See note 1.) Outputs one analog input signal in three switched directions. Constant Selector (See note 1.) Selects 8 preset constants by the contact signal constant Selector (See note 1.) Ramped Switch Switches two analog inputs (or constants) with a namp. Bank Selector Records the PID parameters (SP, P, I, D, MH, ML) in up to 8 sets in advance, and switches the PID parameter for Basic/Advanced/Blended PID blocks according to the analog input range (constant transport of the PID parameters (SP, P, I, D, MH, ML) in up to 8 sets in advance, and switches the PID parameter for Basic/Advanced/Blended PID blocks according to the analog input range (constant transport of the PID parameters (SP, P, I, D, MH, ML) in up to 8 sets in advance, and switches the PID parameter for Basic/Advanced/Blended PID blocks corverts the maiolic singut range (constant transport on the set of the set on command contact. Constant TEM Setting (See note 1.) Writes the constant to the specified ITEM at the rising edge of the send command contact. Pulse Train Operation Accumulated Value In- Accumulated Value In- Multiplier Multiplies analog signals to the accumulated value signals. Accumulated Value In- Multated value unput Counts to furg accumulated value signals to 8 digits. Accumulated Value In- Multated value unput Counters 4 -digit accumulated value signals to 8 digits. Accumulated Value In- Multated value unput Counters 4 -digit accumulated value signals to 8 digits. Accumulated Value In- Multor (See note 1.) </td <td></td> <td>3-input Selector</td> <td>Selects and outputs one of three analog input</td>		3-input Selector	Selects and outputs one of three analog input
Constant Selector (See note 1.) Selects 8 preset constants by the contact signal Constant Generator (See note 1.) Ramped Switch Switches two analog inputs (or constants) with a ramp. Bank Selector Mecorade the PID parameters (SP, PI, D, MH, PHD parameter of basic/Advance/Blendet PID Biocks according to the analog input range (zone) or input bits. Split Converter Inputs the MV from the Basic Advance/Blendet PID Biocks according to the analog input range (zone) or input bits. Constant TEM Setting Constant TEM Setting (See note 1.) Writes the constant to the specified TEM at the sing edge of the send command contact. Variable TEM Setting (See note 1.) Writes the constant to the specified TEM at the sing edge of the send command contact. Pulse Train (See note 1.) Accumulated Value In- put Adder Adds up to four accumulated value signals. Accumulated Value An- alog Multiplier Adds up to four accumulated value signals. Accumulated value An- digit accumulated value signals. Accumulated Value In- put Adder Converts 4-digit accumulated value signals to digits. Contact they are output signals. Accumulated Value In- put Adder Converts 4-digit accumulated value signals to digits. Contact Distributor Contact Distributor Converts 4-digit accumulated value signals to digits. Contact Distributor Contact Distributor C		3-output Selector	Outputs one analog input signal in three switched
(See note 1.) Switches two analog inputs (or constants) with a ramp. Bank Selector Records the PID parameters (SP, P, I, D, MH, ML, I) up to 8 sets in advance, and switches the PID parameter for Basic/Advanced/Biended PID Biocks according to the analog input range (zone) or input bits. Split Converter Inputs the MY from the Basic PID block or Advanced PID block, converts the MV into two analog outputs for V characteristics or parallel characteristics (e.g., MV for heating or cooling) and outputs them. Constant (TEM Setting (See note 1.) Writes the constant to the specified (TEM at the rising edge of the send command contact. Batch Data Collector (See note 1.) Writes the analog signal to the specified ITEM at the rising edge of the send command contact. Pulse Train Accumulated Value In- put Adder Adds up to four accumulated value signals. Accumulated Value In- put Adder Adds up to four accumulated value signals to 8 digits. Gornerts 4-digit accumulated value signals to 8 digits. Contract Input/Accumu- lated value uput Converts 4-digit accumulated value signals to 8 digits. Contract Duputs and outputs 8-digit signals. Sequence Operation Contact Distributor Connect contact signals between function blocks in a 1:1 connection. Contact Distributor Connect contact signals between function blocks in a 1:1 connection. Constant Compares up to eight pairs of analog signals and constants. Variable		Constant Selector	Selects 8 preset constants by the contact signal.
Imamp. Records the PID parameters (SP, P I, D, MH, ML) in up to 8 sets in advance, and switches the PID parameters (SP, P I, D, MH, ML) in up to 8 sets in advance, and switches the PID parameter for Basic/Advanced/Dilended PID Experiment and the analog input range (zone) or input bits. Split Converter Inputs the MV from the Basic PID block or Advanced PID block, converts the MV into two analog outputs for V characteristics or parallel characteristics (e.g., MV for heating or cooling) and outputs them. Constant Constant TEM Setting (See note 1.) Writes the constant to the specified ITEM at the rising edge of the send command contact. Batch Data Collector Stores each of max. 8 analog inputs to buffer by a certain timing within sequential processing. Pulse Train (See note 1.) Adds up to four accumulated value signals. Accumulated Value In- put Adder Adds up to four accumulated value signals. Accumulated Value In- put/Accumu- lated value signals. Contact input/Accumu- lated value signals. Interventer Contact input/Accumu- lated value signals. Accumulated Value In- put/Contact Output Converts 4-digit accumulated value signals to 8 digits. Accumulated Value In- put/Contact Output Connerts 4-digit accumulated value signals. Accumulated Value In- put/Contact Output Converts 4-digit accumulated value signals to 8 digits. Accumulated Value In- put/Contact Output Converts 4-digit accumulated va			Outputs 8 independent constants.
ML) in up to 8 sets in advance, and switches the PIID parameter for Basic/Advanced/Blended PID Blocks according to the analog input range (zone) or input bits. Split Converter Inputs the MV from the Basic PID block or Advanced PIB hock, converts the MV into two analog outputs for V characteristics or parallel characteristics (e.g., MV for heating or cooling) and outputs them. Constant ITEM Setting (See note 1.) Writes the constant to the specified ITEM at the rising edge of the send command contact. Variable ITEM Setting (See note 1.) Writes the analog signal to the specified ITEM at rising edge of the send command contact. Pulse Train (See note 1.) Accumulated Value An- put Adder Adds up to four accumulated value signals. Accumulated Value An- mulated value input (See note 1.) Adds up to four accumulated value signals. Accumulated Value An- mulated value input (See note 1.) Converts 4-digit accumulated value signals to 8 digits. Contact input/Accumu- lated value input (See note 1.) Converts 4-digit accumulated value signals to 8 digits. Contact Distributor Others Contact Distributor Conserts 4-digit accumulated value signals to the speed contact pulses before they are output 8-digit accumulated value signals. Sequence Operation Contact Distributor Contact Distributor Conserts 4-digit accumulated value signals to contacts. Variable Comparator (See note 1.) Compares up to eight sets of analog signals, and outputs a cock pulse at the setting time interva		Ramped Switch	Switches two analog inputs (or constants) with a ramp.
Constant ITEM Setting Constant ITEM Setting (See note 1.) Writes the constant to the specified ITEM at the rising edge of the send command contact. Variable TTEM Setting (See note 1.) Writes the constant to the specified ITEM at the rising edge of the send command contact. Batch Data Collector Stores each of max. 8 analog inputs to buffer by ochrain the rising edge of the send command contact. Pulse Train Operation Accumulated Value In- put Adder Adds up to four accumulated value signals. Accumulated Value An- alog Multiplier Adds up to four accumulated value signals. Accumulated Value An- put Adder Converts 4-digit accumulated value signals to 8 digits. Contact input/Accumu- lated value output Converts 4-digit accumulated value signals to 8 digits. Contract input/Accumu- lated value output Converts 4-digit accumulated value signals to tow-speed contact pulses, and outputs 8-digit accumulated value signals to tow-speed contact pulses before they are output 00 hers Analog/Pulse Width Converter (See note 1.) Compares up to eight sets of analog signals and constant, and outputs the comparison results as contacts. Variable Comparator (See note 1.) Compares up to eight pairs of analog signals, and constant, and outputs the comparison results as contacts. Variable Comparator (See note 1.) 2-stage output type addition timer for forecast values and reached values. Can also output the present value.		Bank Selector	ML) in up to 8 sets in advance, and switches the PID parameter for Basic/Advanced/Blended PID Blocks according to the analog input range
ITEM Setting (See note 1.) rising edge of the send command contact. Variable ITEM Setting (See note 1.) Writes the analog signal to the specified ITEM at the rising edge of the send command contact. Batch Data Collector (See note 1.) Stores each of max. 8 analog inputs to buffer by a certain timing within sequential processing. Pulse Train Operation Accumulated Value An- alog Multiplier Adds up to four accumulated value signals. Accumulated Value An- alog Multiplier Multiplies analog signals by the accumulated value signals. Accumulated Value An- alog Multiplier Converts 4-digit accumulated value signals to 8 digits. Accumulated Value In- put/Contact Output Converts 4-digit accumulated value signals to low-speed contact pulses before they are output contact pulses before they are output analog signal. Sequence Operation Contact Distributor Connact contact pulses before they are output contact pulses before they are output contact Dustributor Constant Comparator (See note 1.) Compares up to eight sets of analog signals and constants, and outputs the comparison results as contacts. Variable Comparator (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as contacts. ON/OFF Timer (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as contacts. Clock Pulse (See note 1.)		Split Converter	vanced PID block, converts the MV into two analog outputs for V characteristics or parallel characteristics (e.g., MV for heating or cooling)
(See note 1.) the rising edge of the send command contact. Batch Data Collector (See note 1.) Stores each of max. 8 analog inputs to buffer by a certain timing within sequential processing. Pulse Train Operation Accumulated Value In- put Adder Adds up to four accumulated value signals. Accumulated Value An- alog Multiplier Adds up to four accumulated value signals. Accumulated value input Converts 4-digit accumulated value signals to 8 digits. Contact input/Accumu- lated value output Converts 4-digit accumulated value signals to low-speed contact pulses, and outputs 8-digit accumulated signals. Accumulated Value In- put/Contact Output Converts 4-digit accumulated value signals to low-speed contact pulses before they are output cycle duration so that it is proportional to the analog signal. Sequence Operation Contact Distributor Connect contact signals between function blocks in a 1:1 connection. Constant Comparator (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as contacts. Variable Comparator (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as output the present value. ON/OFF Timer (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Internal Switch (See note 1.) Checks an analog input for 8 levels and o			
(See note 1.) a certain timing within sequential processing. Pulse Train Operation Accumulated Value In- put Adder Adds up to four accumulated value signals. Accumulated Value An- alog Multiplier Multiplies analog signals by the accumulated value signals. Accumulated Value In- mulated value input Converts 4-digit accumulated value signals to 8 digits. Contact input/Accumu- lated value output Converts 4-digit accumulated value signals to low-speed contact pulses before they are output cycle duration so that it is proportional to the analog signal. Others Analog/Pulse Width Converter (See note 1.) Connect contact signals between function blocks in a 1:1 connection. Sequence Operation Contact Distributor Connect contact signals between function blocks in a 1:1 connection. Contact Distributor Constant Comparator (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as contacts. Variable Comparator (See note 1.) Z-stage output type addition timer for forecast values and reached values. Can also output the present value. ON/OFF Timer (See note 1.) Counter (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Internal Switch (See note 1.) Temporary storage contact for accepting relays in the Step Ladder Progravitor as an analo quicat the sare time.			Writes the analog signal to the specified ITEM at the rising edge of the send command contact.
Operation put Adder Image of the state		Batch Data Collector (See note 1.)	Stores each of max. 8 analog inputs to buffer by a certain timing within sequential processing.
alog Multiplier value signals. value signals. Accumulator for accumulated value input Converts 4-digit accumulated value signals to 8 digits. Contact input/Accumulated Value Input/Ontact Output Counts low-speed contact pulses, and outputs 8-digit accumulated value signals to 10 low-speed contact pulses before they are output 10 low-speed contact signals between function blocks in a 1:1 connection. Sequence Operation Contact Distributor Conneert contact signals between function blocks in a 1:1 connection. Constant Comparator (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as contacts. Variable Comparator (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as contacts. Timer (See note 1.) Z-stage output type addition timer for forecast values and reached values. Can also output the present value. ON/OFF Timer (See note 1.) Clock Pulse (See note 1.) Coutputs a clock pulse at the setting time interval for a single operation cycle. Counter (See note 1.) Counter (See note 1.) Counter (See note 1.) Setting to a single operation cycle. Conter (See note 1.) Counter (See note 1.) Counter (See note 1.) Counter			Adds up to four accumulated value signals.
mulated value input digits. Contact input/Accumu- lated value output Counts low-speed contact pulses, and outputs 8-digit accumulated signals. Accumulated Value In- put/Contact Output Converts 4-digit accumulated value signals to low-speed contact pulses before they are output Converter (See note 1.) Sequence Operation Contact Distributor Connect contact signals between function blocks in a 1:1 connection. Constant Comparator (See note 1.) Compares up to eight sets of analog signals and constants, and outputs the comparison results as contacts. Variable Comparator (See note 1.) Compares up to eight sets of analog signals, and outputs the comparison results as contacts. Timer (See note 1.) 2-stage output type addition timer for forecast values and reached values. Can also output the present value. ON/OFF Timer (See note 1.) Timer for performing ON-OFF operation at preset ON and OFF times. Clock Pulse (See note 1.) Outputs a clock pulse at the setting time interval for a single operation cycle. Counter (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Internal Switch (See note 1.) Timer for performing ON-OFF operation acycle. Counter (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Internal Switch (See n			
Iated value output 8-digit accumulated signals. Accumulated Value In- put/Contact Output Converts 4-digit accumulated value signals to low-speed contact pulses before they are output Others Analog/Pulse Width Converter (See note 1.) Changes the ON/OFF duration ratio in a constant cycle duration so that it is proportional to the analog signal. Sequence Operation Contact Distributor Connect contact signals between function blocks in a 1:1 connection. Constant Comparator (See note 1.) Compares up to eight sets of analog signals, and outputs the comparison results as contacts. Variable Comparator (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as contacts. Timer (See note 1.) 2-stage output type addition timer for forecast values and reached values. Can also output the present value. ON/OFF Timer (See note 1.) Timer for performing ON-OFF operation at preset ON and OFF times. Clock Pulse (See note 1.) Outputs a clock pulse at the setting time interval for a single operation cycle. Counter (See note 1.) 2-stage output type addition timer for forecast values and marival values. Can also output the current value. Internal Switch (See note 1.) Temporary storage contact for accepting relays in the Step Ladder Program block. Note (See note 1.) Checks an analog input for 8 levels and outputs a contact corresponding to the level. The			
put/Contact Output Iow-speed contact pulses before they are output Others Analog/Pulse Width Converter (See note 1.) Changes the ON/OFF duration ratio in a constant converter (See note 1.) Sequence Operation Contact Distributor Connect contact signals between function blocks in a 1:1 connection. Constant Comparator (See note 1.) Compares up to eight sets of analog signals, and outputs the comparison results as contacts. Variable Comparator (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as contacts. Timer (See note 1.) 2-stage output type addition timer for forecast values and reached values. Can also output the present value. ON/OFF Timer (See note 1.) Clock Pulse (See note 1.) Outputs a clock pulse at the setting time interval for a single operation cycle. Counter (See note 1.) 2-stage output type addition timer for forecast values and arrival value. Counter (See note 1.) Internal Switch (See note 1.) Counter (See note 1.) 2-stage output type addition timer for forecast values and arrival value. Internal Switch (See note 1.) Temporary storage contact for accepting relays in the Step Ladder Program block. Note: (One internal switch is already allocated as "temporary storage" in CX-Process Tool.) Level Check (See note 1.) Checks an analog input for 8 levels and outputs a			
Converter (See note 1.) cycle duration so that it is proportional to the analog signal. Sequence Operation Contact Distributor Connect contact signals between function blocks in a 1:1 connection. Constant Comparator (See note 1.) Compares up to eight sets of analog signals, and constants, and outputs the comparison results as contacts. Variable Comparator (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as contacts. Timer (See note 1.) 2-stage output type addition timer for forecast values and reached values. Can also output the present value. ON/OFF Timer (See note 1.) Clock Pulse Outputs a clock pulse at the setting time interval for a single operation cycle. Counter (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. ON/OFF Timer (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Counter (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Internal Switch (See note 1.) Temporary storage contact for accepting relays in the Step Ladder Program block. Internal Switch (See note 1.) Temporary storage contact for accepting relays in the Step Ladder Program block. Internal Switch (See note 1.) Temporary storage co			Converts 4-digit accumulated value signals to low-speed contact pulses before they are output.
Opération in a 1:1 connection. Constant Comparator (See note 1.) Compares up to eight sets of analog signals and constants, and outputs the comparison results as contacts. Variable Comparator (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as contacts. Timer (See note 1.) 2-stage output type addition timer for forecast values and reached values. Can also output the present value. ON/OFF Timer (See note 1.) Timer for performing ON-OFF operation at preset values and orectimes. Clock Pulse (See note 1.) Outputs a clock pulse at the setting time interval for a single operation cycle. Counter (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Internal Switch (See note 1.) Temporary storage contact for accepting relays in the Step Ladder Program block. Note: (One internal switch is already allocated as "temporary storage" in CX-Process Tool.) Level Check (See note 1.) Checks an analog input for 8 levels and outputs a contact corresponding to the level. The level number is also output as an analog value at the same time. Contact Type Control Tar- get ON/OFF Valve Manipu- lator Manipulates and monitors motor operation. Reversible Motor Manip ulator Manipulates and monitors reversible motor operation. Manipulates and monitors motor operation.	Others		cycle duration so that it is proportional to the
(See note 1.) constants, and outputs the comparison results as contacts. Variable Comparator (See note 1.) Compares up to eight pairs of analog signals, and outputs the comparison results as contacts. Timer (See note 1.) 2-stage output type addition timer for forecast values and reached values. Can also output the present value. ON/OFF Timer (See note 1.) 2-stage output type addition timer for forecast values and reached values. Can also output the present value. ON/OFF Timer (See note 1.) Timer for performing ON-OFF operation at preset ON and OFF times. Clock Pulse (See note 1.) Outputs a clock pulse at the setting time interval for a single operation cycle. Counter (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Internal Switch (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Internal Switch (See note 1.) Temporary storage contact for accepting relays in the Step Ladder Program block. Note: (One internal switch is already allocated as "temporary storage" in CX-Process Tool.) Level Check (See note 1.) Contact Type get ON/OFF Valve Manipulates and monitors ON/OFF valves with open/close limit switches. Motor Manipulator Manipulates and monitors notor operation. Reversible Motor Manip- ulator Manipulat		Contact Distributor	Connect contact signals between function blocks in a 1:1 connection.
(See note 1.) and outputs the comparison results as contacts. Timer (See note 1.) 2-stage output type addition timer for forecast values and reached values. Can also output the present value. ON/OFF Timer (See note 1.) Timer for performing ON-OFF operation at preset value. ON/OFF Timer (See note 1.) Timer for performing ON-OFF operation at preset value. Clock Pulse (See note 1.) Outputs a clock pulse at the setting time interval for a single operation cycle. Counter (See note 1.) 2-stage output type addition timer for forecast values and rarival values. Can also output the current value. Internal Switch (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Internal Switch (See note 1.) Temporary storage contact for accepting relays in the Step Ladder Program block. Note: (One internal switch is already allocated as "temporary storage" in CX-Process Tool.) Note: (One internal switch is already allocated as "temporary storage" in CX-Process Tool.) Level Check (See note 1.) Checks an analog input for 8 levels and outputs a clock for a sonalog value at the same time. Contact Type Control Target ON/OFF Valve Manipulates and monitors Motor operation. Reversible Motor Manip ulator Manipulates and monitors motor operation. Reversible Motor Manipulates and monitors reversible motor operation.			Compares up to eight sets of analog signals and constants, and outputs the comparison results as contacts.
Contact Type get ON/OFF Valve Manipu- lator Checks an analog input for 8 levels and outputs a contact Type get ON/OFF Valve Manipu- lator Contact Type Gow More Manipulates Motor Opening Manipu- lator ON/OFF Valve Manipu- lator Outputs a target opening, and manipulates an electric positional-proportional motors			
(See note 1.) ON and ÔFF times. Clock Pulse (See note 1.) Outputs a clock pulse at the setting time interval for a single operation cycle. Counter (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Internal Switch (See note 1.) Temporary storage contact for accepting relays in the Step Ladder Program block. Note: (One internal switch is already allocated as "temporary storage" in CX-Process Tool.) Checks an analog input for 8 levels and outputs a contact corresponding to the level. The level number is also output as an analog value at the same time. Contact Type get ON/OFF Valve Manipu- lator Manipulates and monitors ON/OFF valves with open/close limit switches. Motor Manipulator Manipulates and monitors motor operation. Reversible Motor Manip- lator Inapiculates and monitors reversible motor operation. Motor Opening Manipu- lator Inputs a target opening, and manipulates an electric positional-proportional motor. Switch Meter (See note 2.) Manipulates and Monitors multiple (up to 8) devices such as ON/OFF valves, motors, or		Timer (See note 1.)	values and reached values. Can also output the
(See note 1.) for a single operation cycle. Counter (See note 1.) 2-stage output type addition timer for forecast values and arrival values. Can also output the current value. Internal Switch (See note 1.) Temporary storage contact for accepting relays in the Step Ladder Program block. Internal Switch (See note 1.) Temporary storage contact for accepting relays in the Step Ladder Program block. Level Check (See note 1.) Checks an analog input for 8 levels and outputs a contact corresponding to the level. The level number is also output as an analog value at the same time. Contact Type Control Target ON/OFF Valve Manipulates Motor Manipulator Manipulates and monitors MOVOFF valves with open/close limit switches. Motor Manipulator Manipulates and monitors reversible motor operation. Reversible Motor Manipulates Inputs a target opening, and manipulates an electric positional-proportional motor. Switch Meter (See note 2.) Gwitch Meter Manipulates and Monitors multiple (up to 8) devices such as ON/OFF valves, motor.			Timer for performing ON-OFF operation at preset ON and OFF times.
Contact Type get ON/OFF Valve Manipulates Manipulates and monitors ON/OFF valves with operation. Motor Manipulator Manipulates and monitors reversible motor operation. Manipulates and monitors reversible motor operation.			Outputs a clock pulse at the setting time interval for a single operation cycle.
(See note 1.) in the Step Ladder Program block. Note: (One internal switch is already allocated as "temporary storage" in CX-Process Tool.) Level Check Checks an analog input for 8 levels and outputs a contact corresponding to the level. The level number is also output as an analog value at the same time. Contact Type Control Target ON/OFF Valve Manipulator Motor Manipulator Manipulates and monitors MV/OFF valves with open/close limit switches. Reversible Motor Manipulator Manipulates and monitors notor operation. Reversible Motor Manipulator Inputs a target opening, and manipulates an electric positional-proportional motor. Switch Meter Switch Meter Switch Meter Manipulates and ON/OFF valves, motors, or		Counter (See note 1.)	values and arrival values. Can also output the
(See note 1.) a contact corresponding to the level. The level number is also output as an analog value at the same time. Contact Type Control Tar- get ON/OFF Valve Manipu- lator Manipulates and monitors ON/OFF valves with open/close limit switches. Motor Manipulator Manipulates and monitors motor operation. Reversible Motor Manip- ulator Manipulates and monitors reversible motor operation. Motor Opening Manipu- lator Inputs a target opening, and manipulates an electric positional-proportional motor. Switch Meter (See note 2.) Manipulates and ON/OFF valves, motors, or			in the Step Ladder Program block. Note: (One internal switch is already allocated as "temporary storage" in CX-Process
Control Tar- get lator open/close limit switches. Motor Manipulator Manipulates and monitors motor operation. Reversible Motor Manip- ulator Manipulates and monitors reversible motor operation. Motor Opening Manipu- lator liputs a target opening, and manipulates an electric positional-proportional motor. Switch Meter (See note 2.) devices such as ON/OFF valves, motors, or			a contact corresponding to the level. The level number is also output as an analog value at the
Motor Manipulator Manipulates and monitors motor operation. Reversible Motor Manipulates and monitors reversible motor operation. Manipulates and monitors reversible motor operation. Motor Opening Manipulates and monitors reversible motor operation. Inputs a target opening, and manipulates an electric positional-proportional motor. Switch Meter (See note 2.) Manipulates and monitors multiple (up to 8) devices such as ON/OFF valves, motors, or	Control Tar-		
ulator operation. Motor Opening Manipulator Inputs a target opening, and manipulates an electric positional-proportional motor. Switch Meter Manipulates and monitors multiple (up to 8) devices such as ON/OFF valves, motors, or	yeı		
lator electric positional-proportional motor. Switch Meter (See note 2.) Manipulates and monitors multiple (up to 8) devices such as ON/OFF valves, motors, or			
(See note 2.) devices such as ON/OFF valves, motors, or			electric positional-proportional motor.
			devices such as ON/OFF valves, motors, or

Sequence Control

Туре	Block Name	Function
	Step Ladder Pro- gram (See note.)	Performs logic sequence and step pro- gression control.

Note: The Function Blocks dealing with high-speed operation (operation cycle: 0.01, 0.02, and 0.05 seconds is possible).

Field Terminals

Туре	Block Name	Function
Contact	DI 8-point Terminal	Inputs 8 contacts from 8-point Input Unit.
I/O (See note.)	DI 16-point Terminal	Inputs 16 contacts from 16-point Input Unit.
	DI 32-point Terminal	Inputs 32 contacts from 32-point Input Unit.
	DI 64-point Terminal	Inputs 64 contacts from 64-point Input Unit.
	DO 8-point Terminal	Outputs 8 contacts from 8-point Output Unit.
	DO 16-point Termi- nal	Outputs 16 contacts from 16-point Output Unit.
	DO 32-point Termi- nal	Outputs 32 contacts from 32-point Output Unit.
	DO 64-point Termi- nal	Outputs 64 contacts from 64-point Output Unit.
	DI 16-point/Do 16-point Terminal	Inputs and outputs 16 contacts each from 16-point Input/16-point Output Units.
Analog I/O (See note.)	AI 4-point Terminal (PTS51)	Inputs 4 analog signals from CJ1W- PTS51 (Isolated-type Thermocouple Input Unit)
	AI 4-point Terminal (PTS52)	Inputs 4 analog signals from CJ1W- PTS52 (Isolated-type Temperature Resis- tance Input Unit).
	AI 2-point Terminal (PTS15/16, PDC15)	Inputs 2 analog signals from CJ1W- PTS15 (Isolated-type Thermocouple Input Unit), or CJ1W-PDC15 (Isolated- type DC Input Unit).
	AI 8-point Terminal (AD081)	Inputs 8 analog signals from the CJ1W- AD081(-V1).
	AO 8-point Terminal (DA08V/C)	Outputs 8 analog signals from the CJ1W- DA08V/DA08C.
	AI 4-point Terminal (AD041)	Inputs 4 analog signals from the CJ1W- AD041(-V1).
	AO 4-point Terminal (DA041)	Outputs 4 analog signals from the CJ1W- DA041(-V1).
	AO 2-point Terminal (DA021)	Outputs 4 analog signals from the CJ1W- DA021.
	AI 4-point/AO 2-point Terminal (MAD42)	Inputs 4 analog signals and outputs 2 an- alog signals each from the CJ1W-MAD42.
	AI 4-point Terminal (DRT1-AD04)	Inputs 4 analog signals from a DRT1- AD04 DeviceNet Slave Analog Input Unit.
	AO 2-point Terminal (DRT1-DA02)	Outputs two analog signals from a DRT1- DA02 DeviceNet Slave Analog Output Unit.
	AI 4-point Terminal (AD04U)	Inputs 4 analog signals from the CJ1W- AD04U.
	AI 4-point Terminal (PH41U)	Inputs 4 analog signals from the CJ1W- PH41U.

Note: The Function Blocks dealing with high-speed operation (operation cycle: 0.01, 0.02, and 0.05 seconds is possible).

Note: 1. The Function Blocks dealing with high-speed operation (operation cycle: 0.01, 0.02, and 0.05 seconds is possible).

2. Cannot be used with the CJ1G-CPU45P-GTC.

CX-Process Tool and Monitor

Software Specifications

Item		Specifications
		CX-Process Tool
Name		CX-Process
Model number		(Included in CX-One Package)
Applicable PLCs		CS-series PLCs CJ-series PLCs
Applicable Units		CJ-series Loop-control CPU Units CS-series Loop Control Units/Boards CS1D Process-control CPU Units
Compatible com-	CPU	Processor recommended by Microsoft.
puters	OS	Windows XP (Service Pack 3 or higher, 32-bit version) / Vista (32-bit/64-bit version) / 7 (32-bit/64-bit version) / 8 (32-bit/64-bit version) / 10 (32-bit/64-bit version)
	Memory	Memory recommended by Microsoft.
	Hard disk	Approx. 4.0 GB or more of available memory is required to install all of the CX-One.
	Display	XGA (1,024 \times 768), High Color (16-bit) or higher
	Disk drive	DVD-ROM drive
Communications method Connection with CPU Unit (or Serial Communica- tions Board/Unit)		 When FinsGateway Serial Unit driver is used: Communications protocol with PLC: Host Link or Peripheral Bus (See note 2.) Connect the computer to the peripheral port or built-in RS-232C port of the CPU Unit, or to the RS-232C port of the Serial Communications Board/Unit.
		 Connecting cable: For connecting to peripheral port of CPU Unit: CS1W-CN (2 m or 6 m) For connecting to RS-232C port of CPU Unit: XW2Z-(2 m or 5 m)
		When CX-Server is used: Communications protocol with PLC: Host Link or Peripheral Bus Connecting Cable:
		 For connecting to peripheral port of CPU Unit: CS1W-CN (2 m or 6 m) For connecting to RS-232C port of CPU Unit: XW2Z (2 m or 5 m)
	Connection via Controller Link	When FinsGateway Controller Link driver or CX-Server is used: Install the software in a computer with a Controller Link Support Board to communicate with a PLC with a Controller Link Unit mounted.
	Connection via Ethernet	When FinsGateway ETN_UNIT driver or CX-Server is used: Install the software in a computer with an Ethernet Board to communicate with a PLC with an Ethernet Unit mounted.

CX-Process Tool and Monitor

OMRON

Connections to PLC

Item	Specificatio	ns
Offline functions	 ITEM data settings for function blocks Software connections for analog signals Displaying and printing text strings (annotation) pasted on function block diagrams and ladder diagrams. Instructions for step ladder blocks and commands for sequence table blocks Tag settings for CX-Process Monitor Engineering unit display setting Segment Program parameter setting 	Construction of user screens
Online functions	 Transfer of function block data (Downloading/ Uploading for Loop Control Boards/Units.) Starting/stopping all function blocks (LCU/LCB) Monitoring system operation: Monitoring and controlling the System Common block (including LCB/LCU load rates) Validating LCB/LCU operation: Checking function block connections (including starting and starting individual function blocks), validating ladder diagrams and sequence tables, and monitoring ITEMs Tuning PID constants and other parameters (fine tuning and autotuning) Initialization of Loop Control Unit memory (RAM) External backup specifications 	User screens • Overview screen • Control screen • Tuning screen • Trend screen • Graphic screen • Operating guide message screen System screens • Alarm history screen • System monitor screen • Operation log screen

Note: The CX-Process functions that can be used depend on the version. For details, refer to the *operation manuals* (Cat. No.: W372-E1and W373-E1).

Note: 1. Windows Vista 64-bit version and XP x64 Edition are not supported.

2. Peripheral Bus cannot be used when FinsGateway V3 is used.

Connections to PLC

The following 4 methods can be used to connect to a PLC.

	Communications network		Communication driver	r
		FinsGateway V3	FinsGateway Version 2003 (See note 1.)	CX-Server
Host Link	Connection via PLC's peripheral port or	Supported. (Serial Unit	version is used.)	Supported.
Peripheral Bus	RS-232C port	Not supported.	Supported.	
Controller Link	Connection to PLC with Controller Link Unit via Controller Link Support Board (PCI board).	Supported. (See note 2 (CLK (PCI) version is u	Supported.	
	Connection to PLC with Controller Link Unit via Controller Link Support Board (ISA board).	Supported. (CLK (ISA)	version is used.)	Supported.
Ethernet	Connection to PLC with Ethernet Unit via Ethernet Board.	Supported. (Ethernet v	ersion is used.)	Supported.

Note: 1. The Windows 2000 and XP operating systems are supported. (Windows 95, 98, and Me are not supported.)

2. The Windows 95 operating system cannot be used.

Utility Software



Touch Panel Software

Face Plate Auto-Builder for NS

Simply specify the CSV tag file created using the CX-Process Tool to automatically create a project constructed with a Face Plate for Loop-control CPU Units for use with OMRON's NS-series Programmable Terminals.


Function Overview

- Create windows for monitoring and tuning PID and other function blocks for up to 100 loops (NS System version 4 or higher).
- NS project files for monitoring multiple Loop-control CPU Units from a single NS-series PT can be generated from CX-Process projects for up to 32 multiple nodes.
- When a Segment Program 2 or 3 function block is used for program operation, the Detailed Setting Windows (Time Interval vs. Output Value Setting Window, Wait Interval Setting Window) used for the parameter settings are also automatically generated.
- NS-Runtime is supported.

Basic Specifications

	Item	Specifications						
Name		Face Plate Auto-Builder for NS						
Model number		(Included in CX-One Package)						
Applicable PL0	C products	CJ-series Loop-control CPU Units CS-series Loop Control Boards (unit version 1.0 or later) CS-series Loop Control Units (unit version 2.0 or later) CS1D Process-control CPU Units						
Applicable PTs	6	NS-series NS12, NS10, and NS8 (PT version 2.0 or later), CX-Designer						
System	Computer	IBM PC/AT or compatible						
requirements	CPU	Celeron 400 MHz or better recommended						
	OS	Windows XP (Service Pack 3 or higher, 32-bit version) /Vista(32-bit/64-bit version) / 7 (32-bit/64-bit version) / 8 (32-bit/64-bit version)8.1 (32-bit/64-bit version) / 10 (32-bit/64-bit version) Note: Except for Windows XP 64-bit version						
	Memory	Memory recommended by Microsoft.						
	Hard disk	Approx. 4.0 GB or more of available memory is required to install all of the CX-One.						
	Disk drive	DVD-ROM drive						
Basic functions		Number of generated loops:100 max., control windows and tuning windows Applicable face plates: 2-position ON/OFF, 3-position ON/OFF, Basic PID, Advanced PID, Indication and Operation, Indicator, Segment Program 2 (includes the parameter setting windows), Segment Program 3 (includes the parameter setting windows) Number of loops in control windows: 6 loops per window for NS12, 4 loops per window for NS10/NS8 Realtime trend in tuning window: 1-second cycle						

Example of Automatically Created Windows

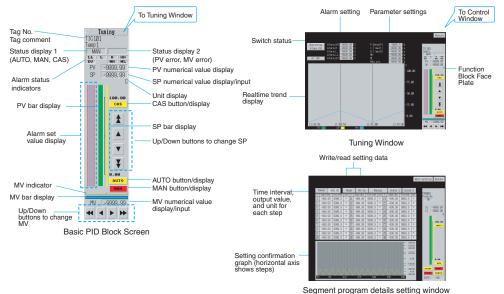


Dimensions



CPU Units


■ Loop-control CPU Units

CJ1G-CPU42P CJ1G-CPU43P CJ1G-CPU44P CJ1G-CPU45P(-GTC)

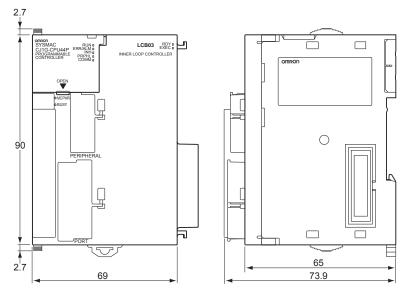

■ Process Input Units

CJ1W-P

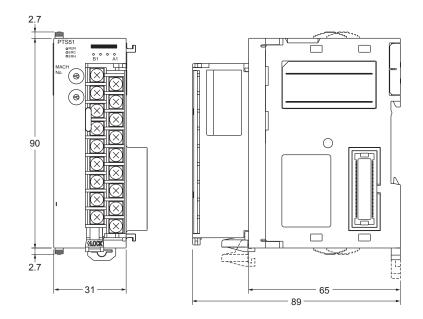

Basic Configuration Units

■ CJ1 Loop Control Units

Product name			Specifications			Curre consumpt		Model	Standards
	I/O capacity/ Mountable- Units (Expansion Racks)	Program capacity	Data memory capacity	LD instruc- tion exe- cution time	Loop Controller	5 V	24 V	-	
CJ1G Loop- control CPU	1,280 points/ 40 Units	60K steps	128K words (DM: 32K words,	0.04 μs	Number of function	1.06(See		CJ1G-CPU45P	
Units	(3 Expansion Racks max.)		ÈM: 32K words × 3 banks)		blocks: 300 blocks	note 1.)		CJ1G-CPU45P-GTC	-
		30K steps	64K words (DM: 32K words,		max.	1.06 (See note 1.)		CJ1G-CPU44P	
	960 points/ 30 Units	20K steps	EM: 32K words × 1 bank)			1.06 (See note 1.)		CJ1G-CPU43P	UC1, CE
	(2 Expansion Racks max.)	10K steps			Number of function blocks: 50 blocks max.	1.06(See note 1.)		CJ1G-CPU42P	

■ CJ1 CPU Units

Prod	uct name		Sp	pecifications		cons	rent ump- i (A)	Model	Standards
		I/O capacity/ Mountable- Units (Expan- sion Racks)	Program capacity	Data memory capacity	LD instruc- tion execu- tion time	5 V	24 V		
CPU	Without built-in I/O	640 points/ 20 Units (1 Expansion Rack max.)	20K steps	32 K words (DM: 32K words, EM: None)	0.1 μs	0.58 (See note 1.)		CJ1M-CPU13	UC1, N, L, CE
		320 points/ 10 Units (No Expansion Rack)	10K steps			0.58 (See note 1.)		CJ1M-CPU12	
		160 points/ 10 Units (No Expansion Rack)	5K steps			0.58 (See note 1.)		CJ1M-CPU11 (See note 2.)	

Note: 1. Current consumptions include current for a Programming Console. Add 0.15 A per Adapter when using NT-AL001 RS-232C/RS-422A Adapters. Add 0.04 A per Adapter when using CJ1W-CIF11 RS-422A Adapters.

2. Some specifications of the low-end CJ1M (CJ1M-CPU11/21) differ from those of the CJ1M-CPU12/13/22/23 as shown in the following table.

OMRON

Basic Configuration Units

■ CJ1 CPU Units (with Built-in I/O)

Prod	uct name		ę	Specifications			cons	rent ump- (A)	Model	Standards
		I/O capacity/ Mountable- Units (Expan- sion Racks)	Program capacity Data memory capacity LD instruction execution execution time Built-in I/O 5 V 24 V							
CJ1M CPU Units	J1M With built-in I/O (See note 2.) 640 points/ 20 K steps (DM: 32K words (DM: 32K words, ack max.) 20 K steps (DM: 32K words, EM: None)	(DM: 32K	0.1 μs	10 inputs and 6 out- puts, 2 counter	0.64 (See note 1.)		CJ1M-CPU23 (See note 3.)	UC1, N, L, CE		
		320 points/ 10 Units (No Expansion Rack)	10K steps			inputs, 2 pulse out- puts	0.64 (See note 1.)		CJ1M-CPU22 (See note 3.)	
		160 points/ 10 Units (No Expansion Rack)	5K steps				0.64 (See note 1.)		CJ1M-CPU21 (See notes 2 and 3.)	

Note: 1. Current consumptions include current for a Programming Console. Add 0.15 A per Adapter when using NT-AL001 RS-232C/RS-422A Adapters. Add 0.04 A per Adapter when using CJ1W-CIF11 RS-422A Adapters.

2. Some specifications of the low-end CJ1M (CJ1M-CPU11/21) differ from those of the CJ1M-CPU12/13/22/23 as shown in the following table.

3. The connector for built-in I/O in the CJ1M-CPU21/22/23 is not included. Purchase one of the connectors or connector cables in the following table separately.

	CJ1M-CPU11	CJ1M-CPU12 CJ1M-CPU13	CJ1M-CPU21	CJ1M-CPU22 CJ1M-CPU23
Overhead time	0.7 ms	0.5 ms	0.7 ms	0.5 ms
Pulse start time			63 μs (without acceleration/decel- eration, continuous)	46 μs (without acceleration/decel- eration, continuous)
			100 μs (trapezoidal control)	70 μs (trapezoidal control)
Number of subroutines and jumps	256	1024	256	1024
Number of scheduled interrupt tasks	1	2	1	2
Number of PMW outputs			1	2

Power Supply Units

One Power Supply Unit is required for each Rack.

Produ	uct name	Power	0	utput capaci	ity		Optio	ns	Model	Standards
		supply voltage	5-VDC output capacity	24-VDC output capacity	Total power consump- tion	24-VDC service power supply	RUN out- put	Maintenance forecast monitor		
AC Power Supply Units		100 to 240 VAC	5 A	0.8 A	25 W	No	No	Yes	CJ1W-PA205C	UC1, N, L, CE
							Yes	No	CJ1W-PA205R	-
	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1		2.8 A	0.4 A	14 W	-	No	No	CJ1W-PA202	*
DC Power supply Units		24 VDC	5 A	0.8 A	25 W		No	No	CJ1W-PD025	
			2 A	0.4 A	19.6 W		No	No	CJ1W-PD022	UC1, CE

Basic Configuration Units

■ Connector Cables for Built-in I/O in CJ1M-CPU□2 CPU Unit

The connector for built-in I/O in the CJ1M-CPU21/22/23 is not included.

Purchase one of the connectors or connector cables in the following table separately.

Product name			Model	Stan- dards		
Applicable Connectors		MIL Flat Cable (40-pin Pressu	e Connectors ire-welded Connectors) * 1		XG4M-4030-T	
			Vire Connectors ed Connectors) *2		XG5N-401	
		Crimp Contact	ts for XG5N *3	Loose contacts	XG5W-0232	
				Reel contacts	XG5W-0232-R	
		Manual Crimp	ing Tool for XG5N	and the second	XY2B-7007	-
Normal Connection Method for Built-in I/O (When Connector-Terminal Block Conver- sion Unit is Used)	Connec- tor- Termi- nal Block	Phillips screw	(M3 screw terminals, 40-pin)		XW2R-J40G-T	
CJ1M-CPU2D (with Built-in I/O) Built-in I/O Connector	Conver- sion Units	Slotted screw	(M3 European type, 40-pin)		XW2R-E40G-T	
Special Connecting Cable XW2R-40G-T Connector-Terminal Biock Conversion Unit		Push-in spring	(Clamp 40-pin)	XW2R-P40G-T		
		Special Conne	ecting Cables	Cable length: 1 m	XW2Z-100K	
Terminal Block				Cable length: 1.5 m Cable length: 2 m	XW2Z-150K XW2Z-200K	-
		1	ser la	Cable length: 3 m	XW2Z-300K	
				Cable length: 5 m	XW2Z-500K	-
Connection to Servo Driver with Built-in I/O	Servo Relay Units	Servo Relay U	Init for 1 axis		XW2B-20J6-8A	
Built-in I/O Connector • For OMNUC G Series: XW2Z-UUJ-A33 • For SMRTSTEP2: XW2Z-UUJ-A33 Servo Relay Unit for 1 axis × XW2E-20J6-8A		Servo Relay L	Init for 2 axes		XW2B-40J6-9A	
Servo Driver Connecting Cables • For OMNUC G Series:			Cable for CJ1M CPU Unit	Cable length: 0.5 m	XW2Z-050J-A33	
XW2Z-000-J-B31 • For SMARTSTEP2: XW2Z-00-J-B32		G Series		Cable length: 1 m	XW2Z-100J-A33	
Servo Driver OMNUC G Series R88D-GT			Servo Driver Connecting Cables	Cable length: 1 m	XW2Z-100J-B31	
• SMARTSTEP2: R7D-BP				Cable length: 2 m	XW2Z-200J-B31	
\bigcirc			Cable for CJ1M CPU Unit	Cable length: 0.5 m	XW2Z-050J-A33	
When two axes are used, two Connecting Cables are required at the Servo Driver for each Servo Relay Unit		SMARTSTEP		Cable length: 1 m	XW2Z-100J-A33	
Lach Servo Relay Unit		2	Servo Driver Connecting Cables	Cable length: 1 m	XW2Z-100J-B32	
				Cable length: 2 m	XW2Z-200J-B32]

Note: Minimum ordering quantity for loose contacts is 100 pieces and for reel contacts is 1 reel (10,000 pieces).

*1. Socket and Stain Relief set

*2. Crimp Contacts (XG5W-0232) are sold separately.

*3.

Applicable wire size is AWG 28 to 24. For applicable conductor construction and more information, visit the OMRON website at www.ia.omron.com.

OMRON

Programming Devices

Programming Devices

Product name	Specifications			Model	Standard	
		Number of licenses	Media		S	
FA Integrated Tool Package	The CX-One is a comprehensive software package that integrates Support Software for OMRON PLCs and components.	 (Media only) *	DVD	CXONE-AL00D-V4		
CX-One Ver. 4.	CX-One runs on the following OS. Windows XP (Service Pack 3 or higher, 32-bit version) /	1 license	DVD	CXONE-AL01D-V4		
	Windows Vista (32-bit/64-bit version) / Windows 7 (32-bit/64-bit version) /	3 licenses	DVD	CXONE-AL03D-V4		
	Pack 3a or higher), XP, or Vista CX-Designer version 3.	10 licenses	DVD	CXONE-AL10D-V4		
		30 licenses	DVD	CXONE-AL30D-V4		
		50 licenses	DVD	CXONE-AL50D-V4		
CX-Designer	Pack 3a or higher), XP, or Vista CX-Designer version 3. or higher includes the Ladder Monitor	1 license	CD	NS-CXDC1-V4		
Peripheral Device	Connects IBM PC/AT or compatible computers, D-Sub 9-pin recept (Length: 0.1 m) (Conversion cable to connect RS-232C cable to pe			CS1W-CN118	CE	
Connecting Cables (for peripheral port)	Connects IBM PC/AT or compatible computers, D-Sub 9-pin (Length: 2.0 m)	Used for Peripl or Host Link.	neral Bus	CS1W-CN226		
	Connects IBM PC/AT or compatible computers, D-Sub 9-pin (Length: 6.0 m)			CS1W-CN626		
Peripheral Device	Connects IBM PC/AT or compatible computers, D-Sub 9-pin (Length: 2.0 m)	Used for Peripl or Host Link.		XW2Z-200S-CV		
Connecting Cables (for RS- 232C port)	Connects IBM PC/AT or compatible computers, D-Sub 9-pin (Length: 5.0 m)	Anti-static con	nector	XW2Z-500S-CV		
	Connects IBM PC/AT or compatible computers, D-Sub 9-pin (Length: 2.0 m)	Used for Host I Peripheral Bus		XW2Z-200S-V		
	Connects IBM PC/AT or compatible computers, D-Sub 9-pin (Length: 5.0 m)	ported.		XW2Z-500S-V		
USB-Serial Conversion Cable	USB-RS-232C Conversion Cable (Length: 0.5 m) and PC driver (or plies with USB Specification 2.0 On personal computer side: USB (A plug connector, male) On PLC side: RS-232C (D-Sub 9-pin, male) OS: Windows 98, Me, 2000, or XP	2/AI or compatible computers, igth: 5.0 m) onversion Cable (Length: 0.5 m) and PC driver (on a CD-ROM disc), Con pecification 2.0 puter side: USB (A plug connector, male) -232C (D-Sub 9-pin, male)				

Note: Site licenses are also available for users that need to use the CX-One on many computers. Ask your OMRON representative for details. When purchasing the DVD format, verify the computer model and DVD drive specifications before purchasing.

* The CXONE-AL00D-V4 contains only the DVD installation media for users who have purchased the CX-One Version 4.□ and does not include the license number. Enter the license number of the CX-One Version 4.□ when installing. (The license number of the CX-One Version 3.□ or lower cannot be used for installation.)

Basic I/O Units

■ Input Units

Unit classi- fica-	Product name			Specific	cations			cons	rrent sump- n (A)	Model	Standards
tion		I/O points	Input voltage current	Com- mons	Additional functions	External connec- tion	No. of word s allo- cated	5 V	24 V		
CJ1 Basic I/O Units	DC Input Units	8 inputs	12 to 24 VDC, 10 mA	Inde- pen- dent contacts	None	Remov- able terminal block	1 word	0.09		CJ1W-ID201	UC1, N, L, CE
		16 in- puts	24 VDC, 7 mA	16 points, 1 com- mon		Remov- able terminal block	1 word	0.08		CJ1W-ID211	
		32 in- puts	24 VDC, 4.1 mA	16 points, 1 com- mon		Fujitsu connector	2 words	0.09		CJ1W-ID231 (See note.)	
		32 in- puts	24 VDC, 4.1 mA	16 points, 1 com- mon		MIL con- nector	2 words	0.09		CJ1W-ID232 (See note.)	
		64 in- puts	24 VDC, 4.1 mA	16 points, 1 com- mon		Fujitsu connector	4 words	0.09		CJ1W-ID261 (See note.)	
		64 in- puts	24 VDC, 4.1 mA	16 points, 1 com- mon		MIL con- nector	4 words	0.09		CJ1W-ID262 (See note.)	
	AC Input Units	16 in- puts	100 to 120 VAC, 7 mA (100 V, 50 Hz)	16 points, 1 com- mon		Remov- able Terminal Block	1 word	0.09		CJ1W-IA111	
		8 inputs	200 to 240 VAC, 10 mA (200 V, 50 Hz)	8 points, 1 com- mon		Remov- able Terminal Block	1 word	0.08		CJ1W-IA201	

Note: Connectors are not provided with these connector models. Either purchase one of the following 40-pin connectors, or use an OMRON XW2 Connector-Terminal Block Conversion Unit or a G7 I/O Relay Terminal.

Basic I/O Units

■ Output Units

Unit classi-	Product name		S	pecifications			No. of words	Curre	ent con- ption (A)	Model	Standards
fica- tion		I/O points	Maximum switching capacity	Commons	Additional functions	External connec- tion	allo- cated	5 V	24 V	-	
CJ1 Basic I/O Units	Relay Contact Output Units	8 out- puts	250 VAC/ 24 VDC, 2 A	Indepen- dent con- tacts	None	Remov- able termi- nal block	1 word	0.09	0.048 max.	CJ1W-OC201	UC1, N, L, CE
Units		16 out- puts	250 VAC/ 24 VDC, 2 A	16 points, 1 common		Remov- able termi- nal block	1 word	0.11	0.096 max.	CJ1W-OC211	*
	Transis- tor Out- put Units	8 out- puts	12 to 24 VDC, 2 A, sinking	4 points, 1 common	-	Remov- able termi- nal block	1 word	0.09		CJ1W-OD201	-
		8 out- puts	24 VDC, 2 A, sourcing	4 points, 1 common	Short- circuit pro- tection, disconnec- tion detec- tion	Remov- able termi- nal block	1 word	0.11		CJ1W-OD202	-
		8 out- puts	12 to 24 VDC, 0.5 A, sinking	8 points, 1 common	None	Remov- able termi- nal block	1 word	0.10		CJ1W-OD203	
		8 out- puts	24 VDC, 0.5 A sourcing	8 points, 1 common	Short- circuit protection	Remov- able termi- nal block	1 word	0.10		CJ1W-OD204	
	B B	16 out- puts	12 to 24 VDC, 0.5 A, sinking	16 points, 1 common	None	Remov- able termi- nal block	1 word	0.10		CJ1W-OD211	
	at a she	16 out- puts	24 VDC, 0.5 A, sourcing	16 points, 1 common	Short-cir- cuit protec- tion	Remov- able termi- nal block	1 word	0.10		CJ1W-OD212	-
		32 out- puts	12 to 24 VDC, 0.5 A, sinking	16 points, 1 common	None	Fujitsu connector	2 words	0.14		CJ1W-OD231 (See note.)	-
		32 out- puts	24 VDC, 0.5 A, sourcing	16 points, 1 common	Short- circuit protection	MIL con- nector	2 words	0.15		CJ1W-OD232 (See note.)	
		32 out- puts	12 to 24 VDC, 0.5 A, sinking	16 points, 1 common	None	MIL con- nector	2 words	0.14		CJ1W-OD233 (See note.)	-
		64 out- puts	12 to 24 VDC, 0.3 A, sinking	16 points, 1 common	None	Fujitsu connector	4 words	0.17		CJ1W-OD261 (See note.)	-
		64 out- puts	24 VDC, 0.3 A, sourcing	16 points, 1 common	None	MIL con- nector	4 words	0.17		CJ1W-OD262 (See note.)	
		64 out- puts	12 to 24 VDC, 0.3 A, sinking	16 points, 1 common	None	MIL con- nector	4 words	0.17		CJ1W-OD263 (See note.)	
	Triac Output Units	8 out- puts	250 VAC, 0.6 A	8 points, 1 common	None	Remov- able termi- nal block	1 word	0.22		CJ1W-OA201	

Note: Connectors are not provided with these connector models. Either purchase one of the following 40-pin connectors, or use an OMRON XW2 Connector-Terminal Block Conversion Unit or a G7 I/O Relay Terminal.

Basic I/O Units

OMRON

■ I/O Units

classi- fica- tion	Product name			Specifica	ations			cons	rrent sump- n (A)	Model	Standards
		I/O points	Input voltage, Input current	Com- mons	Additional functions	Exter- nal con- nection	No. of words allo-	5 V	24 V	-	
			Maximum switching capacity			nection	cated				
CJ1 Basic I/O	DC Input/ Transis-	16 in- puts	24 VDC, 7 mA	16 points, 1 com- mon	None	Fujitsu connec- tor	2 words	0.13		CJ1W-MD231 (See note 2.)	UC1, N, CE
Units	tor Out- put Units	16 out- puts	12 to 24 VDC, 0.5 A, sinking	16 points, 1 com- mon	None	+					
		16 in- puts	24 VDC, 7 mA	16 points, 1 com- mon	None	MIL con- nector	2 words	0.13		CJ1W-MD232 (See note 2.)	UC1, N, L, CE
		16 out- puts	24 VDC, 0.5 A, sourcing	16 points, 1 com- mon	Short-circuit protection	+					
		16 in- puts	24 VDC, 7 mA	16 points, 1 com- mon	None	MIL con- nector	2 words	0.13		CJ1W-MD233 (See note 2.)	UC1, N, CE
		16 out- puts	12 to 24 VDC, 0.5 A, sinking	16 points, 1 com- mon	None	+					
		32 in- puts	24 VDC, 4.1 mA	16 points, 1 com- mon	None	Fujitsu connec- tor	4 words	0.14		CJ1W-MD261 (See note 1.)	
		32 out- puts	12 to 24 VDC, 0.3 A, sinking	16 points, 1 com- mon	None	-					
		32 in- puts	24 VDC, 4.1 mA	16 points, 1 com- mon	None	MIL con- nector	4 words	0.14		CJ1W-MD263 (See note 1.)	
		32 out- puts	12 to 24 VDC, 0.3 A, sinking	16 points, 1 com- mon	None	1					
	TTL I/O Units	32 in- puts	5 VDC, 3.5 mA	16 points, 1 com- mon	None	MIL con- nector	4 words	0.19		CJ1W-MD563 (See note 1.)	
		32 out- puts	5 VDC, 35 mA	16 points, 1 com- mon	None	<u> </u>					

Note: 1. Connectors are not provided with these connector models. Either purchase one of the following 40-pin Connectors, or use an OMRON XW2 Connector-Terminal Block Conversion Unit or a G7 I/O Relay Terminal.

2. Connectors are not provided with these connector models. Either purchase one of the following 20-pin or 24-pin Connectors, or use an OMRON XW2 Connector-Terminal Block Conversion Unit or a G7 I/O Relay Terminal.

Applicable Connectors

Fujitsu Connectors for 32-input, 32-output, 64-input, 64-output, 32-input/32-output

Name	Connection	Remarks	Applicable Units	Model	Standards
40-pin Connectors	Soldered	FCN-361J040-AU Connector FCN-360C040-J2 Connector Cover	Fujitsu Connectors: CJ1W-ID231(32 inputs): 1 per Unit	C500-CE404	
	Crimped	FCN-363J040 Housing FCN-363J-AU Contactor FCN-360C040-J2 Connector Cover	CJ1W-ID261 (64 inputs) 2 per Unit CJ1W-OD231 (32 outputs):1 per Unit CJ1W-OD261 (64 outputs): 2 per Unit CJ1W-MD261 (32 inputs, 32 outputs):	C500-CE405	
	Pressure welded	FCN-367J040-AU/F	2 per Unit	C500-CE403	

OMRON

Special I/O Units

Process Input Units

Isolated-type Units with Fully Universal Inputs

Unit classi- fica-	Product name	I/O points	Signal range selec-	Signal range	Conver- sion speed	Accuracy at ambient temperature	Exter- nal con-	No. of unit num-	cons	rent ump- i (A)	Model	Stan- dards
tion			tion		(résolu- tion)	of 25°C)	nection	bers allo- cated	5 V	24 V		
CJ1 Special I/O Units	Process Input Units (Isolated- type Units with Fully Universal Inputs)	4 in- puts	Set sepa- rately for each in- put	Fully universal inputs: Pt100 (3-wire), JPt100 (3-wire), Pt1000 (3-wire), Pt1000 (4-wire), K, J, T, E, L, U, N, R, S, B, WRe5-26, PL II, 4 to 20 mA, 0 to 20 mA, 1 to 5 V, 0 to 1.25 V, 0 to 10 V, \pm 100 mV se- lectable range -1.25 to 1.25 V, -5 to 5 V, -10 to 10 V, \pm 10 V select- able range, potentiometer	Resolu- tion (con- version speed): 1/256,000 (conver- sion cycle: 60 ms/4 inputs) 1/64,000 (conver- sion cycle: 10 ms/ 4 inputs) 1/16,000 (conver- sion cycle: 5 ms/4 in- puts)	Standard accuracy: ±0.05% of F.S.	Remov- able ter- minal block	1	0.30		CJ1W- PH41U (See note 1.)	UC1, CE
		4 in- puts	Set sepa- rately for each in- put	Fully universal inputs: Pt100, JPt100, Pt1000, K, J, T, L, R, S, B, 4 to 20 mA, 0 to 20 mA, 1 to 5 V, 0 to 5 V, 0 to 10 V	Conver- sion speed: 250 ms/ 4 inputs	Accuracy: Platinum resistance thermometer input: $\pm 0.3\%$ of PV or $\pm 0.8°C$, whichever is larger) ± 1 digit max. Thermocou- ple input: ($\pm 0.3\%$ of PV or $\pm 1.5°C$, whichever is larger) ± 1 digit max. (See note 2.) Voltage or current input: $\pm 0.3\%$ of F.S. ± 1 digit max.			0.32		CJ1W- AD04U	UC1, CE, L

Note: 1. Do not connect a Relay Contact Output Unit in the same CPU Rack or Expansion Rack as the CJ1W-PH41U Isolated-type Universal Input Unit.

2. L and -100°C or less for K and T are ±2°C ±1 digit max., and 200°C or less for R and S is ±3°C ±1 digit max. No accuracy is specified for 400°C or less for B.

OMRON

Special I/O Units

Isolated-type Thermocouple Input Units

Unit classi- fica-	Product name	I/O points	Signal range selec-	Signal range	Conver- sion speed (resolution)	Accuracy at ambient temperature	External connec- tion	No. of unit num-	Current consump- tion (A)		Model	Standards
tion			tion			of 25°C)		bers allo- cated	5 V	24 V		
CJ1 Spe- cial I/O Units	Process Input Units (Isolated- type Thermo- couple Input Units)	2 in- puts	Set sepa- rately for each input	Thermocou- ple: B, E, J, K, L, N, R, S, T, U, WRe5-26, PLII DC voltage: ±100 mV	Conversion speed: 10 ms/ 2 inputs, Resolution: 1/64,000	Standard accuracy: ±0.05% of F.S. *1	Remov- able termi- nal block	1	0.18	0.06 *2	CJ1W- PTS15	UC1, CE
		4 in- puts	Com- mon inputs	Thermocou- ple: R, S, K, J, T, L, B	Conversion speed: 250 ms/ 4 inputs	Accuracy: ±0.3% of PV or ±1°C, whichever is larger, ±1 digit max. *3	1		0.25		CJ1W- PTS51	-

Note: This unit cannnot be used, with the Machine Automation Controller NJ-series.

*1. The accuracy depends on the sensors used and the measurement temperatures. For details, refer to the user's manual.

*2. This is for an external power supply, and not for internal current consumption.

*3. L and -100°C or less for K and T are ±2°C±1 digit max., and 200°C or less for R and S is ±3°C±1 digit max. No accuracy is specified for 400°C or less for B.

Isolated-type Resistance Thermometer Input Units

Unit classi- fica-	Product name	I/O points	Signal range selec-	Signal range	Conver- sion speed (resolution)	Accuracy at ambient temperature	Exter- nal con-	No. of unit num-	cons	rrent sump- n (A)	Model	Standards
tion			tion			of 25°C)	nec- tion	bers allo- cated	5 V	24 V		
CJ1 Spe- cial I/O Units	Process Input Units (Isolated- type Resis- tance Ther- mometer Input Units)	4 in- puts	Com- mon inputs	Platinum resis- tance thermom- eter: Pt100, JPt100	Conversion speed: 250 ms/ 4 inputs	Accuracy: ±0.3% of PV or ±0.8°C, whichever is larger, ±1 digit max.	Remov- able termi- nal block	1	0.25		CJ1W- PTS52	UC1, CE

Note: This unit cannnot be used, with the Machine Automation Controller NJ-series.

* This is for an external power supply, and not for internal current consumption.

OMRON

Special I/O Units

Isolated-type DC Input Unit

Unit classi- fica-	Product name	I/O points	Signal range	Conver- sion speed (resolution)	Accuracy at ambient temperature	External connec- tion	No. of unit num-	cons	rrent sump- n (A)	Model	Standards
tion					of 25°C)		bers allo- cated	5 V	24 V		
CJ1 Special I/O Unit	Isolated- type DC Input Unit	2 in- puts	DC voltage: 0 to 1.25 V, -1.25 to 1.25 V, 0 to 5 V, 1 to 5 V, -5 to 5 V, 0 to 10 V, -10 to 10V, ±10-V select- able DC current: 0 to 20 mA, 4 to 20 mA	Conversion speed: 10 ms/ 2 inputs, Resolution: 1/64,000	Accuracy: ±0.05% of F.S.	Remov- able terminal block	1	0.18	0.09 (See note.)	CJ1W- PDC15	UC1, CE

Note: This is for an external power supply, and not for internal current consumption.

OMRON

■ Analog I/O Units

Analog Input Units

Unit classi- fica-	Product name	I/O points	Signal range selec-	Signal range	Resolu- tion	Conver- sion Speed	Accuracy at ambi- ent	Exter- nal con-	No. of unit num-	cons	rent ump- (A)	Model	Standards
tion			tion				tempera- ture of 25°C)	nec- tion	bers allo- cated	5 V	24 V		
CJ1 Special I/O Units	Analog Input Units	8 in- puts 4 in- puts	Set sepa- rately for each input Set sepa- rately for each input	1 to 5 V, 0 to 5 V, 0 to 10 V, ±10 V, 4 to 20 mA	1/8,000 (Settable to 1/4,000) (See note 1.)	250 μs/ point max. (Settable to 1 ms/ point) (See note 1.)	Voltage: $\pm 0.2\%$ of F.S. Current: $\pm 0.4\%$ of F.S. (See note 2.)	Remov- able termi- nal block	1	0.42		CJ1W- AD081-V1 CS1W- AD041-V1	UC1, N, L, CE

Note: 1. The resolution and conversion speed cannot be set independently. If the resolution is set to 1/4,000, then the conversion speed will be 1 ms/point.

2. At 23 ±2°C

3. For products manufactured from August 2007 onwards.

Analog Output Units

Unit classi- fica-	Product name	I/O points	Signal range selec-	Signal range	Resolu- tion	Con- ver- sion	Accu- racy at ambi-	Exter- nal con-	Exter- nal power	No. of unit num-	cons	rent sump- n (A)	Model	Stan- dards
tion			tion			Speed	ent tem- pera- ture of 25°C)	nec- tion	supply	bers allo- cated	5 V	24 V		
CJ1 Spe- cial I/O Units	Analog Output Units	8 out- puts	Set sepa- rately for each input	1 to 5 V, 0 to 5 V, 0 to 10 V, -10 to 10 V	1/4,000 (Settable to 1/8,000) (See note 1.)	1 ms/ point (Setta- ble to 250 μs/ point max.)	±0.3% of F.S.	Remov- able termi- nal block	24 VDC ^{+10%} -15%, 140 mA max.	1	0.14	0.14 (See note.)	CJ1W- DA08V	UC1, N, L, CE
		8 out- puts		4 to 20 mA	-				24 VDC ^{+10%} -15%, 170 mA max.			0.17 (See note.)	CS1W- DA08C	UC1, N, CE
		4 out- puts		1 to 5 V, 0 to 5 V, 0 to 10 V, -10 to 10 V,	1/4,000	1 ms/ point max.	Volt- age: ±0.3% of F.S. Cur-		24 VDC ^{+10%} -15%, 200 mA max.		0.12	0.2 (See note.)	CJ1W- DA041	UC1, N, L, CE
		2 out- puts		4 to 20 mA			rent: ±0.5% of F.S.		24 VDC ^{+10%} -15%' 140 mA max.			0.14 (See note.)	CS1W- DA021	

Note: This is for an external power supply, and not for internal current consumption.

Temperature Control Unit

Analog I/O Units

Unit classi- fica-	Product name	I/O points	Signal range selec-	Signal range	Resolution	Conver- sion Speed	Accuracy at ambient	Exter- nal con-	No. of unit num-	cons	rent ump- i (A)	Model	Standards
tion			tion				tempera- ture of 25°C)	nec- tion	bers allo- cated	5 V	24 V		
CJ1 Special I/O Units	Analog I/O Units	4 in- puts 2 out- puts	Set sepa- rately for each input	1 to 5 V, 0 to 5 V, 0 to 10 V, -10 to 10 V, 4 to 20 mA	1/4,000 (Settable to 1/8,000)	1 ms/point (Settable to 500 μs/ point max.)	Voltage: ±0.2% of F.S. Current: ±0.2% of F.S. Voltage: ±0.3% of F.S. Current: ±0.3%C of F.S.	Remov- able termi- nal block	1	0.58		CJ1W- MAD42	UC1, N, L, CE

Note: The resolution and conversion speed cannot be set independently. If the resolution is set to 1/4,000, then the conversion speed will be 1 ms/point.

Temperature Control Unit

Unit classi- fica-	Product name		Specifica	ntions	No. of unit numbers allocated	cons	rent ump- n (A)	Model	Standards
tion		No. of loops	Temperature sensor inputs	Control outputs		5 V	24 V		
CJ1 Spe- cial I/O	Temper- ature Control	4 loops	Thermocou- ple input	Open collector NPN outputs (pulses)	2	0.25		CJ1W-TC001	UC1, N, L, CE
Units	Units	4 loops	(R, S, K, J, T, B, L)	Open collector PNP outputs (pulses)		0.25		CJ1W-TC002	
		2 loops, heater burnout detec- tion function		Open collector NPN outputs (pulses)		0.25		CJ1W-TC003	
		2 loops, heater burnout detec- tion function	-	Open collector PNP outputs (pulses)		0.25		CJ1W-TC004	
		4 loops	Platinum resistance	Open collector NPN outputs (pulses)		0.25		CJ1W-TC101	
		4 loops	thermometer input (JPt100, Pt100)	Open collector PNP outputs (pulses)		0.25		CJ1W-TC102	
		2 loops, heater burnout detec- tion function		Open collector NPN outputs (pulses)		0.25		CJ1W-TC103	
		2 loops, heater burnout detec- tion function		Open collector PNP outputs (pulses)		0.25		CJ1W-TC104	

CPU Bus Units

Controller Link Units

Controller Link Units, New Models

Unit classifi-	Product name		Specificati	ons		No. of unit numbers		nt con- ion (A)	Model	Standards
cation		Communica- tions cable	Communi- cations type	Duplex support	Max. Units mountable per CPU Unit	allocated	5 V	24 V		
CJ1 CPU Bus Unit	Control- ler Link Unit	Wired shielded twisted-pair cable (See note 2.)	Data links and mes- sage service	No	8	1	0.35		CJ1W-CLK23	UC1, N, L, CE

Repeater Units

Unit classification	Specifications	Model	Standards
Controller Link Repeater Unit	Wire-to-wire Model	CS1W-RPT01	UC1, CE
	Wire-to-Optical (H-PCF) Model (See note 2.)	CS1W-RPT02	
	Wire-to-Optical (GI) Model (See note 3.)	CS1W-RPT03	

Note: 1. Using Repeater Units enables T-branches and long-distance wiring for Wired Controller Link networks. 62-node configurations, and converting part of the network to optical cable.

2. When using wire-to-optical (H-PCF) cable, use a H-PCF cable (for both Controller Link and SYSMAC LINK) or a H-PCF optical fiber cable with connector.

3. When using wire-to-optical (GI) cable, use a GI optical cable (for Controller Link).

Relay Terminal Block

Unit classification	Specifications	Model	Standards
Relay Terminal Block for Wired Controller Link Unit	Use for Wired Controller Link Units (set of 5).	CS1W-TB101	
ৰ <u>ৰ</u> ৰ মাজান			

Note: Controller Link Units can be replaced without stopping the communications of the entire network if a Relay Terminal Block is installed in advance on the Unit in a Wired Controller Link network. Relay Blocks cannot be used on Controller Link Support Boards.

Serial Communications Units

Unit classi- fica- tion	Product name	Spec	cifications	No. of unit numbers	Current con- sumption (A)		Model	Standards
		Communications interface	Communications functions	allocated	5 V	24 V	-	
CJ1 CPU Bus Units	Serial Commu- nications Units	1 RS-232C port and 1 RS-422A/485 port 2 RS-232C ports 2 RS-422A/485 ports	The following functions can be selected for each port: • Protocol macro • Host Link • NT Links (1:N mode) • Serial Gateway (See note 1.) • No-protocol (See note 2.) • Modbus-RTU Slave (See note 3.)	1	0.38 (See note 4.) 0.28 (See note 4.) 0.38		CJ1W-SCU41-V1 CJ1W-SCU21-V1 CJ1W-SCU31-V1	UC1, N, L, CE

Note: 1. The Serial Gateway function is enabled only for Serial Communications Units of unit version 1.2 and later.

2. The no-protocol function is enabled only for Serial Communications Units of unit version 1.2 and later (and a CPU Unit of unit version 3.0 or later is also required).

3. The Modbus-STU Slave function is enabled only for Serial Communications Units of unit version 1.3 and later.

4. When an NT-AL001 RS-232C/RS-422A Conversion Unit is used, this value increases by 0.15 A/Unit. When a CJ1W-CIF11 RS-422A Conversion Unit is used, it increases by 0.04 A/Unit.

Ethernet Unit

Unit classi-	Product name	Specifications			No. of unit num-	Current con- sumption (A)		Model	Standards
fica- tion		Communi- cations cable	Communications functions Max. Units mount- able per CPU Unit Allo- cated		24 V				
CJ1 CPU Bus Unit	Ethernet Unit	100Base-TX	FINS communications service (TCP/IP, UDP/IP), FTP server functions, socket services, mail transmission service, mail recep- tion (remote command receive), automatic adjustment of PLC built-in clock, server/host name specifications	4	1	0.37		CJ1W-ETN21	UC1, N, L, CE

FL-net Unit

Unit classi- fica-	Product name	Specifications			No. of unit num- bers	Current consump- tion (A)		Model	Standards
tion		Communi- cations interface	Communications functions	Max. Units mountable per CPU Units	allo- cated	5 V	24 V		
CJ1 CPU Bus Units	FL-net Unit	100Base-TX	With FL-net Ver. 2.0 specifications (OPCN-2), Data links and message service	4	1	0.37		CJ1W-FLN22	UC1, CE

OMRON

DeviceNet Unit

DeviceNet Unit

Unit classi- fica-	Product name	Specifications	Communications type	No. of unit numbers allocated	cons	rrent sump- n (A)	Model	Standards
tion					5 V	24 V		
CJ1 CPU Bus Units	DeviceNet Unit	Functions as master and/ or slave; allows control of 32,000 points max. per master.	 Remote I/O communica- tions master (fixed or user-set allocations) Remote I/O communica- tions slave (fixed or user- set allocations) Message communica- tions 	1	0.29		CJ1W-DRM21	UC1, N, L, CE

CompoNet Master Unit

Unit classi- fica-	Product name	Specifications		No. of unit numbers allocated	numbers cons		Model	Standards
tion		Communications functions	No. of I/O points per Master Unit		5 V	24 V		
CJ1 Spe- cial I/O Unit	CompoNet Master Unit	 Remote I/O communications Message communications 	Word Slaves: 2,048 max. (1,024 inputs and 1,024 outputs) Bit Slaves: 512 max. (256 inputs and 256 outputs)	1, 2, 4, or 8	0.4		CJ1W-CRM21	CE, U, U1, L, UC, UC1 (approval pending)

CompoBus/S Master Unit

Unit classi- fica-	Product name	Specifications		No. of unit numbers allocated	Current consump- tion (A)		Model	Standards	
tion		Communica- tions functions	No. of I/O points	Max. Units mountable per CPU Unit		5 V	24 V		
CJ1 Spe- cial I/O Unit	CompoBus/ S Master Unit	Remote I/O communications	256 max. (128 inputs and 128 outputs) 128 max. (64 inputs and 64 outputs)	40	1 or 2 (variable)	0.15		CJ1W-SRM21	UC1, N, L, CE

ID Sensor Units

ID Sensor Units

Unit classi- fica- tion	Product name	Spe	Specifications				nt con- ion (A))	Standards
		Connected ID System	No. of connected R/W heads	External power supply	allocated	5 V	24 V		
CJ1 Spe- cial I/O Units	ID Sensor Units	br V680 Series RFID 1 System.	1	Not required.	1	0.26 (See notes 1 and 2.)	0.13 (See notes 1 and 2.)	CJ1W-V680C11	CE, UC (approval pending)
			2		2	0.32 (See note 2.)	0.26 (See note 2.)	CJ1W-V680C12	
		V600 Series RFID System	1	Not required.	1	0.26	0.12	CJ1W-V600C11	UC, CE
		2	2		2	0.32	0.24	CJ1W-V600C12	

Note: 1. To use a V680-H01 Antenna, refer to the V680 Series RFID System Catalog (Cat. No. Q151).

2. Specifications subject to change without notice.

SYSMAC SPU (High-speed Data Storage Unit)

Unit classi- fica-	Product name	Specifi	cations	No. of unit numbers allocated	Current consump- tion (A)		Model	Standards
tion		PC Card slot	Ethernet (LAN) port		5 V	24 V		
CJ1 CPU Bus Units	SYSMAC SPU Ver. 2 (High-speed Data Storage Unit)	CF Card Type I/II × 1 slot Use an OMRON HMC- EF□□□ Memory Card.	1 port (10/100Base-TX)	1	0.56		CJ1W-SPU01-V2	UC1, CE
	SPU- Console Ver. 2.0	Functions: Unit settings, Collection Uni OS : Microsoft Win Microsoft Win Microsoft Win Microsoft Win		WS02-SPTC1-V2				
	SYSMAC SPU Data Manage-	Management	ected by SYSMAC SPU D Middleware are automatica	ally acquired			WS02-EDMC1-V2	-
	ment Middleware Ver. 2.0	database. OS : Microsoft Win Microsoft Win Microsoft Win Microsoft Win Microsoft Win	l computer, and can be read dows 10 (32 bit/64 bit) dows 8.1 (32 bit/64 bit) dows 8 (32 bit/64 bit) dows 7 (32 bit/64 bit) dows Server 2012 dows Server 2008	gistered in a	5 licenses		WS02-EDMC1- V2L05	
	Memory Cards	Flash memory, 128 MB			Note:		HMC-EF183	N, L, CE
		Flash memory, 256 MB (SYSMAC SPU only)		A Mer Card i		HMC-EF283	_
		Flash memory, 512 MB (SYSMAC SPU only)		requir data c		HMC-EF583	
		Flash memory 1 GB (SY	SMAC SPU only)		tion.	onec-	HMC-EF194	

NS-series Programmable Terminals

NS-series Programmable Terminals

Model name	Specifications			Model number	Standards
		Ethernet	Case color		
NS5-V2	5.7-inch STN, 320 x 240 dots	No	lvory	NS5-SQ10-V2	UC1, CE, N, L,
(See note.)			Black	NS5-SQ10B-V2	UL Type4
		Yes	lvory	NS5-SQ11-V2	
			Black	NS5-SQ11B-V2	
	5.7-inch TFT, 320 x 240 dots	No	lvory	NS5-TQ10-V2	
			Black	NS5-TQ10B-V2	
		Yes	lvory	NS5-TQ11-V2	
			Black	NS5-TQ11B-V2	
NS8-V2	8.4-inch TFT, 640 x 480 dots	No	lvory	NS8-TV00-V2	UC1, CE, N, L
			Black	NS8-TV00B-V2	
		Yes	lvory	NS8-TV01-V2	
			Black	NS8-TV01B-V2	
NS10-V2	10.4-inch TFT, 640 x 480 dots	No	lvory	NS10-TV00-V2	
			Black	NS10-TV00B-V2	
		Yes	lvory	NS10-TV01-V2	
			Black	NS10-TV01B-V2	
NS12-V2	12.1-inch TFT, 800 x 600 dots	No	lvory	NS12-TS00-V2	
			Black	NS12-TS00B-V2	
		Yes	lvory	NS12-TS01-V2	
			Black	NS12-TS01B-V2	
NSH5-V2 Hand-held	5.7-inch STN, 320 x 240 dots	No	Black (Emergency stop switch: red)	NSH5-SQR10B-V2	UC, CE
			Black (Stop switch: gray)	NSH5-SQG10B-V2	
Cable	Screen transfer cable for IBM	PC/AT or compatible co	omputers	XW2Z-S002	
PT-to-PLC Connecting	PT connection: 9 pins	Length: 2 m		XW2Z-200T	
Cable	PLC connection: 9 pins	Length: 5 m		XW2Z-500T	
NSH5 Cables	RS-422A cable (loose wires)	Length: 10 m		NSH5-422CW-10M	-
	RS-232C cable (loose wires)	Length: 3 m		NSH5-232CW-3M	-
	RS-232C cable (loose wires)	Length: 10 m		NSH5-232CW-10M	

Note: As of July 2008, the image memory has been increased to 60 MB. Production of the NS5-Q00(B)-V2 and NSH5-SQ00B-V2 is scheduled to be discontinued with a transition period of one year.

■ NS-Runtime

Model name	Specifications		Media	Model number	Standards
NS-Runtime	NS-Runtime Installer, manual in PDF format,	1 license	CD	NS-NSRCL1	
	hardware key (See note.)	3 licenses		NS-NSRCL3	
		10 licenses		NS-NSRCL10	

Note: A hardware key (USB dongle) is required to run NS-Runtime.

Ordering Information

International Standards

- The standards are abbreviated as follows: U: UL, U1: UL (Class I Division 2 Products for Hazardous Locations), C: CSA, UC: cULus, UC1: cULus (Class I Division 2 Products for Hazardous Locations), CU: cUL, N: NK, L: Lloyd, and CE: EC Directives.
- Contact your OMRON representative for further details and applicable conditions for these standards.

EMC Directives

Applicable Standards EMI: EN 61000-6-4 EMS: EN 61131-2 and EN 61000-6-2 (See note.)

PLCs are electrical devices that are incorporated in machines and manufacturing installations. OMRON PLCs conform to the related EMC standards so that the devices and machines into which they are built can more easily conform to EMC standards. The actual PLCs have been checked for conformity to EMC standards. Whether these standards are satisfied for the actual system, however, must be checked by the customer.

EMC-related performance will vary depending on the configuration, wiring, and other conditions of the equipment or control panel in which the PLC is installed. The customer must, therefore, perform final checks to confirm that the overall machine or device conforms to EMC standards.

Note: The applicable EMS standard depends on the product.

Low Voltage Directive

Applicable Standard: EN 61131-2

Devices that operate at voltages from 50 to 1,000 VAC or 75 to 150 VDC must satisfy the appropriate safety requirements. With PLCs, this applies to Power Supply Units and I/O Units that operate in these voltage ranges.

These Units have been designed to conform to EN 61131-2, which is the applicable standard for PLCs.

OMRON

OMRON

Running H/F 1

(This page was intentionally left blank.) **MEMO**

Please read and understand this catalog before purchasing the product. Please consult your OMRON representative if you have any questions or comments.

Warranty and Limitations of Liability

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall the responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted. IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

Application Considerations

SUITABILITY FOR USE

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the product in the customer's application or use of the product.

Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all prohibitions of use applicable to this product.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

Disclaimers

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons. Consult with your OMRON representative at any time to confirm actual specifications of purchased product.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

PERFORMANCE DATA

Performance data given in this catalog is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.



Note: Do not use this document to operate the Unit.

OMRON Corporation Industrial Automation Company Tokyo, JAPAN

Contact: www.ia.omron.com

Regional Headquarters OMRON EUROPE B.V. Wegalaan 67-69-2132 JD Hoofddorp The Netherlands Tel: (31)2356-81-300/Fax: (31)2356-81-388

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON ELECTRONICS LLC One Commerce Drive Schaumburg, IL 60173-5302 U.S.A Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON (CHINA) CO., LTD. Room 2211, Bank of China Tower, 200 Yin Cheng Zhong Road, PuDong New Area, Shanghai, 200120, China Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200 Authorized Distributor:

© OMRON Corporation 2004-2012 All Rights Reserved. In the interest of product improvement, specifications are subject to change without notice. CSM 12 4 0120

Cat. No. R128-E1-05

Printed in Japan 0212(1104)