N-Smart
Presence Detection Measurement

OMRON

Best Selection

Fiber Sensor Best Selection Catalog

Start with Smart!

Easily select the most reliable Fiber Unit
for your detection conditions.

New Product Information

NEW

Build-in Lens Oil-resistant Fiber Unit

E32-T11NF

→ 38 Page

realizing

Smart Fiber Amplifier Units

E3NX-FA

Sensor Communications Units

E3NW

EtherCAT
CompoNet
CC-Link V2

Fiber Sensor Features 2 Page
Selection Guide 4 Page
Fiber Units
Standard Installation 6 Page
Saving Space 14 Page
Beam Improvements 20 Page
Transparent Objects 34 Page
Environmental Immunity 38 Page
Applications 48 Page
Installation Information 58 Page
Fiber Amplifiers, Communications Unit, and Accessories 62 Page
Technical Guide and Precautions 90 Page
Model Index 98 Page

Easy

“Mounts Anywhere”

Wide Variety

Variously-shaped, compact heads allow installation in any small space.

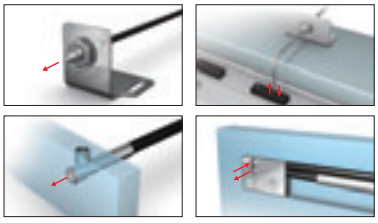

Suitable for Harsh Environments

Fiber Units are available for various installation conditions and can be installed as is, even in harsh environments.

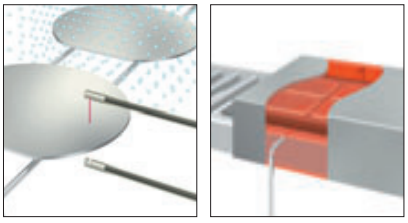

“Achieve Easy Detection in Many Applications”

Smart Tuning

Just press the button to set the optimum incident level and threshold.
Consistent settings are achieved for all users with this ultra-easy procedure.

Optimum Light Intensity Adjustment from Transparent Objects to Black Workpieces

The incident level is optimized to enable stable detection even for saturated or insufficient incident levels.

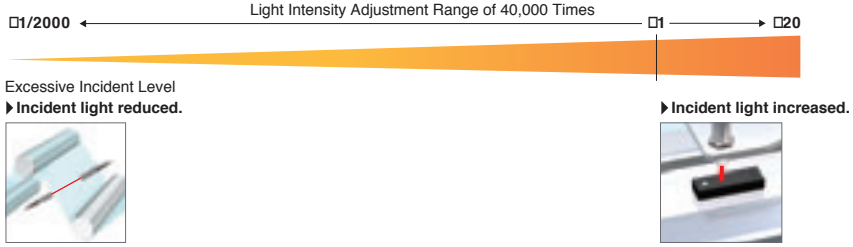

“Smooth Wiring and Setting”

Reduced Wiring

Simply link the Fiber Amplifier Units together for easy wiring and checking.

Separate Installation

Use the Distributed Sensor Unit for distributed installation to reduce introduction costs and work.

Easy Setup

Commissioning time is reduced with batch setting from a Touch Panel or backup data for process switchovers.

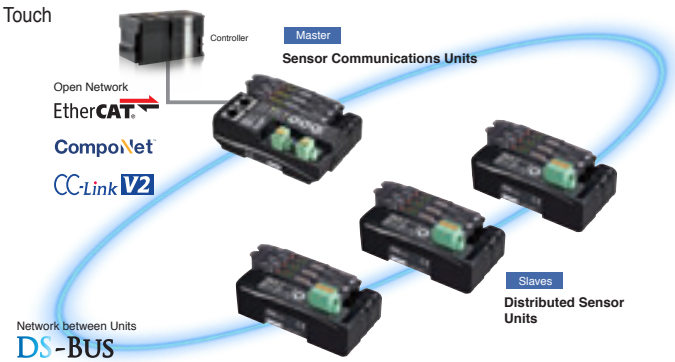

Optimal Fiber Sensor for additional

Fiber Units for various Installation Conditions,

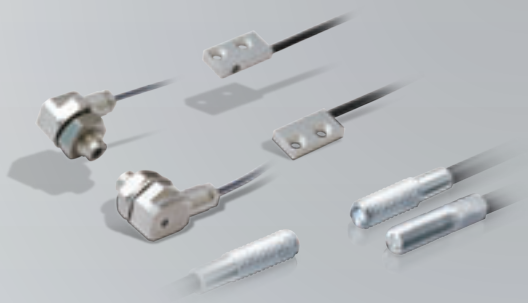

NEW

Smart Fiber Amplifier Units

E3NX-FA

62, 64 Page

Fiber

‘Easy’ and ‘Stable’ for

installation when starting production.

Fiber Amplifier Units with easy optimum setting

Stable

Fiber Units
E32

06 Page

"Expanded Application Response Capabilities"

Improved Basic Performance

Improvements in the sensing distance and minimum sensing object increase the range of application for stable detection.

1.5 Times
the Sensing Distance*

6 m

For E32-LT11 Fiber Unit with a fiber length of 3.5 m

1/10th
the Minimum Sensing Object*

0.3 μm dia.

Typical example of actual measurements with E32-D11R Fiber Unit.

*Compared to E3X-HD.

NEW

Sensor Communications Units
E3NW

EtherCAT
CompoNet
CC-Link V2

62, 64 Page

Sensor

Minimal Cost Process.

Basic Features of Fiber Sensors

Ideal for narrow spaces or for detecting minute objects.

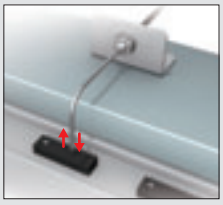

Digital display achieves visual control and quantitative control.

Conventional Photoelectric Sensor with Built-in Amplifier

Set the threshold by a sensitivity adjuster / Check the operation by an indicator.



- Ambiguous standard (e.g., 3/4 turn of adjuster)
- Indicator does not show the present value.

Fiber Sensor

Quantitative control over threshold settings with a digital display.



- The reference value can be set numerically for easier specification.
- Easily perceivable present value.

Selection by Category

STEP 1

Select a Fiber Unit.

Select a category. Fiber Unit Index 05 Page

Select a model. Category Pages 06 to 61 Page

STEP 2

Select a Fiber Amplifier Unit and Communications Unit. 62 Page

STEP 3

Select Accessories of Fiber Amplifier Unit 65,79 Page

Before Selecting Fiber Units

The Fiber Units specifications give the sensing distance when the Fiber Unit and Fiber Amplifier Unit is combined. Check the Fiber Amplifier Unit series for easier selection.

<Specifications on Each Fiber Unit Category Page>

Fiber Amplifier Unit Series

			E3X-HD Series	E3NX-FA Series NEW
Fiber Amplifier Unit specifications	Output		1 output	1 or 2 outputs (depending on the model)
	External input		Not supported	Supported or not supported (depending on the model)
	Response time		50 µs (55 µs)/250 µs/1 ms/16 ms (Default: 250 µs)	30 µs (32 µs)/250 µs/1 ms/16 ms (Default: 250 µs)
	Sensing distance (Giga-power mode)	E32-T11R	2,000 mm	3,000 mm
		E32-D11R	840 mm	1,260 mm
	Minimum sensing object	E32-T11R	5 µm dia.	2 µm dia.
Sensor Communications Unit application	Communications method (Sensor Communications Unit model)		EtherCAT (E3X-ECT) CompoNet (E3X-CRT)	EtherCAT (E3NW-ECT) CompoNet (E3NW-CRT) CC-Link (E3NW-CCL)
	Applicable Sensors		Fiber Sensor (E3X-HD0) Fiber Sensor (E3X-MDA0) Laser Photoelectric Sensor (E3C-LDA0) Proximity Sensor (E2C-EDA0)	Fiber Sensor (E3NX-FA0) Laser Sensors (E3NC-LA0, E3NC-SA0) Contact-Type Sensor (E9NC-TA0)*
Page listings	Ordering Information		78 Page	64 Page
	Ratings and Specifications		80 Page	66 Page
	Dimensions		80 Page	68 Page

* E3NW-CRT Sensor Communications Units (CompoNet) cannot be used.

Selection by Model

STEP 1

Search for the page in the model index. 98 Page

STEP 2

Search for the model on the corresponding pages. Each Page

Fiber Unit Index

Standard Installation

Threaded Models

Standard screw-type installation. The Fiber Units is mounted into a drilled hole and secured with nuts.

06 Page

Cylindrical Models

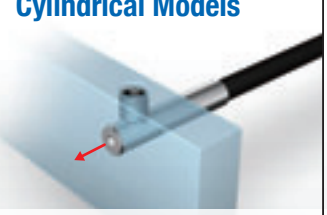

Ideal for installation in narrow spaces.
The Fiber Unit is secured with a set screw.

10 Page

Saving Space

Flat Models

Mount directly in limited spaces without using special mounting brackets.

14 Page

Sleeve Models

(Close-range Detection)

Suitable for close-range detection.
Ideal for detecting minute objects in areas with limited space.

16 Page

Beam Improvements

Small-Spot, Reflective

(Minute Object Detection)

Small-spot to accurately detect small objects.

20 Page

High-power Beam

(Long-distance Installation, Dust-resistant)

Suitable for detection on large equipment, of large objects, and in environments with airborne particles.

24 Page

Narrow View

(Detection Across Clearance)

The Fiber Unit emit a non-spreading beam to prevent false detection of light reflected off surrounding objects.

30 Page

Detection without Background Interference

Detect only objects in the sensing range, and not in the background.

32 Page

Transparent Object Detection

Retro-reflective

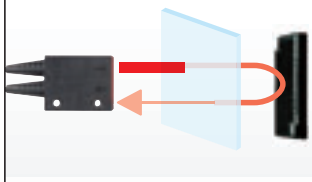

Detect transparent objects reliably because the beam passes through the object twice, resulting in greater light interruption.

34 Page

Limited-reflective

(Glass Detection)

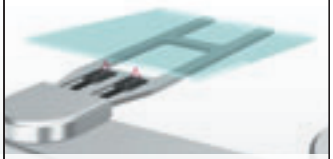

The limited-reflective optical system provides stable detection of specular reflective glass.

36 Page

Environmental Immunity

Chemical-resistant, Oil-resistant

Made from materials that are resistant to various oils and chemicals.

38 Page

Bending-resistant, Disconnection-resistant

Resistant to repeated bending on moving parts and breaking from snagging or shock.

40 Page

Heat-resistant

Can be used in high-temperature environments at up to 400°C.

44 Page

Special Applications

Area Beam

(Area Detection)

Detect across areas for meandering materials or falling workpieces whose position vary.

48 Page

Liquid-level Detection

Detect only liquid when being mounted on tubes or in liquid.

50 Page

Vacuum-resistant

Can be used under high vacuums of up to 10^{-5} Pa.

52 Page

FPD, Semiconductors, and Solar Cells

Designed specifically to reliably detect glass substrates and wafers.

54 Page

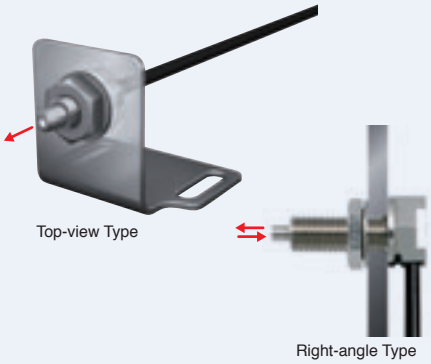

- Standard configuration. These Fiber Units are mounted into a hole drilled in a bracket and secured with nuts.
- The Right-angle Model prevents snagging on the cable because the cable runs along the mounting surface.

Hex-shaped Fiber Units with Build-in Lenses Build-in Lens have been added to the series. (They have a right-angle shape like that of the E32-T11N shown below.)
→ 96 Page

Specifications

Through-beam Fiber Units

Sensing direction (Aperture angle)	Size	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	E3X-HD HS	E3X-HD Other modes	E3NX-FA NEW GIGA	E3NX-FA NEW HS	E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	07 Page Dimensions No.
Right-angle (Approx. 60°)	M4	 IP67	Flexible, R1	2,000	700	ST : 1,000 SHS: 280	3,000	1,050	ST : 1,500 SHS: 280	1 dia. (5 μm dia./ 2 μm dia.)	E32-T11N 2M	07-A
Top-view (Approx. 60°)		 IP67									E32-T11R 2M	07-B
Top-view (Approx. 15°)		 Build-in Lens IP50	R25	* 4,000	2,700	* ST : 4,000 SHS: 1,080	* 4,000	* 4,000	* ST : 4,000 SHS: 1,080	2.3 dia. (0.1 dia./ 0.03 dia.)	E32-LT11 2M NEW	07-C
			Flexible, R1	* 4,000	2,300	* ST : 3,500 SHS: 920	* 4,000	3,450	* ST : 4,000 SHS: 920		E32-LT11R 2M NEW	

* The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.

Note The following mode names and response times apply to the modes given in the Sensing distance column.

1. [E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 μs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 μs, PNP output: 55 μs)
   [E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 μs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 μs)
   The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values.
2. The first value is for the E3X-HD and the second value is for the E3NX-FA.

Dimensions

Installation Information → 59, 60 Page

Through-beam Fiber Units (Set of 2)

07-A E32-T11N 2M (Free Cutting)

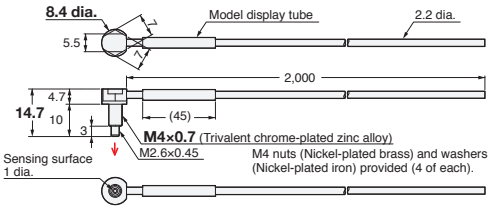

07-B E32-T11R 2M (Free Cutting)

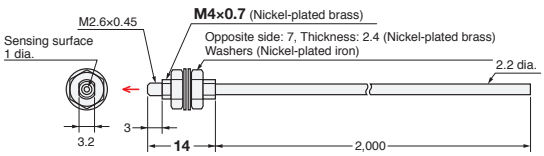

07-C E32-LT11 2M (Free Cutting)
E32-LT11R 2M (Free Cutting)

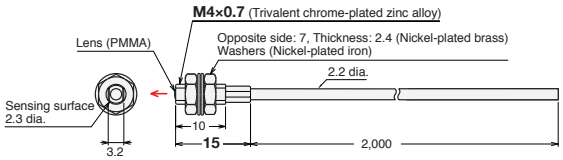

- Reference Information for Model Selection -

Features of the Right-angle Type

- Cable is less prone to snagging.
- Cable runs along the mounting surface for less space compared with Top-view Fiber Units.
- The nut is attached to the Fiber Unit to reduce installation work.

Build-in Lens

What Are Fiber Units with Build-in Lenses?

These Fiber Units have built-in lenses.
They feature high-power beams.
You don't have to worry about the lens falling off and getting lost.

What Is "Flexible" Fiber?

The flexible fiber has a small bending radius for easy routing without easily breaking.
It is easy to use because the cable can be bent without significantly reducing light intensity.

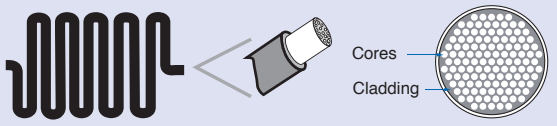

Structure which has a cladding around a large number of ultrafine cores.

And

Long-distance Sensing Applications

A separate Lens Unit can be attached to extend the sensing distance.
→ 26 Page

Breaking Due to Snagging or Shock

The Fiber Unit can be protected from breaking with stainless steel spiral tube.
→ 40 Page (Excluding the E32-T11N 2M.)

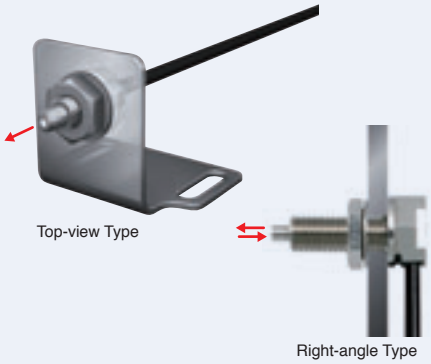

- Standard configuration. These Fiber Units are mounted into a hole drilled in a bracket and secured with nuts.
- The Right-angle Model prevents snagging on the cable because the cable runs along the mounting surface.

Hex-shaped Fiber Units have been added to the series.
(They have a right-angle shape like that of the E32-C31N shown below.)
→ 96 Page

Specifications

Reflective Fiber Units

Sensing direction (Aperture angle)	Size	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	E3X-HD HS	E3X-HD Other modes	E3NX-FA NEW GIGA	E3NX-FA NEW HS	E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	09 Page Dimensions No.
Right-angle (Approx. 60°)	M3	Coaxial, 20.5, M3, IP67	Flexible, R4	110	46	ST : 50 SHS: 14	160	69	ST : 75 SHS: 14	(5 µm dia./ 2 µm dia.)	E32-C31N 2M	09-A
	M6	Coaxial, 24, M6, IP67		780	220	ST : 350 SHS: 100	1,170	340	ST : 520 SHS: 100		E32-C91N 2M NEW	09-B
Top-view (Approx. 60°)	M3	11, M3, IP67	Flexible, R1	140	40	ST : 60 SHS: 16	210	60	ST : 90 SHS: 16		E32-D21R 2M	09-C
		Coaxial, 25, M3, IP67	R25	330	100	ST : 150 SHS: 44	490	150	ST : 220 SHS: 44		E32-C31 2M	09-D
		Coaxial, 11, M3, IP67	R10								E32-C31M 1M	09-E
	M4	15, M4, IP67	Flexible, R1	140	40	ST : 60 SHS: 16	210	60	ST : 90 SHS: 16		E32-D211R 2M	09-F
	M6	17, M6, IP67		840	240	ST : 350 SHS: 100	1,260	360	ST : 520 SHS: 100		E32-D11R 2M	09-G
		Coaxial, 23, M6, IP67	R25	1,400	400	ST : 600 SHS: 180	2,100	600	ST : 900 SHS: 180		E32-CC200 2M	09-H
Top-view (Approx. 15°)	M6	23, M6, Built-in Lens, IP50	R25	860	250	ST : 360 SHS: 110	1,290	370	ST : 540 SHS: 110	(1 dia./ 0.03 dia.)	E32-LD11 2M NEW	09-I
			Flexible, R1	840	240	ST : 350 SHS: 100	1,260	360	ST : 520 SHS: 100		E32-LD11R 2M NEW	

Note The following mode names and response times apply to the modes given in the Sensing distance column.

1. [E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
   [E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)
   The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values.
2. The first value is for the E3X-HD and the second value is for the E3NX-FA.
   The sensing distances for Reflective Fiber Units are for white paper. (The sensing distance for the E32-LD11 2M / E32-LD11R 2M are for glossy white paper.)

Dimensions

Installation Information → 58, 59 Page

Reflective Fiber Units

09-A E32-C31N 2M (Free Cutting)

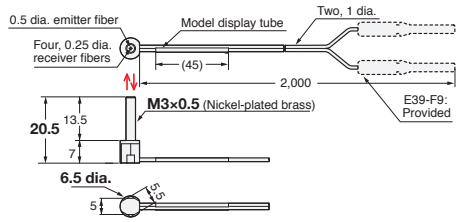

Note: There is a white line on the emitter fiber.
M3 nuts (Nickel-plated brass)
Washers (Nickel-plated brass) provided (2 of each)

09-B E32-C91N 2M (Free Cutting)

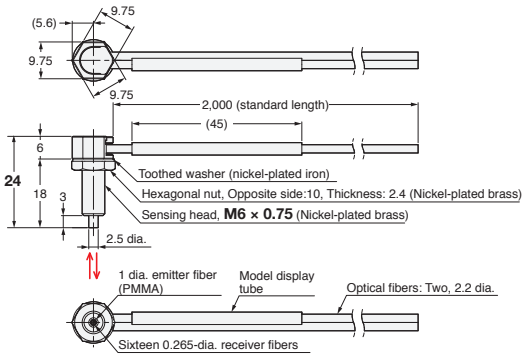

Note: There is a white line on the emitter fiber.

09-C E32-D21R 2M (Free Cutting)

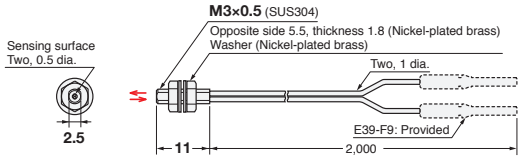

09-D E32-C31 2M (Free Cutting)

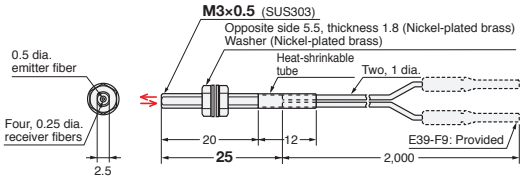

Note: There is a white line on the emitter fiber.

09-E E32-C31M 1M (Free Cutting)

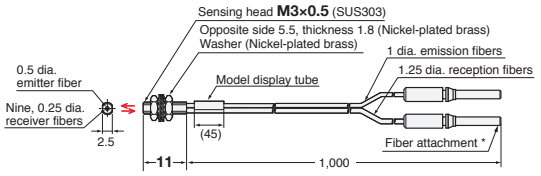

Note: There is a white line on the emitter fiber.

* The Fiber Attachments that are provided were specially designed for this Fiber Unit.
E39-F9 cannot be attached.

09-F E32-D211R 2M (Free Cutting)

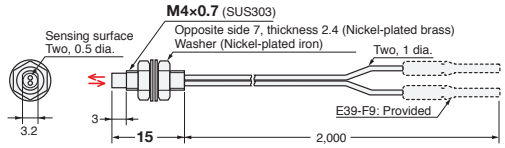

09-G E32-D11R 2M (Free Cutting)

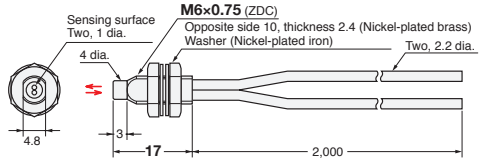

09-H E32-CC200 2M (Free Cutting)

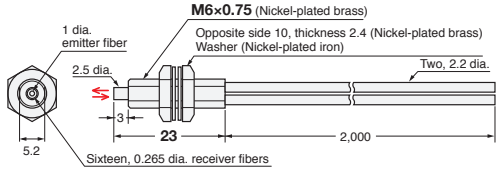

Note: There is a white line on the emitter fiber.

09-I E32-LD11 2M (Free Cutting)
E32-LD11R 2M (Free Cutting)

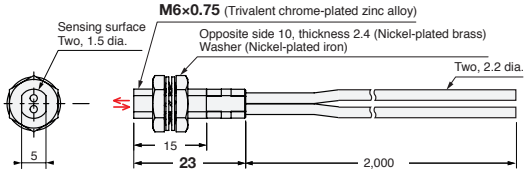

- Reference Information for Model Selection -

Features of Coaxial Reflective Type

These Fiber Units offer better detection of small objects at close distances (of 2 mm or less) than Standard Reflective Fiber Units.
They also detect glossy surfaces more reliably than Standard Reflective Fiber Units, even if the surface is tilted.
The receiver fibers are arranged around the emitter fiber as shown below.



And

Breaking Due to Snagging or Shock

The Fiber Unit can be protected from breaking with stainless steel spiral tube.

→ 42 Page

Features of the Right-angle Type

- Cable is less prone to snagging.
- Cable runs along the mounting surface for less space compared with Top-view Fiber Units.
- The nut is attached to the Fiber Unit to reduce installation work.

What Is "Flexible" Fiber?

The flexible fiber has a small bending radius for easy routing without easily breaking.
It is easy to use because the cable can be bent without significantly reducing light intensity.

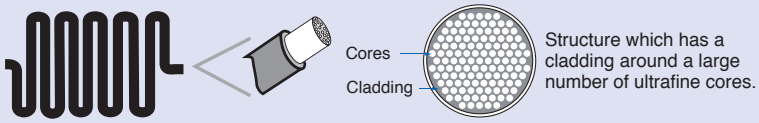

Build-in Lens

What Are Fiber Units with Build-in Lenses?

These Fiber Units have built-in lenses.
They feature high-power beams.
You don't have to worry about the lens falling off and getting lost.

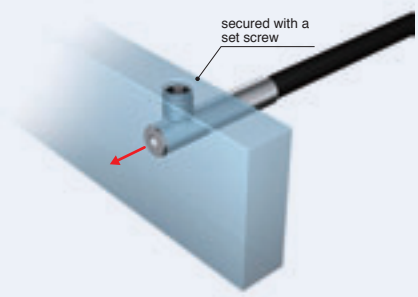

- Inserted where space is limited. (Secured using a set screw.)
- Ultramate space-saving by micro-fiber head. (1 dia. × 10 mm)

- Side-view models can be mounted where there is limited depth.

Specifications

Through-beam Fiber Units

Size	Sensing direction	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	HS	Other modes	Sensing distance (mm) E3NX-FA NEW GIGA	HS	Other modes	Optical axis diameter (minimum sensing object)	Models	11 Page Dimensions No.
1 dia.	Top-view	10, 1 dia., IP67	Flexible, R1	450	150	ST : 250 SHS: 60	670	220	ST : 370 SHS: 60	0.5 dia. (5 µm dia./ 2 µm dia.)	E32-T223R 2M	11-A
1.5 dia.	Top-view	10, 1.5 dia., IP67	Bendresistant, R4	680	220	ST : 400 SHS: 90	1,020	330	ST : 600 SHS: 90	0.5 dia. (5 µm dia./ 2 µm dia.)	E32-T22B 2M	11-B
3 dia.	Top-view	14, 3 dia., IP67	Flexible, R1	2,000	700	ST : 1,000 SHS: 280	3,000	1,050	ST : 1,500 SHS: 280	1 dia. (5 µm dia./ 2 µm dia.)	E32-T12R 2M	11-C
3 dia.	Side-view	35, 3 dia., IP67	Flexible, R1	750	260	ST : 450 SHS: 100	1,120	390	ST : 670 SHS: 100	1 dia. (5 µm dia./ 2 µm dia.)	E32-T14LR 2M	11-D

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)
2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

Dimensions

Installation Information → 60 Page

Through-beam Fiber Units (Set of 2)

11-A E32-T223R 2M (Free Cutting)



11-B E32-T22B 2M (Free Cutting)



11-C E32-T12R 2M (Free Cutting)



11-D E32-T14LR 2M (Free Cutting)

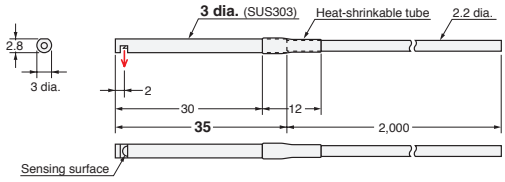

- Reference Information for Model Selection -

Recommended Mounting Hole Dimensions

The recommended mounting-hole dimensions for Cylindrical Fiber Units are given below.



(Unit: mm)

Outer diameter of Fiber Unit	1 dia.	1.5 dia.	3 dia.
Dimension F	$1.2^{+0.5}_{0}$ dia.	$1.7^{+0.5}_{0}$ dia.	$3.2^{+0.5}_{0}$ dia.

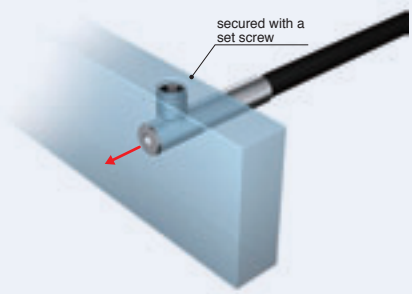

- Inserted where space is limited.
  (Secured using a set screw.)

Specifications

Reflective Fiber Units

Size	Sensing direction	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	E3X-HD HS	E3X-HD Other modes	E3NX-FA NEW GIGA	E3NX-FA NEW HS	E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	13 Page Dimensions No.
1.5 dia.	Top-view	15, 1.5 dia., IP67	Bend-resistant, R4	140	40	ST : 60 SHS: 16	210	60	ST : 90 SHS: 16	(5 µm dia./ 2 µm dia.)	E32-D22B 2M	13-A
1.5 dia. + 0.5 dia.		The sleeve cannot be bent. 3, 15, 1.5 dia., 0.5 dia., IP67	R4	28	8	ST : 12 SHS: 4	42	12	ST : 18 SHS: 4		E32-D43M 1M	13-B
3 dia.		15, 3 dia., IP67	Flexible, R1	140	40	ST : 60 SHS: 16	210	60	ST : 90 SHS: 16		E32-D22R 2M	13-C
		15, 3 dia., IP67	Bend-resistant, R4	300	90	ST : 140 SHS: 40	450	130	ST : 210 SHS: 40		E32-D221B 2M	13-D
		Coaxial 15, 3 dia., IP67	R25	700	200	ST : 300 SHS: 90	1,050	300	ST : 450 SHS: 90		E32-D32L 2M	13-E
3 dia. + 0.8 dia.		The sleeve cannot be bent. 20, 15, 3 dia., 0.8 dia., IP67		70	20	ST : 30 SHS: 8	100	30	ST : 45 SHS: 8		E32-D33 2M	13-F

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)

2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

3. The sensing distances for Reflective Fiber Units are for white paper.

Dimensions

Installation Information → 58, 59 Page

Reflective Fiber Units

13-A E32-D22B 2M (No Cutting)

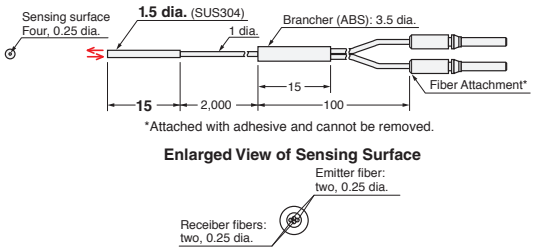

*Attached with adhesive and cannot be removed.

Enlarged View of Sensing Surface

13-B E32-D43M 1M (No Cutting)

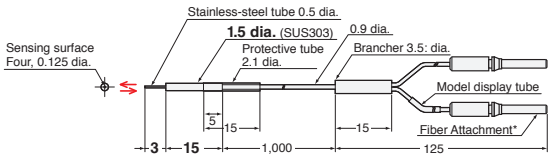

* Attached with adhesive and cannot be removed.

13-C E32-D22R 2M (Free Cutting)



13-D E32-D221B 2M (Free Cutting)



13-E E32-D32L 2M (Free Cutting)

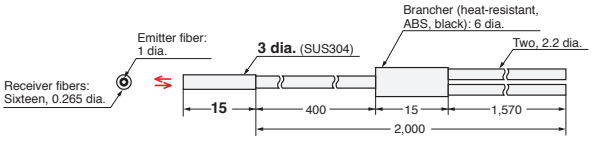

Note: There is a yellow dotted line on the Emitter fiber.

13-F E32-D33 2M (Free Cutting)

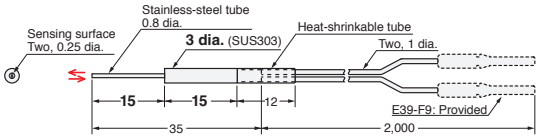

- Reference Information for Model Selection -

Features of Coaxial Reflective Type

These Fiber Units offer better detection of small objects at close distances (of 2 mm or less) than Standard Reflective Fiber Units.
They also detect glossy surfaces more reliably than Standard Reflective Fiber Units, even if the surface is tilted.
The receiver fibers are arranged around the emitter fiber as shown below.



Recommended Mounting Hole Dimensions

The recommended mounting-hole dimensions for Cylindrical Fiber Units are given below.



(Unit: mm)

Outer diameter of Fiber Unit	1.5 dia.	3 dia.
Dimension F	1.7 $^{+0.5}_{0}$ dia.	3.2 $^{+0.5}_{0}$ dia.

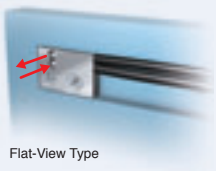
Flat-View Type

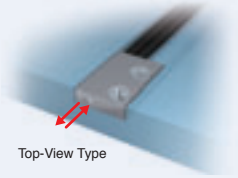
Top-View Type

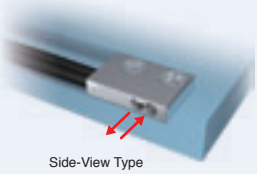
Side-View Type

- Thin profile for mounting in limited spaces.
- Mounts directly without using special mounting brackets.

Specifications

Through-beam Fiber Units

Sensing direction	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	HS	Other modes	Sensing distance (mm) E3NX-FA NEW GIGA	HS	Other modes	Optical axis diameter (minimum sensing object)	Models	15 Page Dimensions No.
Top-view	 IP67	Flexible, R1	2,000	700	ST : 1,000 SHS: 280	3,000	1,050	ST : 1,500 SHS: 280	1 dia. (5 µm dia./ 2 µm dia.)	E32-T15XR 2M	15-A
Side-view	 IP67		750	260	ST : 450 SHS: 100	1,120	390	ST : 670 SHS: 100		E32-T15YR 2M	15-B
Flat-view	 IP67									E32-T15ZR 2M	15-C
	 IP40		2,400	800	ST : 1,200 SHS: 300	3,600	1,200	ST : 1,800 SHS: 300	3 dia. (0.1 dia./ 0.03 dia.)	E32-LT35Z 2M NEW	15-D

Reflective Fiber Units

Sensing direction	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	HS	Other modes	Sensing distance (mm) E3NX-FA NEW GIGA	HS	Other modes	Optical axis diameter (minimum sensing object)	Models	15 Page Dimensions No.
Top-view	 IP67	Flexible, R1	840	240	ST : 350 SHS: 100	1,260	360	ST : 520 SHS: 100	(5 µm dia./ 2 µm dia.)	E32-D15XR 2M	15-E
Side-view	 IP67		200	52	ST : 100 SHS: 24	300	78	ST : 150 SHS: 24		E32-D15YR 2M	15-F
Flat-view	 IP67									E32-D15ZR 2M	15-G

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)

2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

3. The sensing distances for Reflective Fiber Units are for white paper.

Dimensions

Installation Information → 60 Page

Through-beam Fiber Units (Set of 2)

15-A E32-T15XR 2M (Free Cutting)

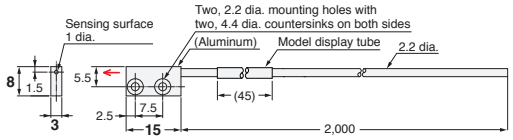

Note: 1. Set of two symmetrically shaped Fiber Units.
2. Four, M2 × 8 stainless steel countersunk mounting screws are provided.

15-B E32-T15YR 2M (Free Cutting)

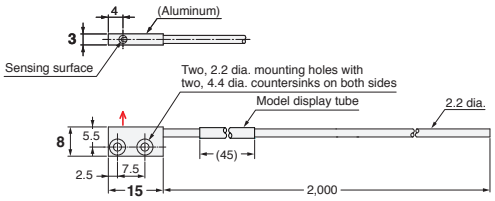

Note: 1. Set of two symmetrically shaped Fiber Units.
2. Four, M2 × 8 stainless steel countersunk mounting screws are provided.

15-C E32-T15ZR 2M (Free Cutting)

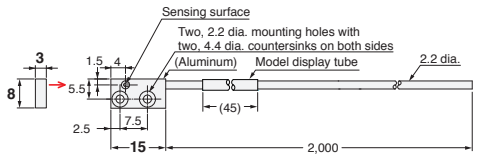

Note: 1. Set of two symmetrically shaped Fiber Units.
2. Four, M2 × 8 stainless steel countersunk mounting screws are provided.

15-D E32-LT35Z 2M (Free Cutting)

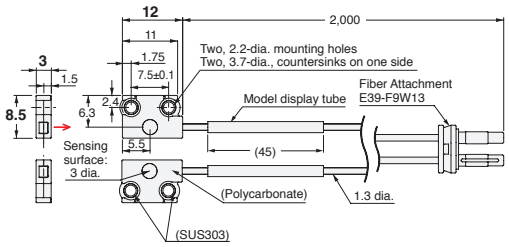

Note: 1. Set of two symmetrically shaped Fiber Units.
2. Four, M2 x 8 stainless-steel, pan-head mounting screws, four spring washers, four flat washers, and four nuts are provided.

Installation Information → 58 Page

Reflective Fiber Units

15-E E32-D15XR 2M (Free Cutting)

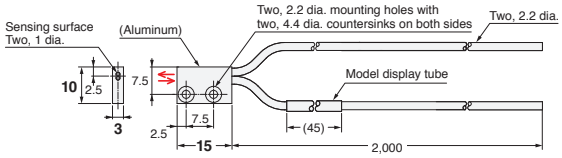

Note: Two, M2 × 8 stainless steel countersunk mounting screws are provided.

15-F E32-D15YR 2M (Free Cutting)

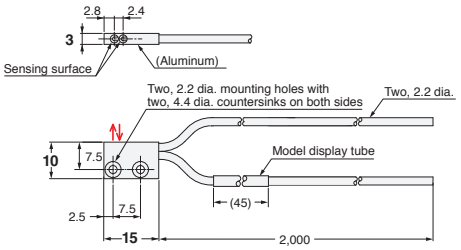

Note: Two, M2 × 8 stainless steel countersunk mounting screws are provided.

15-G E32-D15ZR 2M (Free Cutting)

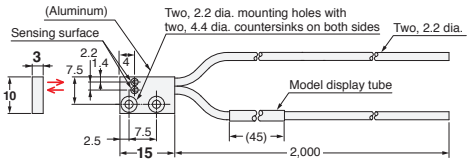

Note: Two, M2 × 8 stainless steel countersunk mounting screws are provided.

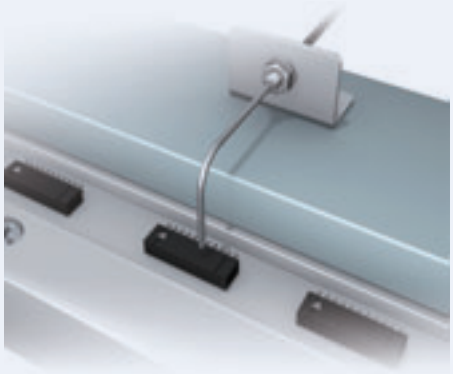

- Sleeve Fiber Units allow detection away from the point of installation for stable close-range detection of small objects.
- The shape of sleeve can be changed freely. (Refer to the sleeve bending specifications in the Appearance column of the specifications table.)

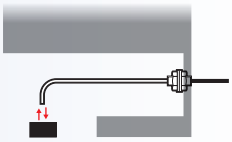

Specifications

Through-beam Fiber Units

Sensing direction	Appearance (mm)	Bending radius of cable	Sensing distance (mm)				Optical axis diameter (minimum sensing object)	Models	17 Page Dimensions No.
			E3X-HD		E3NX-FA NEW				
			GIGA HS	Other modes	GIGA HS	Other modes			
Side-view	The sleeve cannot be bent. 15 20 1 dia. 2 dia. IP67	Flexible, R1	170 / 50	ST : 100 SHS: 20	250 / 75	ST : 150 SHS: 20	0.5 dia. (5 µm dia./ 2 µm dia.)	E32-T24R 2M	17-A
	The sleeve cannot be bent. 15 15 2.5 dia. 0.81 dia. IP67	R10	450 / 150	ST : 250 SHS: 60	670 / 220	ST : 370 SHS: 60		E32-T24E 2M	17-B
Top-view	The sleeve cannot be bent. 40 15 0.5 dia. 3 dia. IP67		150 / 50	ST : 90 SHS: 20	220 / 75	ST : 130 SHS: 20	0.25 dia. (5 µm dia./ 2 µm dia.)	E32-T33 1M	17-C
	The sleeve cannot be bent. 15 15 0.82 dia. M3 IP67		510 / 170	ST : 300 SHS: 68	760 / 250	ST : 450 SHS: 68	0.5 dia. (5 µm dia./ 2 µm dia.)	E32-T21-S1 2M NEW	17-D
	Sleeve bending radius: 5 mm 90 11 1.2 dia. M4 IP67	Flexible, R1	2,000 / 700	ST : 1,000 SHS: 280	3,000 / 1,050	ST : 1,500 SHS: 280	1 dia. (5 µm dia./ 2 µm dia.)	E32-TC200BR 2M	17-E

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)

2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

Dimensions

Installation Information → 60, 61 Page

Through-beam Fiber Units (Set of 2)

17-A E32-T24R 2M (Free Cutting)

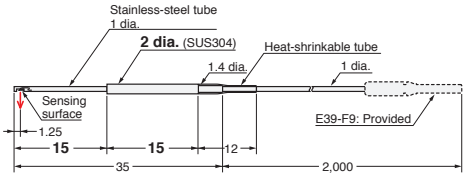

17-B E32-T24E 2M (Free Cutting)

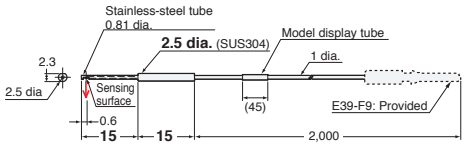

17-C E32-T33 1M (Free Cutting)

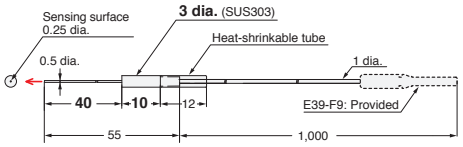

17-D E32-T21-S1 2M (Free Cutting)

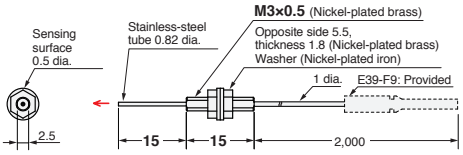

17-E E32-TC200BR 2M (Free Cutting)

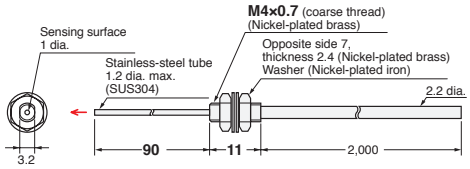

- Reference Information for Model Selection -

And

In case of bending sleeve

The E32-TC200BR has a bendable sleeve.
Use the Sleeve Bender to bend them.

Sleeve Bender (sold separately)

Appearance	Applicable Fiber Units	Model
Uses for the bending of the sleeve.	E32-TC200BR	E39-F11

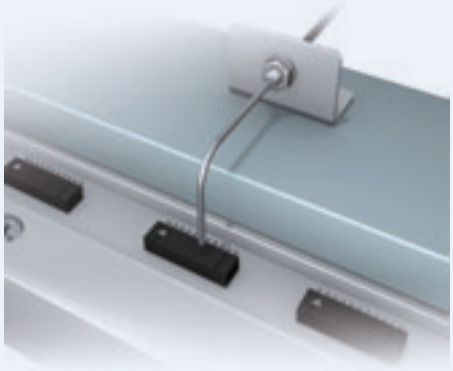

- Sleeve Fiber Units allow detection away from the point of installation for stable close-range detection of small objects.
- The shape of sleeve can be changed freely. (Refer to the sleeve bending specifications in the Appearance column of the specifications table.)

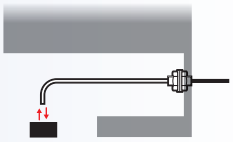

Specifications

Reflective Fiber Units

Sensing direction	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	E3X-HD HS	E3X-HD Other modes	E3NX-FA NEW GIGA	E3NX-FA NEW HS	E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	19 Page Dimensions No.
Side-view	The sleeve cannot be bent. 20, 15, 3 dia., 2 dia. IP67	Flexible, R1	70	20	ST : 30 SHS: 8	100	30	ST : 45 SHS: 8	(5 µm dia./ 2 µm dia.)	E32-D24R 2M	19-A
	Sleeve bending radius: 25 mm 65, 15, 4.8 dia., 2.1 dia. IP67	R25	120	45	ST : 53 SHS: 14	180	67	ST : 79 SHS: 14		E32-D24-S2 2M NEW	19-B
Top-view	The sleeve cannot be bent. 15, 3, 1.5 dia., 0.5 dia. IP67	R4	28	8	ST : 12 SHS: 4	42	12	ST : 18 SHS: 4		E32-D43M 1M	19-C
	The sleeve cannot be bent. 15, 15, 2 dia., 0.5 dia. IP67		14	4	ST : 6 SHS: 2	21	6	ST : 9 SHS: 2		E32-D331 2M	19-D
	The sleeve cannot be bent. 20, 15, 3 dia., 0.8 dia. IP67	R25	70	20	ST : 30 SHS: 8	100	30	ST : 45 SHS: 8		E32-D33 2M	19-E
	The sleeve cannot be bent. 15, 5, 3 dia., 0.82 dia. IP67	R4	63	18	ST : 27 SHS: 7	94	27	ST : 40 SHS: 7		E32-D32-S1 0.5M NEW	19-F
	The sleeve cannot be bent. 15, 15, M3, 0.82 dia. IP67									E32-D31-S1 0.5M NEW	19-G
	Sleeve bending radius: 5 mm 11, 40, M3, 1.2 dia. IP67	Flexible, R1	140	40	ST : 60 SHS: 16	210	60	ST : 90 SHS: 16		E32-DC200F4R 2M	19-H
	The sleeve cannot be bent. 15, 22, 4 dia., 1.65 dia. IP67	R10	250	72	ST : 110 SHS: 30	370	100	ST : 160 SHS: 30		E32-D22-S1 2M NEW	19-I
	Sleeve bending radius: 10 mm 16, 67, M4, 1.65 dia. IP67									E32-D21-S3 2M NEW	19-J
	The sleeve cannot be bent. 17, 90, M6, 2.5 dia. IP67	Flexible, R1	840	240	ST : 350 SHS: 100	1,260	360	ST : 520 SHS: 100		E32-DC200BR 2M	19-K
	Sleeve bending radius: 10 mm 15, 10, 3, 67, 1.65 dia. IP67	R10	250	72	ST : 110 SHS: 30	370	100	ST : 160 SHS: 30		E32-D25-S3 2M NEW	19-L

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)
2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.
3. The sensing distances for Reflective Fiber Units are for white paper.

Dimensions

Installation Information → 58, 59 Page

Reflective Fiber Units

19-A E32-D24R 2M (Free Cutting)

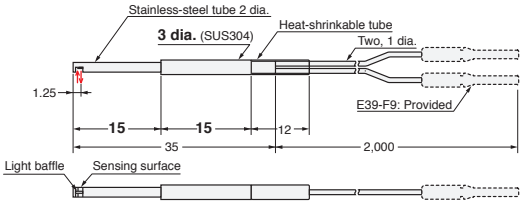

19-B E32-D24-S2 2M (Free Cutting)

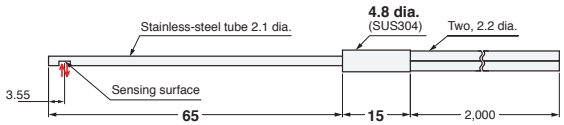

19-C E32-D43M 1M (No Cutting)

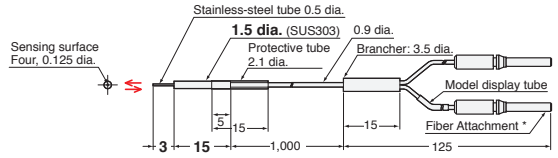

*Attached with adhesive and cannot be removed.

19-D E32-D331 2M (No Cutting)

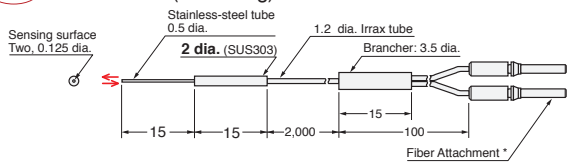

*Attached with adhesive and cannot be removed.

19-E E32-D33 2M (Free Cutting)

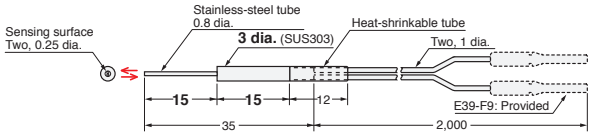

19-F E32-D32-S1 0.5M (No Cutting)

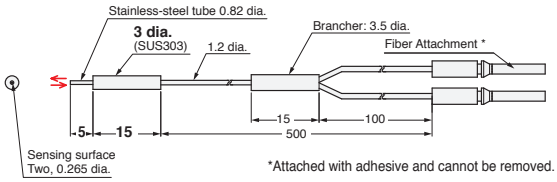

*Attached with adhesive and cannot be removed.

19-G E32-D31-S1 0.5M (No Cutting)

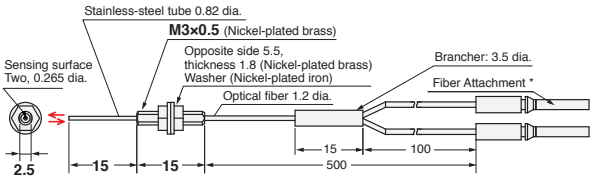

*Attached with adhesive and cannot be removed.

19-H E32-DC200F4R 2M (Free Cutting)

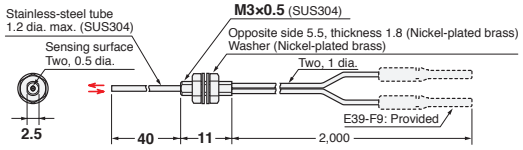

19-I E32-D22-S1 2M (Free Cutting)

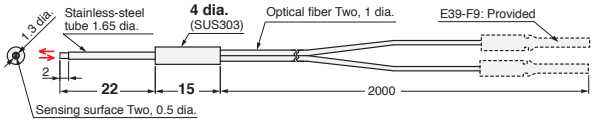

19-J E32-D21-S3 2M (Free Cutting)

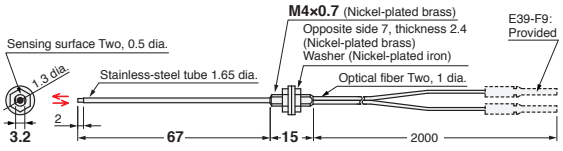

19-K E32-DC200BR 2M (Free Cutting)

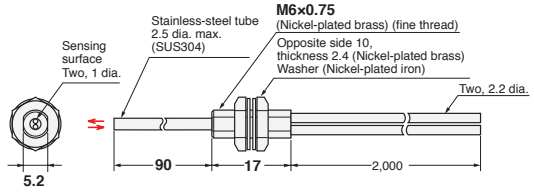

19-L E32-D25-S3 2M (Free Cutting)

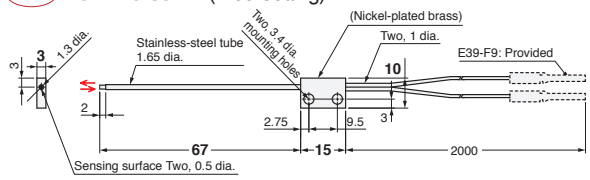

- Reference Information for Model Selection -

And

In case of bending sleeve

The E32-DC200F4R , E32-D21-S3 and E32-D25-S3 have bendable sleeves.
Use the Sleeve Bender to bend them.

Sleeve Bender (sold separately)

Appearance	Applicable Fiber Units	Model
Uses for the bending of the sleeve.	E32-DC200F4R E32-D21-S3 E32-D25-S3	E39-F11

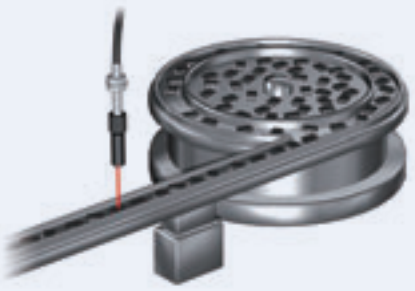

- Small-spot is ideal for detecting minute objects.
  Select the Fiber Unit that is best suited for the workpiece size and installation distance.
  (Refer to Reference Information for Model Selection)
- Available with a variable-spot Lens Unit to change the spot diameter without replacing the fiber. The spot diameter can be adjusted according to the size of the workpiece by changing the withdrew length and sensing distance.
  Refer to the following graph, which shows the relation between the withdrew length, focal distance, and spot diameter.

E39-F3A + E32-C42

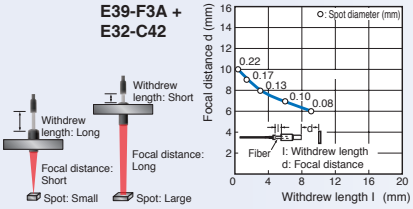

E39-F17 + E32-C42

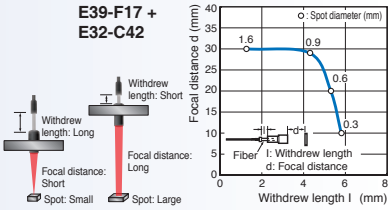

* Withdrew length: Approx. 1.3 to 5.8 mm

Specifications

Reflective Fiber Units

Variable-spot types

Lens Units + Fiber Unit

Type	Spot diameter	Center distance (mm)	Lens Units	Lens Units + Fiber Units	Fiber Unit		21 Page Dimensions No.
			Models	Appearance (mm)	Bending radius of cable	Model	
Variable spot	0.1 to 0.6 dia.	6 to 15	E39-F3A		R25	E32-C42 1M	21-A
	0.3 to 1.6 dia.	10 to 30	E39-F17				21-B

Parallel-light-spot types

Lens Units + Fiber Unit

Type	Spot diameter	Center distance (mm)	Lens Units	Lens Units + Fiber Units	Fiber Unit		21 Page Dimensions No.
			Model	Appearance (mm)	Bending radius of cable	Models	
Parallel light	4 dia.	0 to 20	E39-F3C		R25	E32-C31 2M	21-C
					Flexible, R2	E32-C21N 2M NEW	21-D

Small-spot types

Integrated Lens

Type	Spot diameter	Center distance (mm)	Appearance (mm)	Bending radius of cable	Models	21 Page Dimensions No.
Short-distance, Small-spot	0.1 dia.	5	Lens: unnecessary IP50	R25	E32-C42S 1M	21-E
Long-distance, Small-spot	6 dia.	50	 Lens: unnecessary IP50		E32-L15 2M	21-F

* The spot diameter and the center distance are the same when using with E3X-HD series or E3NX-FA series.

Dimensions

Installation Information → 58, 59 and 61 Page

Reflective Fiber Units

21-A E32-C42 1M (No Cutting) + E39-F3A

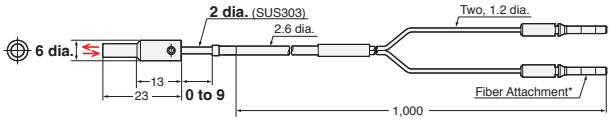

* Attached with adhesive and cannot be removed.

Note: There is a white tube on the emitter fiber.

E39-F3A

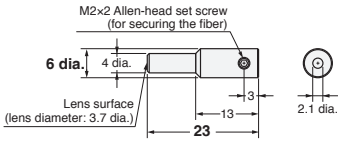

Material:
Aluminum for body and optical glass for lens.

Note: This is the Lens Unit for the E32-C42.

21-B E32-C42 1M (No Cutting) + E39-F17

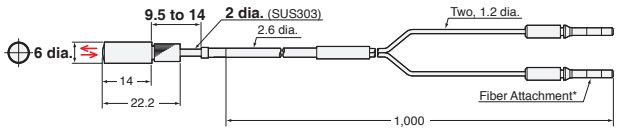

* Attached with adhesive and cannot be removed.

Note: There is a white tube on the emitter fiber.

E39-F17

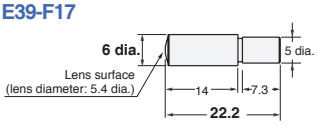

Material:
Aluminum for body and optical glass for lens.

21-C E32-C31 2M (Free Cutting) + E39-F3C

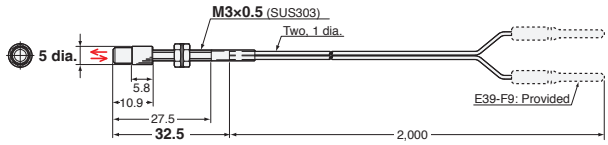

Note: There is a white line on the emitter fiber.

E39-F3C



Material:
Aluminum for body and optical glass for lens.

Note: This is the Lens Unit for the E32-C31 and E32-C31N.

21-D E32-C21N 2M (Free Cutting) + E39-F3C

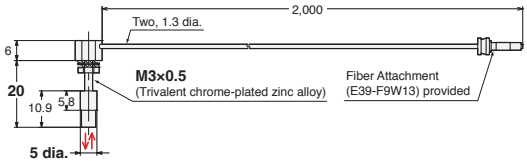

Note: There is a white line on the emitter fiber.

21-E E32-C42S 1M (No Cutting)

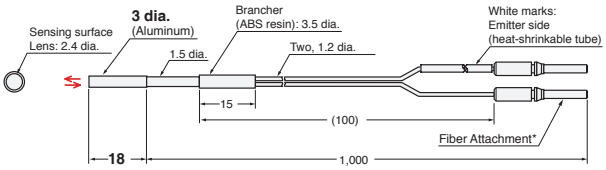

* Attached with adhesive and cannot be removed.

Note: There is a white tube on the emitter fiber.

21-F E32-L15 2M (Free Cutting)

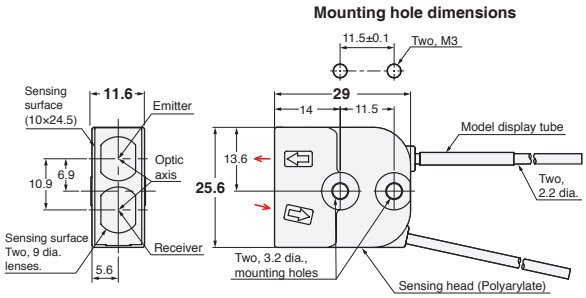

Note: There is a white tube on the emitter fiber.

- Reference Information for Model Selection -

Model Selection Tips

Select the best model by following these steps.

1. Select the model based on the spot diameter suitable for the workpiece size.
   * The Variable-spot Type is useful if there are different sensing object sizes.
2. Select the model based on the allowable installation distance and center distance.

<Map of Spot Diameters and Center Distances> (Unit: mm)

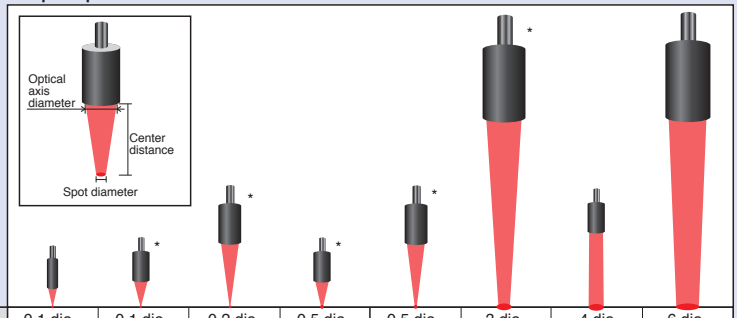

Spot diameter	0.1 dia.	0.1 dia.	0.2 dia.	0.5 dia.	0.5 dia.	3 dia.	4 dia.	6 dia.
Center distance	5	7	17	7	17	50	0 to 20	50
Optical axis diameter	2.4	3.7	4.8	3.7	4.8	9.4	3.7	10
Models	E32-C42S	E39-F3A-5 + E32-C41	E39-F3B + E32-C41	E39-F3A-5 + E32-C31 E32-C21N	E39-F3B + E32-C31 E32-C21N	E39-F18 + E32-CC200 E32-C91N	E39-F3C + E32-C31 E32-C21N	E32-L15

* Refer to page 22 for details.

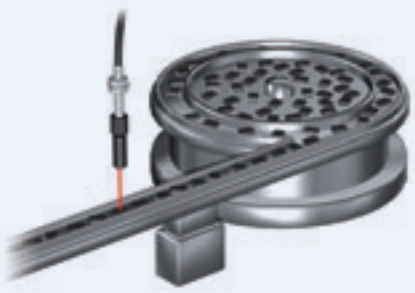

- Small-spot is ideal for detecting minute objects.
  Select the Fiber Unit that is best suited for the workpiece size and installation distance.
  (Refer to Reference Information for Model Selection)

Specifications

Reflective Fiber Units

Small-spot Models

Lens Units + Fiber Units

Type	Spot diameter	Center distance (mm)	Lens Units	Lens Units + Fiber Units	Fiber Units		23 Page Dimensions No.
			Models	Appearance(mm)	Bending radius of cable	Models	
Short-distance, small-spot	0.1 dia.	7	E39-F3A-5		R25	E32-C41 1M	23-A
	0.5 dia.					E32-C31 2M	23-B
					Flexible, R2	E32-C21N 2M NEW	23-C
Medium-distance, small-spot	0.2 dia.	17	E39-F3B		R25	E32-C41 1M	23-D
	0.5 dia.					E32-C31 2M	23-E
					Flexible, R2	E32-C21N 2M NEW	23-F
Long-distance, small-spot	3 dia.	50	E39-F18		R25	E32-CC200 2M	23-G
					Flexible, R4	E32-C91N 2M	23-H

* The spot diameter and the center distance are the same when using with E3X-HD series or E3NX-FA series.

Dimensions

Installation Information → 58, 61 Page

Reflective Fiber Units

23-A E32-C41 1M (No Cutting) + E39-F3A-5

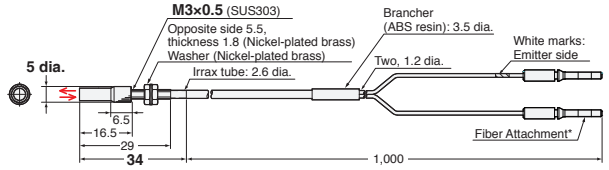

* Attached with adhesive and cannot be removed.

Note: There is a white tube on the emitter fiber.

23-B E32-C31 2M (Free Cutting) + E39-F3A-5

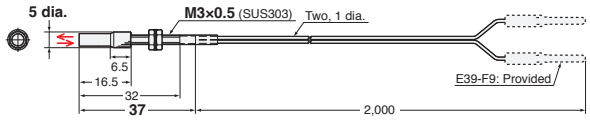

Note: There is a white line on the emitter fiber.

E39-F3A-5

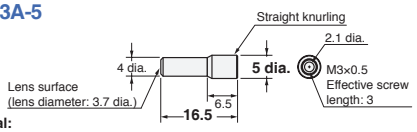

Material:
Aluminum for body and optical glass for lens

Note: This is a Lens Unit for the E32-C41, E32-C31 and E32-C31N.

23-C E32-C21N 2M (Free Cutting) + E39-F3A-5

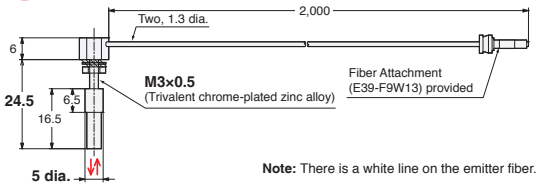

Note: There is a white line on the emitter fiber.

23-D E32-C41 1M (No Cutting) + E39-F3B

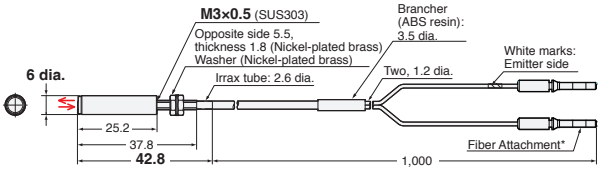

* Attached with adhesive and cannot be removed.

Note: There is a white tube on the emitter fiber.

23-E E32-C31 2M (Free Cutting) + E39-F3B

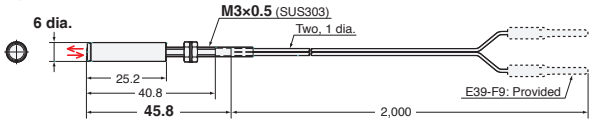

Note: There is a white line on the emitter fiber.

E39-F3B



Material:
Aluminum for body and optical glass for lens

Note: This is a Lens Unit for the E32-C41, E32-C31 and E32-C31N.

23-F E32-C21N 2M (Free Cutting) + E39-F3B

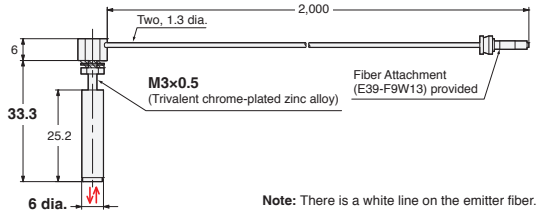

Note: There is a white line on the emitter fiber.

23-G E32-CC200 2M (Free Cutting) + E39-F18

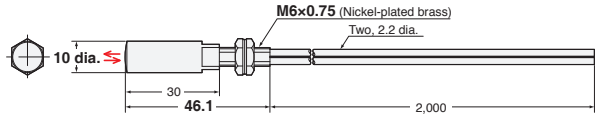

Note: There is a white line on the emitter fiber.

23-H E32-C91N 2M (Free Cutting) + E39-F18

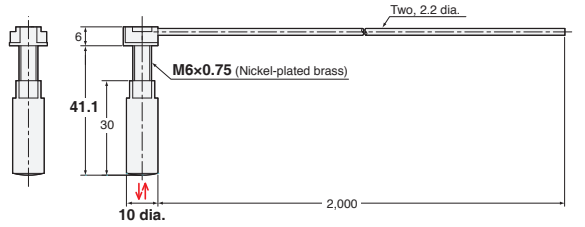

Note: There is a white line on the emitter fiber.

E39-F18

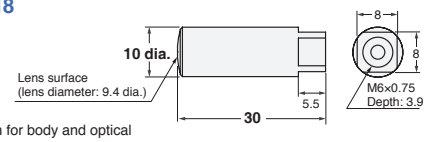

Material:
Aluminum for body and optical glass for lens

Note: This is a Lens Unit for the E32-C91N and E32-CC200.

- Reference Information for Model Selection -

Model Selection Tips

Select the best model by following these steps.

1. Select the model based on the spot diameter suitable for the workpiece size.
   * The Variable-spot Type is useful if there are different sensing object sizes.
2. Select the model based on the allowable installation distance and center distance.

<Map of Spot Diameters and Center Distances> (Unit: mm)

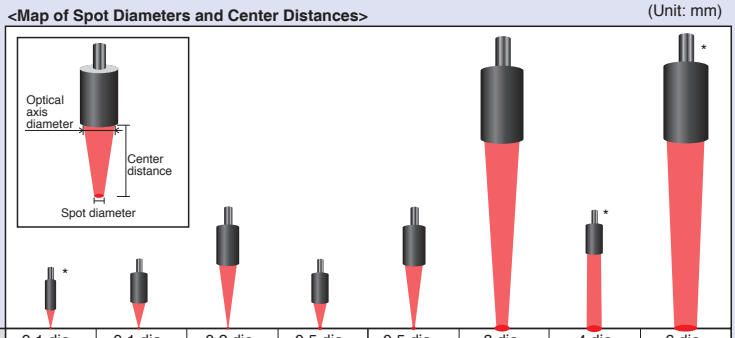

Spot diameter	0.1 dia.	0.1 dia.	0.2 dia.	0.5 dia.	0.5 dia.	3 dia.	4 dia.	6 dia.
Center distance	5	7	17	7	17	50	0 to 20	50
Optical axis diameter	2.4	3.7	4.8	3.7	4.8	9.4	3.7	10
Models	E32-C42S	E39-F3A-5 + E32-C41	E39-F3B + E32-C41	E39-F3A-5 + E32-C31 E32-C21N	E39-F3B + E32-C31 E32-C21N	E39-F18 + E32-CC200 E32-C91N	E39-F3C + E32-C31 E32-C21N	E32-L15

* Refer to page 20 for details.

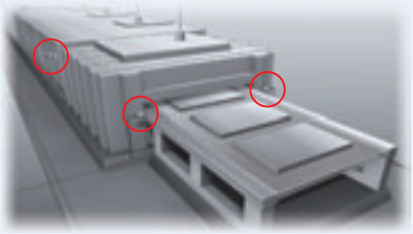

- Maximum sensing distance without attaching a Lens: 20 m (E32-T17L)
  Suitable for detection of large objects and for use in large-scale installations.
- Powerful enough to resist the influences of dust and dirt.
  (Refer to the comparisons of incident level on the Reference Information for Model Selection.)
- In addition to the products listed on this page, Lenses are available to extend the sensing distance. (→ 26 to 29 pages)

Specifications

Through-beam Fiber Units

Sensing direction	Aperture angle	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA HS	E3X-HD Other modes	E3NX-FA NEW GIGA HS	E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	25 Page Dimensions No.
Right-angle	15°		Flexible, R2	4,000 *1 / 2,300	ST : 3,500 SHS: 920	4,000 *1 / 3,450	*1 ST : 4,000 SHS: 920	2.3 dia. (0.1 dia./ 0.03 dia.)	E32-LT11N 2M NEW	25-A
Top-view	10°		R25	20,000 *2 / 20,000 *2	*2 ST : 20,000 SHS: 8,000	20,000 *2 / 20,000 *2	*2 ST : 20,000 SHS: 8,000	10 dia.	E32-T17L 10M	25-B
	15°	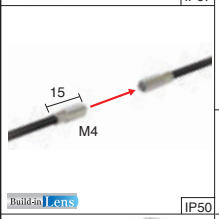	R25	4,000 *1 / 2,700	*1 ST : 4,000 SHS: 1,080	4,000 *1 / 4,000 *1	*1 ST : 4,000 SHS: 1,080	2.3 dia. (0.1 dia./ 0.03 dia.)	E32-LT11 2M NEW	25-C
			Flexible, R1	4,000 *1 / 2,300	ST : 3,500 SHS: 920	4,000 *1 / 3,450	*1 ST : 4,000 SHS: 920		E32-LT11R 2M NEW	
Side-view	30°		R25	4,000 *1 / 4,000 *1	*1 ST : 4,000 SHS: 1,800	4,000 *1 / 4,000 *1	*1 ST : 4,000 SHS: 1,800	4 dia. (0.1 dia./ 0.03 dia.)	E32-T14 2M	25-D

*1 The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.
*2 The optical fiber is 10 m long on each side, so the sensing distance is 20,000 mm.

Reflective Fiber Units

Sensing direction	Aperture angle	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA HS	E3X-HD Other modes	E3NX-FA NEW GIGA HS	E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Model	25 Page Dimensions No.
Top-view	4°		Bendresistant, R4	40 to 2,800 / 40 to 900	ST : 40 to 1,400 SHS: 40 to 480	40 to 4,000 / 40 to 1,350	ST : 40 to 2,100 SHS: 40 to 480	–	E32-D16 2M	25-E

Note The following mode names and response times apply to the modes given in the Sensing distance column.

1. [E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)
The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values.

2. The first value is for the E3X-HD and the second value is for the E3NX-FA.
The sensing distances for Reflective Fiber Units are for white paper.

Dimensions

Installation Information → 59, 60 Page

Through-beam Fiber Units (Set of 2)

25-A E32-LT11N 2M (Free Cutting)

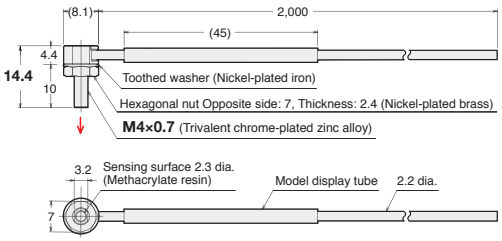

25-B E32-T17L 10M (Free Cutting)

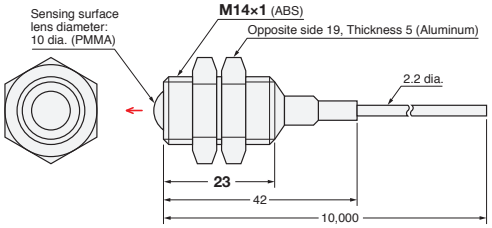

25-C E32-LT11 2M (Free Cutting)
E32-LT11R 2M (Free Cutting)

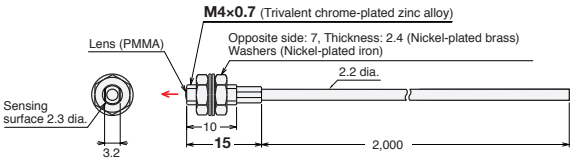

25-D E32-T14 2M (Free Cutting)

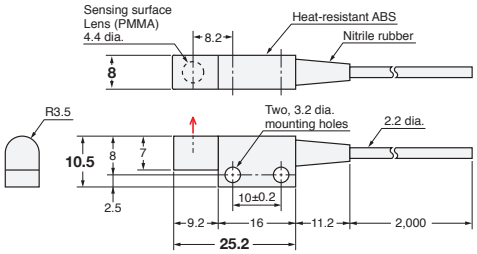

Installation Information → 58 Page

Reflective Fiber Units

25-E E32-D16 2M (Free Cutting)

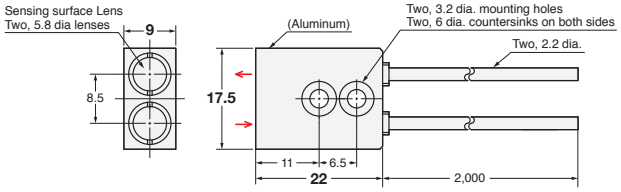

- Reference Information for Model Selection -

Comparisons of incident level

Select the model based on the comparisons of incident level against Standard Fiber Units.

Comparisons of incident level (Through-beam)

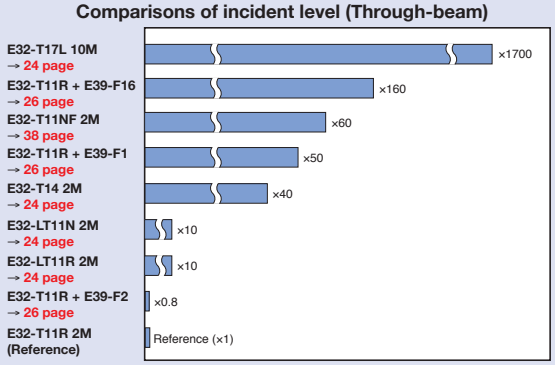

Comparisons of incident level (Reflective)

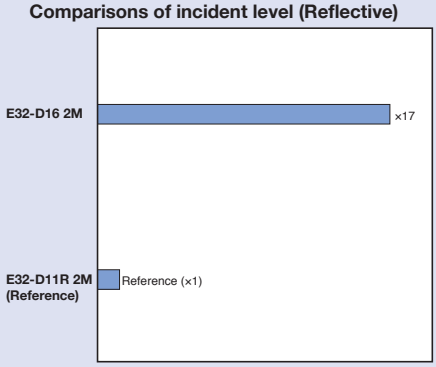

Specifications

Through-beam Fiber Units

Lens Units / Fiber Units	Type	High-power (incident level: 50 times)	Ultra-high-power (incident level: 160 times)	Side-View (incident level: 0.8 times)
	Models	E39-F1	E39-F16	E39-F2
	Appearance	26-A	26-B	26-C
	Aperture angle	Approx. 12°	Approx. 6°	Approx. 60°
	Optical axis diameter (minimum sensing object)	4 dia. (0.1 dia.)	7.2 dia.	3 dia. (0.1 dia.)

Models	Appearance (mm)	Sensing distance (mm)											
		E3X-HD		E3NX-FA NEW		E3X-HD		E3NX-FA NEW		E3X-HD		E3NX-FA NEW	
		GIGA HS	Other modes	GIGA HS	Other modes	GIGA HS	Other modes	GIGA HS	Other modes	GIGA HS	Other modes	GIGA HS	Other modes
E32-T11N 2M		4,000* / 4,000*	* ST: 4,000 / SHS: 2,000 (27-A)	4,000* / 4,000*	* ST: 4,000 / SHS: 2,000	4,000* / 4,000*	* ST: 4,000 / SHS: 3,600 (27-D)	4,000* / 4,000*	* ST: 4,000 / SHS: 3,600	—	—	—	—
E32-T11R 2M		4,000* / 4,000*	* ST: 4,000 / SHS: 2,000 (27-B)	4,000* / 4,000*	* ST: 4,000 / SHS: 2,000	4,000* / 4,000*	* ST: 4,000 / SHS: 3,600 (27-E)	4,000* / 4,000*	* ST: 4,000 / SHS: 3,600	1,450 / 500	ST: 800 / SHS: 200 (27-G)	2,170 / 750	ST: 1,200 / SHS: 200
E32-T11 2M		4,000* / 4,000*	* ST: 4,000 / SHS: 1,860 (27-C)	4,000* / 4,000*	* ST: 4,000 / SHS: 1,860	4,000* / 4,000*	* ST: 4,000 / SHS: 4,000 (27-F)	4,000* / 4,000*	* ST: 4,000 / SHS: 4,000	2,300 / 860	ST: 1,320 / SHS: 320 (27-H)	3,450 / 1,290	ST: 1,980 / SHS: 320

* The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 μs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 μs, PNP output: 55 μs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 μs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 μs)

2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

Dimensions

Installation Information → 61 Page

Lens Units (Set of 2)

26-A E39-F1



Material: Brass for the body and optical glass for the lens itself.

Note: Two per set.

26-B E39-F16



Material: SUS303 for the body and optical glass for the lens itself.

Note: Two per set.

26-C E39-F2

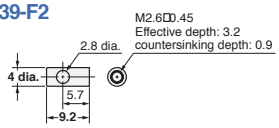

Material: Brass for the body and optical glass for the lens itself.

Note: Two per set.

Dimensions

Installation Information → 60, 61 Page

Through-beam Fiber Units (Set of 2)

27-A E32-T11N 2M (Free Cutting) + E39-F1



27-B E32-T11R 2M (Free Cutting) + E39-F1



27-C E32-T11 2M (Free Cutting) + E39-F1



27-D E32-T11N 2M (Free Cutting) + E39-F16

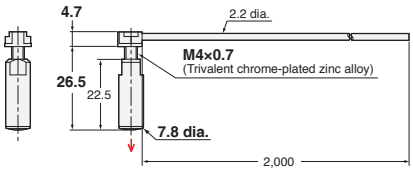

27-E E32-T11R 2M (Free Cutting) + E39-F16



27-F E32-T11 2M (Free Cutting) + E39-F16



27-G E32-T11R 2M (Free Cutting) + E39-F2

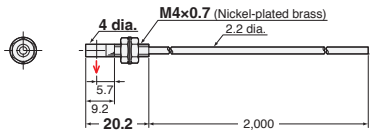

27-H E32-T11 2M (Free Cutting) + E39-F2

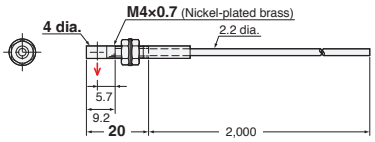

- Reference Information for Model Selection -

Comparisons of incident level

Select the model based on the comparisons of incident level against Standard Fiber Units.

Comparisons of incident level (Through-beam)

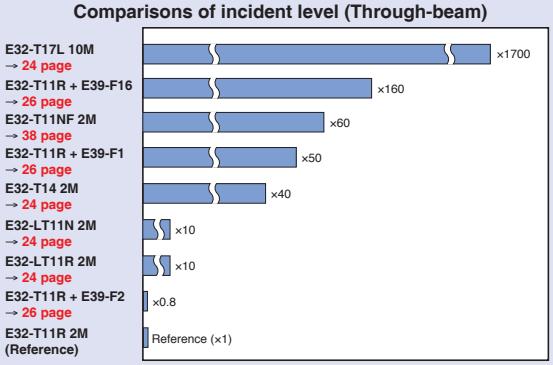

Specifications

Through-beam Fiber Units (Heat-resistant)

Lens Units	Type	High-power (incident level: 50 times)	Ultra-high-power (incident level: 160 times)	Side-View (incident level: 0.8 times)
	Models	E39-F1	E39-F16	E39-F2
	Appearance	28-A	28-B	28-C
	Aperture angle	Approx. 12°	Approx. 6°	Approx. 60°
Fiber Units	Optical axis diameter (minimum sensing object)	4 dia. (0.1 dia.)	7.2 dia.	3 dia. (0.1 dia.)

Models	Appearance (mm)	Sensing distance (mm)											
		E3X-HD		E3NX-FA NEW		E3X-HD		E3NX-FA NEW		E3X-HD		E3NX-FA NEW	
		GIGA HS	Other modes	GIGA HS	Other modes	GIGA HS	Other modes	GIGA HS	Other modes	GIGA HS	Other modes	GIGA HS	Other modes
E32-T51R 2M	Heat-resistant up to 100°C 	4,000* / 3,900	ST : 4,000* SHS: 1,500 29-A	4,000* / 4,000*	ST : 4,000* SHS: 1,500	4,000* / 4,000*	ST : 4,000* SHS: 4,000* 29-D	4,000* / 4,000*	ST : 4,000* SHS: 4,000*	1,400 / 500	ST : 720 SHS: 200 29-G	2,100 / 750	ST : 1,080 SHS: 200
E32-T81R-S 2M	Heat-resistant up to 200°C 	4,000* / 2,700	ST : 4,000* SHS: 1,000 29-B	4,000* / 4,000*	ST : 4,000* SHS: 1,000	4,000* / 4,000*	ST : 4,000* SHS: 1,800 29-E	4,000* / 4,000*	ST : 4,000* SHS: 1,800	1,000 / 360	ST : 550 SHS: 140 29-H	1,500 / 540	ST : 820 SHS: 140
E32-T61-S 2M	Heat-resistant up to 350°C (200°C) (See Note 3) 	4,000* / 4,000*	ST : 4,000* SHS: 1,800 29-C	4,000* / 4,000*	ST : 4,000* SHS: 1,800	4,000* / 4,000*	ST : 4,000* SHS: 3,100 29-F	4,000* / 4,000*	ST : 4,000* SHS: 3,100	1,680 / 600	ST : 900 SHS: 240 29-I	2,520 / 900	ST : 1,350 SHS: 240

* The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 μs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 μs, PNP output: 55 μs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 μs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 μs)
2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values.
The first value is for the E3X-HD and the second value is for the E3NX-FA.
3. The ambient temperature of E32-T61-S must be between –40 to 200°C when using it with E39-F1 or E39-F2 Lens Unit.
The ambient temperature of E32-T61-S must be between –40 to 350°C when using it with E39-F16 Lens Unit.

Lens Units	Type	High-power (incident level: 50 times)	Ultra-high-power (incident level: 160 times)
	Models	E39-F1-33	E39-F16
	Appearance	28-D	28-B
	Aperture angle	Approx. 12°	Approx. 6°
Fiber Units	Optical axis diameter (minimum sensing object)	4 dia. (0.1 dia.)	7.2 dia.

Models	Appearance (mm)	Sensing distance (mm)							
		E3X-HD		E3NX-FA NEW		E3X-HD		E3NX-FA NEW	
		GIGA HS	Other modes	GIGA HS	Other modes	GIGA HS	Other modes	GIGA HS	Other modes
E32-T51 2M	Heat-resistant up to 150°C 	4,000* / 2,300	ST : 4,000* SHS: 1,400 29-J	4,000* / 3,450	ST : 4,000* SHS: 1,400	4,000* / 4,000*	ST : 4,000* SHS: 4,000* 29-K	4,000* / 4,000*	ST : 4,000* SHS: 4,000*

* The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 μs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 μs, PNP output: 55 μs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 μs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 μs)
2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values.
The first value is for the E3X-HD and the second value is for the E3NX-FA.

Dimensions

Installation Information → 61 Page

Lens Units (Set of 2)

28-A E39-F1



Material: Brass for the body and optical glass for the lens itself.
Note: Two per set.

28-B E39-F16



Material: SUS303 for the body and optical glass for the lens itself.
Note: Two per set.

28-C E39-F2



Material: Brass for the body and optical glass for the lens itself.
Note: Two per set.

28-D E39-F1-33



Material: Brass for the body and optical glass for the lens itself.
Note 1: Two per set.
Note 2: This is the Lens Unit for the E32-T51.

Dimensions

Installation Information → 60, 61 Page

Through-beam Fiber Units (Set of 2)

29-A E32-T51R 2M (Free Cutting) + E39-F1



29-B E32-T81R-S 2M (No Cutting) + E39-F1



29-C E32-T61-S 2M (No Cutting) + E39-F1

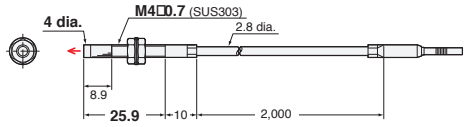

29-D E32-T51R 2M (Free Cutting) + E39-F16



29-E E32-T81R-S 2M (No Cutting) + E39-F16



29-F E32-T61-S 2M (No Cutting) + E39-F16

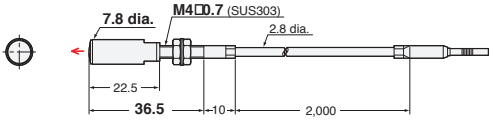

29-G E32-T51R 2M (Free Cutting) + E39-F2

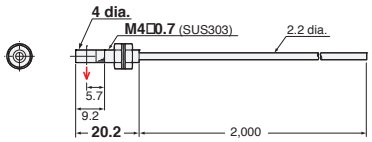

29-H E32-T81R-S 2M (No Cutting) + E39-F2

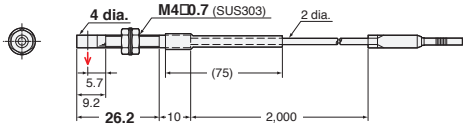

29-I E32-T61-S 2M (No Cutting) + E39-F2

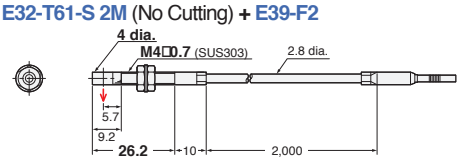

29-J E32-T51 2M (Free Cutting) + E39-F1-33

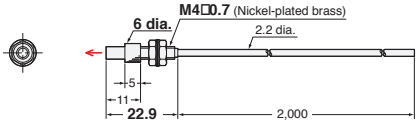

29-K E32-T51 2M (Free Cutting) + E39-F16



- Reference Information for Model Selection -

Comparisons of incident level

Select the model based on the comparisons of incident level against Standard Fiber Units.

Comparisons of incident level (Through-beam)

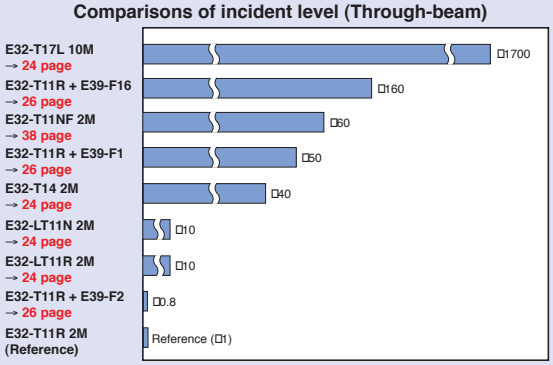

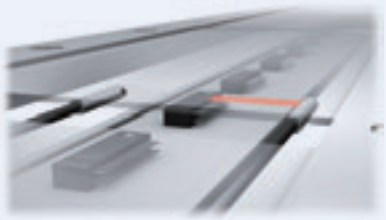

- The fine beam prevents false detection of light that is reflected off surrounding objects.

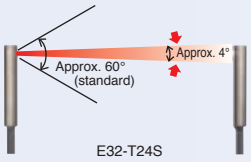

Specifications

Through-beam Fiber Units

Sensing direction	Aperture angle	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA/HS	Sensing distance (mm) E3X-HD Other modes	Sensing distance (mm) E3NX-FA NEW GIGA/HS	Sensing distance (mm) E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	31 Page Dimensions No.
Side-view	1.5°	20.5, Thickness: 3 mm, IP50	Flexible, R1	3,220 / 1,200	ST: 1,780 / SHS: 500	4,000* / 1,800	ST: 2,670 / SHS: 500	2 dia. (0.1 dia./ 0.03 dia.)	E32-A03 2M	31-A
		24.5, 10, Thickness: 3 mm, IP50	R10						E32-A03-1 2M	31-B
	3.4°	20.5, Thickness: 2 mm, IP50		1,280 / 450	ST: 680 / SHS: 200	1,920 / 670	ST: 1,020 / SHS: 200	1.2 dia. (0.1 dia./ 0.03 dia.)	E32-A04 2M	31-C
	4°	20.5, 3.5 dia., IP50	Flexible, R1	4,000* / 1,460	ST: 2,200 / SHS: 580	4,000* / 2,190	ST: 3,300 / SHS: 580	2 dia. (0.1 dia./ 0.03 dia.)	E32-T24SR 2M	31-D
			R10	4,000* / 1,740	ST: 2,600 / SHS: 700	4,000* / 2,610	ST: 3,900 / SHS: 700		E32-T24S 2M	31-E
Top-view		15, 3 dia., IP50		4,000* / 2,500	ST: 3,800 / SHS: 1,000	4,000* / 3,750	ST: 4,000* / SHS: 1,000	1.7 dia. (0.1 dia./ 0.03 dia.)	E32-T22S 2M	31-F

* The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)
2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

Dimensions

Installation Information → 58, 60 Page

Through-beam Fiber Units (Set of 2)

31-A E32-A03 2M (Free Cutting)

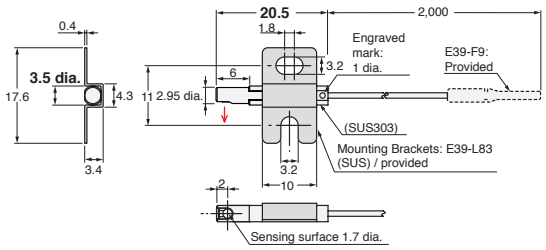

Note: Use the engraved surface and its opposing surface as installation (reference) surfaces.

31-B E32-A03-1 2M (Free Cutting)

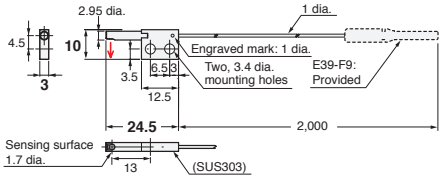

Note 1: Use the engraved surface and its opposing surface as installation (reference) surfaces.
Note 2: Set of two symmetrically shaped Fiber Units.

31-C E32-A04 2M (Free Cutting)

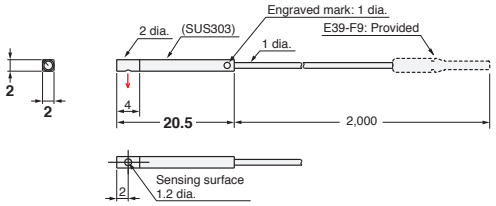

Note: Use the engraved surface and its opposing surface as installation (reference) surfaces.

31-D E32-T24SR 2M (Free Cutting)

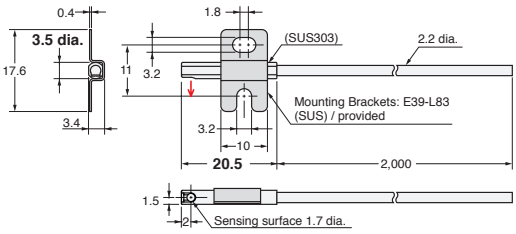

31-E E32-T24S 2M (Free Cutting)

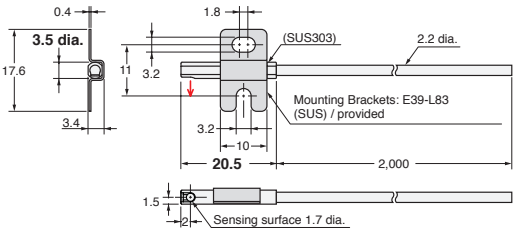

31-F E32-T22S 2M (Free Cutting)



- Reference Information for Model Selection -

Aperture angle and Optical Axis Diameter

The Aperture angle is the output angle of the emitted beam, and the optical axis diameter is the core diameter of the emitter fiber.
A fiber with a narrow view has a larger optical axis diameter than standard fibers, but the aperture angle is smaller so it is not influenced by surrounding objects.



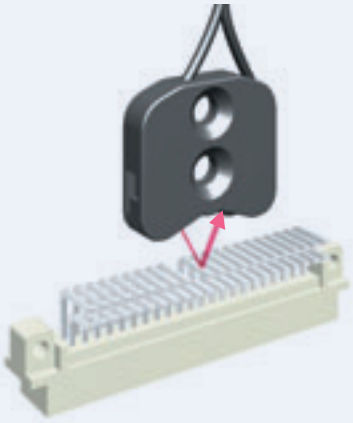

- These Fiber Units detect only objects in the sensing range. Objects in the background that are located beyond a certain point are not detected. They are not easily affected by the material or color of the sensing object.

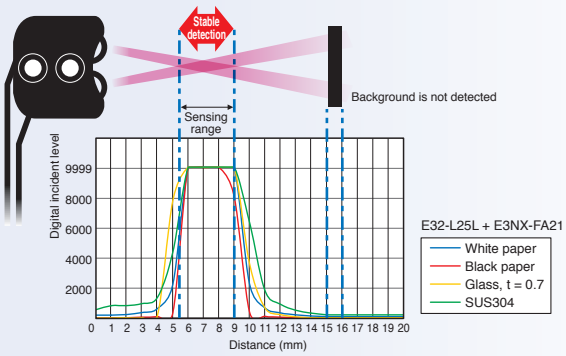

Specifications

Limited-reflective Fiber Units

Sensing direction	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA/HS	Sensing distance (mm) E3X-HD Other modes	Sensing distance (mm) E3NX-FA NEW GIGA/HS	Sensing distance (mm) E3NX-FA NEW Other modes	Standard sensing object (minimum sensing object)	Models	33 Page Dimensions No.
Flat-view	 IP40	R25	0 to 15 0 to 15	ST : 0 to 15 SHS: 0 to 12	0 to 15 0 to 15	ST : 0 to 15 SHS: 0 to 12	Soda glass with reflection factor of 7%	E32-L16-N 2M	33-A
	IP50	R10	0 to 4 0 to 4	ST : 0 to 4 SHS: 0 to 4	0 to 4 0 to 4	ST : 0 to 4 SHS: 0 to 4	(5 µm dia./ 2 µm dia.)	E32-L24S 2M	33-B
Side-view	 IP50		5.4 to 9 5.4 to 9 (Center 7.2)	ST : 5.4 to 9 SHS: 5.4 to 9 (Center 7.2)	5.4 to 9 5.4 to 9 (Center 7.2)	ST : 5.4 to 9 SHS: 5.4 to 9 (Center 7.2)		E32-L25L 2M	33-C

Note 1. If operation is affected by the background, perform power tuning or use the ECO Mode to decrease the incident light level.

2. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)

3. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

4. The sensing distances for Reflective Fiber Units are for white paper.

Dimensions

Installation Information → 59 Page

Limited-reflective Fiber Units

33-A E32-L16-N 2M (Free Cutting)

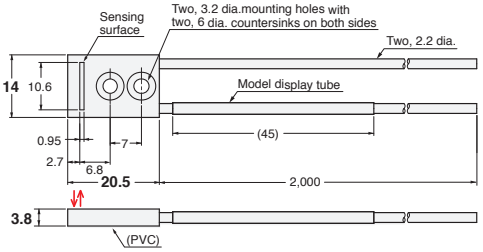

33-B E32-L24S 2M (Free Cutting)

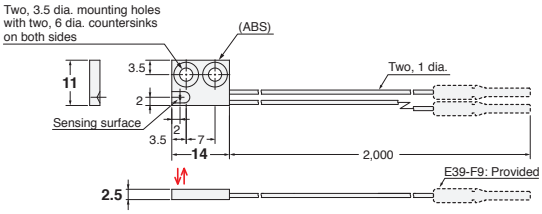

33-C E32-L25L 2M (Free Cutting)

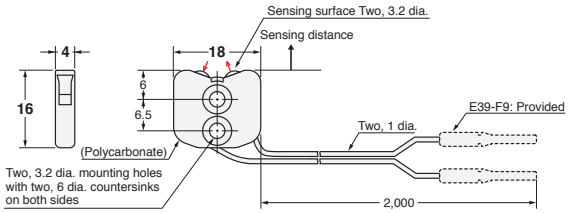

- Reference Information for Model Selection -

Sensing Distance vs. Digital Value

The following graphs show how the digital value is high within the sensing range and small outside. This explains why false detection does not occur outside the sensing range, even against common metal backgrounds, such as stainless steel.

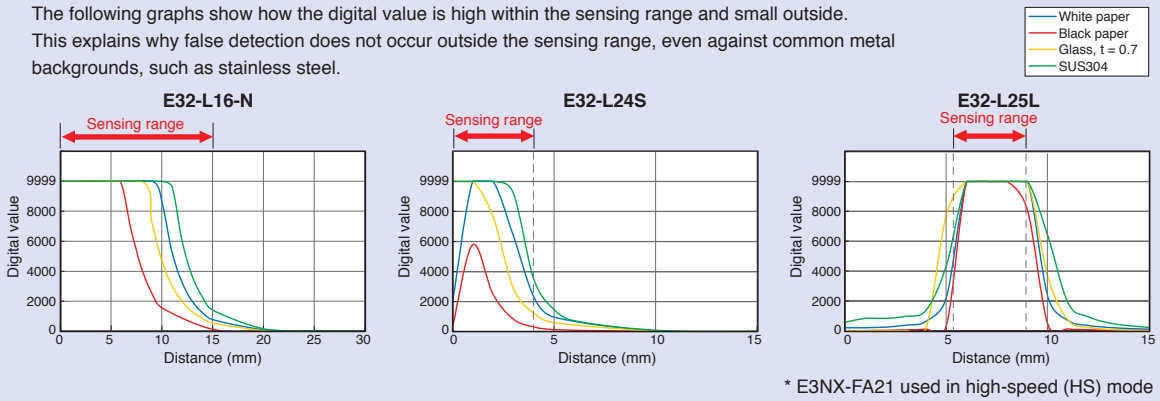

* E3NX-FA21 used in high-speed (HS) mode

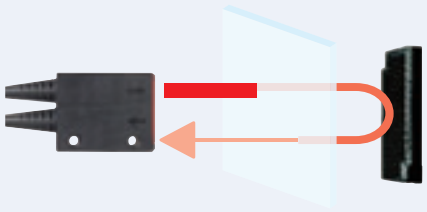

- Retro-reflective Fiber Units are ideal for detecting transparent objects. The light beam passes through the object twice, this model interrupts light more than Through-beam model.



- Excellent detection performance with transparent films. (E32-LR11NP + E39-RP1) The specially designed filter eliminates undesirable light, which allows significantly more light to be interrupted for stable detection of films.

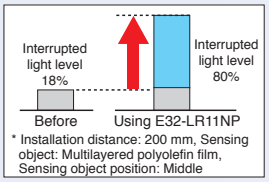

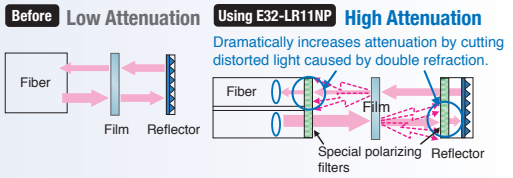

Specifications

Retro-reflective Fiber Units (With M.S.R. Function)

Type		Appearance (mm)	Bending radius of cable	Sensing distance (mm)				Optical axis diameter (minimum sensing object)	Models	35 Page Dimensions No.
				E3X-HD		E3NX-FA NEW				
Features	Size			GIGA HS	Other modes	GIGA HS	Other modes			
Film detection *	M6	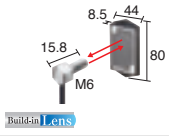	Flexible, R2	1,350 / 1,000	ST : 1,200 SHS: 550	2,020 / 1,500	ST : 1,800 SHS: 550	–	E32-LR11NP 2M + E39-RP1 NEW	35-A
Square	—		R25	150 to 1,500 / 150 to 1,500	ST : 150 to 1,500 SHS: 150 to 1,500	150 to 1,500 / 150 to 1,500	ST : 150 to 1,500 SHS: 150 to 1,500	(0.2 dia./ 0.07 dia.)	E32-R16 2M	35-B
Threaded Models	M6		R10	10 to 250 / 10 to 250	ST : 10 to 250 SHS: 10 to 250	10 to 370 / 10 to 370	ST : 10 to 370 SHS: 10 to 250	(0.1 dia./ 0.03 dia.)	E32-R21 2M	35-C

* This effect may not be as strong for some films. Check suitability beforehand.

Note 1. Objects with a high reflection factor may cause the Fiber Sensor to detect reflected light as incident light. Also, stable detection may not be possible for transparent objects. Check suitability beforehand.

2. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)

3. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

Dimensions

Installation Information → 58, 59 and 61 Page

Retro-reflective Fiber Units (With M.S.R. Function)

35-A E32-LR11NP 2M (Free Cutting)

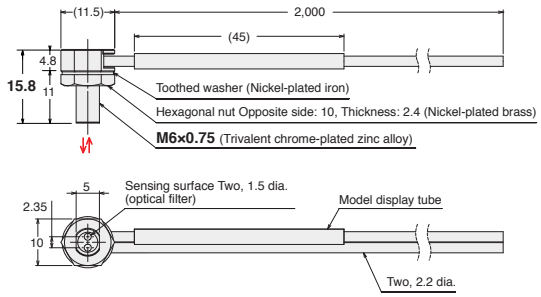

E39-RP1

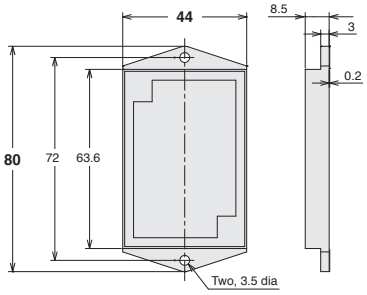

Material:
<Reflective surface> Methacrylate resin
<Back> ABS

35-B E32-R16 2M (Free Cutting)

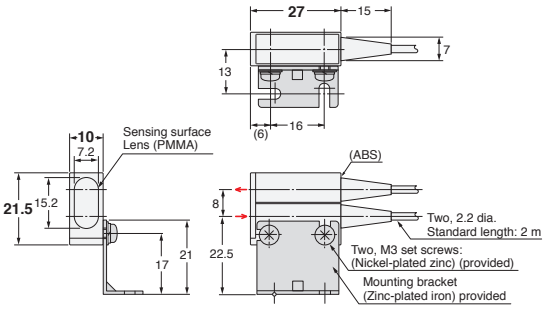

E39-R1 (Provided)

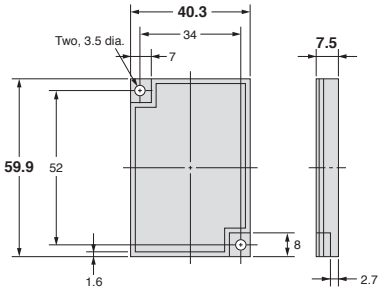

Material:
<Reflective surface> Methacrylate resin
<Back> ABS

35-C E32-R21 2M (Free Cutting)

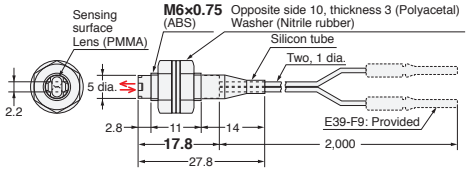

E39-R3 (Provided)

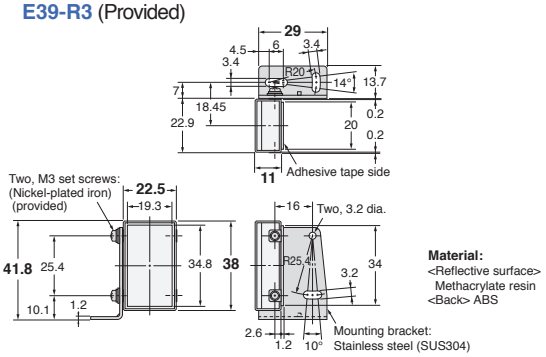

Material:
<Reflective surface> Methacrylate resin
<Back> ABS

- Reference Information for Model Selection -

Performance Comparison of Transparent Object Detection

For detecting transparent objects, consider using following products together: E32-LR11NP 2M + E39-RP1.

- This configuration features a special built-in optical filter that ensures stable detection of double-refractive materials, such as films and PET bottles.
- The retro-reflective model is suitable for detecting glass.

Sensing object / Models	Film wrapper on cigarette packs	PET bottles	Glass bottles	Plate glass, t: 0.7
E32-LR11NP 2M + E39-RP1	◎	◎	○	○
E32-R16 2M	△	△	○	○
E32-R21 2M	△	△	○	○

E32-LR11NP Usage in Combination with a Sheet Reflector

Reference values of sensing distance are provided in the following table.

Reflector shape (mm)	Sensing distance (mm) (reference values)				Models
	E3X-HD		E3NX-FA NEW		
	GIGA HS	Other modes	GIGA HS	Other modes	
50, 12	550 / 430	ST : 500 / SHS: 250	820 / 640	ST : 750 / SHS: 250	E39-RSP1
13.7, 23	210 / 160	ST : 190 / –	310 / 240	ST : 280 / –	E39-RP37

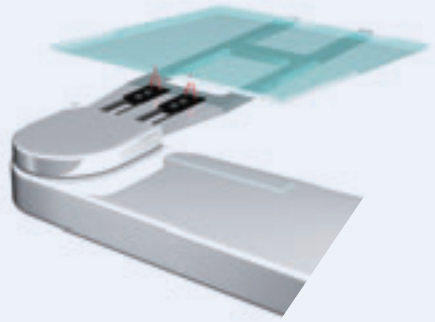

- These Fiber Units are based on a limited-reflective optical system where the emitting light and receiving light axes intersect at the same angle. This allows for stable detection of glass because the Fiber Units receives the specular reflection of the glass when the glass is in the sensing range.

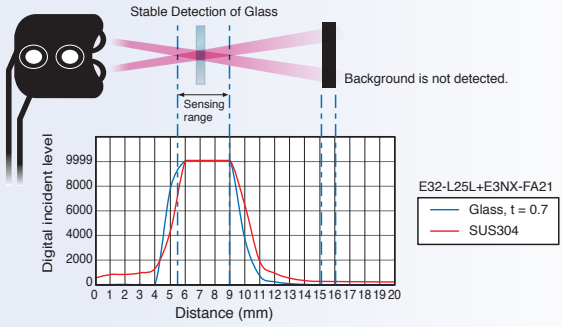

Specifications

Limited-reflective Fiber Units

Type: Features	Type: Detection direction	Appearance (mm)	Bending radius of cable	Sensing distance (mm): E3X-HD GIGA/HS	Sensing distance (mm): E3X-HD Other modes	Sensing distance (mm): E3NX-FA NEW GIGA/HS	Sensing distance (mm): E3NX-FA NEW Other modes	Standard sensing object (minimum sensing object)	Models	37 Page Dimensions No.
Small size	Flat-view	 IP50	R10	0 to 4 0 to 4	ST : 0 to 4 SHS: 0 to 4	0 to 4 0 to 4	ST : 0 to 4 SHS: 0 to 4	(5 µm dia./ 2 µm dia.)	E32-L24S 2M	37-A
Standard		IP40	R25	0 to 15 0 to 15	ST : 0 to 15 SHS: 0 to 12	0 to 15 0 to 15	ST : 0 to 15 SHS: 0 to 12	Soda glass with reflection factor of 7%	E32-L16-N 2M	37-B
Glass-substrate alignment, 70°C		 IP40		10 to 20 10 to 20	ST : 10 to 20 SHS: –	10 to 20 10 to 20	ST : 10 to 20 SHS: –		E32-A08 2M *	37-C
Standard long distance		 IP40		12 to 30 12 to 30	ST : 12 to 30 SHS: –	12 to 30 12 to 30	ST : 12 to 30 SHS: –		E32-A12 2M	37-D
Side View form	Side-view	IP50	R10	5.4 to 9 5.4 to 9 (Center 7.2)	ST : 5.4 to 9 SHS: 5.4 to 9 (Center 7.2)	5.4 to 9 5.4 to 9 (Center 7.2)	ST : 5.4 to 9 SHS: 5.4 to 9 (Center 7.2)	(5 µm dia./ 2 µm dia.)	E32-L25L 2M	37-E
Glass-substrate Mapping, 70°C	Top-view	IP40	R25	15 to 38 15 to 38 (Center 25)	ST : 15 to 38 (Center 25) SHS: –	15 to 38 15 to 38 (Center 25)	ST : 15 to 38 (Center 25) SHS: –	End surface of soda glass with reflection factor of 7% (t = 0.7 mm, rounded edges)	E32-A09 2M	37-F

* If operation is affected by the background, perform power tuning to decrease the incident light level.

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)

2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

3. The sensing distances for Reflective Fiber Units are for white paper.

Dimensions

Installation Information → 58, 59 Page

Limited-reflective Fiber Units

37-A E32-L24S 2M (Free Cutting)

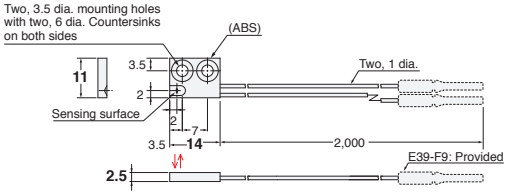

37-B E32-L16-N 2M (Free Cutting)

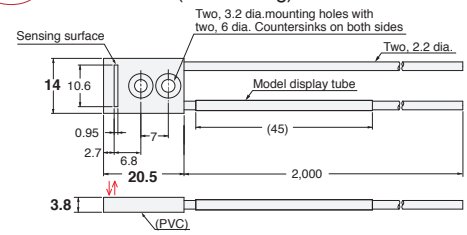

37-C E32-A08 2M (Free Cutting)

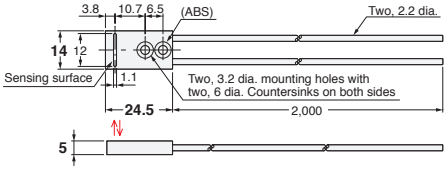

37-D E32-A12 2M (Free Cutting)

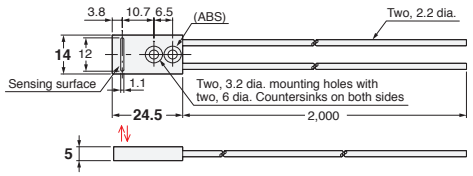

37-E E32-L25L 2M (Free Cutting)

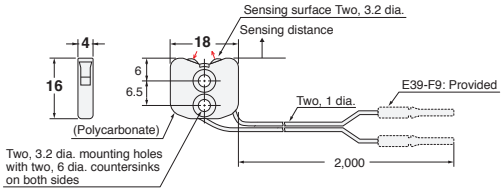

37-F E32-A09 2M (Free Cutting)

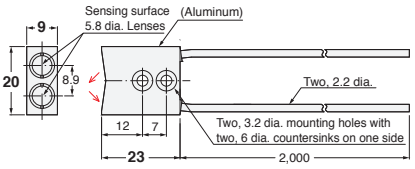

- Reference Information for Model Selection -

Sensing Distance vs. Digital Value

Limited-reflective Fiber Unit can keep high digital value within the sensing area for glass.
The digital value gets lower out of the sensing area for metals, including SUS (common as background).

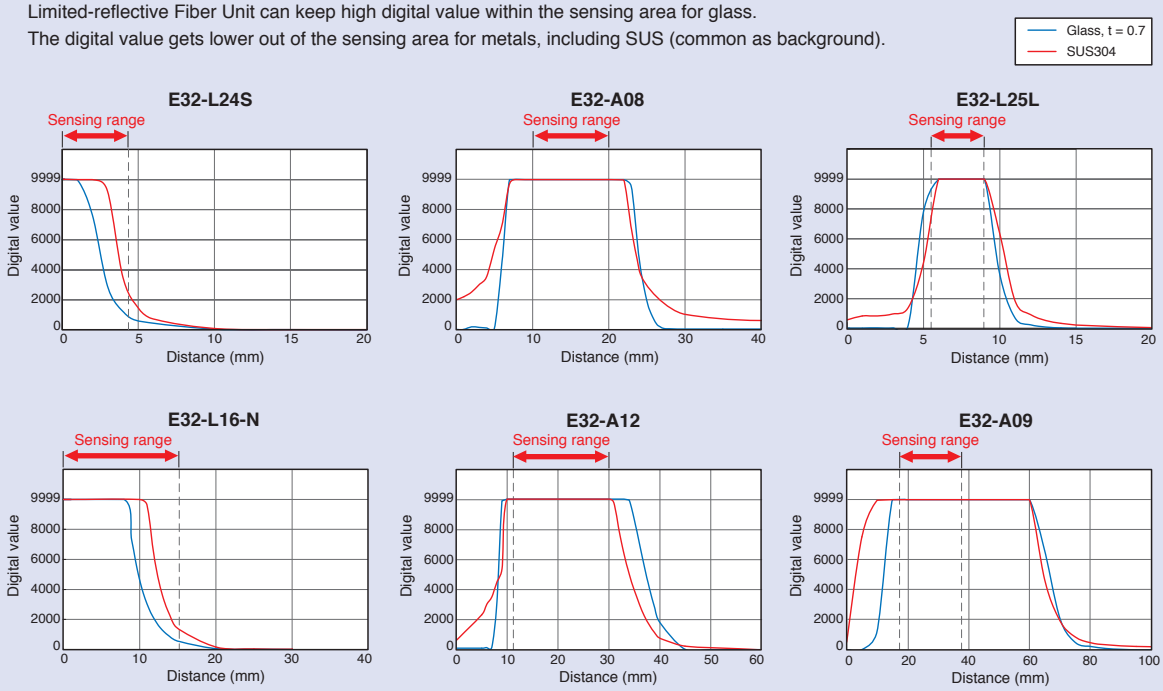

* E3NX-FA21 used in high-speed (HS) mode.

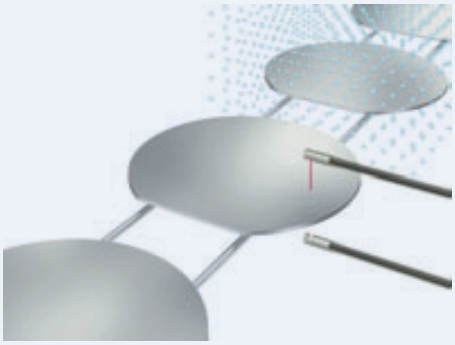

• These Fiber Units are made from fluororesin for resistance to chemicals.

Chemical-resistant Data for Fluororesin (Reference)

Material / Chemical	Fluororesin	Acryl	ABS	Polycarbonate	Polyethylene	PVC
Hydrochloric acid	◎	△	△	△	△	×
Sulfuric acid	◎	×	×	×	×	×
Sodium hydroxide	◎	△	△	×	○	×
Methyl alcohol	◎	×	△	×	○	×
Acetone	◎	×	×	×	△	×
Toluene	◎	△	×	×	△	×
Benzene	◎	△	△	×	△	×

Note: Results depend on concentration.

Specifications

Through-beam Fiber Units

Type	Sensing direction	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA / HS	E3X-HD Other modes	E3NX-FA NEW GIGA / HS	E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	39 Page Dimensions No.
Oil-resistant	Right-angle		Flexible, R1	4,000 *1 / 4,000 *1	*1 ST : 4,000 SHS: 2,200	4,000 *1 / 4,000 *1	*1 ST : 4,000 SHS: 2,200	4 dia. (0.1 dia./ 0.03 dia.)	E32-T11NF 2M NEW	39-A
Chemical/ oil resistant	Top-view		R40	4,000 *1 / 4,000 *1	*1 ST : 4,000 SHS: 1,600	4,000 *1 / 4,000 *1	*1 ST : 4,000 SHS: 1,600		E32-T12F 2M	39-B
			R4	4,000 *1 / 2,600	*1 ST : 4,000 SHS: 1,000	4,000 *1 / 3,900	*1 ST : 4,000 SHS: 1,000		E32-T11F 2M	39-C
	Side-view		R40	1,400 / 500	ST : 800 SHS: 200	2,100 / 750	ST : 1,200 SHS: 200	3 dia. (0.1 dia./ 0.03 dia.)	E32-T14F 2M	39-D
Chemical/ oil resistant 150°C *2	Top-view		R40	4,000 *1 / 1,800	ST : 2,800 SHS: 700	4,000 *1 / 2,700	*1 ST : 4,000 SHS: 700	4 dia. (0.1 dia./ 0.03 dia.)	E32-T51F 2M	39-E

*1 The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.
*2 For continuous operation, use the Fiber Unit between –40 and 130°C.
*3. The IP68G is the degree of protection which is defined according to the JIS (Japanese Industrial Standards). The IP68 indicates the same level of protection as defined by the IEC, and the G indicates that a device has resistance to oil. Passed OMRON's Oil-resistant Component Evaluation Standards (OMRON's own durability evaluation standards) (Cutting oil type: specified in JIS K 2241:2000; Temperature: 35°C max.)

Reflective Fiber Units

Type	Sensing direction	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA / HS	E3X-HD Other modes	E3NX-FA NEW GIGA / HS	E3NX-FA NEW Other modes	Standard sensing object (minimum sensing object)	Models	39 Page Dimensions No.
Semiconductors: Cleaning, developing, and etching, 60°C	Top-view		R40	8 to 20 mm from tip of lens (Recommended sensing distance: 11 mm) 19 to 31 mm from center of mounting hole A (Recommended sensing distance: 22 mm)				Glass (t=0.7 mm)	E32-L11FP 2M	39-F
Semiconductors: Resist stripping, 85°C				8 to 20 mm from tip of lens (Recommended sensing distance: 11 mm) 32 to 44 mm from center of mounting hole A (Recommended sensing distance: 35 mm)					E32-L11FS 2M	39-G
Chemical/ oil resistant				GIGA – / 130	ST : 190 SHS: 60	GIGA – / 190	ST : 280 SHS: 60	(5 µm dia./ 2 µm dia.)	E32-D12F 2M	39-H
Only cable: chemical resistant			R4	840 / 240	ST : 350 SHS: 100	1,260 / 360	ST : 520 SHS: 100		E32-D11U 2M	39-I

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)
2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.
3. The sensing distances for Reflective Fiber Units are for white paper.

Dimensions

Installation Information → 60 Page

Through-beam Fiber Units (Set of 2)

39-A E32-T11NF 2M (Free Cutting)

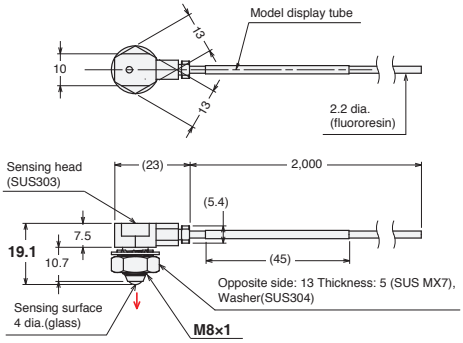

39-B E32-T12F 2M (Free Cutting)

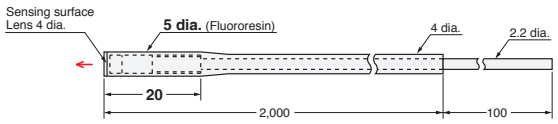

39-C E32-T11F 2M (Free Cutting)

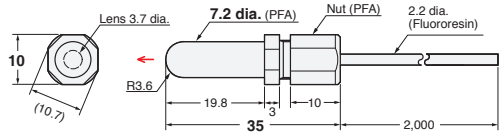

39-D E32-T14F 2M (Free Cutting)

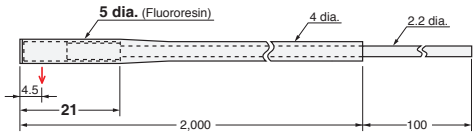

39-E E32-T51F 2M (Free Cutting)



Installation Information → 58, 59 Page

Reflective Fiber Units

39-F E32-L11FP 2M (Free Cutting)

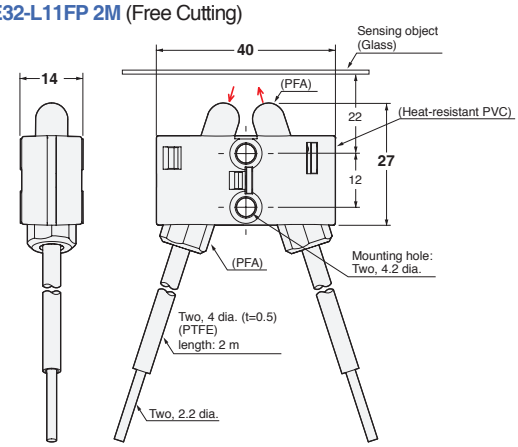

39-G E32-L11FS 2M (Free Cutting)

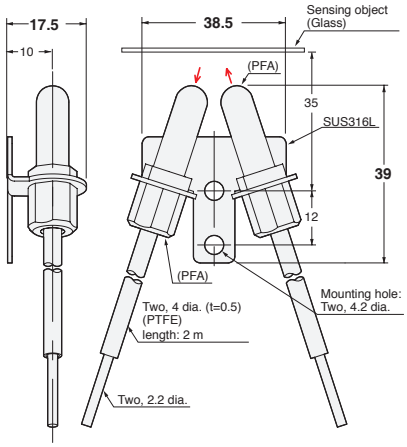

39-H E32-D12F 2M (Free Cutting)



39-I E32-D11U 2M (Free Cutting)

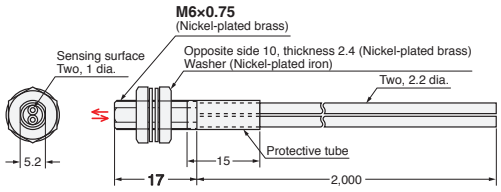

- Reference Information for Model Selection -

Oil-resistance performance of the E32-T11NF

Fluororesin Outer Cable Sheath

The fluororesin that covers the entire surface of the cable sheath (fiber covering) prevents the penetration of cutting oil.

Mechanical Seal Structure

An aluminum ring bushing is compressed and deformed by a set screw to seal the structure by pressing against the fluororesin part of the fiber core. This prevents the ingress of cutting oil from the joined surfaces.

Mechanical Seal Structure

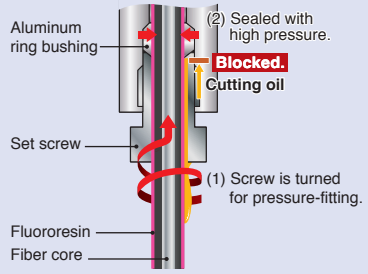

Structure Around Sensing Surface Also Resists Cutting Oil and Cutting Chips

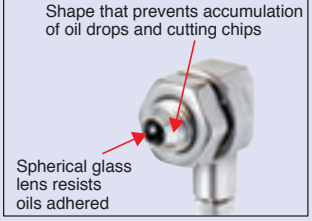

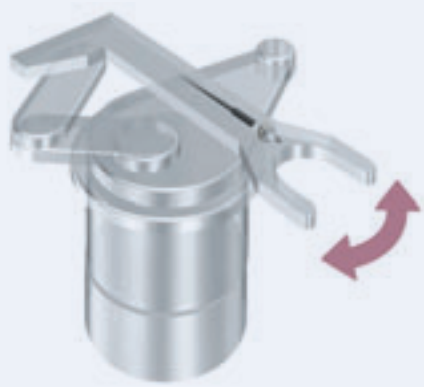

- Capable of withstanding one million repeated bends.

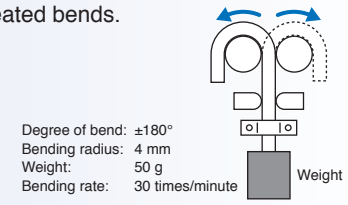

- A large number of independent fine fibers ensures good flexibility. Suitable for use on moving parts without easily breaking.

- Protective Stainless Spiral Tube is available for covering the fiber cable to protect it from accidental breaking due to snagging or shock.

Specifications

Through-beam Fiber Units

Size	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	Sensing distance (mm) E3X-HD HS	Sensing distance (mm) E3X-HD Other modes	Sensing distance (mm) E3NX-FA NEW GIGA	Sensing distance (mm) E3NX-FA NEW HS	Sensing distance (mm) E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	41 Page Dimensions No.
1.5 dia.		Bendresistant, R4	680	220	ST : 400 SHS: 90	1,020	330	ST : 600 SHS: 90	0.5 dia. (5 µm dia./ 2 µm dia.)	E32-T22B 2M	41-A
M3										E32-T21 2M	41-B
M4			2,500	900	ST : 1,350 SHS: 360	3,750	1,350	ST : 2,020 SHS: 360	1 dia. (5 µm dia./ 2 µm dia.)	E32-T11 2M	41-C
Square			500	170	ST : 300 SHS: 70	750	250	ST : 450 SHS: 70	0.5 dia. (5 µm dia./ 2 µm dia.)	E32-T25XB 2M	41-D

Note The following mode names and response times apply to the modes given in the Sensing distance column.

1. [E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
   [E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)
   The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values.
2. The first value is for the E3X-HD and the second value is for the E3NX-FA.

Protective Stainless Spiral Tube (Sold separately)

Insert the fiber cable into the protective tube to prevent breaking by snagging or shock.

Applicable Fiber Units	Model	Quantity	41 Page Dimensions No.
E32-T11R 2M/E32-T11 2M/ E32-LT11 2M/E32-LT11R 2M/ E32-T51R 2M/E32-T51 2M	E39-F32C 1M	2 pieces	41-E

* This Tube cannot be used if a Lens Unit is being used.

Dimensions

Installation Information → 60, 61 Page

Through-beam Fiber Units (Set of 2)

41-A E32-T22B 2M (Free Cutting)

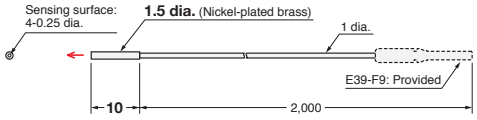

41-B E32-T21 2M (Free Cutting)

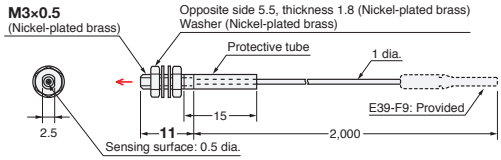

41-C E32-T11 2M (Free Cutting)

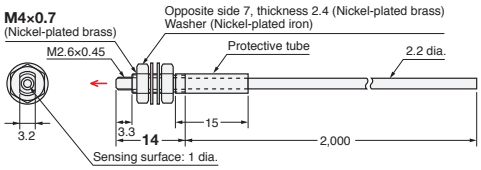

41-D E32-T25XB 2M (Free Cutting)

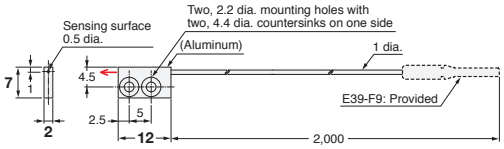

Note 1: Set of two symmetrically shaped Fiber Units.
Note 2: Four, M2 × 8 stainless steel countersunk mounting screws are provided.

41-E E39-F32C 1M

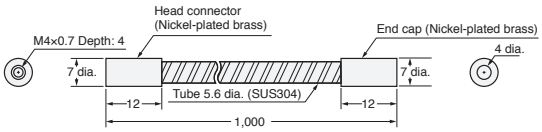

Note: Saddles (four, trivalent chromate-plated iron) are provided.

- Capable of withstanding one million repeated bends.

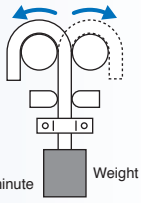

- A large number of independent fine fibers ensures good flexibility. Suitable for use on moving parts without easily breaking.

- Protective Stainless Spiral Tube is available for covering the fiber cable to protect it from accidental breaking due to snagging or shock.

Specifications

Reflective Fiber Units

Size	Appearance (mm)	Bending radius of cable	Sensing distance (mm)				Optical axis diameter (minimum sensing object)	Models	43 Page Dimensions No.
			E3X-HD		E3NX-FA NEW				
			GIGA HS	Other modes	GIGA HS	Other modes			
1.5 dia.		Bendresistant, R4	140 / 40	ST : 60 SHS: 16	210 / 60	ST : 90 SHS: 16	(5 µm dia./ 2 µm dia.)	E32-D22B 2M	43-A
M3								E32-D21 2M	43-B
3 dia.			300 / 90	ST : 140 SHS: 40	450 / 130	ST : 210 SHS: 40		E32-D221B 2M	43-C
M4								E32-D21B 2M	43-D
M6			840 / 240	ST : 350 SHS: 100	1,260 / 360	ST : 520 SHS: 100		E32-D11 2M	43-E
Square			240 / 60	ST : 100 SHS: 30	360 / 90	ST : 150 SHS: 30		E32-D25XB 2M	43-F

Note The following mode names and response times apply to the modes given in the Sensing distance column.

1. [E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
   [E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)
   The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values.
2. The first value is for the E3X-HD and the second value is for the E3NX-FA.
   The sensing distances for Reflective Fiber Units are for white paper.

Protective Stainless Spiral Tube (Sold separately)

Insert the fiber cable into the protective tube to prevent breaking by snagging or shock.

Applicable Fiber Units	Models	Quantity	43 Page Dimensions No.
E32-D21R 2M/E32-C31 2M/ E32-D21 2M	E39-F32A 1M	1 piece	43-G
E32-D211R 2M/E32-D21B 2M	E39-F32C 1M	2 pieces	
E32-D11R 2M/E32-CC200 2M/ E32-D11 2M/E32-D51R 2M/ E32-D51 2M	E39-F32D 1M	1 piece	

* This Tube cannot be used if a Lens Unit is being used.

Dimensions

Installation Information → 58, 59 and 61 Page

Limited-reflective Fiber Units

43-A E32-D22B 2M (No Cutting)

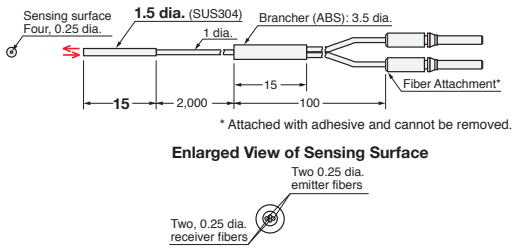

43-B E32-D21 2M (Free Cutting)

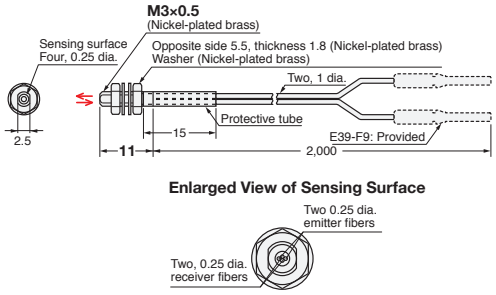

43-C E32-D221B 2M (Free Cutting)



43-D E32-D21B 2M (Free Cutting)

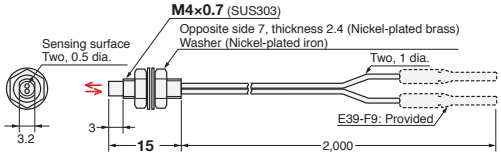

43-E E32-D11 2M (Free Cutting)

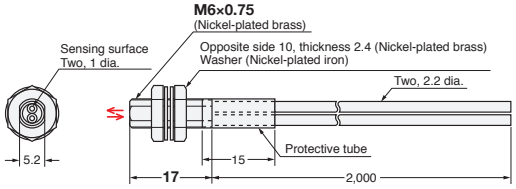

43-F E32-D25XB 2M (Free Cutting)

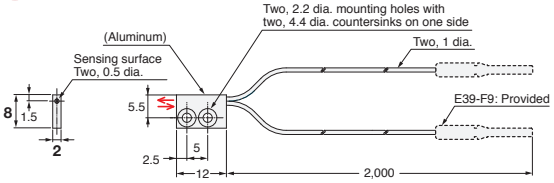

Note: Two, M2×8 stainless steel countersunk mounting screws are provided.

43-G E39-F32A 1M/E39-F32C 1M/E39-F32D 1M



Models	A	B	C	D
E39-F32A 1M	M3×0.5 Depth: 4	3 dia.	6 dia.	(4.6 dia.)
E39-F32C 1M	M4×0.7 Depth: 4	4 dia.	7 dia.	(5.6 dia.)
E39-F32D 1M	M6×0.75 Depth: 4	5 dia.	8.5 dia.	(7 dia.)

Note: Saddles (two (four for the E39-F32C 1M), trivalent chromate-plated iron) are provided.

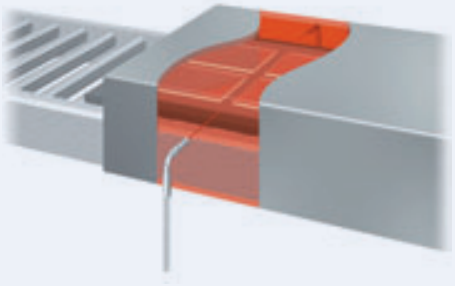

- Wide product variety for temperatures from 100 to 350°C. Select the model according to heat-resistant temperature.

Specifications

Through-beam Fiber Units

Heat-resistant temperature	Appearance (mm)	Bending radius of cable	Sensing distance (mm)				Optical axis diameter (minimum sensing object)	Models	45 Page Dimensions No.
			E3X-HD		E3NX-FA NEW				
			GIGA HS	Other modes	GIGA HS	Other modes			
100°C *1		Flexible, R2	1,600 / 560	ST : 800 SHS: 225	2,400 / 840	ST : 1,200 SHS: 225	1 dia. (0.1 dia./ 0.03 dia.)	E32-T51R 2M	45-A
150°C *2		R35	2,800 / 1,000	ST : 1,500 SHS: 400	4,000*5 / 1,500	ST : 2,250 SHS: 400	1.5 dia. (0.1 dia./ 0.03 dia.)	E32-T51 2M	45-B
200°C *3		R10	1,000 / 360	ST : 550 SHS: 140	1,500 / 540	ST : 820 SHS: 140	0.7 dia. (5 µm dia./ 2 µm dia.)	E32-T81R-S 2M	45-C
350°C *4		R25	1,680 / 600	ST : 900 SHS: 240	2,520 / 900	ST : 1,350 SHS: 240	1 dia. (5 µm dia./ 2 µm dia.)	E32-T61-S 2M	45-D
70°C	—							Standard Fiber Units can be used.	–

*1 For continuous operation, use the Fiber Unit between –40 to 90°C.
*2 For continuous operation, use the Fiber Unit between –40 to 130°C.
*3 The heat-resistant rating is not the same for all parts of the Fiber Unit. Refer to the dimensions diagrams for details.
*4 The ambient operating temperature for the E32-T61-S 2M is –60 to 350°C.
*5 The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)
2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

Dimensions

Installation Information → 60 Page

Through-beam Fiber Units (Set of 2)

45-A E32-T51R 2M (Free Cutting)

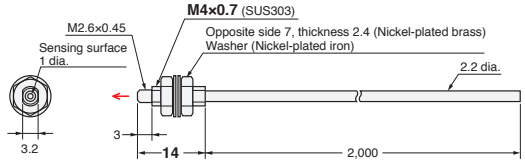

45-B E32-T51 2M (Free Cutting)

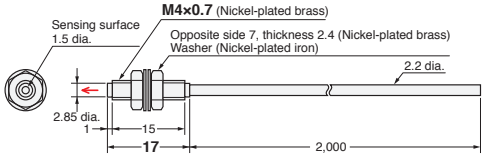

45-C E32-T81R-S 2M (No Cutting)

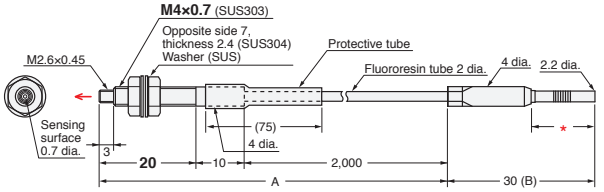

Note: The maximum allowable temperatures for sections A and B are 200°C and 110°C, respectively. The section inserted into the Amplifier Unit (indicated by *) must be maintained within the Amplifier Unit's operating temperature range.

45-D E32-T61-S 2M (No Cutting)

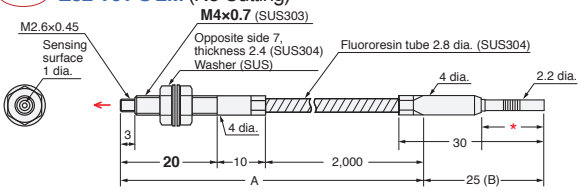

Note: The maximum allowable temperatures for sections A and B are 350°C and 110°C, respectively. The section inserted into the Amplifier Unit (indicated by *) must be maintained within the Amplifier Unit's operating temperature range.

- Reference Information for Model Selection -

And

Long-distance Sensing Applications

A separate Lens Unit can be attached to extend the sensing distance.

→ 28 page

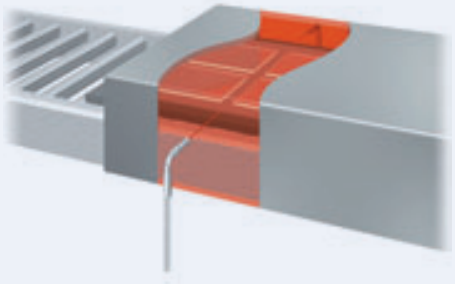

- Wide product variety for temperatures from 100 to 400°C. Select the model according to heat-resistant temperature.

Specifications

Reflective Fiber Units

Heat-resistant temperature	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	E3X-HD HS	E3X-HD Other modes	E3NX-FA NEW GIGA	E3NX-FA NEW HS	E3NX-FA NEW Other modes	Standard sensing object (minimum sensing object)	Models	47 Page Dimensions No.
100°C *1	 IP50	Flexible, R2	670	190	ST : 280 SHS: 80	1,000	280	ST : 420 SHS: 80	(5 µm dia./ 2 µm dia.)	E32-D51R 2M	47-A
150°C *2	 IP67	R35	1,120	320	ST : 450 SHS: 144	1,680	480	ST : 670 SHS: 144		E32-D51 2M	47-B
200°C *3	 IP67	R10	420	120	ST : 180 SHS: 54	630	180	ST : 270 SHS: 54		E32-D81R-S 2M	47-C
300°C	 IP30	R25	10 to 20	10 to 20	ST : 10 to 20 SHS: –	10 to 20	10 to 20	ST : 10 to 20 SHS: –	Soda glass with reflection factor of 7%	E32-A08H2 2M	47-D
	 IP40		20 to 30	20 to 30	ST : 20 to 30 SHS: –	20 to 30	20 to 30	ST : 20 to 30 SHS: –	End surface of soda glass with eflection factor of 7% (t = 0.7 mm, rounded edges)	E32-A09H2 2M	47-E
350□ *3	 IP67		420	120	ST : 180 SHS: 54	630	180	ST : 270 SHS: 54	(5 µm dia./ 2 µm dia.)	E32-D611-S 2M	47-F
										E32-D61-S 2M	47-G
400°C *3	 Sleeve bending radius : 10 mm		280	80	ST : 120 SHS: 36	420	120	ST : 180 SHS: 36		E32-D73-S 2M	47-H
70□	—									Standard Fiber Units can be used.	–

*1 For continuous operation, use the Fiber Unit between –40 to 90°C.
*2 For continuous operation, use the Fiber Unit between –40 to 130°C.
*3 The heat-resistant rating is not the same for all parts of the Fiber Unit. Refer to the dimensions diagrams for details.

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)
2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.
3. The sensing distances for Reflective Fiber Units are for white paper.

Dimensions

Installation Information → 58, 59 Page

Reflective Fiber Units

47-A E32-D51R 2M (Free Cutting)

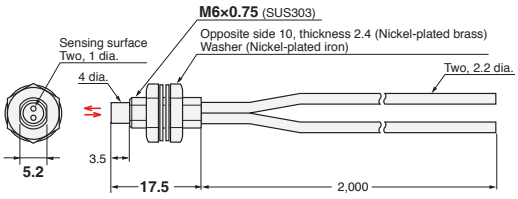

47-B E32-D51 2M (Free Cutting)

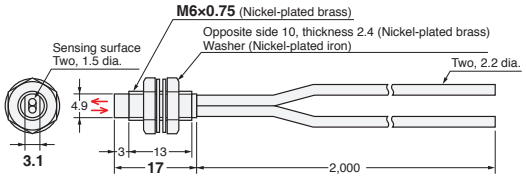

47-C E32-D81R-S 2M (No Cutting)

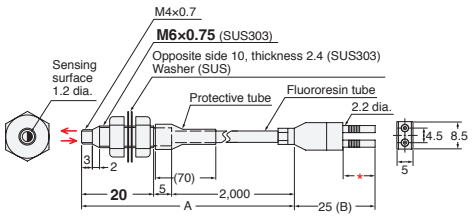

Note: The maximum allowable temperatures for sections A and B are 200°C and 110°C, respectively. The section inserted into the Amplifier Unit (indicated by *) must be maintained within the Amplifier Unit's operating temperature range.

47-D E32-A08H2 2M (No Cutting)

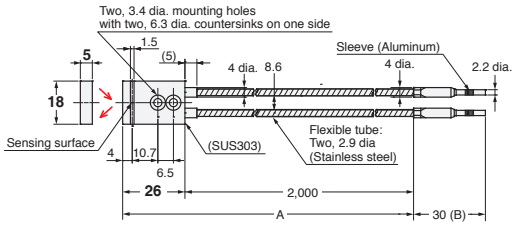

Note: The maximum allowable temperatures for sections A and B are 300°C and 110°C, respectively.



Mounting holes

47-E E32-A09H2 2M (No Cutting)

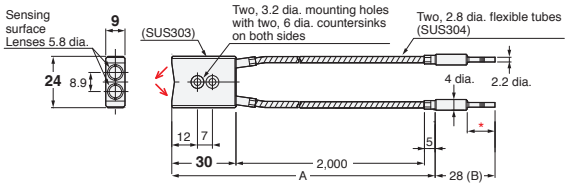

Note: The maximum allowable temperatures for sections A and B are 300°C and 110°C, respectively. The section inserted into the Amplifier Unit (indicated by *) must be maintained within the Amplifier Unit's operating temperature range.

47-F E32-D611-S 2M (No Cutting)

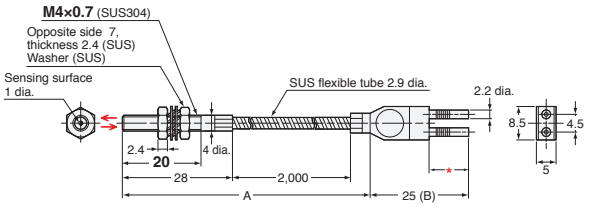

Note: The maximum allowable temperatures for sections A and B are 350°C and 110°C, respectively. The section inserted into the Amplifier Unit (indicated by *) must be maintained within the Amplifier Unit's operating temperature range.

47-G E32-D61-S 2M (No Cutting)

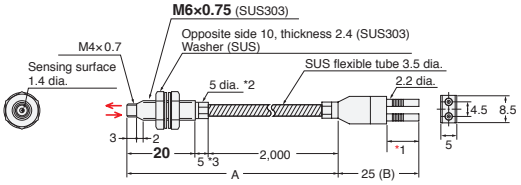

*2. The diameter is 6 dia. if the fiber length exceeds 10 m.
*3. The length is 10 if the fiber length exceeds 10 m.

Note: The maximum allowable temperatures for sections A and B are 350°C and 110°C, respectively. The section inserted into the Amplifier Unit (indicated by *1) must be maintained within the Amplifier Unit's operating temperature range.

47-H E32-D73-S 2M (No Cutting)

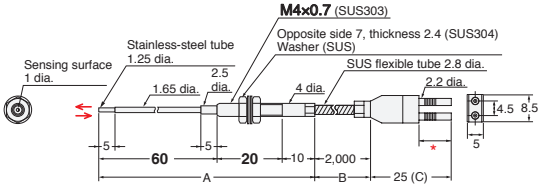

Note: The maximum allowable temperatures for sections A, B, and C are 400°C, 300°C, and 110°C, respectively. The section inserted into the Amplifier Unit (indicated by *) must be maintained within the Amplifier Unit's operating temperature range.

Detection of falling workpieces

Meander detection

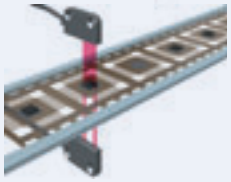

Detection of workpieces with holes

- Area beams are optimum for detecting workpieces presented in inconsistent positions, such as falling workpieces, or for meander detection, or for detecting workpieces with holes.
- This Fiber Unit is ideal for meander detectin because it outputs the digital value in a linear relation to the interrupted light distance.

Characteristics of Light Interruption (Reference Value)

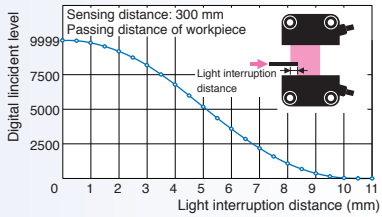

E32-T16PR+E3NX-FA21

Specifications

Through-beam Fiber Units

Type	Sensing width	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	HS	Other modes	Sensing distance (mm) E3NX-FA NEW GIGA	HS	Other modes	Optical axis diameter (minimum sensing object)	Models	49 Page Dimensions No.
Area	11 mm	 IP50	Flexible, R1	3,100	1,120	ST : 1,700 SHS: 440	4,000 *1	1,680	ST : 2,550 SHS: 440	*2 (0.2 dia./ 0.07 dia.)	E32-T16PR 2M	49-A
		 IP50		2,750	960	ST : 1,500 SHS: 380	4,000 *1	1,440	ST : 2,250 SHS: 380		E32-T16JR 2M	49-B
	30 mm	 IP50		4,000 *1	1,700	ST : 2,600 SHS: 680	4,000 *1	2,550	ST : 3,900 SHS: 680	*2 (0.3 dia./ 0.1 dia.)	E32-T16WR 2M	49-C
Array	10 mm	 IP50	R5	10	10	ST : 10 SHS: 10	10	10	ST : 10 SHS: 10	11 dia.	E32-G16 2M NEW	49-D

*1 The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.
*2 The values for the minimum sensing object were obtained for detection in the sensing area with the sensing distance set to 300 mm. (The values are for a stationary sensing object.) The first value is for the E3X-HD and the second value is for the E3NX-FA.

Reflective Fiber Units

Type	Sensing width	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	HS	Other modes	Sensing distance (mm) E3NX-FA NEW GIGA	HS	Other modes	Optical axis diameter (minimum sensing object)	Model	49 Page Dimensions No.
Array	11 mm	 IP67	Bend-resistant, R4	700	200	ST : 300 SHS: 90	1,050	300	ST : 450 SHS: 90	(5 μm dia./ 2 μm dia.)	E32-D36P1 2M	49-E

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 μs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 μs, PNP output: 55 μs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 μs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 μs)
2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

Dimensions

Installation Information → 60 Page

Through-beam Fiber Units (Set of 2)

49-A E32-T16PR 2M (Free Cutting)

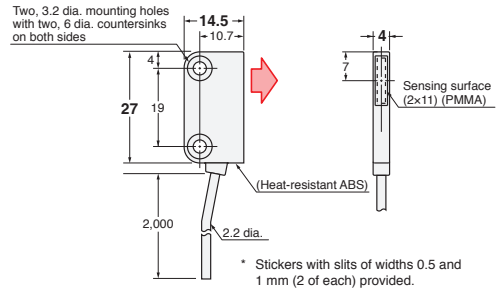

* Stickers with slits of widths 0.5 and 1 mm (2 of each) provided.

49-B E32-T16JR 2M (Free Cutting)

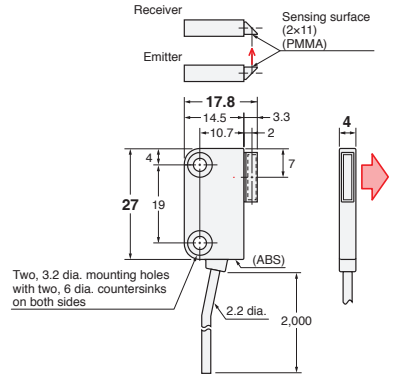

49-C E32-T16WR 2M (Free Cutting)

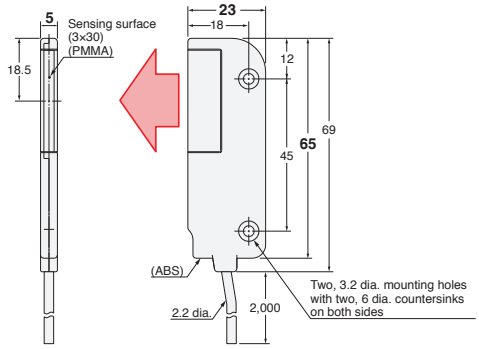

49-D E32-G16

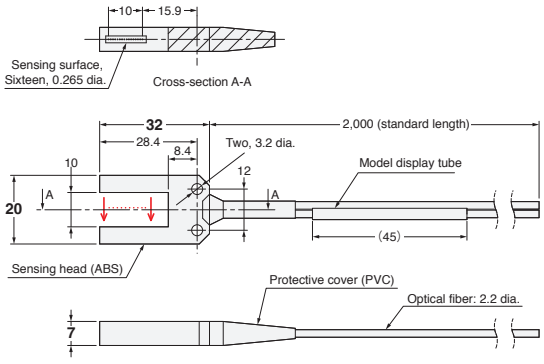

Installation Information → 59 Page

Through-beam Fiber Units (Set of 2)

49-E E32-D36P1 2M (Free Cutting)

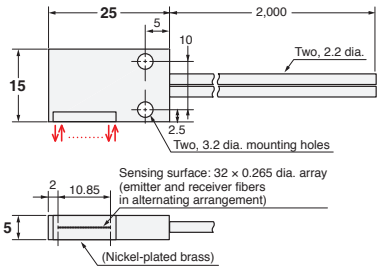

- Fiber Units for detecting liquid levels are available in two types: for tube mounting and liquid contact.

▶ Tube-mounting Types

Detect the liquid level inside transparent tubes.
Strap the Fiber Unit to a tube with band.

▶ Liquid-contact Type

Detect the liquid level by direct contact with the liquid.
This model has excellent chemical-resistance because the Fiber Unit is covered in fluororesin.

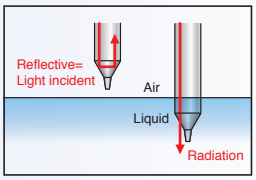

Specifications

Detection scheme	Tube diameter	Features	Appearance (mm)	Bending radius of cable	Applicable range	Optical axis diameter (minimum sensing object)	Models	51 Page Dimensions No.
Tube-mounting	3.2, 6.4 and 9.5 dia.	• Resistant to bubbles and droplets • Residual quantity detection		Bend-resistant, R4	Applicable tube: Transparent tube with a diameter of 3.2, 6.4, or 9.5 dia. and a recommended wall thickness of 1 mm	–	E32-A01 5M	51-A
	8 to 10 dia.	Ideal for mounting at multilevels		R10	Applicable tube: Transparent tube with a diameter of 8 to 10 dia. and a recommended wall thickness of 1 mm	–	E32-L25T 2M	51-B
	No restrictions	• Usable on large diameter tubes • Resistant to bubbles and droplets		R4	Applicable tube: Transparent tube (no restrictions on diameter)	–	E32-D36T 2M	51-C
Liquid contact (heat-resistant up to 200°C)	–	–		R40 R25 *3	Liquid-contact Type *1	–	E32-D82F1 4M	51-D

*1 If the incident light level is too high, perform power tuning or use the ECO mode to decrease the incident level.
*2 The applicable range is the same whether an E3X-HD series or E3NX-FA series is used.
When using a Fiber Amplifier Unit in giga-power mode, level detection may not work depending on the tube diameter. Make sure to confirm operation with the actual tube.
*3 The bending radius of the sensing section (except for the unbendable section) is 40 mm, and the bending radius of the fiber is 25 mm.

- Reference Information for Model Selection -

Determining the Best Model for Tube-mounted Types

Mounting and conditions	Recommended Unit	Features
When bubbles and the water droplets are generated	E32-A01	This is a Through-beam Model, so the incident light will differ greatly between with and without of liquid. It also uses an area beam, which is less prone to false detection by bubbles and droplets. 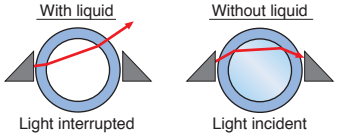
Multilevel installation in limited space	E32-L25T	This model is suitable for mounting at multilevels because of the thin type (height: 10 mm).
Mounting on large diameter tubes	E32-D36T	This model has no restrictions on the tube diameter, so it can be mounted on many different tube sizes. It also uses an area beam, which is less prone to false detection by bubbles and droplets. 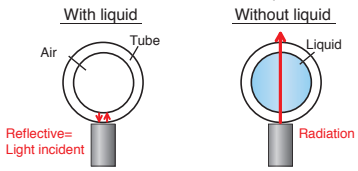

Dimensions

Installation Information → 58, 59 Page

51-A E32-A01 5M (Free Cutting)

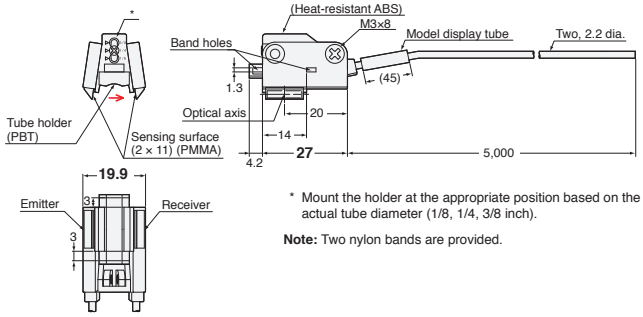

* Mount the holder at the appropriate position based on the actual tube diameter (1/8, 1/4, 3/8 inch).

Note: Two nylon bands are provided.

Tube-mounting Examples

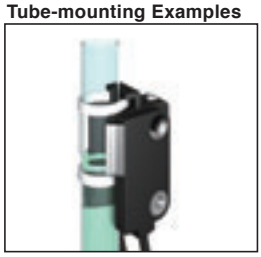

51-B E32-L25T 2M (Free Cutting)

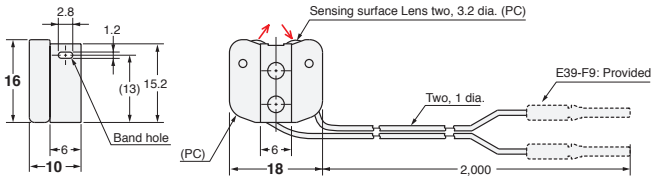

Note: Two nylon bands and one anti-reflector are provided.

51-C E32-D36T 2M (Free Cutting)

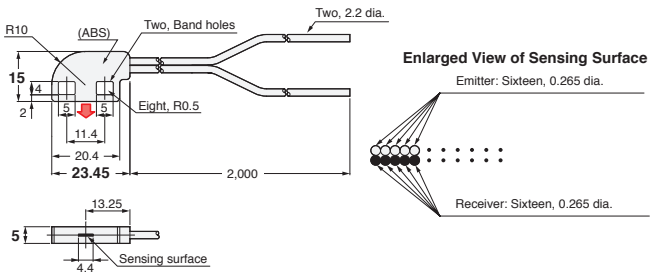

51-D E32-D82F1 4M (Free Cutting)

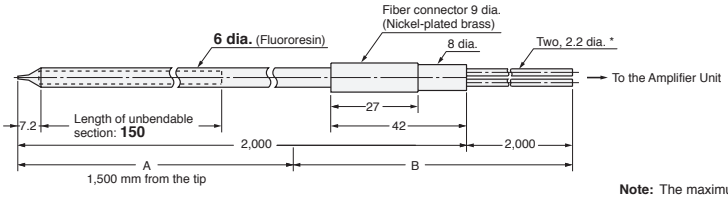

* The 2-m section of optical fiber on the Amplifier unit side is plastic and therefore allows free cutting.

Note: The maximum allowable temperature is 200°C for section A and 85°C for section B.

And

Designed for Safe Residual quantity detection (E32-A01 only)

The E32-A01 Fiber Unit is designed to default to the same output as for liquid absent in the event of a failure, such as when the fiber breaks. This makes it suitable for residual quantity detection.

Trouble (disconnection)	Light interrupted
With liquid	Light interrupted
Without liquid	Light incident

If the failure goes unnoticed, this failsafe design will prevent false detection of liquid when there is no liquid present.

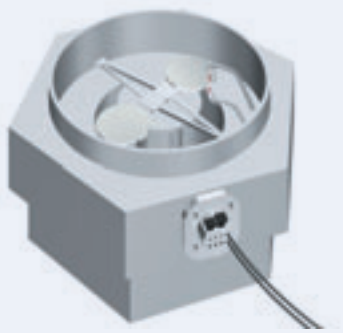

- Can be used under high vacuums of up to 10^{-5} Pa.
- Available in models with heat resistant up to 120 or 200°C.

Configuration Example for using under vacuum

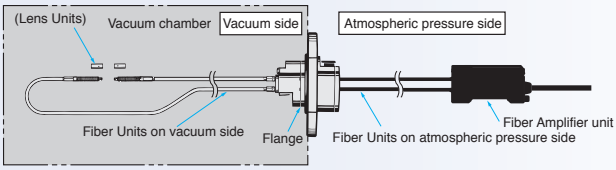

Specifications

Through-beam Fiber Units

Type	Heat-resistant temperature	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	HS	Other modes	Sensing distance (mm) E3NX-FA NEW GIGA	HS	Other modes	Optical axis diameter (minimum sensing object)	Models	53 Page Dimensions No.
Vacuum side	120°C		R30	720	260	ST : 400 SHS: 100	1,080	390	ST : 600 SHS: 100	1.2 dia. (10 µm dia./ 4 µm dia.)	E32-T51V 1M	53-A
				2,000*	1,360	ST : 2,000 SHS: 520	2,000*	2,000*	ST : 2,000* SHS: 520	4 dia. (0.1 dia./ 0.03 dia.)	E32-T51V 1M + E39-F1V	53-B
	200°C		R25	1,760	640	ST : 950 SHS: 260	2,000*	960	ST : 1,420 SHS: 260	2 dia. (0.1 dia./ 0.03 dia.)	E32-T84SV 1M	53-C
Atmospheric pressure side	70°C			—		ST : – SHS: –	—		ST : – SHS: –	—	E32-T10V 2M	53-D

* The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)

2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

Flange

Appearance	Type	Models	53 Page Dimensions No.
	4-channel flange	E32-VF4	53-E
	1-channel flange	E32-VF1	53-F

Dimensions

Installation Information → 60, 61 Page

Through-beam Fiber Units (Set of 2)

53-A E32-T51V 1M (No Cutting)

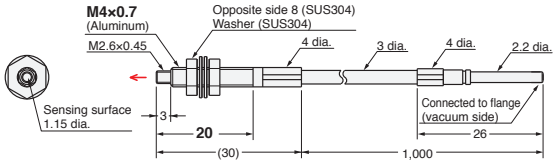

53-B E32-T51V 1M (No Cutting) + E39-F1V

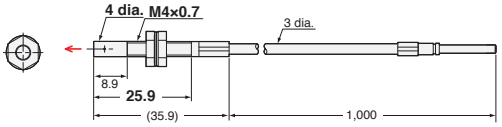

E39-F1V

53-C E32-T84SV 1M (No Cutting)

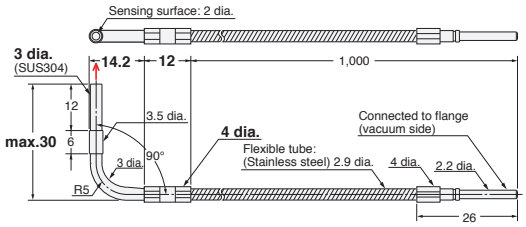

53-D E32-T10V 2M (Free Cutting)



53-E E32-VF4

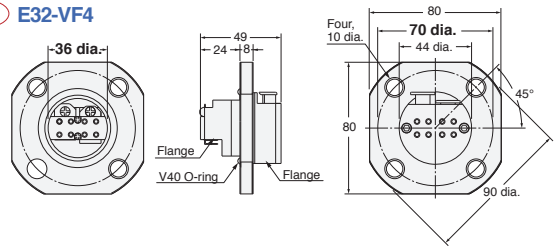

Note 1. Mount the Flange so that the V40 O-ring is on the atmospheric-pressure side of the vacuum chamber wall.
2. Mounting-hole dimensions: 38 dia. ±0.5 mm
3. The maximum tightening torque is 9.8 N·m.
4. A V40 O-ring is provided.

53-F E32-VF1

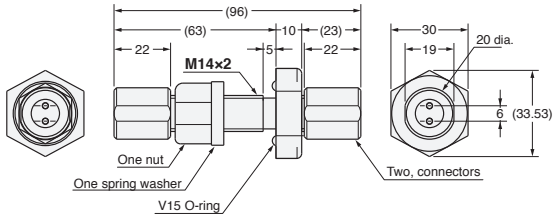

Note 1. Mount the Flange so that the V15 O-ring is on the atmospheric-pressure side of the vacuum chamber wall.
2. Mounting-hole dimensions: 14.5 dia. ±0.2 mm
3. The maximum tightening torque is 14.7 N·m for the clamp nut and 1.5 N·m for the connector.
4. A V15 O-ring, nut, spring washer, two connectors, and four O-rings for the fibers are provided.

- Reference Information for Model Selection -

What Is a Vacuum-resistant Fiber Unit?

- The Flange is designed to create an air-tight seal on the vacuum side.
- The fibers and Flange on the vacuum side are made of non-outgassing materials.
  These parts are inspected, cleaned, and sealed in an air-tight package in a clean room prior to shipment.

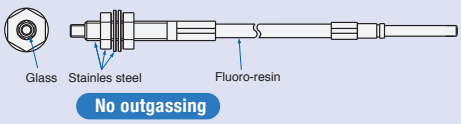

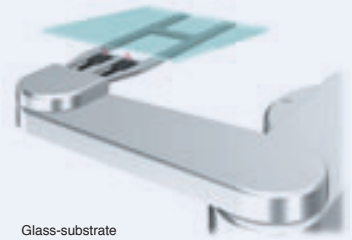

Glass-substrate Alignment

- **Glass-substrate Alignment**
  - Detection position accuracy: 0.2 mm max. No variation in detection positions even if the sensing distance changes.
  - Tilting workpiece does not affect detection.

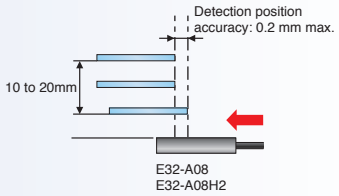

- **Glass-substrate Mapping**

  Stable detection is possible even for difficult-to-detect curved surfaces.

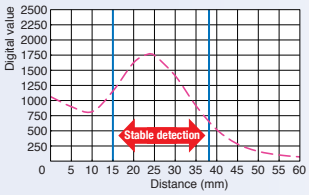



- **Glass Presence Detection in Wet Processes**
  - Stable non-contact detection even with warped glass.
  - The spherical heads ensure stable detection without being influenced by liquid.

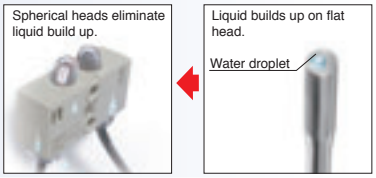

Specifications

Limited-reflective Fiber Units

Application	Ambient temperature	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA/HS	Sensing distance (mm) E3X-HD Other modes	Sensing distance (mm) E3NX-FA NEW GIGA/HS	Sensing distance (mm) E3NX-FA NEW Other modes	Standard sensing object (minimum sensing object)	Models	55 Page Dimensions No.
Glass presence detection	70°C	 IP40	R25	0 to 15 0 to 15	ST : 0 to 15 SHS: 0 to 12	0 to 15 0 to 15	ST : 0 to 15 SHS: 0 to 12	Soda glass with reflection factor of 7%	E32-L16-N 2M *1	55-A
Glass-substrate Alignment	70°C	 IP40		10 to 20 10 to 20	ST : 10 to 20 SHS: –	10 to 20 10 to 20	ST : 10 to 20 SHS: –		E32-A08 2M *1	55-B
	300°C	 IP30							E32-A08H2 2M *1	55-C
	70°C	 IP40		12 to 30 12 to 30	ST : 12 to 30 SHS: –	12 to 30 12 to 30	ST : 12 to 30 SHS: –		E32-A12 2M	55-D
Mapping of glass substrates	70°C	 IP40		15 to 38 15 to 38 (Center 25)	ST : 15 to 38 SHS: – (Center 25)	15 to 38 15 to 38 (Center 25)	ST : 15 to 38 SHS: – (Center 25)	End surface of soda glass with reflection factor of 7% (t = 0.7 mm, rounded edges)	E32-A09 2M	55-E
	300°C *2	 IP40		20 to 30 20 to 30 (Center 25)	ST : 20 to 30 SHS: – (Center 25)	20 to 30 20 to 30 (Center 25)	ST : 20 to 30 SHS: – (Center 25)		E32-A09H2 2M	55-F
Wet processes (Cleaning, Resist developing, and etching)	60°C	 IP67	R40	8 to 20 mm from tip of lens (Recommended sensing distance: 11 mm) 19 to 31 mm from center of mounting hole A (Recommended sensing distance: 22 mm)				Glass (t=0.7mm)	E32-L11FP 2M	55-G
Wet processes (Resist stripping)	85°C	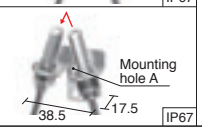 IP67		8 to 20 mm from tip of lens (Recommended sensing distance: 11 mm) 32 to 44 mm from center of mounting hole A (Recommended sensing distance: 35 mm)					E32-L11FS 2M	55-H

*1 If operation is affected by the background, perform power tuning to decrease the incident light level.
*2 The maximum allowable temperature is not the same for all parts of the Fiber Unit. Refer to the dimensions diagrams for details. Must not be repeatedly subject to rapid temperature changes.

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)

Dimensions

Installation Information → 58, 59 Page

Limited-reflective Fiber Units

55-A E32-L16-N 2M (Free Cutting)

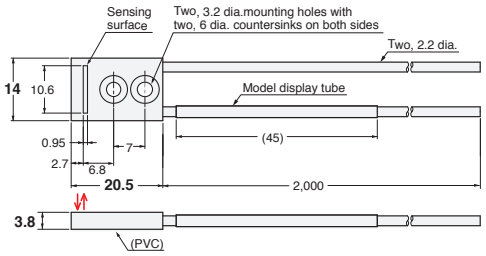

55-B E32-A08 2M (Free Cutting)

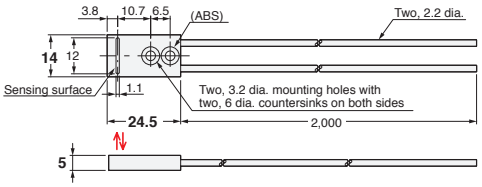

55-C E32-A08H2 2M (No Cutting)

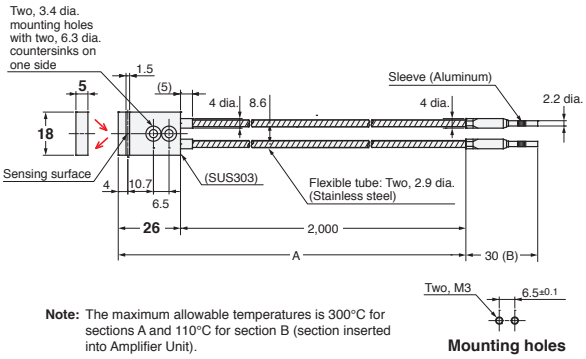

Note: The maximum allowable temperatures is 300°C for sections A and 110°C for section B (section inserted into Amplifier Unit).

55-D E32-A12 2M (Free Cutting)

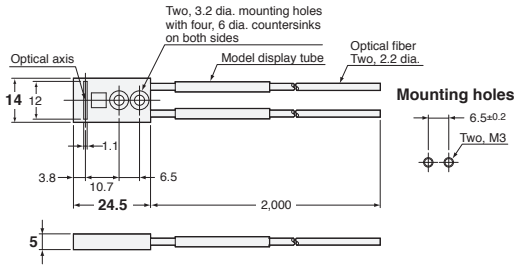

55-E E32-A09 2M (Free Cutting)

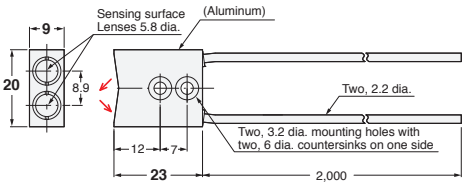

55-F E32-A09H2 2M (No Cutting)

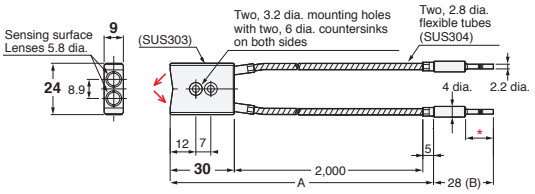

Note: The maximum allowable temperatures for sections A and B are 300°C and 110°C, respectively. The section inserted into the Amplifier Unit (indicated by *) must be maintained within the Amplifier Unit's operating temperature range.

55-G E32-L11FP 2M (Free Cutting)

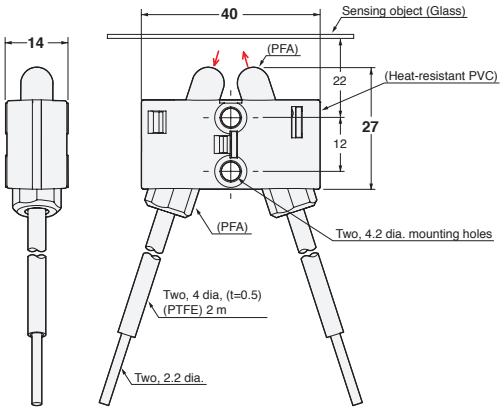

55-H E32-L11FS 2M (Free Cutting)

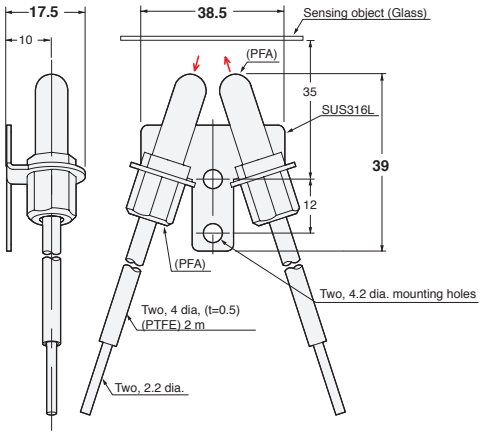

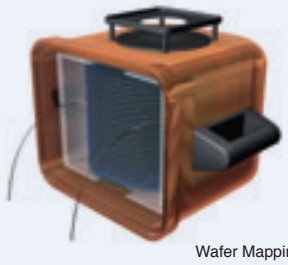

Wafer Mapping

• **Wafer Mapping**

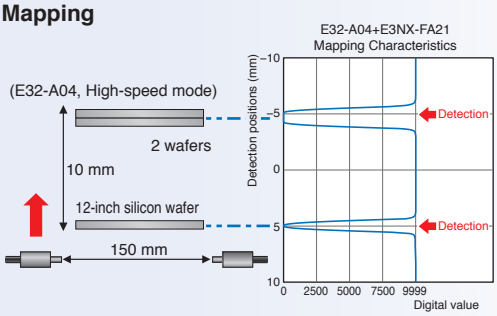

- Thin-profile design enables easy mounting on robot arms.
- Easy to adjust optical axis.
  (Typical alignment error between mechanical and optical axes is only ±0.1°.)
- Reliably wafer detection, even when stacked closely together.

Specifications

Through-beam Fiber Units

Application	Ambient temperature	Aperture angle	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	Sensing distance (mm) E3X-HD HS	Sensing distance (mm) E3X-HD Other modes	Sensing distance (mm) E3NX-FA NEW GIGA	Sensing distance (mm) E3NX-FA NEW HS	Sensing distance (mm) E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	57 Page Dimensions No.
Wafer Mapping	70°C	1.5°	20.5, Thickness: 3 mm, IP50	Flexible, R1	3,220	1,200	ST : 1,780 SHS: 500	4,000 *	1,800	ST : 2,670 SHS: 500	2 dia. (0.1 dia./ 0.03 dia.)	E32-A03 2M	57-A
			24.5, 10, Thickness: 3 mm, IP50	R10								E32-A03-1 2M	57-B
		3.4°	20.5, Thickness: 2 mm, IP50		1,280	450	ST : 680 SHS: 200	1,920	670	ST : 1,020 SHS: 200	1.2 dia. (0.1 dia./ 0.03 dia.)	E32-A04 2M	57-C
		4°	20.5, 3.5 dia., IP50	Flexible, R1	4,000 *	1,460	ST : 2,200 SHS: 580	4,000 *	2,190	ST : 3,300 SHS: 580	2 dia. (0.1 dia./ 0.03 dia.)	E32-T24SR 2M	57-D
				R10	4,000 *	1,740	ST : 2,600 SHS: 700	4,000 *	2,610	ST : 3,900 SHS: 700		E32-T24S 2M	57-E

* The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)
2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

Dimensions

Installation Information → 58, 60 Page

Through-beam Fiber Units (Set of 2)

57-A E32-A03 2M (Free Cutting)

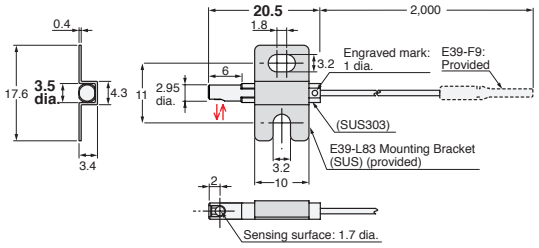

Note: Use the engraved surface and its opposing surface as installation (reference) surfaces.

57-B E32-A03-1 2M (Free Cutting)

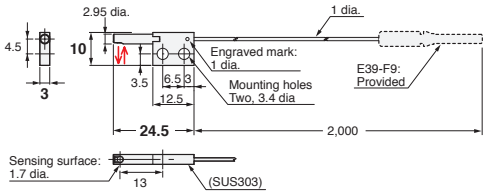

Note1: Use the engraved surface and its opposing surface as installation (reference) surfaces.
2. Set of two symmetrical parts.

57-C E32-A04 2M (Free Cutting)

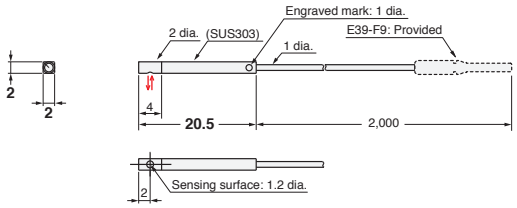

Note: Use the engraved surface and its opposing surface as installation (reference) surfaces.

57-D E32-T24SR 2M (Free Cutting)

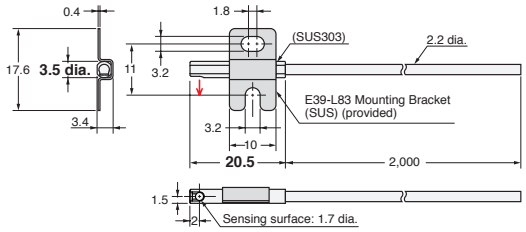

57-E E32-T24S 2M (Free Cutting)

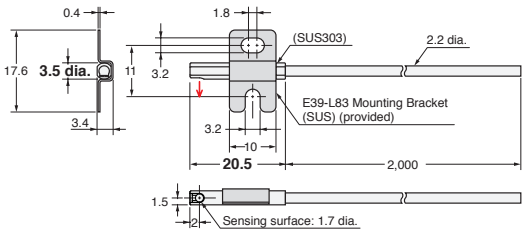

Models	Installation			Cable						Weight (packed state) (g)	Demensions Page No.
	Ambient temperature	Tightening torque	Mounting hole	Bending radius	Unbendable length*1	Tensile strength	Sheath material	Core material	Emitter/receiver differentiation		
E32-A01 5M	−40 to 70°C	0.03N · m	–	R4	10	9.8N	Fluororesin	Plastic	None	200	51 Page 51-A
E32-A03 2M	−40 to 70°C	0.29N · m	–	R1	0	9.8N	Polyethylene	Plastic	None	40	31 Page 31-A 57 Page 57-A
E32-A03-1 2M	−40 to 70°C	0.29N · m	–	R10	10	9.8N	Polyethylene	Plastic	None	50	31 Page 31-B 57 Page 57-B
E32-A04 2M	−40 to 70°C	0.29N · m	2.2$^{+0.5}_{0}$ dia.	R10	10	9.8N	Polyethylene	Plastic	None	40	31 Page 31-C 57 Page 57-C
E32-A08 2M	−40 to 70°C	0.53N · m	–	R25	10	9.8N	Polyethylene	Plastic	None	60	37 Page 37-C 55 Page 55-B
E32-A08H2 2M	−40 to 300°C *2	0.53N · m	–	R25	10	29.4N	SUS	Glass	None	240	47 Page 47-D 55 Page 55-C
E32-A09 2M	−40 to 70°C	0.53N · m	–	R25	10	9.8N	Polyethylene	Plastic	None	60	37 Page 37-F 55 Page 55-E
E32-A09H2 2M	−40 to 300°C *2, *3	0.53N · m	–	R25	10	9.8N	SUS	Glass	None	230	47 Page 47-E 55 Page 55-F
E32-A12 2M	−40 to 70°C	0.53N · m	–	R25	10	9.8N	Polyethylene	Plastic	None	60	37 Page 37-D 55 Page 55-D
E32-C21N 2M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia. *4	R2	0	9.8N	Polyethylene	Plastic	White line on emitter cable	30	97 Page 97-D
E32-C31 2M	−40 to 70°C	0.78N · m	3.2$^{+0.5}_{0}$ dia. *4	R25	10	9.8N	Polyethylene	Plastic	White line on emitter cable	40	09 Page 09-D
E32-C31M 1M	−40 to 70°C	0.78N · m	3.2$^{+0.5}_{0}$ dia. *4	R10	10	9.8N	Polyethylene	Plastic	White line on emitter cable	40	09 Page 09-E
E32-C31N 2M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia. *4	R4	0	9.8N	PVC and Polyethylene	Plastic	White line on emitter cable	40	09 Page 09-A
E32-C41 1M	−40 to 70°C	0.78N · m	3.2$^{+0.5}_{0}$ dia. *4	R25	10	9.8N	Polyethylene	Plastic	White tube on emitter cable	30	23 Page 23-A, 23-D
E32-C42 1M	−40 to 70°C	0.29N · m	2.2$^{+0.5}_{0}$ dia.	R25	10	9.8N	Polyethylene	Plastic	White tube on emitter cable	30	21 Page 21-A, 21-B
E32-C42S 1M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia.	R25	10	4N	Polyolefin	Plastic	White tube on emitter cable	30	21 Page 21-E
E32-CC200 2M	−40 to 70°C	0.98N · m	6.2$^{+0.5}_{0}$ dia.	R25	10	29.4N	Polyethylene	Plastic	White line on emitter cable	40	09 Page 09-H
E32-C91N 2M	−40 to 70°C	0.98N · m	6.2$^{+0.5}_{0}$ dia.	R4	0	29.4N	Polyethylene	Plastic	White line on emitter cable	36	09 Page 09-B 97 Page 97-F
E32-D11 2M	−40 to 70°C	0.98N · m	6.2$^{+0.5}_{0}$ dia.	R4	10	29.4N	PVC	Plastic	None	50	43 Page 43-E
E32-D11R 2M	−40 to 70°C	0.98N · m	6.2$^{+0.5}_{0}$ dia.	R1	0	29.4N	PVC	Plastic	None	50	09 Page 09-G
E32-D11U 2M	−40 to 70°C	0.98N · m	6.2$^{+0.5}_{0}$ dia.	R4	10	29.4N	Fluororesin	Plastic	None	60	39 Page 39-I
E32-D12F 2M	−40 to 70°C	0.78N · m	6.5$^{+0.5}_{0}$ dia.	R40	10	29.4N	Fluororesin	Plastic	None	190	39 Page 39-H
E32-D15XR 2M	−40 to 70°C	0.15N · m	–	R1	0	29.4N	PVC	Plastic	None	60	15 Page 15-E
E32-D15YR 2M	−40 to 70°C	0.15N · m	–	R1	0	29.4N	PVC	Plastic	None	60	15 Page 15-F
E32-D15ZR 2M	−40 to 70°C	0.15N · m	–	R1	0	29.4N	PVC	Plastic	None	60	15 Page 15-G
E32-D16 2M	−40 to 70°C	0.53N · m	–	R4	10	29.4N	PVC	Plastic	None	70	25 Page 25-E
E32-D21 2M	−40 to 70°C	0.78N · m	3.2$^{+0.5}_{0}$ dia. *4	R4	10	9.8N	PVC	Plastic	None	20	43 Page 43-B
E32-D211R 2M	−40 to 70°C	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R1	0	9.8N	Polyethylene	Plastic	None	40	09 Page 09-F
E32-D21B 2M	−40 to 70°C	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R4	10	9.8N	PVC	Plastic	None	40	43 Page 43-D
E32-D21N 2M	−40 to 70°C	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R2	0	9.8N	Polyethylene	Plastic	None	30	97 Page 97-E
E32-D21R 2M	−40 to 70°C	0.78N · m	3.2$^{+0.5}_{0}$ dia. *4	R1	0	9.8N	Polyethylene	Plastic	None	20	09 Page 09-C
E32-D21-S3 2M	−40 to 70°C	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R10	10	9.8N	Polyethylene	Plastic	None	50	19 Page 19-J
E32-D221B 2M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia.	R4	10	9.8N	PVC	Plastic	None	40	13 Page 13-D 43 Page 43-C
E32-D22B 2M	−40 to 70°C	0.2N · m	1.7$^{+0.5}_{0}$ dia.	R4	10	9.8N	PVC	Plastic	None	30	13 Page 13-A 43 Page 43-A

*1 Unbendable length of cable from fiber head.
Do not bend the cable for at least 20 mm from where the cable inserts into the Fiber Amplifier Unit.
*2 The heat-resistant rating is not the same for all parts of the Fiber Unit. Refer to the dimensions diagrams for details.
*3 Avoid rapid temperature changes.
*4 For embedded mounting, prepare a hole with a diameter of 2.6 mm.

Models	Installation			Cable						Weight (packed state) (g)	Demensions Page No.
	Ambient temperature	Tightening torque	Mounting hole	Bending radius	Unbendable length*1	Tensile strength	Sheath material	Core material	Emitter/receiver differentiation		
E32-D22R 2M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia.	R1	0	9.8N	Polyethylene	Plastic	None	40	13 Page 13-C
E32-D22-S1 2M	−40 to 70°C	0.29N · m	4.2$^{+0.5}_{0}$ dia.	R10	10	9.8N	Polyethylene	Plastic	None	45	19 Page 19-I
E32-D24R 2M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia.	R1	0	9.8N	Polyethylene	Plastic	None	40	19 Page 19-A
E32-D24-S2 2M	−40 to 70°C	0.29N · m	5$^{+0.5}_{0}$ dia.	R25	10	19.6N	Polyethylene	Plastic	None	55	19 Page 19-B
E32-D25XB 2M	−40 to 70°C	0.15N · m	–	R4	10	9.8N	PVC	Plastic	None	40	43 Page 43-F
E32-D25-S3 2M	−40 to 70°C	0.29N · m	–	R10	10	9.8N	Polyethylene	Plastic	None	50	19 Page 19-L
E32-D31-S1 0.5M	−40 to 70°C	0.78N · m	3.2$^{+0.5}_{0}$ dia. *2	R4	10	9.8N	Polyolefin	Plastic	None	35	19 Page 19-G
E32-D32L 2M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia.	R25	10	29.4N	Polyethylene	Plastic	Yellow dotted line on emitter cable	50	13 Page 13-E
E32-D32-S1 0.5M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia.	R4	10	9.8N	Polyolefin	Plastic	None	35	19 Page 19-F
E32-D33 2M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia.	R25	10	9.8N	Polyethylene	Plastic	None	40	13 Page 13-F 19 Page 19-E
E32-D331 2M	−40 to 70°C	0.29N · m	2.2$^{+0.5}_{0}$ dia.	R4	10	9.8N	Polyethylene	Plastic	None	30	19 Page 19-D
E32-D36P1 2M	−40 to 70°C	0.78N · m	–	R4	10	29.4N	Polyethylene	Plastic	None	60	49 Page 49-E
E32-D36T 2M	−40 to 70°C	–	–	R4	10	29.4N	Polyethylene	Plastic	None	190	51 Page 51-C
E32-D43M 1M	−40 to 70°C	0.29N · m	1.7$^{+0.5}_{0}$ dia.	R4	10	9.8N	Polyethylene	Plastic	None	30	13 Page 13-B 19 Page 19-C
E32-D51 2M	−40 to 150°C *3	0.98N · m	6.2$^{+0.5}_{0}$ dia.	R35	10	29.4N	Fluororesin	Plastic	None	60	47 Page 47-B
E32-D51R 2M	−40 to 100°C *4	0.98N · m	6.2$^{+0.5}_{0}$ dia.	R2	0	29.4N	Polyurethane	Plastic	None	60	47 Page 47-A
E32-D61-S 2M	−60 to 350°C *5	0.98N · m	6.2$^{+0.5}_{0}$ dia.	R25	10	29.4N	SUS	Glass	None	190	47 Page 47-G
E32-D611-S 2M	−60 to 350°C *5	0.98N · m	4.2$^{+0.5}_{0}$ dia.	R25	10	29.4N	SUS	Glass	None	170	47 Page 47-F
E32-D73-S 2M	−40 to 400°C *5	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R25	10	29.4N	SUS	Glass	None	170	47 Page 47-H
E32-D81R-S 2M	−40 to 200°C *5	0.78N · m	6.2$^{+0.5}_{0}$ dia.	R10	10	9.8N	Fluororesin	Glass	None	70	47 Page 47-C
E32-D82F1 4M	−40 to 200°C	0.29N · m	6.5$^{+0.5}_{0}$ dia.	R25	10	29.4N	Fluororesin	Plastic	None	450	51 Page 51-D
E32-DC200BR 2M	−40 to 70°C	0.98N · m	6.2$^{+0.5}_{0}$ dia.	R1	0	29.4N	PVC	Plastic	None	60	19 Page 19-K
E32-DC200F4R 2M	−40 to 70°C	0.78N · m	3.2$^{+0.5}_{0}$ dia. *2	R1	0	9.8N	Polyethylene	Plastic	None	40	19 Page 19-H
E32-G16 2M	−40 to 70°C	0.53N · m	–	R5	0 *6	29.4N	Polyethylene	Plastic	–	51	49 Page 49-D
E32-L11FP 2M	−10 to 60°C	0.78N · m	–	R40	10	9.8N	Fluororesin	Plastic	None	310	39 Page 39-F 55 Page 55-G
E32-L11FS 2M	−10 to 85°C	0.78N · m	–	R40	10	9.8N	Fluororesin	Plastic	None	310	39 Page 39-G 55 Page 55-H
E32-L15 2M	−40 to 70°C	0.53N · m	–	R25	10	29.4N	Polyethylene	Plastic	White tube on emitter cable	60	21 Page 21-F
E32-L16-N 2M	−40 to 70°C	0.29N · m	–	R25	10	29.4N	Polyethylene	Plastic	None	60	33 Page 33-A 37 Page 37-B 55 Page 55-A
E32-L24S 2M	−40 to 70°C	0.29N · m	–	R10	10	9.8N	Polyethylene	Plastic	None	40	33 Page 33-B 37 Page 37-A
E32-L25L 2M	−40 to 105°C *4	0.29N · m	–	R10	10	9.8N	Polyethylene	Plastic	None	40	33 Page 33-C 37 Page 37-E
E32-L25T 2M	−40 to 70°C	–	–	R10	10	9.8N	Polyethylene	Plastic	None	40	51 Page 51-B
E32-LD11 2M	−40 to 70°C	0.98N · m	–	R25	10	29.4N	Polyethylene	Plastic	None	40	09 Page 09-I
E32-LD11N 2M	−40 to 70°C	0.98N · m	6.2$^{+0.5}_{0}$ dia.	R2	0	29.4N	Polyethylene	Plastic	None	40	97 Page 97-C
E32-LD11R 2M	−40 to 70°C	0.98N · m	–	R1	0	29.4N	Polyethylene	Plastic	None	40	09 Page 09-I

*1 Unbendable length of cable from fiber head.
Do not bend the cable for at least 20 mm from where the cable inserts into the Fiber Amplifier Unit.
*2 For embedded mounting, prepare a hole with a diameter of 2.6 mm.
*3 For continuous operation, use the Fiber Unit between −40 to 130°C.
*4 For continuous operation, use the Fiber Unit between −40 to 90°C.
*5 The heat-resistant rating is not the same for all parts of the Fiber Unit. Refer to the dimensions diagrams for details.
*6 The bending radius of the protective cover (PVC, 25 mm) is 10 mm min.

Models	Installation			Cable						Weight (packed state) (g)	Demensions Page No.
	Ambient temperature	Tightening torque	Mounting hole	Bending radius	Unbendable length*1	Tensile strength	Sheath material	Core material	Emitter/receiver differentiation		
E32-LR11NP 2M	−40 to 70°C *2	0.98N · m	6.2$^{+0.5}_{0}$ dia.	R2	0	29.4N	Polyethylene	Plastic	None	40	35 Page 35-A 97 Page 97-G
E32-LT11 2M	−40 to 70°C	0.78N · m	–	R25	10	29.4N	Polyethylene	Plastic	None	40	07 Page 07-C 25 Page 25-C
E32-LT11N 2M	−40 to 70°C	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R2	0	29.4N	Polyethylene	Plastic	None	40	25 Page 25-A 97 Page 97-A
E32-LT11R 2M	−40 to 70°C	0.78N · m	–	R1	0	29.4N	Polyethylene	Plastic	None	40	07 Page 07-C 25 Page 25-C
E32-LT35Z 2M	−40 to 70°C	0.15N · m	–	R1	0	9.8N	Polyethylene	Plastic	None	25	15 Page 15-D
E32-R16 2M	−25 to 55°C	0.54N · m	–	R25	10	29.4N	Polyethylene	Plastic	None	220 (E39-R1 included.)	35 Page 35-B
E32-R21 2M	−40 to 70°C	0.39N · m	6.2$^{+0.5}_{0}$ dia.	R10	10	9.8N	Polyethylene	Plastic	None	70 (E39-R3 included.)	35 Page 35-C
E32-T10V 2M	−25 to 70°C	0.3N · m	–	R25	10	29.4N	Fluororesin	Plastic	None	170	53 Page 53-D
E32-T11 2M	−40 to 70°C	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R4	10	29.4N	PVC	Plastic	None	40	41 Page 41-C
E32-T11F 2M	−40 to 70°C	0.29N · m	–	R4	10	29.4N	Fluororesin	Plastic	None	60	39 Page 39-C
E32-T11N 2M	−40 to 70°C	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R1	0	29.4N	PVC	Plastic	None	70	07 Page 07-A
E32-T11NF 2M	−25 to 70°C	12N · m	8.5$^{+0.5}_{0}$ dia.	R1	0	29.4N	Fluororesin	Plastic	None	80	39 Page 39-A
E32-T11R 2M	−40 to 70°C	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R1	0	29.4N	PVC	Plastic	None	50	07 Page 07-B
E32-T12F 2M	−40 to 70°C	0.78N · m	5.5$^{+0.5}_{0}$ dia.	R40	10	29.4N	Fluororesin	Plastic	None	210	39 Page 39-B
E32-T12R 2M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia.	R1	0	29.4N	PVC	Plastic	None	60	11 Page 11-C
E32-T14 2M	−40 to 70°C	0.49N · m	–	R25	10	29.4N	Polyethylene	Plastic	None	60	25 Page 25-D
E32-T14F 2M	−40 to 70°C	0.78N · m	5.5$^{+0.5}_{0}$ dia.	R40	10	29.4N	Fluororesin	Plastic	None	220	39 Page 39-D
E32-T14LR 2M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia.	R1	0	29.4N	PVC	Plastic	None	60	11 Page 11-D
E32-T15XR 2M	−40 to 70°C	0.15N · m	–	R1	0	29.4N	PVC	Plastic	None	60	15 Page 15-A
E32-T15YR 2M	−40 to 70°C	0.15N · m	–	R1	0	29.4N	PVC	Plastic	None	60	15 Page 15-B
E32-T15ZR 2M	−40 to 70°C	0.15N · m	–	R1	0	29.4N	PVC	Plastic	None	60	15 Page 15-C
E32-T16JR 2M	−40 to 70°C	0.29N · m	–	R1	0	29.4N	PVC	Plastic	None	60	49 Page 49-B
E32-T16PR 2M	−40 to 70°C	0.29N · m	–	R1	0	9.8N	PVC	Plastic	None	60	49 Page 49-A
E32-T16WR 2M	−25 to 55°C	0.29N · m	–	R1	0	9.8N	PVC	Plastic	None	60	49 Page 49-C
E32-T17L 10M	−40 to 70°C	0.78N · m	14.5$^{+1}_{0}$ dia.	R25	10	29.4N	Polyethylene	Plastic	None	240	25 Page 25-B
E32-T21 2M	−40 to 70°C	0.78N · m	3.2$^{+0.5}_{0}$ dia. *3	R4	10	9.8N	PVC	Plastic	None	30	41 Page 41-B
E32-T21-S1 2M	−40 to 70°C	0.78N · m	3.2$^{+0.5}_{0}$ dia. *3	R10	10	9.8N	Polyethylene	Plastic	None	45	17 Page 17-D
E32-T223R 2M	−40 to 70°C	0.20N · m	1.2$^{+0.5}_{0}$ dia.	R1	20	9.8N	Polyethylene	Plastic	None	40	11 Page 11-A
E32-T22B 2M	−40 to 70°C	0.20N · m	1.7$^{+0.5}_{0}$ dia.	R4	10	9.8N	PVC	Plastic	None	40	11 Page 11-B 41 Page 41-A
E32-T22S 2M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia.	R10	10	29.4N	PVC	Plastic	None	60	31 Page 31-F
E32-T24E 2M	−40 to 70°C	0.29N · m	2.7$^{+0.5}_{0}$ dia.	R10	10	9.8N	Polyethylene	Plastic	None	40	17 Page 17-B
E32-T24R 2M	−40 to 70°C	0.29N · m	2.2$^{+0.5}_{0}$ dia.	R1	0	9.8N	Polyethylene	Plastic	None	40	17 Page 17-A
E32-T24S 2M	−40 to 70°C	0.29N · m	–	R10	10	29.4N	PVC	Plastic	None	60	31 Page 31-E 57 Page 57-E
E32-T24SR 2M	−40 to 70°C	0.29N · m	–	R1	0	9.8N	PVC	Plastic	None	60	31 Page 31-D 57 Page 57-D
E32-T25XB 2M	−40 to 70°C	0.15N · m	–	R4	10	9.8N	PVC	Plastic	None	40	41 Page 41-D

*1 Unbendable length of cable from fiber head.
Do not bend the cable for at least 20 mm from where the cable inserts into the Fiber Amplifier Unit.
*2 Ambient operating temperature of the recommended reflector (E39-RP1) is −40 to 60°C.
*3 For embedded mounting, prepare a hole with a diameter of 2.6 mm.

Models	Installation			Cable						Weight (packed state) (g)	Demensions Page No.
	Ambient temperature	Tightening torque	Mounting hole	Bending radius	Unbendable length*1	Tensile strength	Sheath material	Core material	Emitter/receiver differentiation		
E32-T33 1M	−40 to 70°C	0.29N · m	3.2$^{+0.5}_{0}$ dia.	R10	10	9.8N	Polyethylene	Plastic	None	40	17 Page 17-C
E32-T51 2M	−40 to 150°C *2	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R35	10	29.4N	Fluororesin	Plastic	None	70	45 Page 45-B
E32-T51F 2M	−40 to 150°C *2	0.78N · m	5.5$^{+0.5}_{0}$ dia.	R40	10	29.4N	Fluororesin	Plastic	None	220	39 Page 39-E
E32-T51R 2M	−40 to 100°C *3	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R2	0	29.4N	Polyurethane	Plastic	None	60	45 Page 45-A
E32-T51V 1M	−25 to 120°C	0.29N · m	4.2$^{+0.5}_{0}$ dia.	R30	10	29.4N	Fluororesin	Glass	None	160	53 Page 53-A
E32-T61-S 2M	−60 to 350°C *4	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R25	10	29.4N	SUS	Glass	None	200	45 Page 45-D
E32-T81R-S 2M	−40 to 200°C *4	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R10	10	9.8N	Fluororesin	Glass	None	60	45 Page 45-C
E32-T84SV 1M	−25 to 200°C	0.29N · m	4.5$^{+0.5}_{0}$ dia.	R25	10	29.4N	SUS	Glass	None	190	53 Page 53-C
E32-TC200BR 2M	−40 to 70°C	0.78N · m	4.2$^{+0.5}_{0}$ dia.	R1	0	29.4N	PVC	Plastic	None	60	17 Page 17-E
E32-VF1	−25 to 70°C	–	–	–	–	–	–	–	–	240	53 Page 53-F
E32-VF4	−25 to 70°C	–	–	–	–	–	–	–	–	280	53 Page 53-E
E39-F1	−40 to 200°C	–	–	–	–	–	–	–	–	2	26 Page 26-A 27 Page 27-A to 27-C 28 Page 28-A 29 Page 29-A to 29-C
E39-F1-33	−40 to 200°C	–	–	–	–	–	–	–	–	3	28 Page 28-D
E39-F11	–	–	–	–	–	–	–	–	–	30	–
E39-F16	−40 to 350°C	–	–	–	–	–	–	–	–	15	26 Page 26-B 27 Page 27-D to 27-F 28 Page 28-B 29 Page 29-D to 29-F, 29-K
E39-F17	−25 to 70°C	–	–	–	–	–	–	–	–	10	21 Page 21-B
E39-F18	−40 to 70°C	–	–	–	–	–	–	–	–	5	23 Page 23-G, 23-H
E39-F1V	−25 to 120°C	–	–	–	–	–	–	–	–	3	53 Page 53-B
E39-F2	−40 to 200°C	–	–	–	–	–	–	–	–	2	26 Page 26-C 27 Page 27-G, 27-H 28 Page 28-C 29 Page 29-G to 29-I
E39-F32A 1M	−40 to 150°C	–	–	R30	–	–	–	–	–	70	43 Page 43-G
E39-F32C 1M	−40 to 150°C	–	–	R30	–	–	–	–	–	110	41 Page 41-E 43 Page 43-G
E39-F32D 1M	−40 to 150°C	–	–	R30	–	–	–	–	–	80	43 Page 43-G
E39-F3A	−40 to 70°C	–	–	–	–	–	–	–	–	2	21 Page 21-A
E39-F3A-5	−40 to 70°C	–	–	–	–	–	–	–	–	1	23 Page 23-A, 23-B, 23-C
E39-F3B	−25 to 55°C	–	–	–	–	–	–	–	–	2	23 Page 23-D, 23-E, 23-F
E39-F3C	−25 to 55°C	–	–	–	–	–	–	–	–	1	21 Page 21-C, 21-D
E39-R1	−25 to 55°C	–	–	–	–	–	–	–	–	20	35 Page 35-B
E39-R3	−25 to 55°C	–	–	–	–	–	–	–	–	20	35 Page 35-C
E39-RP1	−40 to 60°C	–	–	–	–	–	–	–	–	25	35 Page 35-A 97 Page 97-G
E39-RP37	−25 to 55°C	–	–	–	–	–	–	–	–	4	–
E39-RSP1	−25 to 55°C	–	–	–	–	–	–	–	–	4	–

*1 Unbendable length of cable from fiber head.
Do not bend the cable for at least 20 mm from where the cable inserts into the Fiber Amplifier Unit.
*2 For continuous operation, use the Fiber Unit between −40 to 130°C.
*3 For continuous operation, use the Fiber Unit between −40 to 90°C.
*4 The heat-resistant rating is not the same for all parts of the Fiber Unit. Refer to the dimensions diagrams for details.

Smart Fiber Amplifier Units

E3NX-FA Series NEW

A Smart Fiber Amplifier Unit with Ultra-stable Detection and Ultra-easy Setup

64 Page

Expanded Application Response Capabilities

Advanced Basic Performance

Improvements in the sensing distance and minimum sensing object have increased the range of application for stable detection.

1.5 Times the Sensing Distance*	1/10th the Minimum Sensing Object*
6 m	0.3 μm dia.
For E32-LT11 Fiber Unit with a fiber length of 3.5 m	Typical example of actual measurements with E32-D11R Fiber Unit.

*Compared to E3X-HD.

Achieve Easy Detection in Many Applications

Advanced Smart Tuning

Just press the S-TUNE button once with a workpiece and once without a workpiece to automatically set the optimum incident level and threshold. Consistent settings are achieved for all users with this ultra-easy procedure.

Optimum Light Intensity Adjustment from Transparent Objects to Black Workpieces

The incident level is optimized to enable stable detection even for saturated or insufficient incident levels.

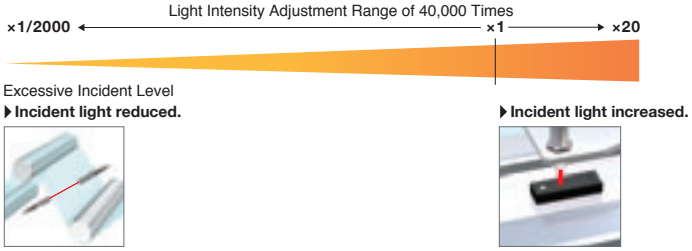

Sensor Communications Units for E3NX-FA

E3NW Series NEW

The Next-generation E3NW Sensor Network Units Revolutionize On-site Sensing

EtherCAT
CompoNet
CC-Link V2

64 Page

The Sensor Communications Unit with a master function and the Distributed Sensor Units with slave functions enable N-Smart Sensors communication over open networks.

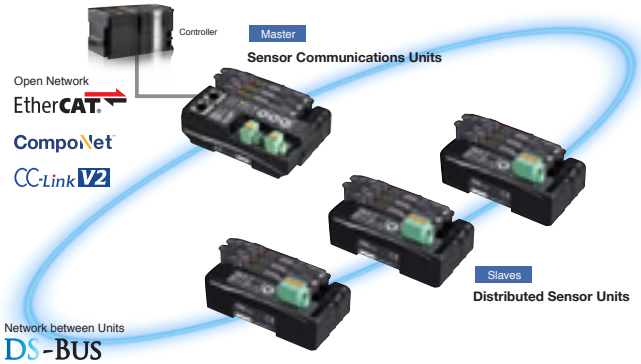

Greatly Reduced Machine Manufacturing Costs

There is no need to change the current distributed installation to introduce a network without increasing costs.

Greatly Reduced Machine Commissioning Time

All of the settings can be made at the same time from a Touch Panel.

Greatly Improved Machine Productivity

Realtime monitoring lets you perform maintenance before malfunctions occur.

Smart Fiber Amplifier Units

E3X-HD Series

Affordable Amplifier Units with Simple Operation and Stable Detection Capabilities

78 Page

Sensor Communications Units for E3X-HD

E3X-ECT / E3X-CRT

Sensor Communications Units for CompoNet and EtherCAT

CompoNet EtherCAT

78 Page

<Fiber Amplifier Unit Comparison>

			E3NX-FA Series NEW	E3X-HD Series
Fiber Amplifier Unit specifications	Output		1 or 2 outputs (depending on the model)	1 output
	External input		Supported or not supported (depending on the model)	Not supported
	Response time		30 µs (32 µs)/250 µs/1 ms/16 ms (Default: 250 µs)	50 µs (55 µs)/250 µs/1 ms/16 ms (Default: 250 µs)
	Sensing distance (Giga-power mode)	E32-T11R	3,000 mm	2,000 mm
		E32-D11R	1,260 mm	840 mm
	Minimum sensing object	E32-T11R	2 µm dia.	5 µm dia.
Sensor Communications Unit application	Communications method (Sensor Communications Unit model)		EtherCAT (E3NW-ECT) CompoNet (E3NW-CRT) CC-Link (E3NW-CCL)	EtherCAT (E3X-ECT) CompoNet (E3X-CRT)
	Applicable Sensors		Fiber Sensor (E3NX-FA0) Laser Sensors (E3NC-LA0, E3NC-SA0) Contact-Type Sensor (E9NC-TA0) *	Fiber Sensor (E3X-HD0) Fiber Sensor (E3X-MDA0) Laser Photoelectric Sensor (E3C-LDA0) Proximity Sensor (E2C-EDA0)
Page listings	Ordering Information		64 Page	78 Page
	Ratings and Specifications		66 Page	80 Page
	Dimensions		68 Page	80 Page

* E3NW-CRT Sensor Communications Units (CompoNet) cannot be used.

Fiber Amplifier Unit Accessories

65, 79 Page

E3NX-FA Fiber Amplifier Units and Related Products NEW

Fiber Amplifier Units E3NX-FA Series

Type	Appearance	Connecting method	Inputs/ outputs	Models		Ratings and Specifications	Dimensions
				NPN output	PNP output		
Standard models		Pre-wired (2 m)	1 output	E3NX-FA11 2M	E3NX-FA41 2M	Page 66	Page 68 68-A
		Wire-saving Connector	1 output	E3NX-FA6	E3NX-FA8		Page 68 68-B
Advanced models		Pre-wired (2 m)	2 outputs + 1 input	E3NX-FA21 2M	E3NX-FA51 2M		Page 68 68-A
		Wire-saving Connector	1 output + 1 input	E3NX-FA7	E3NX-FA9		Page 68 68-B
			2 outputs	E3NX-FA7TW	E3NX-FA9TW		
		M8 Connector	1 output + 1 input	E3NX-FA24	E3NX-FA54		Page 69 69-A
			2 outputs	—	E3NX-FA54TW		
Model for Sensor Communications Unit *		Connector for Sensor Communications Unit	—	E3NX-FA0			Page 69 69-B

* A Sensor Communications Unit is required if you want to use the Fiber Amplifier Unit on a network.

Sensor Communications Unit

Sensor Communications Unit

Communication method	Appearance	Applicable Fiber Amplifier Model	Model	Ratings and Specifications	Dimensions
EtherCAT		E3NX-FA0	E3NW-ECT	Page 76	Page 77 77-A
CompoNet			E3NW-CRT	*	*
CC-Link			E3NW-CCL		

* For details, refer to your OMRON website.

Distributed Sensor Unit

Appearance	Applicable Fiber Amplifier Model	Model	Ratings and Specifications	Dimensions
	E3NX-FA0	E3NW-DS	Page 76	Page 77 77-B

Note. The Distributed Sensor Unit can be connected to any of the Sensor Communications Units.

Accessories (sold separately)

Wire-saving connectors (Required for models for Wire-saving Connectors.)

Connectors are not provided with the Fiber Amplifier Unit and must be ordered separately. * Protective stickers: provided.

Type	Appearance	Cable length	Number of conductors	Applicable Fiber Amplifier Units	Models	Ratings, Specifications and Dimensions
Master Connector		2 m	4	E3NX-FA7 E3NX-FA7TW E3NX-FA9 E3NX-FA9TW	E3X-CN21	Page 88 88-A
Slave Connector			2		E3X-CN22	Page 88 88-B
Master Connector			3	E3NX-FA6 E3NX-FA8	E3X-CN11	Page 88 88-A
Slave Connector			1		E3X-CN12	Page 88 88-B

Sensor I/O Connectors (Required for models with M8 Connectors.)

Connectors are not provided with the Fiber Amplifier Unit and must be ordered separately. * Protective stickers: provided.

Appearance	Cable length	Number of conductors	Models	Ratings and Specifications	Dimensions
Straight	2 m	4	XS3F-M421-402-A	Page 88	Page 88 88-C
	5 m		XS3F-M421-405-A		
L-shaped	2 m		XS3F-M422-402-A		Page 88 88-D
	5 m		XS3F-M422-405-A		

Mounting Bracket

A Mounting Bracket is not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Model	Quantity	Dimensions
	E39-L143	1	Page 89 89-A

DIN Track

A Din Track is not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Type	Models	Quantity	Dimensions
	Shallow type, total length: 1 m	PFP-100N	1	Page 89 89-B
	Shallow type, total length: 0.5 m	PFP-50N		
	Deep type, total length: 1 m	PFP-100N2		Page 89 89-C

End Plate

Two End Plates are provided with the Sensor Communications Unit.
End Plates are not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Model	Quantity	Dimensions
	PFP-M	1	Page 89 89-D

Cover

Attach these Covers to Amplifier Units.
Order a Cover when required, e.g., if you lose the covers.

Appearance	Model	Quantity
	E39-G25 FOR E3NX-FA	1

Ratings and Specifications

Item		Type	Standard		Advanced					Model for Sensor Communications Unit
		NPN output	E3NX-FA11	E3NX-FA6	E3NX-FA21	E3NX-FA7	E3NX-FA7TW	E3NX-FA24	—	E3NX-FA0
		PNP output	E3NX-FA41	E3NX-FA8	E3NX-FA51	E3NX-FA9	E3NX-FA9TW	E3NX-FA54	E3NX-FA54TW	
		Connecting method	Pre-wired	Wire-saving Connector	Pre-wired	Wire-saving Connector		M8 Connector		Connector for Sensor Communications Unit
Inputs / Outputs	Output		1 output		2 outputs	1 output	2 outputs	1 output	2 outputs	— *1
	External input		—		1 input	1 input	—	1 input	—	
Light source (wavelength)			Red, 4-element LED (625 nm)							
Power supply voltage			10 to 30 VDC , including 10% ripple (p-p)							Supplied from the connector through the Sensor Communications Unit
Power consumption *2			At Power Supply Voltege of 24 VDC. Standard Models: Normal mode : 840 mW max. (Current consumption at 35 mA max.) Eco function ON : 650 mW max. (Current consumption at 27 mA max.) Eco function LO : 750 mW max. (Current consumption at 31 mA max.) Advanced Models or Model for Sensor Communications Unit: Normal mode : 920 mW max. (Current consumption at 38 mA max.) Eco function ON : 680 mW max. (Current consumption at 28 mA max.) Eco function LO : 800 mW max. (Current consumption at 33 mA max.)						
Control output			Load power supply voltage: 30 VDC max., open-collector output Load current: Groups of 1 to 3 Amplifier Units: 100 mA max., Groups of 4 to 30 Amplifier Units: 20 mA max. (Residual voltage: At load current of less than 10 mA: 1 V max., At load current of 10 to 100 mA: 2 V max.) OFF current: 0.1 mA max.							—
External input			—		Refer to *3.		—	Refer to *3.		—
Indicators			7-segment displays (Sub digital display: green, Main digital display: white) Display direction: Switchable between normal and reversed. OUT indicator (orange), L/D indicator (orange), ST indicator (blue), DPC indicator (green) OUT Selection Indicator (orange)(only on models with 2 outputs)							
Protection circuits			Power supply reverse polarity protection, output short-circuit protection, and output reverse polarity protection							Power supply reverse polarity protection and output short-circuit protection
Response time	Super-high-speed mode (SHS) *4		Operate or reset for model with 1 output: 30 μs, with 2 outputs: 32 μs							
	High-speed mode (HS)		Operate or reset: 250 μs							
	Standard mode (Stnd)		Operate or reset: 1 ms							
	Giga-power mode (GIGA)		Operate or reset: 16 ms							
Sensitivity adjustment			Smart tuning (2-point tuning, full auto tuning, position tuning, maximum sensitivity tuning, power tuning, or percentage tuning (–99% to 99%)) or manual adjustment							
Maximum connectable Units			30 units							With E3NW-ECT: 30 units *5 With E3NW-CRT: 16 units With E3NW-CCL: 16 units
Mutual interference prevention	Super-high-speed mode (SHS) *4		Possible for up to 0 units							
	High-speed mode (HS)		Possible for up to 10 units							
	Standard mode (Stnd)		Possible for up to 10 units							
	Giga-power mode (GIGA)		Possible for up to 10 units							
Functions	Auto power control (APC)		Always ON							
	Dynamic power control (DPC)		Provided							
	Timer		Select from timer disabled, OFF-delay, ON-delay, one-shot, or ON-delay + OFF-delay timer. 1ms to 9999ms							
	Zero reset		Negative values can be displayed. (Threshold value is shifted.)							
	Resetting settings *6		Select from initial reset (factory defaults) or user reset (saved settings).							

*1. Two sensor outputs are allocated in the programmable logic controller PLC I/O table.
PLC operation via Communications Unit enables reading detected values and changing settings.
*2. At Power Supply Voltage of 10 to 30 VDC.
Standard Models:
Normal mode : 990 mW max. (Current consumption: 33 mA max. at 30 VDC, 65 mA max. at 10 VDC)
Eco function ON : 780 mW max. (Current consumption: 26 mA max. at 30 VDC, 42 mA max. at 10 VDC)
Eco function LO : 840 mW max. (Current consumption: 28 mA max. at 30 VDC, 45 mA max. at 10 VDC)
Advanced Models:
Normal mode : 1,020 mW max. (Current consumption: 34 mA max. at 30 VDC, 67 mA max. at 10 VDC)
Eco function ON : 810 mW max. (Current consumption: 27 mA max. at 30 VDC, 44 mA max. at 10 VDC)
Eco function LO : 870 mW max. (Current consumption: 29 mA max. at 30 VDC, 48 mA max. at 10 VDC)
*3. The following details apply to the input.

	Contact input (relay or switch)	Non-contact input (transistor)	Input time*3-1
NPN type	ON: Shorted to 0V (Sourcing current: 1 mA max.). OFF: Open or shorted to Vcc.	ON: 1.5V max. (Sourcing current: 1 mA max.). OFF: Vcc – 1.5 V to Vcc (Leakage current: 0.1 mA max.)	ON : 9ms min. OFF : 20ms min.
PNP type	ON: Shorted to Vcc (Sinking current: 3 mA max.). OFF: Open or shorted to 0V.	ON: Vcc – 1.5 V to Vcc (Sinking current: 3 mA max.). OFF: 1.5V max.(Leakage current: 0.1 mA max.)	

*3-1. Input time is 25 ms (ON)/(OFF) only when (in tUnE) or (in PtUn) input is selected.
*4. The mutual interference prevention function is disabled if the detection mode is set to super-high-speed mode.
*5. When connected to an OMRON NJ-series Controller.
*6. The bank is not reset by the user reset function or saved by the user save function.

Item		Type	Standard		Advanced					Model for Sensor Communications Unit
		NPN output	E3NX-FA11	E3NX-FA6	E3NX-FA21	E3NX-FA7	E3NX-FA7TW	E3NX-FA24	—	E3NX-FA0
		PNP output	E3NX-FA41	E3NX-FA8	E3NX-FA51	E3NX-FA9	E3NX-FA9TW	E3NX-FA54	E3NX-FA54TW	
		Connecting method	Pre-wired	Wire-saving Connector	Pre-wired	Wire-saving Connector		M8 Connector		Connector for Sensor Communications Unit
Functions	Eco mode *7		Select from OFF (digital displays lit), Eco ON (digital displays not lit) or Eco LO (digital displays dimmed)							
	Bank switching		Select from banks 1 to 4.							
	Power tuning		Select from ON or OFF.							
	Output 1		Select from normal detection mode, or area detection mode.							
	Output 2		—		Select from normal detection mode, alarm output mode, or error output mode.	—	Select from normal detection mode, alarm output mode, or error output mode.	—	Select from normal detection mode, alarm output mode, or error output mode.	
	External input		—		Select from input OFF, tuning, power tuning, emission OFF, zero reset, or bank switching.		—	Select from input OFF, tuning, power tuning, emission OFF, zero reset, or bank switching.	—	
	Hysteresis width		Select from standard setting or user setting. For a user setting, the hysteresis width can be set to from 0 to 9,999.							
Ambient Illumination (Receiver side)			Incandescent lamp: 20,000 lx max., Sunlight: 30,000 lx max.							
Ambient temperature range			Operating: Groups of 1 to 2 Amplifer Units: –25 to 55°C, Groups of 3 to 10 Amplifer Units: –25 to 50°C, Groups of 11 to 16 Amplifer Units: –25 to 45°C, Groups of 17 to 30 Amplifer Units: –25 to 40°C Storage: –30 to 70°C (with no icing or condensation)							Operating: Groups of 1 to 2 Amplifer Units: 0 to 55°C, Groups of 3 to 10 Amplifer Units: 0 to 50°C, Groups of 11 to 16 Amplifer Units: 0 to 45°C, Groups of 17 to 30 Amplifer Units: 0 to 40°C Storage: –30 to 70°C (with no icing or condensation)
Ambient humidity range			Operating and storage: 35 to 85% (with no condensation) within the surrounding air temperature range shown above							
Altitude			2,000 m max.							
Installation environment			Pollution degree 3 (as per IEC 60947-1)							
Insulation resistance			20 MΩ min. (at 500 VDC)							
Dielectric strength			1,000 VAC at 50/60 Hz for 1 min							
Vibration resistance (destruction)			10 to 55 Hz with a 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions							
Shock resistance (destruction)			500 m/s^2 for 3 times each in X, Y, and Z directions							150 m/s^2 for 3 times each in X, Y, and Z directions
Weight (packed state/unit only)			Approx. 115 g/ Approx. 75 g	Approx. 60 g/ Approx. 20 g	Approx. 115 g/ Approx. 75 g	Approx. 60 g/Approx. 20 g		Approx. 65 g/Approx. 25 g		
Materials	Case		Polycarbonate (PC)							
	Cover		Polycarbonate (PC)							
	Cable		PVC							
Accessories			Instruction Manual							

*7. Eco LO is supported for Amplifier Units manufactured in July 2014 or later.

(Unit: mm)

Dimensions

Tolerance class IT16 applies to demmensions in this date sheet unless otherwise specified.

Pre-wired Amplifier Units

68-A

E3NX-FA11
E3NX-FA21
E3NX-FA41
E3NX-FA51

E3NX-FA11/FA41

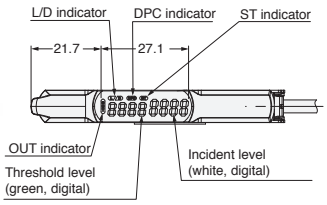

E3NX-FA21/FA51

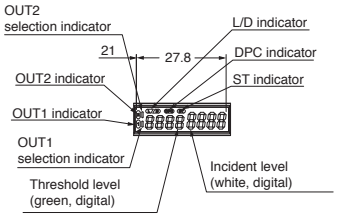

*Cable Specifications

Models	Outer diameter	Number of conductors	Others
E3NX-FA11	4.0 dia.	3	Conductor cross-section: 0.2 mm²
E3NX-FA41			Insulator dia.: 0.9 mm
E3NX-FA21	4.0 dia.	5	Standard length: 2 m
E3NX-FA51			Minimum bending radius: 12 mm

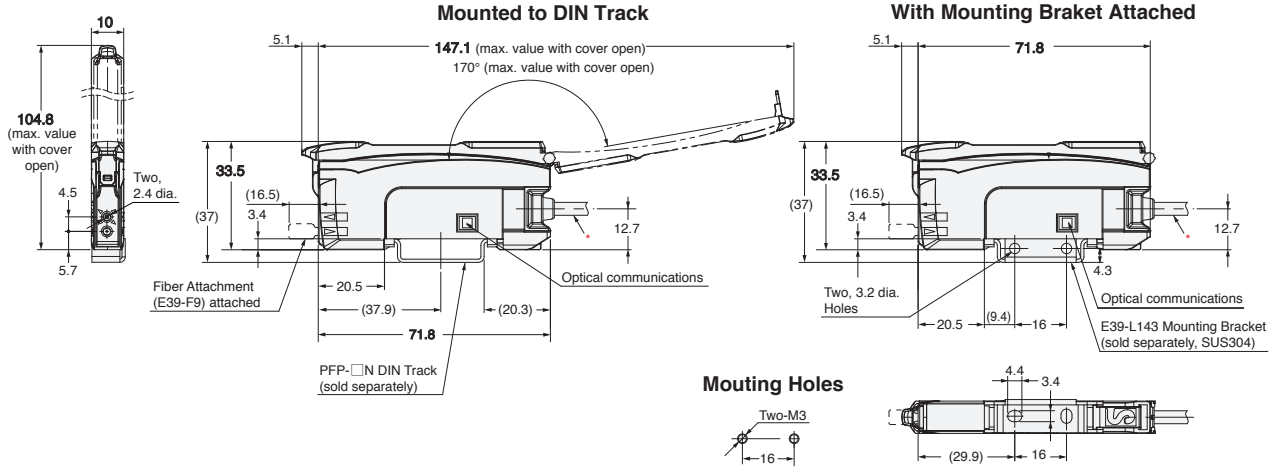

Mouting Holes

Amplifier Units with Wire-saving Connectors

68-B

E3NX-FA6
E3NX-FA7
E3NX-FA7TW
E3NX-FA8
E3NX-FA9
E3NX-FA9TW

E3NX-FA6/FA7/FA8/FA9

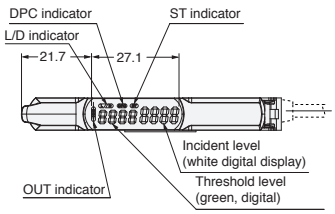

E3NX-FA7TW/FA9TW

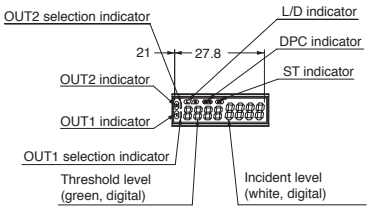

*Cable Specifications

Models	Outer diameter	Number of conductors
E3X-CN12	2.6 dia.	1
E3X-CN22	4.0 dia.	2
E3X-CN11		3
E3X-CN21		4

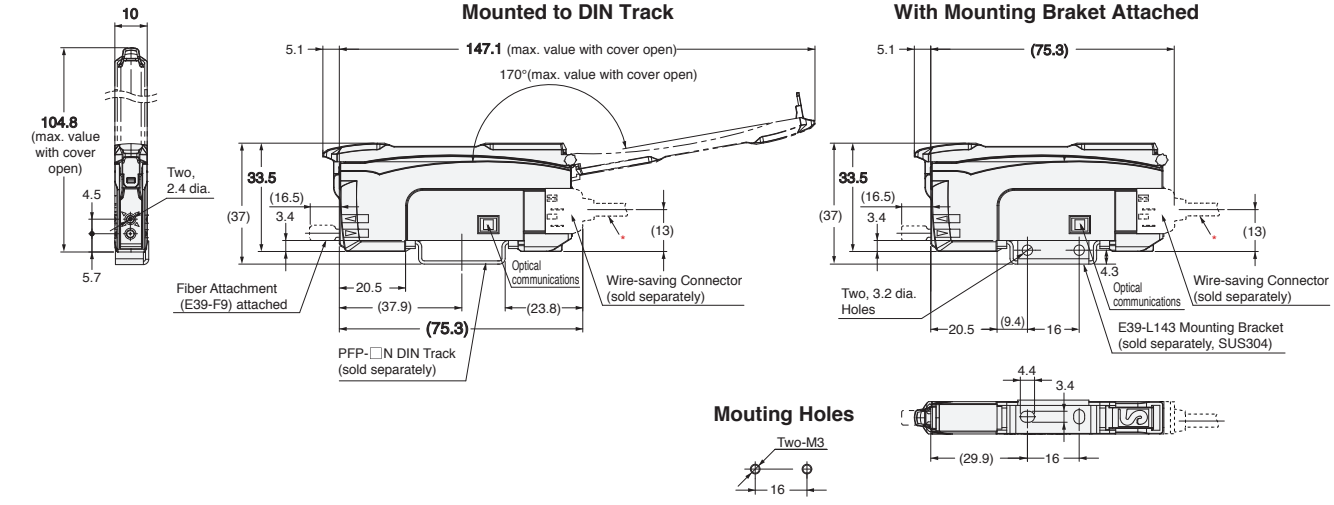

Mouting Holes

Amplifier Units with M8 Connector

69-A **E3NX-FA24**
E3NX-FA54
E3NX-FA54TW

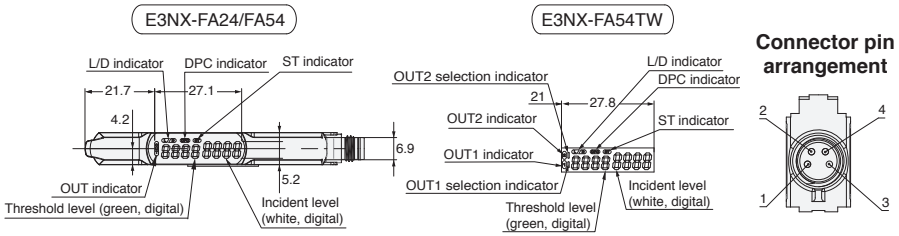

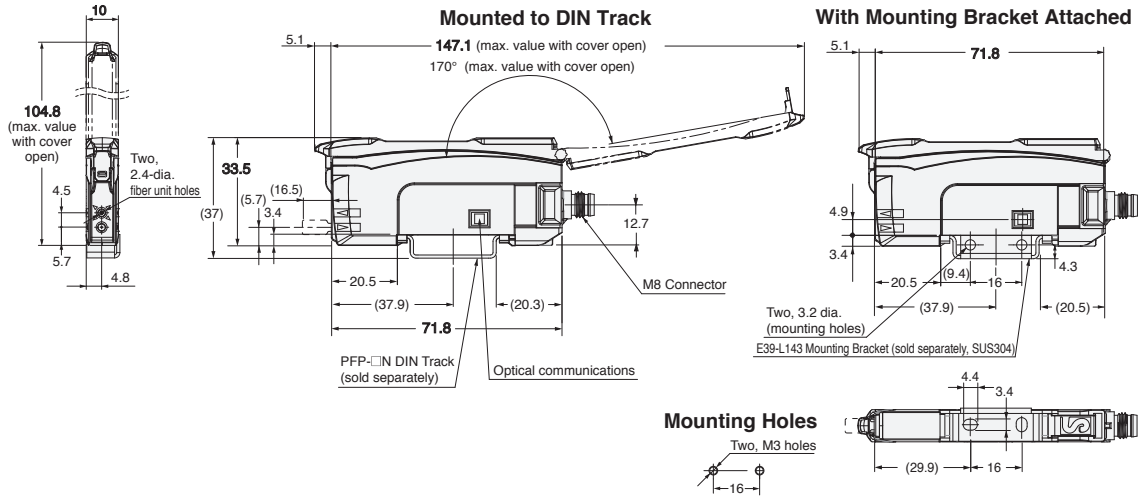

Amplifier Unit with Connector for Sensor Communications Unit

69-B **E3NX-FA0**

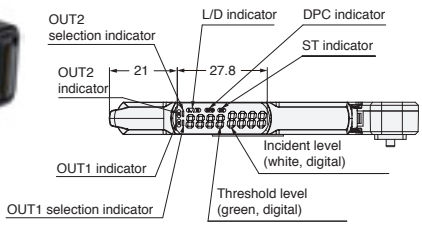

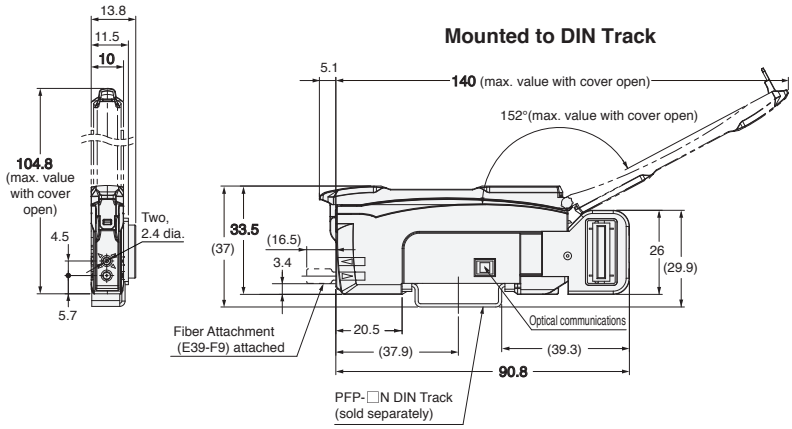

I/O Circuit Diagrams

NPN Output

Models	Operation mode	Timing chart	L/D indicators	Output circuit
E3NX-FA11 E3NX-FA6	Light-ON	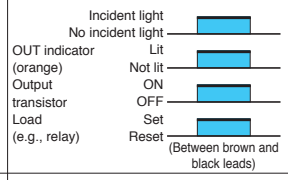	L lit.	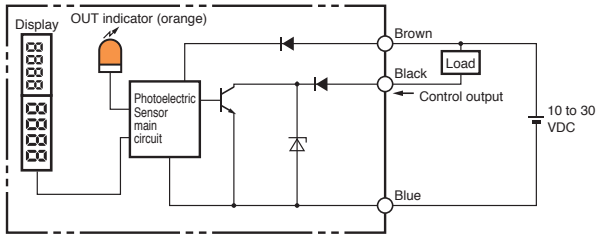
	Dark-ON	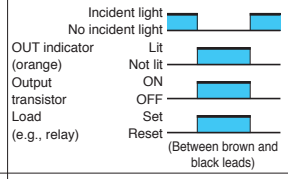	D lit.	
E3NX-FA21	Light-ON	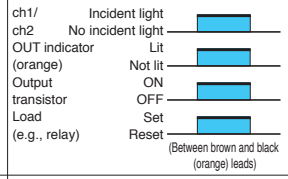	L lit.	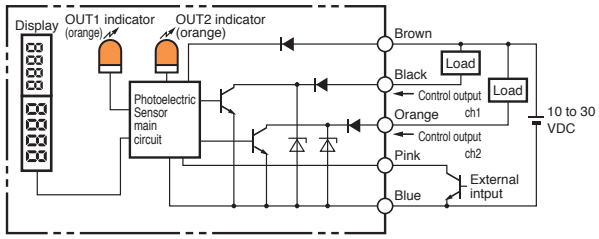
	Dark-ON	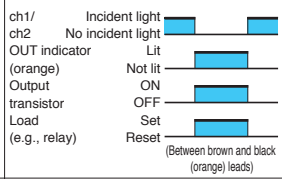	D lit.	
E3NX-FA7 E3NX-FA24	Light-ON	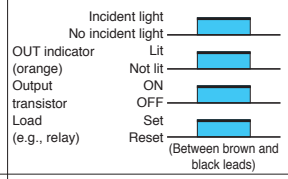	L lit.	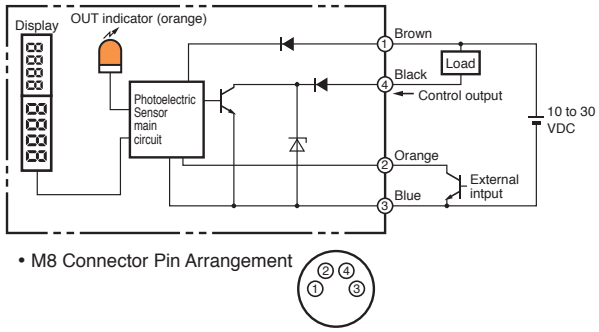
	Dark-ON	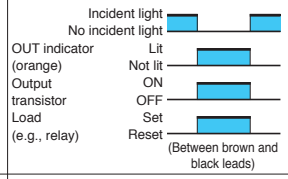	D lit.	
E3NX-FA7TW	Light-ON	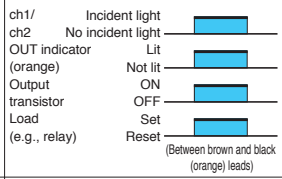	L lit.	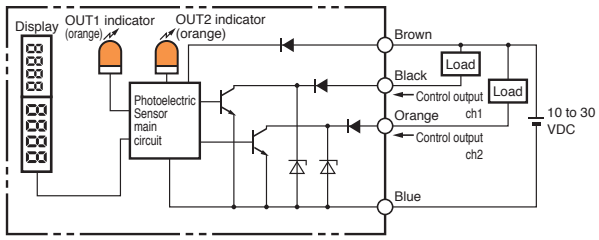
	Dark-ON	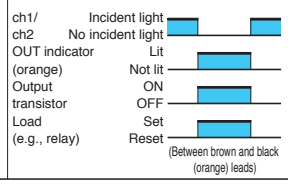	D lit.	

PNP Output

Models	Operation mode	Timing chart	L/D indicators	Output circuit
E3NX-FA41 E3NX-FA8	Light-ON	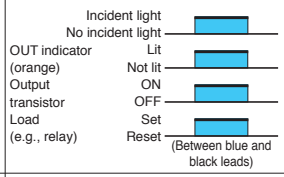	L lit.	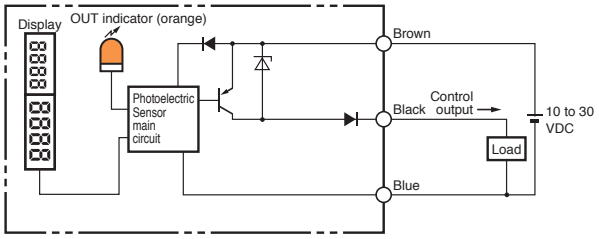
	Dark-ON	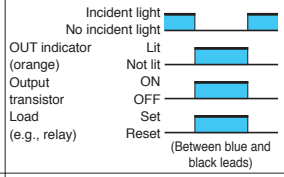	D lit.	
E3NX-FA51	Light-ON	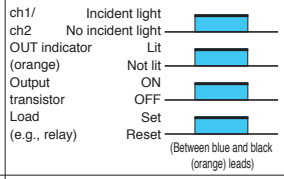	L lit.	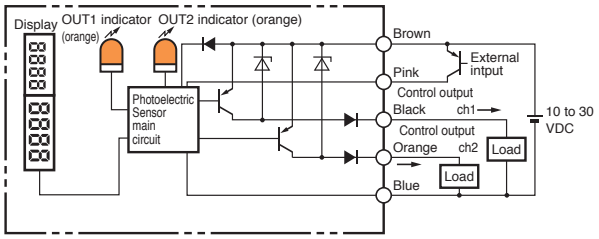
	Dark-ON	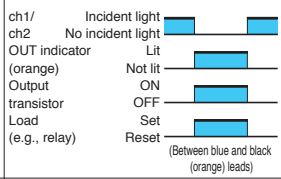	D lit.	
E3NX-FA9 E3NX-FA54	Light-ON	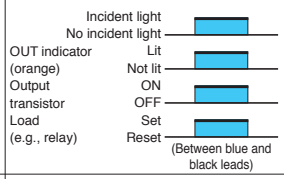	L lit.	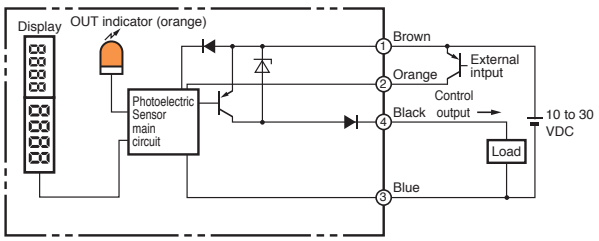 • M8 Connector Pin Arrangement
	Dark-ON	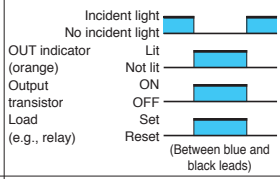	D lit.	
E3NX-FA9TW E3NX-FA54TW	Light-ON	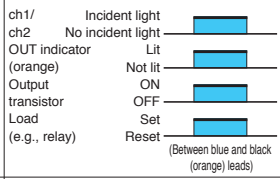	L lit.	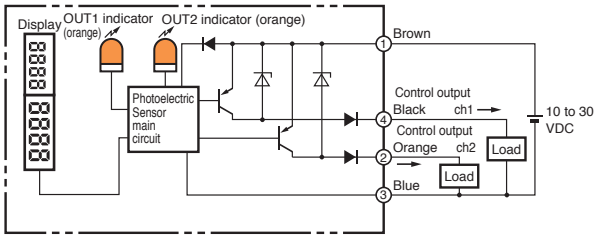 • M8 Connector Pin Arrangement
	Dark-ON	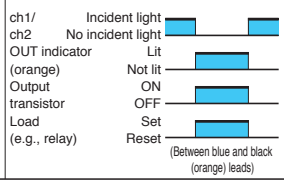	D lit.	

Plug (Sensor I/O Connector)

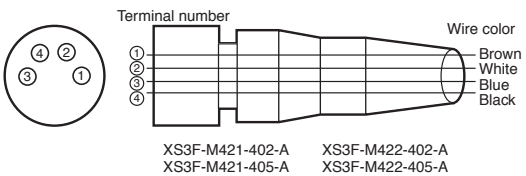

Wire color	Connection pin	Application
Brown	1	Power supply (+V)
White	2	External input / Output
Blue	3	Power supply (0 V)
Black	4	Output

Nomenclature

E3NX-FA11/FA41/FA6/FA8/FA7/FA9/FA24/FA54

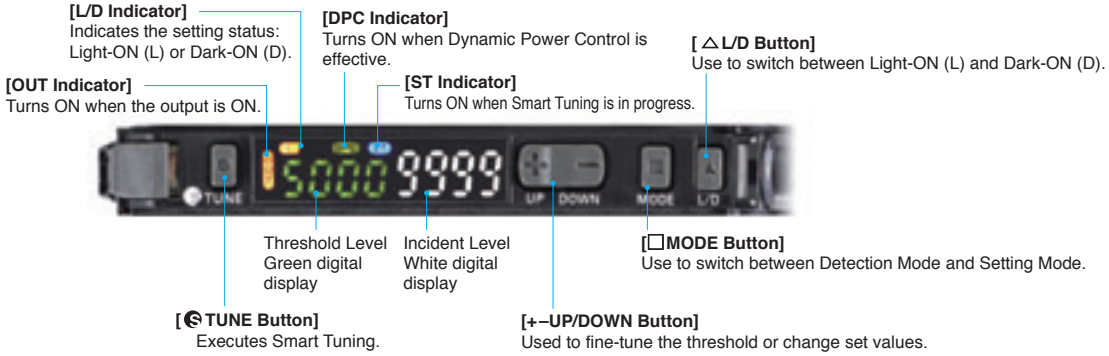

E3NX-FA21/FA51/FA7TW/FA9TW/FA54TW/FA0

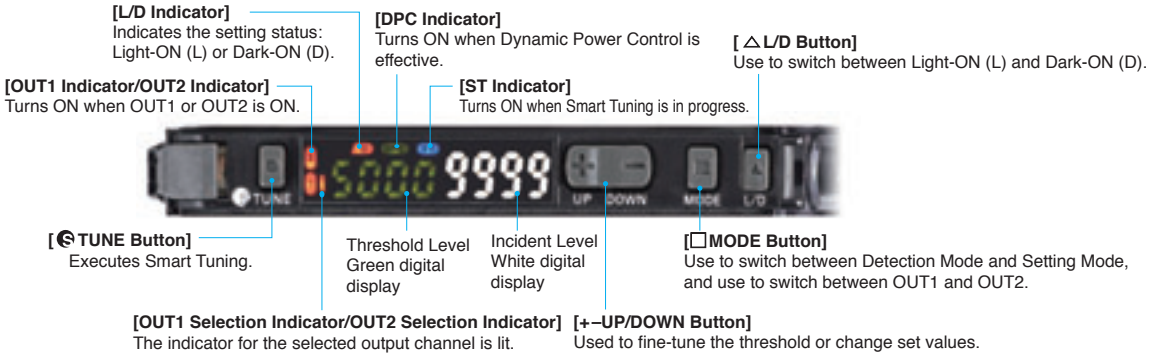

Operating Procedures

Basic Settings

Output switching

1. Press L/D button.

Through-beam:
Set to “Dark ON" to turn the output ON with a workpiece in the detection area.
[L/D Indicator] turns D ON.

Reflective:
Set to “Light ON" to turn the output ON with a workpiece in the detection area.
[L/D Indicator] turns L ON.

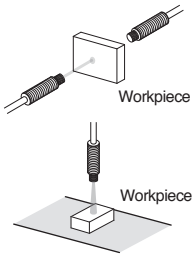

Smart Tuning [Easy Sensitivity Setting]

(1) Detect for Workpiece Presence/Absence

- **2-point Tuning**

1. Press TUNE button with a workpiece in the detection area.



2. Press TUNE button again without a workpiece in the detection area.
Release the button when [2PNt] is displayed.

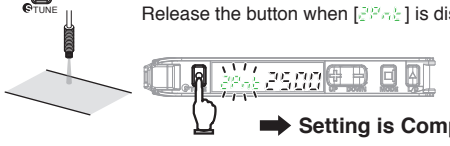

➡ **Setting is Completed**

Incident light level setting:
The larger incident level of the Step 1 and 2 values is adjusted to the power tuning level.
Threshold setting:
Set to the middle between the Step 1 and 2 incident light levels.

CHECK! Step 1 and Step 2 can be reversed.

(2) Enhance Durability of the Fiber Head against Dust and Dirt

- **Maximum Sensitivity Tuning**

1. Hold TUNE button for 3 seconds or longer with/without workpiece as shown below.
Release the button when [FULL] is displayed.

Through-beam: Workpiece is present

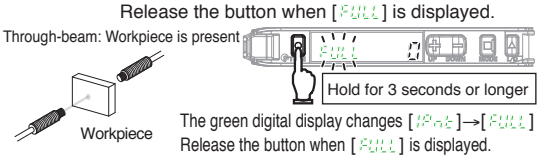

The green digital display changes [tPnt]→[FULL]
Release the button when [FULL] is displayed.

Reflective: Workpiece is absent



➡ **Setting is Completed**

Incident light level setting:
The incident level in Step 1 is adjusted to "0".
Threshold setting:
The value is set to approx. 7% of the incident light level of 1.

CHECK! However, the Sensor becomes more susceptible to the influence of background objects.

(3) Adjust for Moving Workpiece without Stopping Line

- **Full Auto Tuning**

1. Hold the TUNE button without the presence of a workpiece, and pass the workpiece through while [tPnt]→[FULL]→[RUNn] is displayed in green digital.

(Keep holding the TUNE button while the workpiece passes through, and hold 7 seconds or longer until [RUN☆] is displayed in green digital. After the workpiece passes through, release your finger from the TUNE button.)

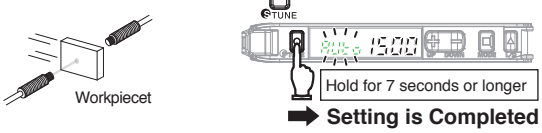

➡ **Setting is Completed**

Incident light level setting: Adjust the max. incident light level on Step 1 as the power tuning level.
Threshold setting: Set to the middle between max. and min. incident light levels on Step 1.

Basic Settings

(4) Determine Workpiece Position

- **Position Tuning**

1. Turn ON power tuning in SET mode.

Refer to "Detailed Settings"

2. Press STUNE button without a workpiece in the area.



3. Place the workpiece at the desired position and hold STUNE button.



The green digital display changes [ ]→[ ].

Setting is Completed

Incident light level setting: The Step 3 incident level is adjusted to half the power tuning level.
Threshold setting: Set to the same value as the Step 3 incident level.

(5) Detect Transparent or Small Workpiece (Set Threshold by incident light level percentage)

- **Percentage Tuning**

1. Turn ON Percentage Tuning in SET mode.

Refer to "Detailed Settings"

2. Press STUNE button without a workpiece in the area.



Setting is Completed

Incident light level setting:
The Step 2 incident light level is adjusted to the power tuning level.
Threshold setting:
Set to the value obtained by [Incident Level at Step 2 × (1 + Percentage Tuning Level)].

CHECK! No Smart Tuning other than Power Tuning can be used if Percentage Tuning is set.

(6) Restore from the Incident Level Changed due to Dust and Dirt

- **Power Tuning**

1. Hold STUNE and MODE buttons for 1 second or longer without a workpiece in the area.



Setting is Completed

Incident light level setting: The Step 1 incident level is adjusted to the power tuning level.
Threshold setting: Not changed.

CHECK! Perform the procedure with a workpiece in the area for reflective model setting. If the setting is made after position tuning, set both the through-beam model and reflective model with a workpiece.

Refer to " • Smart Tuning Error " for error displays.

- **Smart Tuning Error**

Error / Display / Cause	Error Origin Tuning Type	Remedy
Near Error nEAr Err The light level difference between Points 1 and 2 are extremely small.	2-point Tuning Full Auto Tuning	• Change the detection function mode to a slower response time mode. • Reduce the distance between the emitter and receiver. (Through-beam) • Place the Fiber Head closer to the sensing object. (Reflective)
Over Error ouEr Err Incident light level is too high.	All	• Use a thin-diameter fiber. • Widen the emitter and receiver distance. (Through-beam) • Distance the Fiber Head from the sensing object. (Reflective)
Low Error Lo Err Incident light level is too low.	Tuning other than Maximum Sensitivity Tuning	• Reduce the distance between the emitter and receiver. (Through-beam) • Place the Fiber Head closer to the sensing object. (Reflective)

Refer to " Detailed Settings " to change the power tuning level.

Channel switching

(Models with 2 Outputs: E3NX-FA21,E3NX-FA51,E3NX-FA7TW, E3NX-FA9TW and E3NX-FA54TW)

■ The OUT selection indicators and the settings will change.

1. Press STUNE button for 1 second.
2. The OUT selection indicators (OUT1/OUT2) switch.

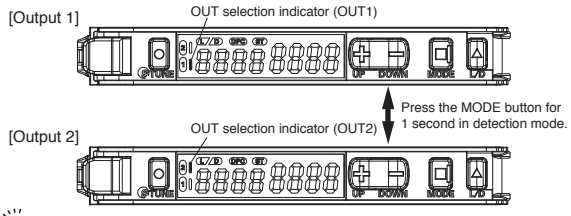

CHECK! In the detailed settings, the OUT selection indicators will each light whenever the output (OUT1/OUT2) is set.

Minute Adjustment of Threshold Level

1. Press UP/DOWN button to adjust the threshold level.

CHECK! Hold the key for high-speed level adjustment.

Convenient Setting Features

(1) Stable Detection Regardless of Incident Level Change due to Dust and Dirt

- **DPC Function (Use of the function with Through-beam model or Retro-reflective model is recommended)**

1. Perform Smart Tuning.

Refer to "Smart Tuning"
Refer to "Power Tuning"

2. Set the DPC function ON in SET mode.

Refer to "Detailed Settings" .

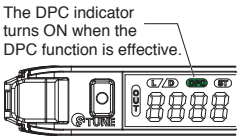

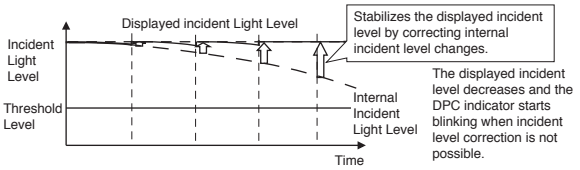

(2) Reset Settings

- **Setting Reset**

Initializes all the settings by returning them to the factory defaults.

1. Hold STUNE button and then hold L/D button for 3 seconds or longer.



2. Select [ ] in UP/DOWN and press MODE button.
3. Select [ ] in UP/DOWN and press MODE button.

(3) Save or Read Settings

1. Hold STUNE button and then hold L/D button for 3 seconds or longer.

- **User Save Function**

Saves the current settings.

2. Select [SAvE] in UP/DOWN and press MODE button.
3. Select [SAvE YES] in UP/DOWN and press MODE button.

- **User Reset Function**

Reads out the saved settings.

2. Select [rSt] in UP/DOWN and press MODE button.
3. Select [rSt USEr] in UP/DOWN and press MODE button.

(4) Prevent Mistake-operation

- **Key Lock Function**

Disables all button operations. [LoC on] is displayed when the button is pressed.

■ **Enable/Cancel (This procedure)**



* Press either of UP/DOWN.

Convenient Setting Features

(5) Reset Incident Light Level to "0"

- **Zero Reset Function**

Changes the incident light level to "0".
The threshould level is also shifted accordingly.
The lower limit of the threshold is –1,999.

■ Enable



■ Cancel



(6) Producing an Output When the Incident Level Is within an Area

- **Area Detection Mode**

1. Select [SET Mode] – [OUT1 Mode] – [Area Detection Mode]. Press MODE button for at least 3 seconds to leave the SET mode.
2. Press MODE button in [Detection Mode] to display OUT1 HIGH and OUT 1 LOW. "HIGH" and "LOW" will appear on the green digital display.
3. Press S-TUNE button for the high and low thresholds to execute smart tuning.

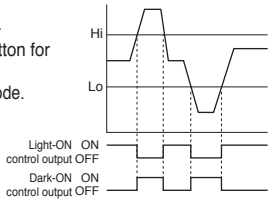

CHECK! Percentage Tuning: The thresholds are set as follows:
High: Incident level from step 3 + Incident level from step 3 × Percentage tuning level
Low: Incident level from step 3 – Incident level from step 3 × Percentage tuning level

(7) Monitoring the Incident Level for Sensing Objects Passing at High Speed

- **Change Finder**

1. Select [SET Mode]→[Digital Display] to set [d SP CFd].
2. Press MODE button for 3 seconds or longer to leave the SET mode.
3. Send a workpiece past the Fiber Unit.
4. The maximum and minimum incident levels will be displayed for 0.5 seconds when the workpiece passes.

CHECK! The maximum value and minimum value are displayed with Light-ON and Dark-ON respectively.



(8) Determining If the Workpiece Can Be Detected

- **Solution Viewer**

1. Press MODE button and L/D button together for 3 seconds or longer to set [SoLU on].
   To clear the setting, press MODE button and L/D button together for 3 seconds or longer to set [SoLU oFF].
2. Send a workpiece past the Fiber Unit.
3. Displaying the Passing Time and Difference in Incident Levels.
4. Press MODE button and L/D button together for 3 seconds or longer to leave SET mode.

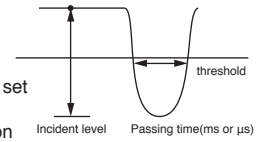



Detailed Settings

Hold MODE button for 3 seconds or longer to enter SET mode.
SET mode provides the function settings described hereafter. The initial display shown after transition from one function to another represents the factory default.

CHECK! The OUT selection indicators shows items for output 1 or output 2 individually for each output.



Function Setting	Description

1. Function Selection

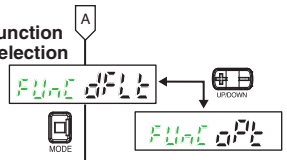

Changing Functions to Set in SET mode

[oPt]: Functions 1. to 5. can be set
[oPt]: Functions 1. to 16. can be set.

2. Detection Function

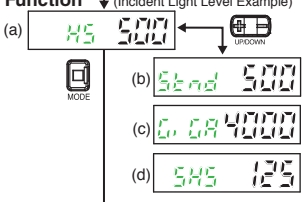

Changing Light Level and Response Time

	Detection Function	Response Time	Light Level
(a)	HS High-speed mode	250 µs	1(Standard)
(b)	STND Standard mode	1ms	1 time
(c)	GIGA Giga mode	16ms	8 times
(d)	SHS Super-high-speed mode*	30µs	0.25 times

Smart Tuning is canceled if the detection mode is changed.

* The communication and mutual interference prevention functions are disabled when the detection mode is set to super-high-speed mode. The response time for models with 2 outputs is 32 µs

CHECK! The incident light level in SET mode is a reference value. It may be changed when switched to detection mode.

3. DPC Function



Stable Detection Regardless of Incident Light Level Change

Refer to "Convenient Setting Features"

4. Timer Function

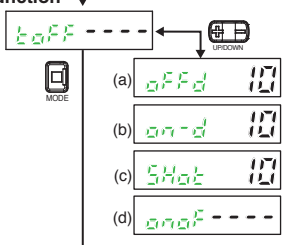

Setting Output Timer

(Settings are displayed for both outputs for models with 2 outputs.)

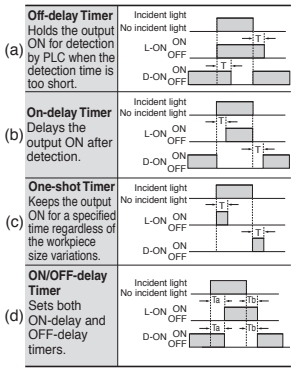

A timer value can be set after pressing MODE button when a timer menu (other display than "----") is displayed.
Use UP/DOWN button to set the time.
(1 to 9999 ms in 1 ms steps; the initial value: 10 ms)

5. Power Tuning Level

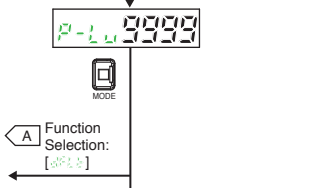

Changing the Target Incident Light Level (Power Tuning Level)

Use UP/DOWN button to set the power tuning level.
[50 to 9999 in 1 steps; the initial value: 9999]

Refer to "Convenient Setting Features"

6.BANK Switching

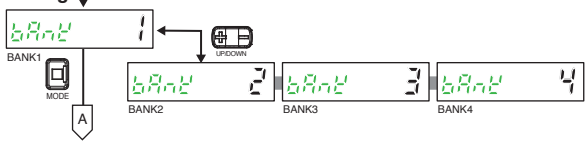

Saving Settings in Each Bank

Function Setting	Description
7. Power Tuning ON/OFF Setting	**Setting ON or OFF Incident Level Adjustment when Tuning**
8. Percentage Tuning	**Detecting Transparent or Small Workpiece** Press MODE button in [PEr on] menu, then use UP/DOWN button to set the percentage tuning level. (–99% to 99% in 1% steps; the initial value: –10%) Refer to "Smart Tuning"
9. Output 1 Mode	**Changing the Output Mode for Output 1**
10. Output 2 Mode	**Changing the Output Mode for Output 2** Alarm Output Mode: Press MODE button and then set the alarm output level with UP/DOWN button. (0 to 100 P in 1-P increments, default: 50 P) ON-delay of 300 ms is applied. Error Output Mode: An output is made when a DPC error, EEPROM error, or Load short circuit detection error occurs.
11. External Input	**Changing the Type of External Input** The closed-circuit input time for tuning is the same as the key input time.
12. Digital Display	**Changing Digital Display in RUN Mode for Specific Purpose**

Power Tuning ON Setting / Power Tuning OFF Setting / Normal Detection Mode / Area Detection Mode / Alarm Output Mode / Error Output Mode / Input-OFF / Tuning / Power Tuning / laser OFF / Zero Reset / BANK Switching OFF : 1, ON : 2

	First point	Second point
2-point Tuning	Less than 3 seconds	Less than 3 seconds
Maximum Sensitivity Tuning	3 seconds min. Less than 7 seconds	—
Full Auto Tuning	7.0 s or longer	—
Position Tuning	Less than 3 seconds	3 seconds or longer
Power/ percentage tuning	25 ms min.	—

	Enable	Cancel
Zero reset	Less than 3 seconds	3 seconds min.

Enable/Cancel of Zero reset is the timing when input is turned off.

Checking a Margin Against Threshold

(a) Threshold / Light Level Ratio — The ratio of the incident light level to the threshold is displayed in white digital figures.

Setting Threshold using a Small or Fast Moving Workpiece

(b) Peak Light Level / Bottom Light Level — Holds and displays the minimum value of the peak of the light incident and the maximum value of the bottom of the light interruption.

Setting for Intuitive Analog Display

(c) Threshold 120% 100% 80% — Displays the current level in the 80 to 120% range against the threshold value (100%).

Adjusting Optical Axis

(d) Peak Light Level / Light Level — Holds the peak incident light level and displays it in green digital figures.

Checking the Channel No. in Group Mounting

(e) Ch. No. / Light Level — Checking the Channel No. in Group Mounting.

Checking the Light Level of Fast Moving Workpiece

(f) Threshold / Light level when the workpiece passes — Light level when the workpiece passes is displayed in white digital figures for 0.5 seconds.

Function Setting	Description
13. Inverted Display	**Mounting Amplifier in Inverted Direction** Inverts the display upside down. The digital display shows the threshold value in green, and light incident level in white.
14. Eco Function	**Saving Power Consumption** ECo on Indicators (Green and White digital displays) turn OFF in approx. 10 seconds after a key operation. ECo Lo Indicators (Green and White digital displays) turn ON with low brightness in approx. 10 seconds after a key operation.
15. Hysteresis width	**Changing the Hysteresis Width** The hysteresis width is set to a default value. The hysteresis width is set so that the judgement output is stable near the threshold value. Be sure to check the stability of outputs as there is a possibility of chattering. Press MODE button with [HUSt] displayed and then set the hysteresis width with UP/DOWN button. (0 to 9999)
16. Using the External Input to Write to EEPROM	**Turning ON and OFF Writing to EEPROM** The settings thathave been changed by an external input with [oFF] will not be overwritten to prevent EEPROM from reaching its lifespan (1,000,000 writings).

Standard Setting / User Setting / User Setting (Displayed for models with 2 outputs.) / ON / OFF

Ratings and Specifications

Item / Models	E3NW-ECT	E3NW-DS
Connectable Sensor Amplifier Units	N-Smart Smart Fiber Amplifier Unit: E3NX-FA0 Color Fiber Amplifier Unit: E3NX-CA0 *1 Smart Laser Amplifier Unit: E3NC-LA0 Smart Laser Amplifier Unit (CMOS type): E3NC-SA0 Contact-Type Smart Amplifier Unit: E9NC-TA0 *2	
Power supply voltage	24VDC (20.4 to 26.4 VDC)	
Power and current consumption	2.4 W max. (Not including the power supplied to Sensor.) 100 mA max. (Not including the current supplied to Sensor.)	2 W max. (Not including the power supplied to Sensor.) 80 mA max. (Not including the current supplied to Sensor.)
Indicators	L/A IN Indicator (Green), L/A OUT Indicator (Green), PWR Indicator (Green), RUN Indicator (Green), ERROR Indicator (Red),and SS (Sensor Status) indicator (Green/Red)	RUN Indicator (Green), and SS (Sensor Status) indicator (Green/Red)
Vibration resistance (destruction)	10 to 60 Hz with a 0.7-mm double amplitude, 60 to 150 Hz 50 m/s² for 1.5 hours each in X, Y, and Z directions	
Shock resistance (destruction)	Destruction: 150 m/s² for 3 times each in X, Y, and Z directions	
Ambient temperature range	Operating: 0 to 55°C, *3 Storage: –30 to 70°C (with no icing or condensation)	
Ambient humidity range	Operating and storage: 25% to 85% (with no condensation)	
Maximum connectable Sensors	30 *4	10
Maximum connectable Distributed Sensor units	8	—
Insulation resistance	20 MΩ min. (at 500 VDC)	
Dielectric strength	500 VAC 50/60Hz 1 min	
Mounting method	35-mm DIN track-mounting	
Weight (packed state/unit only)	Approx. 185 g/Approx. 95 g	Approx. 160 g/Approx. 40 g
Materials	Polycarbonate	
Accessories	Power supply connector,Communications connector for E3NW-DS, DIN Track End Plates (2) and Instruction manual	Power supply/communications connector, DIN Track End Plates (2), Ferrite cores (2) and Instruction manual

*1. The E3NX-CA0 is supported for firmware version 1.06 or higher (Sensor Communications Units manufactured in June 2016 or later).
*2. The E9NC-TA0 is supported for firmware version 1.03 or higher (Sensor Communications Units manufactured in July 2014 or later).
*3. Temperature Limitations Based on Number of Connected Amplifier Units:
Groups of 1 or 2 Amplifiers: 0 to 55°C, Groups of 3 to 10 Amplifiers: 0 to 50°C, Groups of 11 to 16 Amplifiers: 0 to 45°C, Groups of 17 to 30 Amplifiers: 0 to 40°C
*4. A maximum total of 30 Sensors can be connected to a Sensor Communications Unit and Distributed Sensor Units.

Communications Specifications

Item	Specifications
Protocol	EtherCAT
Modulation	Baseband
Baud rate	100 Mbps
Physical layer	100Base-TX (IEEE802.3u)
Topology	Daisy chain
Communications media	STP category 5 or higher
Communications distance	100 m max. between nodes
Noise immunity	Compliant with IEC 61000-4-4, 1 kV min.
Node address setting method	Set the decimal rotary switches or software *1
Node address range	000 to 192 *2

*1. The software setting is used when the node address setting switches are set to 0.
*2. The range depend on the EtherCAT master that is used. Refer to the E3NW-ECT EtherCAT Sensor Communications Unit Operation Manual for details.

CompoNet-compatible and CC-Link-compatible products are also available. Refer to your OMRON website for details.

Dimensions

(Unit: mm)
Tolerance class IT16 applies to demmensions in this date sheet unless otherwise specified.

Sensor Communications Unit

77-A **E3NW-ECT**

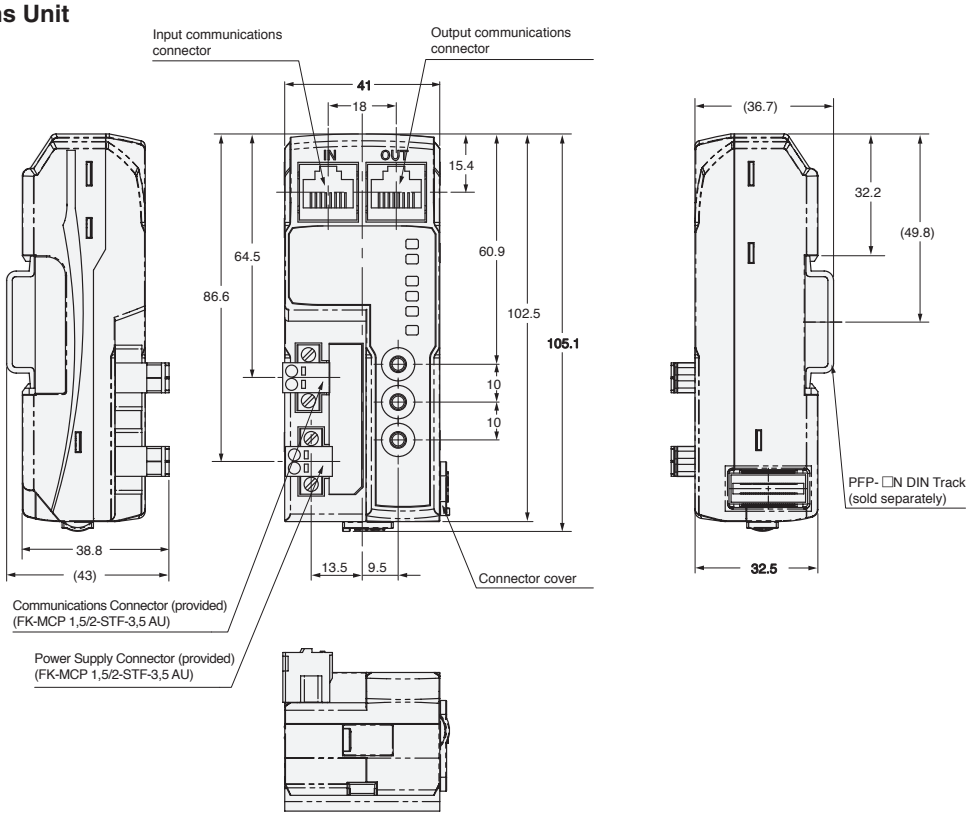

Distributed Sensor Unit

77-B **E3NW-DS**

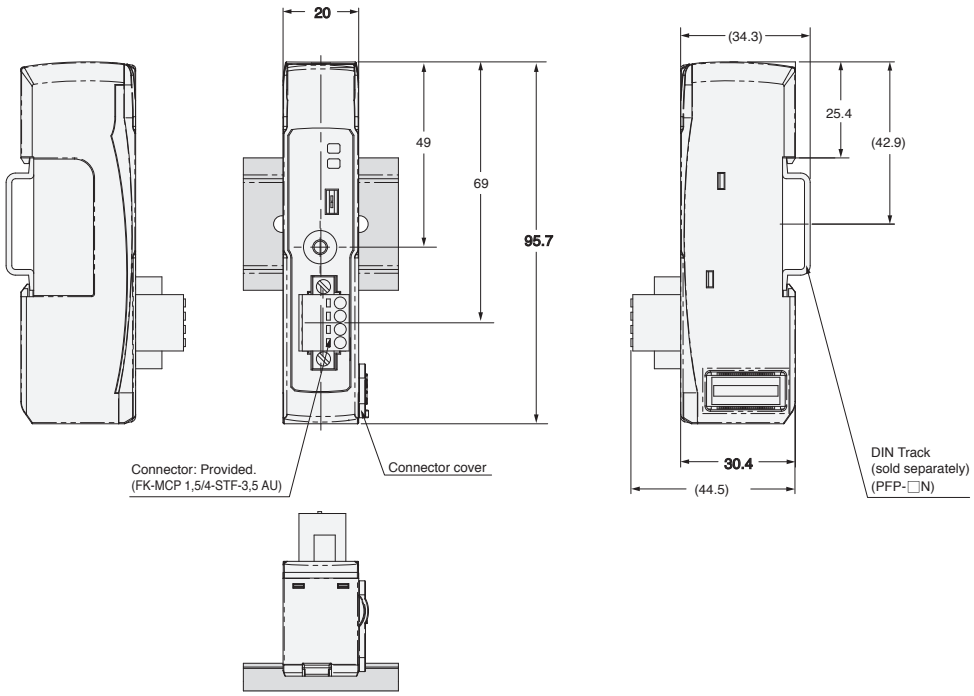

E3X-HD Fiber Amplifier Units and Related Products

Fiber Amplifier Units E3X-HD Series

Type	Appearance	Connecting method	Models		Ratings and Specifications	Dimensions
			NPN output	PNP output		
Standard models		Pre-wired (2 m)	**E3X-HD11 2M**	**E3X-HD41 2M**	Page 80	Page 80 **80-A**
		Wire-saving Connector	**E3X-HD6**	**E3X-HD8**		Page 81 **81-A**
		M8 Connector	**E3X-HD14**	**E3X-HD44**		Page 81 **81-B**
Model for Sensor Communications Unit		Connector for Sensor Communications Unit	**E3X-HD0**			Page 81 **81-C**

Sensor Communications Unit

Communication method	Appearance	Applicable Fiber Amplifier Model	Models	Ratings and Specifications	Dimensions
CompoNet		E3X-HD0 E3X-MDA0	**E3X-CRT**	Page 86	Page 87 **87-A**
EtherCAT			**E3X-ECT**		Page 87 **87-B**

Accessories (sold separately)

Wire-saving connectors (Required for models for Wire-saving Connectors.)

Connectors are not provided with the Fiber Amplifier Unit and must be ordered separately. * Protective stickers: provided.

Type	Appearance	Cable length	Number of conductors	Models	Ratings and Specifications	Dimensions
Master Connector		2m	3	E3X-CN11	Page 88	Page 88 88-A
Slave Connector			1	E3X-CN12		Page 88 88-B

Sensor I/O Connectors (Required for models with M8 Connectors.)

Connectors are not provided with the Fiber Amplifier Unit and must be ordered separately. * Protective stickers: provided.

Appearance	Cable length	Number of conductors	Models	Ratings and Specifications	Dimensions
Straight	2m	4	XS3F-M421-402-A	Page 88	Page 88 88-C
	5m		XS3F-M421-405-A		
L-shaped	2m		XS3F-M422-402-A		Page 88 88-D
	5m		XS3F-M422-405-A		

Mounting Bracket

A Mounting Bracket is not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Model	Quantity	Dimensions
	E39-L143	1	Page 89 89-A

DIN Track

A Din Track is not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Type	Models	Quantity	Dimensions
	Shallow type, total length: 1 m	PFP-100N	1	Page 89 89-B
	Shallow type, total length: 0.5 m	PFP-50N		
	Deep type, total length: 1 m	PFP-100N2		Page 89 89-C

End Plate

Two End Plates are provided with the Sensor Communications Unit.
End Plates are not provided with the Fiber Amplifier Unit and must be ordered separately as required.

Appearance	Model	Quantity	Dimensions
	PFP-M	1	Page 89 89-D

Ratings and Specifications

Item		Type	Standard			Model for Sensor Communications Unit *1
		NPN output	E3X-HD11	E3X-HD6	E3X-HD14	E3X-HD0
		PNP output	E3X-HD41	E3X-HD8	E3X-HD44	
		Connecting method	Pre-wired	Wire-saving Connector *2	M8 Connector	Connector for Sensor Communications Unit
Light source (wavelength)			Red, 4-element LED (625 nm)			
Power supply voltage			12 to 24 VDC ±10%, ripple (P-P) 10% max.			Supplied from the connector through the Sensor Communications Unit
Power consumption	Normal mode		720 mW max. (Current consumption: 30 mA max. at 24 VDC, 60 mA max. at 12 DVC)			
	Eco ON		530 mW max. (Current consumption: 22 mA max. at 24 VDC, 44 mA max. at 12 VDC)			
	Eco LO		640 mW max. (Current consumption: 26 mA max. at 24 VDC, 53 mA max. at 12 VDC)			—
Control output			Load power supply voltage: 26.4 VDC max., open-collector output Load current: Groups of 1 to 3 Amplifier Units: 100mA max., Groups of 4 to 16 Amplifier Units: 20mA max. Residual voltage: At load current of less than 10 mA: 1 V max., At load current of 10 to 100 mA: 2 V max. OFF current: 0.1mA max.			—
Protection circuits			Power supply reverse polarity protection, output short-circuit protection and output reverse polarity protection			Power supply reverse polarity protection and output short-circuit protection
Response time	Super-high-speed mode (SHS) *4		NPN outputs: Operate or reset: 50 µs PNP outputs: Operate or reset: 55 µs			—
	High-speed mode (HS)		Operate or reset: 250 µs (default setting)			
	Standard mode (Stnd)		Operate or reset: 1 ms			
	Giga-power mode (GIGA)		Operate or reset: 16 ms			
Maximum connectable Units			16 units			with E3X-CRT: 16 units with E3X-ECT: 30 units *3
Mutual interference prevention			Possible for up to 10 units (optical communications sync) *4			
Auto power control (APC)			Always ON			
Other functions			Power tuning, differential detection, DPC, timer (OFF-delay, ON-delay, or one-shot), zero reset, resetting settings, and Eco mode			
Ambient Illumination (Receiver side)			Incandescent lamp: 20,000 lx max., Sunlight: 30,000 lx max.			
Ambient temperature range			Operating: Groups of 1 to 2 Amplifier Units: –25 to 55°C, Groups of 3 to 10 Amplifier Units: –25 to 50°C, Groups of 11 to 16 Amplifier Units: –25 to 45°C Storage: –30 to 70°C (with no icing or condensation)			Operating: Groups of 1 to 2 Amplifier Units: 0 to 55°C, Groups of 3 to 10 Amplifier Units: 0 to 50°C, Groups of 11 to 16 Amplifier Units: 0 to 45°C, Groups of 17 to 30 Amplifier Units: 0 to 40°C Storage: –30 to 70°C (with no icing or condensation)
Ambient humidity range			Operating and storage: 35% to 85% (with no condensation)			
Insulation resistance			20 MΩ min. (at 500 VDC)			
Dielectric strength			1,000 VAC at 50/60 Hz for 1 min			
Vibration resistance (destruction)			10 to 55 Hz with a 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions			10 to 150 Hz with a 0.7-mm double amplitude for 80 minutes each in X, Y, and Z directions
Shock resistance (destruction)			500 m/s² for 3 times each in X, Y, and Z directions			150 m/s² for 3 times each in X, Y, and Z directions
Degree of protection			IEC 60529 IP50 (with Protective Cover attached)			—
Weight (packed state/unit only)			Approx. 105 g/Approx. 65 g	Approx. 60 g/Approx. 20 g	Approx. 70 g/Approx. 25 g	Approx. 65 g/Approx. 25 g
Materials	Case		Polycarbonate (PC)			Heat-resistant ABS (connector: PBT)
	Cover		Polycarbonate (PC)			
	Cable		PVC			
Accessories			Instruction Manual			

*1.The E3X-ECT EtherCAT Sensor Communications Unit and the E3X-CRT CompoNet Sensor Communications Unit can be used.
*2. Use either the E3X-CN11 (master connector, 3 conductors) or the E3X-CN12 (slave connector, 1 conductor).
*3. When connected to an OMRON NJ-series Controller.
*4. The communications function and matual interference prevention function are disabled when the detection mode is set to Super-high-speed mode (SHS).
When including E3X-DA-S with activated power tuning the maximum number of mutual interference prevention is up to 6.
When including E3X-MDA with activated power tuning the maximum number of mutual interference prevention is up to 5.

Dimensions

(Unit: mm)
Tolerance class IT16 applies to demmensions in this date sheet unless otherwise specified.

Pre-wired Amplifier Units

80-A **E3X-HD11**
E3X-HD41

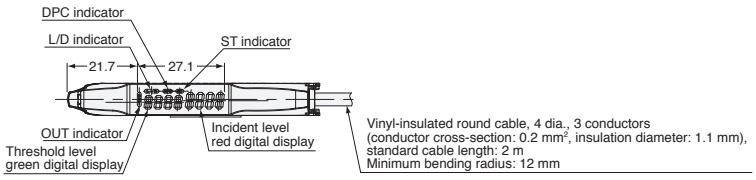

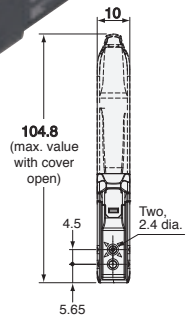

DIN track mounting

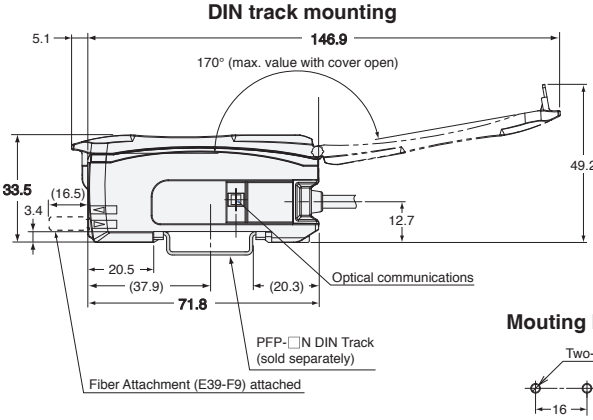

With Mounting Braket Attached

Note: When using E39-L143 Mounting Brackets, there will be small gaps between the Amplifier Units if they are mounted side by side.

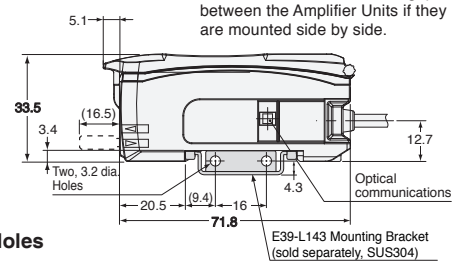

Mouting Holes



Amplifier Units with Wire-saving Connectors

81-A **E3X-HD6**
E3X-HD8

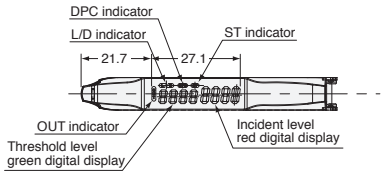

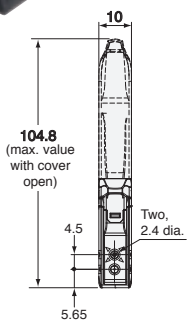

DIN track mounting

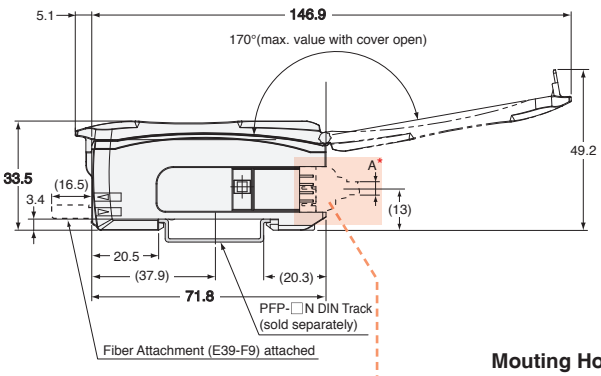

With Mounting Braket Attached

Note: When using E39-L143 Mounting Brackets, there will be small gaps between the Amplifier Units if they are mounted side by side.

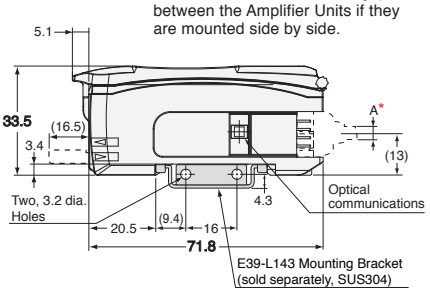

Mouting Holes



* The cable diameters are as follows:

E3X-CN11 (3 conductors)	4.0 dia.
E3X-CN12 (1 conductor)	2.6 dia.

Amplifier Units with M8 Connectors

81-B **E3X-HD14**
E3X-HD44

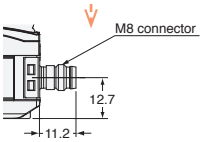

The dimensions are the same as the E3X-HD6/8, except for the connector.

Amplifier Unit with Connector for Sensor Communications Unit

81-C **E3X-HD0**

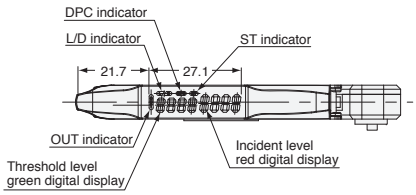

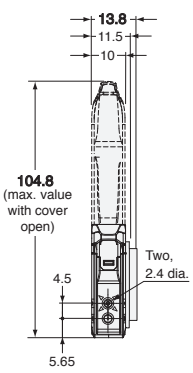

DIN track mounting

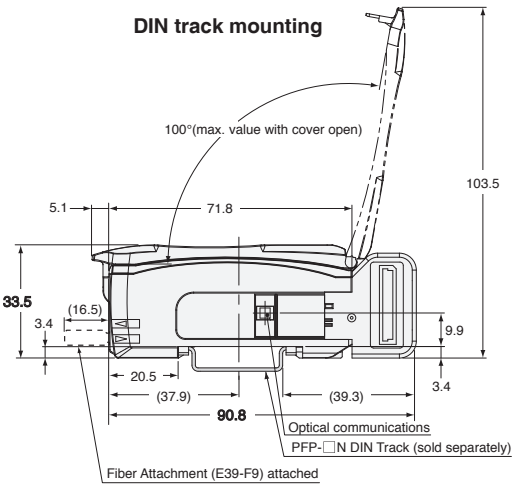

I/O Circuit Diagrams

NPN Output

Models	Operation mode	Timing chart	L/D indicators	Output circuit
E3X-HD11 E3X-HD6 E3X-HD14	Light-ON	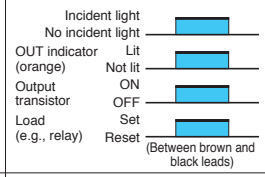	L lit.	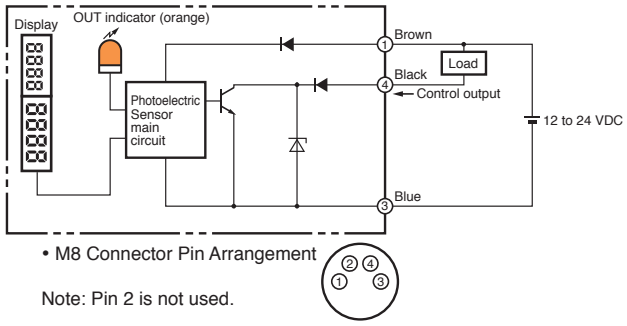
	Dark-ON	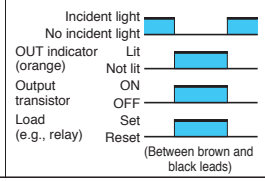	D lit.	• M8 Connector Pin Arrangement Note: Pin 2 is not used.

PNP Output

Models	Operation mode	Timing chart	L/D indicators	Output circuit
E3X-HD41 E3X-HD8 E3X-HD44	Light-ON	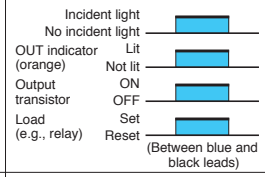	L lit.	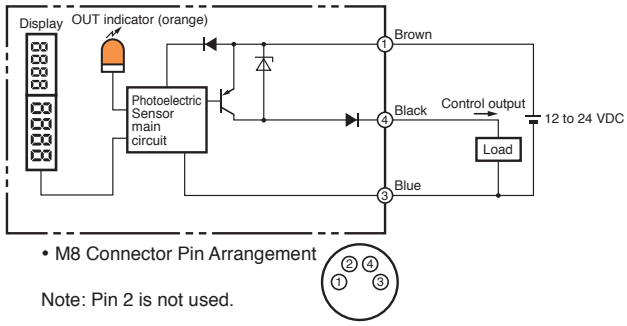
	Dark-ON	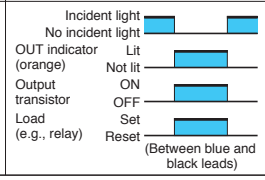	D lit.	• M8 Connector Pin Arrangement Note: Pin 2 is not used.

ON delay	OFF delay	One-shot
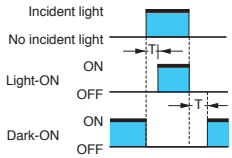	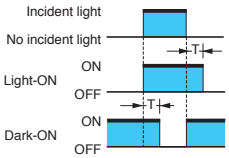	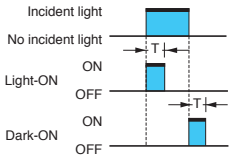

Note: Timing Charts for Timer Settings (T: Set Time)

Plug (Sensor I/O Connector)

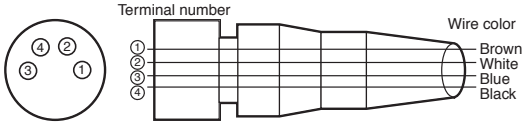

XS3F-M421-402-A
XS3F-M421-405-A

XS3F-M422-402-A
XS3F-M422-405-A

Wire color	Connection pin	Application
Brown	1	Power supply (+V)
White	2	---
Blue	3	Power supply (0 V)
Black	4	Output

Note: Pin 2 is not used.

Nomenclature

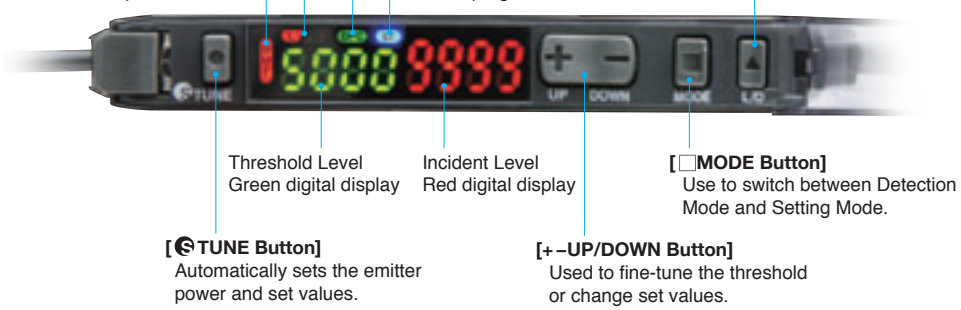

Operating Procedures

Basic Settings

Output switching

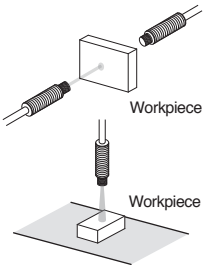

1. Press L/D button.

Through-beam:
Set to "Dark ON" to turn the output ON with a workpiece in the detection area.
[L/D Indicator] turns D ON.

Reflective:
Set to "Light ON" to turn the output ON with a workpiece in the detection area.
[L/D Indicator] turns L ON.

Smart Tuning [Easy Sensitivity Setting]

(1) Detect for Workpiece Presence/Absence

- **2-point Tuning**

1. Press ⊙ TUNE button with a workpiece in the detection area.

2. Press ⊙ TUNE button again without a workpiece in the detection area.

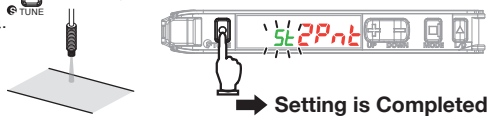

➡ **Setting is Completed**

Incident light level setting:
The larger incident level of the Step 1 and 2 values is adjusted to the power tuning level.
Threshold setting:Set to the middle between the Step 1 and 2 incident light levels.

CHECK! Step 1 and Step 2 can be reversed.

(2) Enhance Durability of the Fiber Head against Dust and Stain

- **Maximum Sensitivity Tuning**

1. Hold ⊙ TUNE button for 3 seconds or longer with/without workpiece as shown below.
Release the button when [St FULL] is displayed.

Through-beam: Workpiece is present

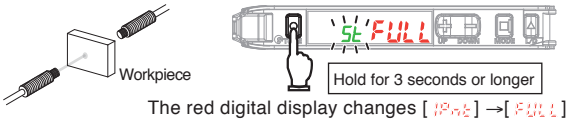

The red digital display changes [1Pnt] →[FULL]

Reflective: Workpiece is absent

➡ **Setting is Completed**

Incident light level setting:
The incident level in Step 1 is adjusted to "0".
Threshold setting:
The value is set to approx. 7% of the incident light level of 1.
If the incident light level of 1 is smaller during long distance detection, the minimum value by which an output is correctly turned ON will be set.

(3) Adjust for Moving Workpiece without Stopping Line

- **Full Auto Tuning**

1. Hold the ⊙ TUNE button without the presence of a workpiece, and pass the workpiece through while [1Pnt] → [FULL] → [AUto] is displayed in red digital. (Keep holding the ⊙ TUNE button while the workpiece passes through, and hold 7 seconds or longer until [AUto] is displayed in red digital. After the workpiece passes through, release your finger from the ⊙ TUNE button.)

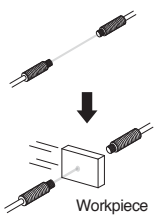

➡ **Setting is Completed**

Incident light level setting:
Adjust the max. incident light level on Step 1 as the power tuning level.
Threshold setting:
Set to the middle between max. and min. incident light levels on Step 1.

(4) Determine Workpiece Position

- **Position Tuning**

1. Press ⊙ TUNE button without a workpiece in the area.



2. Place the workpiece at the desired position and hold ⊙ TUNE button.



The red digital display changes [2Pnt] → [PoS].

➡ **Setting is Completed**

Incident light level setting:
The Step 2 incident level is adjusted to half the power tuning level.
Threshold setting:Set to the same value as the Step 2 incident level.

(5) Detect Transparent or Small Workpiece
(Set Threshold by incident light level percentage)

- **Percentage Tuning**

1. Turn ON Percentage Tuning in SET mode.

Refer to "Detailed Settings".

2. Press ⊙ TUNE button without a workpiece in the area.



➡ **Setting is Completed**

Incident light level setting:
The Step 2 incident light level is adjusted to the power tuning level.
Threshold setting:Set to the value obtained by [Incident Level at Step 2 × Percentage Tuning Level + Incident Level at Step 2].

CHECK! No Smart Tuning other than Power Tuning can be used if Percentage Tuning is set.

- **Smart Tuning Error**

Error / Display / Cause	Error Origin Tuning Type	Remedy
Near Error nEAr Err The light level difference between Points 1 and 2 are extremely small.	2-point Tuning Full Auto Tuning Positioning Tuning	• Change the detection function mode to a slower response time mode. • Reduce the distance between the light emitting and light receiving surfaces. (Through-beam) • Place the Fiber Head closer to the sensing object. (Reflective)
Over Error ouEr Err Incident light level is too high.	All	• Enhance the power tuning level. • Use a thin-diameter fiber. • Widen the emitter and receiver distance (Through-beam) • Distance the Fiber Head from the sensing object(Reflective)
Low Error Lo Err Incident light level is too low.	Tuning other than Maximum Sensitivity Tuning	• Decrease the power tuning level. • Reduce the distance between the light emitting and light receiving surfaces. (Through-beam) • Place the Fiber Head closer to the sensing object. (Reflective)

CHECK! The adjustment range of smart tuning is approx. 20 to 1/100 times. When selecting giga mode as detection function, the range will be approx. 2 to 1/100 times due to the large initial value.

Refer to "Detailed Settings" to change the power tuning level.

Minute Adjustment of Threshold Level

1. Press UP/DOWN button to adjust the threshold level.

CHECK! Hold the key for high-speed level adjustment.

Convenient Setting Features

(1) Restore from the Incident Level Changed due to Dust and Dirt

- **Power Tuning**

1. Hold (TUNE) and (MODE) buttons for 1 second or longer without a workpiece in the area.

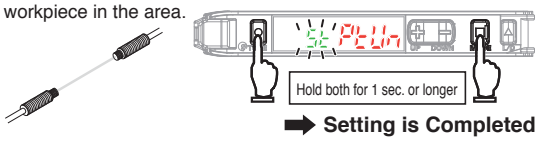

➡ **Setting is Completed**

Incident light level setting:
The Step 1 incident level is adjusted to the power tuning level.
Threshold setting:
Not changed. If the value is low, it will be set to the minimum value in which an output is turned ON/OFF correctly.

CHECK! Perform the procedure with a workpiece in the area for reflective model setting. If the setting is made after position tuning, set both the through-beam model and reflective model with a workpiece.

Refer to "●Smart Tuning Error" for error displays.

(2) Stable Detection Regardless of Incident Level Change due to Dust and Dirt

- **DPC Function (Use of the function with Through-beam model or Retro-reflective model is recommended)**

1. Perform Smart Tuning.

Refer to "Smart Tuning"
Refer to "Power Tuning"

The DPC indicator turns ON when the DPC function is effective.



2. Set the DPC function ON in SET mode.

Refer to "Detailed Settings".

CHECK!
- Steps 1 and 2 can be reversed.
- The DPC function will be disabled when a smart tuning error occurs, differential function with maximum sensitivity tuning is performed, or the first incident light level of the positioning tuning is low.
- The incident light level is corrected to the power tuning level to maintain stable threshold and incident light levels. This provides stable detection regardless of the incident level changes caused by dirty sensor head, position error, or temperature changes.

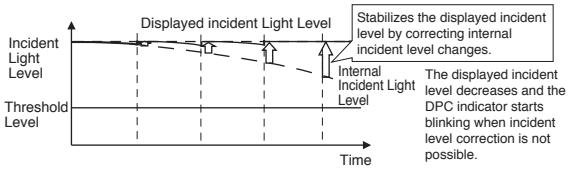

(3) Reset Settings

- **Setting Reset**

Initializes all the settings by returning them to the factory defaults.

1. Hold (TUNE) button and then hold (L/D) button for 3 seconds or longer.



2. Select [rSt] in (UP/DOWN) and press (MODE) button.
3. Select [rSt no yE] in (UP/DOWN) and press (MODE) button.

Item	Initial Value
Threshold Value	55
Control Output	L-ON

* Settings for other functions are returned to the detailed setting initial values.
User-saved settings are retained.
Smart Tuning is canceled.

CHECK! Caution is required; the output is inverted if (L/D) button is pressed first.

(4) Save or Read Settings

1. Hold (TUNE) button and then hold (L/D) button for 3 seconds or longer.

- **User Save Function**

Saves the current settings.

2. Select [SAvE] in (UP/DOWN) and press (MODE) button.
3. Select [SAvE YES] in (UP/DOWN) and press (MODE) button.

- **User Reset Function**

Reads out the saved settings.

2. Select [rSt] in (UP/DOWN) and press (MODE) button.
3. Select [rSt USEr] in (UP/DOWN) and press (MODE) button.

CHECK! Caution is required; the output is inverted if (L/D) button is pressed first.

(5) Prevent Mistake-operation

- **Key Lock Function**

Disables all button operations. [Loc on] is displayed when the button is pressed.

■ **Enable/Cancel (This procedure)**

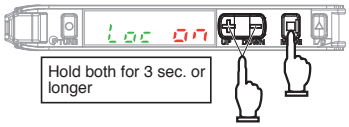

* Press either of UP/DOWN.

(6) Reset Incident Light Level to "0"

- **Zero Reset Function**

Changes the incident light level to "0". The threshold level is also shifted accordingly.

■ **Enable**



■ **Cancel**



CHECK! The zero reset function is canceled when either of the DPC function/differential function/Smart Tuning is performed.

Detailed Settings

Hold MODE button for 3 seconds or longer to enter SET mode.

SET mode provides the function settings described hereafter. The initial display shown after transition from one function to another represents the factory default.

Function Setting	Description

1. Function Selection

Func dFLt ← UP/DOWN → Func oPt

Changing Functions to Set in SET Mode

[dFLt]: Functions 1. to 5. can be set
[oPt]: Functions 1. to 10. can be set.

2. Detection Function

(Incident Light Level Example)

(a) HS 500 ← UP/DOWN → (b) Stnd 500 (c) GIGA 6000 (d) SHS 125

Changing Light Level and Response Time

	Detection Function	Response Time		Light Level
(a)	HS High-speed mode	250 µs		1 (Standard)
(b)	STND Standard mode	1 ms		1 time
(c)	GIGA Giga mode	16 ms		12 times
(d)	SHS Super-high-speed mode*	NPN	50 µs	0.25 times
		PNP	55 µs	

Smart Tuning is canceled if the detection mode is changed.

* The communication and mutual interference prevention functions are disabled when the detection mode is set to super-high-speed mode.

CHECK! The incident light level in SET mode is a reference value. It may be changed when switched to detection mode.

3. DPC Function

dPc oFF ← UP/DOWN → dPc on

Stable Detection Regardless of Incident Light Level Change

Refer to "Convenient Setting Features"

4. Timer Function

toFF ---- ← UP/DOWN → (a) oFFd 10 (b) on-d 10 (c) Shot 10

Setting Output Timer

(a) **Off-delay Timer** Holds the output ON for detection by PLC when the detection time is too short.

(b) **On-delay Timer** Delays the output ON after detection.

(c) **One-shot Timer** Keeps the output ON for a specified time regardless of the workpiece size variations.

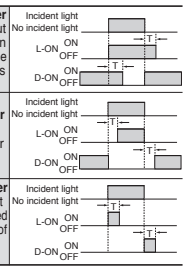

A timer value can be set after pressing MODE button when a timer menu (other display than "----") is displayed.

Use UP/DOWN button to set the time.

(1 to 9999 ms in 1 ms steps; the initial value: 10 ms)

5. Power Tuning Level

P-Lu 9999

Function Selection: [dFLt] (A)

Function Selection: [oPt]

Changing the Target Incident Light Level (Power Tuning Level)

Use UP/DOWN button to set the power tuning level.

[100 to 9999 in 1 steps; the initial value: 9999]

Refer to "Convenient Setting Features"

6. Percentage Tuning

PEr oFF ← UP/DOWN → PEr on

Detecting Transparent or Small Workpiece

Press MODE button in [PEr on] menu, then use UP/DOWN button to set the percentage tuning level.

(–99% to 99% in 1% steps; the initial value: –10%)

Refer to "Smart Tuning"

B

7. Differential Function

diFF oFF ← UP/DOWN → diFF 1 / diFF 2 / diFF 3 / diFF 4 / diFF 5

Detecting Incident Light Level Change

Detects if the absolute value of the incident light level change of the set response time is larger than the threshold value. The display shows the change of the incident light level of the set response time in red.

Differential Setting	Response Time
1	250 µs
2	500 µs
3	1 ms
4	10 ms
5	100 ms

Use UP/DOWN button to specify the response time.

When the differential function is enabled, the detection function setting is disabled.

Smart tunings except power tuning are disabled.

The adjustment range of power tuning is approx. 1 to 1/100 times.

8. Digital Display

disP Std ← UP/DOWN → (a) disP PEr (b) disP P-b (c) disP bAr (d) disP PEAk (e) disP ch

Changing Digital Display in RUN Mode for Specific Purpose

Checking a Margin Against Threshold

(a) Threshold / Light Level Ratio — 2000 1500 — The ratio of the incident light level to the threshold is displayed in red digital figures.

Setting Threshold using a Small or Fast Moving Workpiece

(b) Peak Light Level / Bottom Light Level — 8000 2000 — Holds and displays the minimum value of the peak of the light incident and the maximum value of the bottom of the light interruption.

Setting for Intuitive Analog Display

(c) Threshold 120% 100% 80% — Displays the current level in the 80 to 120% range against the threshold value (100%).

Adjusting Optical Axis

(d) Peak Light Level / Light Level — 3500 3000 — Holds the peak incident light level and displays it in green digital figures.

Checking the Channel No. in Group Mounting

(e) Ch. No. / Light Level — 1ch 3000 — Checking the Channel No. in Group Mounting.

9. Inverted Display

rEu oFF ← UP/DOWN → uo mgi

Mounting Amplifier in Inverted Direction

Inverts the display upside down.

The digital display shows the threshold value in red, and light incident level in green.

10. Eco Function

Eco oFF ← UP/DOWN → Eco on / Eco Lo

Saving Power Consumption

Eco on
Indicators (Green and Red digital displays) turn OFF in approx. 10 seconds after a key operation.

Eco Lo
Indicators (Green and Red digital displays) turn ON with low brightness in approx. 10 seconds after a key operation.

A

Ratings and Specifications

E3X-CRT

Item	Specifications
Communication method	CompoNet Communications
Connectable Sensors	Fiber Sensors: E3X-HD0 and E3X-MDA0 Laser Sensor Head with Separate Digital Amplifier: E3C-LDA0 Proximity Sensor with Separate Amplifier: E2C-EDA0
Communications power supply voltage	14 to 26.4 VDC (Communications Unit draws power from the communications power supply.)
Power and current consumption	2.4 W max. (Not including the power supplied to Sensor.) 100 mA max. at 24 VDC (Not including the current supplied to Sensor.)
Functions	I/O communications, message communications, and Sensor error output
Indicators	MS Indicator (Green/Red), NS indicator (Green/Red), and SS (Sensor Status) indicator (Green/Red)
Vibration resistance	10 to 150 Hz with double amplitude of 0.7 mm, or 50 m/s^2 80 min each in X, Y, and Z directions
Shock resistance	150 m/s^2 3 times each in X, Y, and Z directions
Dielectric strength	500 VAC 50/60Hz 1 min
Insulation resistance	20MΩ min.
Ambient operating temperature	0 to 55°C (with no icing or condensation) * The temperature is limited by the number of connected Fiber Amplifier Units.
Ambient operating humidity	25% to 85% (with no icing or condensation)
Storage temperature	–30 to 70°C (with no icing or condensation)
Storage humidity	25% to 85% (with no condensation)
Mounting method	35-mm DIN track-mounting
Weight (packed state/unit only)	Approx. 220 g/Approx. 95 g
Accessories	Connector cover, DIN track End Plates and Instruction manual

Note. The E3X-CRT has two operating modes: I/O mode 1 and I/O mode 2.
The following table gives the differences between these modes.

	I/O classification	Number of allocated points	Maximum number of interconnected
I/O mode 1	Input Unit	Input: 32	15
I/O mode 2	I/O Unit	Input: 64 Output: 64	16

* Temperature Limitations Based on Number of Connected Fiber Amplifier Units:
Groups of 1 to 2 Amplifier Units: 0 to 55°C,
Groups of 3 to 10 Amplifier Units: 0 to 50°C,
Groups of 11 to 16 Amplifier Units:0 to 45°C

Read the User's Manual for precautions on using this Unit. (E412)

E3X-ECT

Item	Specifications
Communication method	EtherCAT
Connectable Sensors	Fiber Sensor E3X-HD0 and E3X-MDA0 Laser Sensor Head with Separate Digital Amplifier: E3C-LDA0 Proximity Sensor with Separate Amplifier: E2C-EDA0
Power supply voltage	20.4 to 26.4 VDC
Power and current consumption	2.4 W max. (Not including power the supplied to Sensor.) 100 mA max. at 24 VDC (Not including the current supplied to Sensor.)
Functions	DC (synchronous) mode, Free run mode, PDO communications,* 1 SDO communications, Sensor error output
Indicators	L/A IN indicator (Yellow), L/A OUT indicator (Yellow), PWR indicator (Green), RUN indicator (Green), ERROR indicator (Red), and SS (Sensor Status) indicator (Green/Red)
Vibration resistance	10 to 150 Hz with double amplitude of 0.7 mm, or 50 m/s^2 80 min each in X, Y, and Z directions
Shock resistance	150 m/s^2 3 times each in X, Y, and Z directions
Dielectric strength	500 VAC 50/60 Hz 1 min
Insulation resistance	20MΩ min.
Ambient operating temperature	0 to 55°C (with no icing or condensation) * The temperature is limited by the number of connected Fiber Amplifier Units.
Ambient operating humidity	25% to 85% (with no condensation)
Storage temperature	–30 to 70°C (with no icing or condensation)
Storage humidity	25% to 85% (with no condensation)
Mounting method	35-mm DIN track-mounting
Weight (packed state/unit only)	Approx. 220 g/Approx. 95 g
Accessories	Power supply connector, connector cover, DIN track End Plates and Instruction manual

*1. Data Size Assignable to the PDO (Process Data Object):
There is a maximum data size that can be assigned. The maximum size is 36 bytes.
*2. Temperature Limitations Based on Number of Connected Fiber Amplifier Units:
Groups of 1 to 2 Amplifier Units: 0 to 55°C,
Groups of 3 to 10 Amplifier Units: 0 to 50°C,
Groups of 11 to 16 Amplifier Units: 0 to 45°C,
Groups of 17 to 30 Amplifier Units: 0 to 40°C

Read the User's Manual for precautions on using this Unit. (E413)

Dimensions

(Unit: mm)
Tolerance class IT16 applies to demmensions in this date sheet unless otherwise specified.

87-A E3X-CRT

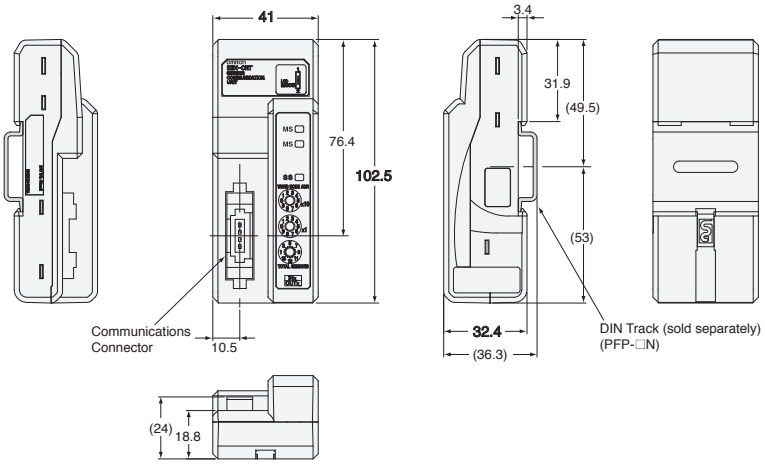

87-B E3X-ECT

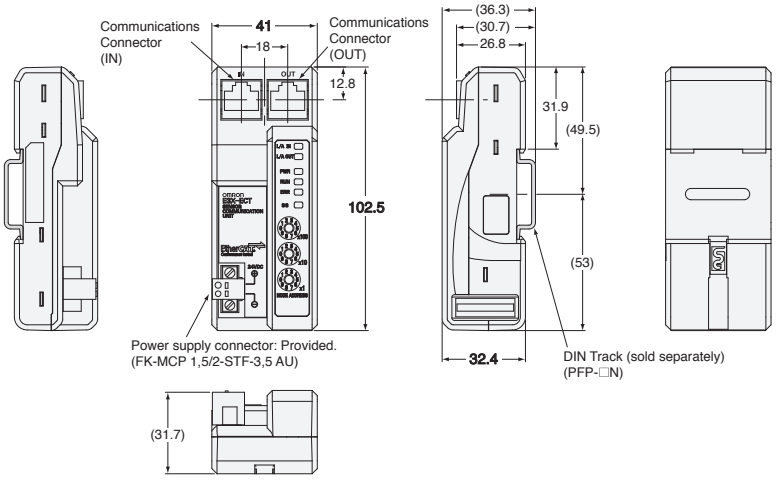

Ratings and Specifications

Wire-saving Connectors

Item	Type	Master Connector		Slave Connector	
	Models	E3X-CN21	E3X-CN11	E3X-CN22	E3X-CN12
Number of conductors		4	3	2	1
Diameter of cable		4 dia.			2.6 dia.
Rated current		2.5A			
Rated voltage		50VDC			
Contact resistance		20 mΩ max. (20 mVDC max., 100 mA max.) (The above figure is for connection to the Amplifier Unit and the adjacent Connector. It does not include the conductor resistance of the cable.)			
Number of insertions		Destruction: 50 times (for connection to the Amplifier Unit and the adjacent Connector)			
Material	Housing	Polybutylene terephthalate (PBT)			
	Contact	Phosphor bronze/gold-plated nickel			
Weight (packed state)		Approx. 55 g			Approx. 25 g

Sensor I/O Connectors

Item	Models	XS3F-M42□-40□-A
Number of conductors		4
Diameter of cable		4 dia.
Rated current		1A
Rated voltage		125VDC
Contact resistance		40 mΩ max. (20 mVDC max., 100 mA max.)
Number of insertions		Destruction: 200 times

Dimensions

(Unit: mm)
Tolerance class IT16 applies to dimensions in this date sheet unless otherwise specified.

Wire-saving Connectors (for Models with Wire-saving Connectors)

Master Connector

88-A **E3X-CN21**
E3X-CN11

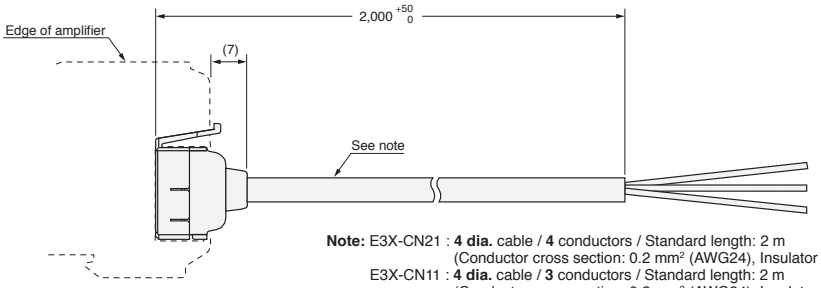

Note: E3X-CN21 : **4 dia.** cable / **4** conductors / Standard length: 2 m
(Conductor cross section: 0.2 mm² (AWG24), Insulator diameter: 1.1 mm)
E3X-CN11 : **4 dia.** cable / **3** conductors / Standard length: 2 m
(Conductor cross section: 0.2 mm² (AWG24), Insulator diameter: 1.1 mm)

Slave Connector

88-B **E3X-CN22**
E3X-CN12

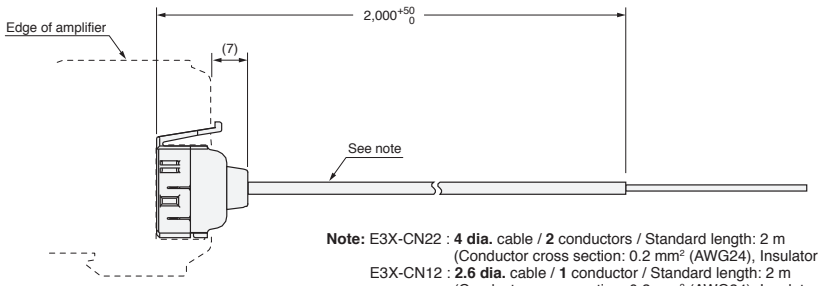

Note: E3X-CN22 : **4 dia.** cable / **2** conductors / Standard length: 2 m
(Conductor cross section: 0.2 mm² (AWG24), Insulator diameter: 1.1 mm)
E3X-CN12 : **2.6 dia.** cable / **1** conductor / Standard length: 2 m
(Conductor cross section: 0.2 mm² (AWG24), Insulator diameter: 1.1 mm)

Sensor I/O Connectors (for Models with M8 Connectors)

88-C **XS3F-M421-402-A**
XS3F-M421-405-A

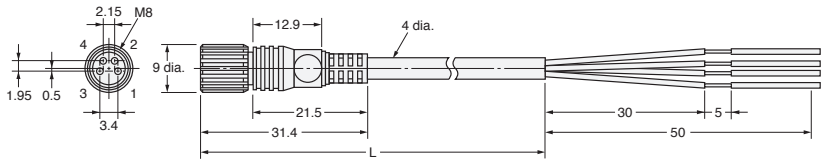

88-D **XS3F-M422-402-A**
XS3F-M422-405-A

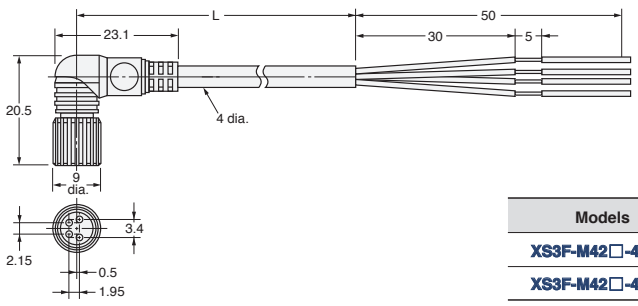

Models	Cable length L (m)
XS3F-M42□-402-A	2
XS3F-M42□-405-A	5

Mounting Brackets

89-A **E39-L143**

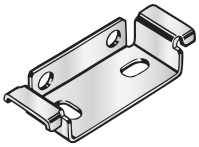

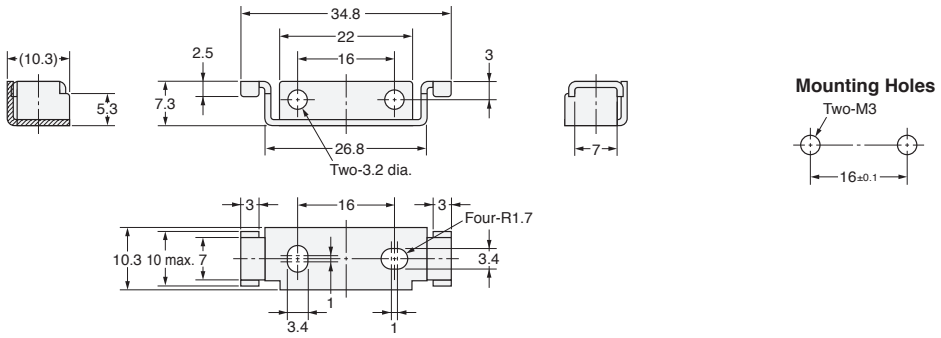

Material: Stainless steel (SUS304)

DIN track

89-B **PFP-100N**
PFP-50N

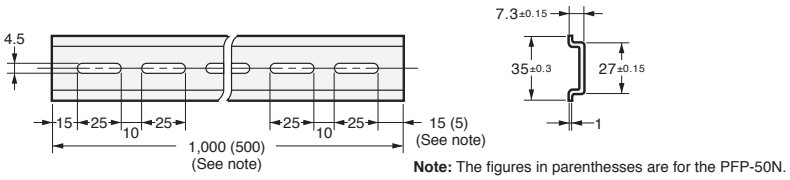

Note: The figures in parentheses are for the PFP-50N.

Material: Aluminum

89-C **PFP-100N2**

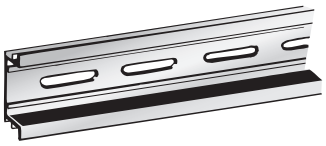

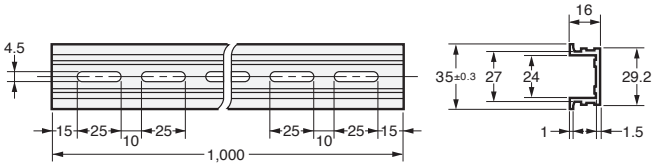

Material: Aluminum

End Plate

89-D **PFP-M**

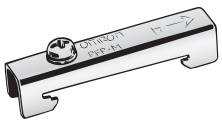

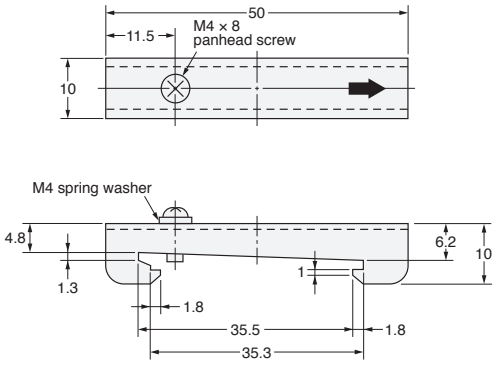

Material: Iron, zinc plating

Reference Information for Fiber Units

Influence of Fiber Cable Length

The sensing distance listed in the Fiber Units specifications are based on the fiber cable lengths found in the suffix of the model number.
The sensing distance will change if the fiber cable is cut or extended.
The following graph shows the percentage change of the various fiber cable length, where 100% is the sensing distance for a fiber cable with a length of 2 m.
Use this as a guideline for installation distances.
Keep in mind that extending the cable with a fiber connector will result in even shorter sensing distances than the value given in the graph.

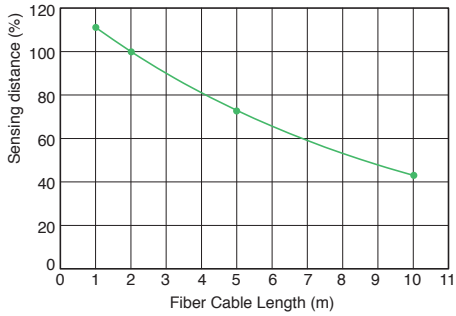

* The 100% value is for a fiber cable with a length of 2 m (same for Through-beam and Reflective Models).

Reflective Models: Sensing Distance Ratios by Workpiece Materials

The following graph shows the percentage change of the various workpieces, where 100% is the sensing distance for white paper, the standard sensing object.
Refer to the value of the material that looks like your workpiece.

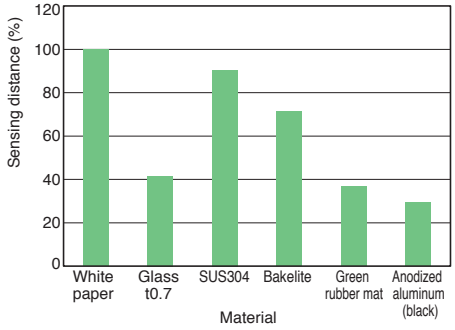

* White paper is 100%.

Types of Fiber Cables

This section describes the features of different types of fiber cables.
(This is given in the Fiber Unit specifications as either Flexible or Bend-resistant for the cable bending radius, and Coaxial for the appearance.
If no difinition is given, a standard cable is used.)

● Flexible Fibers

The flexible fiber has a small bending radius for easy routing without easily breaking.
It is easy to use because the cable can be bent without significantly reducing light intensity.



● Break-resistant Fibers

This fiber is resistant to repeated bends for use on moving parts.



● Standard Fibers

This fiber have a large bending radius compared with bend-resistant or flexible fiber.
Use this fiber where the bending radius is large, or on non-moving parts.



● Coaxial Reflective Fibers

These fibers are suitable for sensing small objects at close range.



Q&A

Category	Question	Answer
Fiber Units	How do I interpret the optical axis diameter in the Fiber Unit specifications?	The optical axis diameter is the beam size that the Through-beam Fiber Unit uses for detection. If you are detecting objects larger than the optical axis diameter, you can expect stable detection performance because the object will block all of the beams of light that are used for detection. The incident level may fluctuate, however, if the workpiece passes the beam at high speed. In this case, it is best to select a Fiber Unit with a smaller optical axis diameter, or change the response time of the Fiber Amplifier Unit to High-speed mode or to Super-high-speed mode setting. 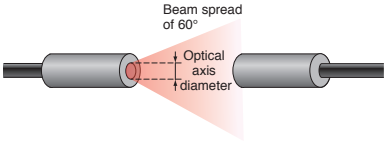
	Are there any differences between the Fiber Units that are used for emitter and receiver?	With Through-beam Fiber Units, there is no difference between emitter fibers and receiver fibers. With Reflective Fiber Units, the emitter fibers and receiver fibers are different on Coaxial Reflective Models. Emitter fiber cables have identification marks. Refer to the individual dimensions diagrams of Fiber Units for details.
	What size must the hole be to mount a Threaded or Cylindrical Fiber Unit?	Refer to the recommended mounting hole dimensions given on pages 58 to 61.
	Are Fiber Cables available in different lengths?	Some models are available with either 5-m or 10-m cable. Ask your OMRON representative for details.
	What is the aperture angle?	The aperture angle is the angle at which the emitter beam spreads out. 
	Are these Fiber Units CE certified?	Fiber Units do not have any electrical components and therefore are exempt from CE certification.
	Can these Fiber Units be used in explosionproof areas?	The Fiber Units can be used in an explosion-proof area. Install only the Fiber Unit in the explosion-proof area and install the Fiber Amplifier Unit outside the explosion-proof area.
	Built-in Lens What the Fiber Units with built-in lenses?	These highly recommended Fiber Units have built-in lenses that achieve stable detection with high-power beams.
Fiber Amplifier Units	Can the Fiber Amplifier Units be linked with other models?	The E3X-HD Series can be connected only with the E3X-DA-S and MDA Series.
	Can the Fiber Amplifier Unit be operated from a mobile console?	Mobile consoles cannot be used with either the E3NX-FA Series or the E3X-HD Series.
	Can a Sensor Communications Unit be used?	If you use E3NX-FA0 Amplifier Units, you can use the E3NW-ECT(EtherCAT), E3NW-CRT(CompoNet) or E3NW-CCL (CC-Link). If you use E3X-HD0 Amplifier Units, you can use the E3X-CRT (CompoNet) or E3X-ECT (EtherCAT).

For common precautions, refer to www.ia.omron.com

Fiber Amplifier Unit

⚠ Warning

This product is not designed or rated for ensuring safety of persons either directly or indirectly.
Do not use it for such purposes.

Do not use the product with voltage in excess of the rated voltage.
Excess voltage may result in malfunction or fire.

Never use the product with AC power supply.
Otherwise, explosion may result.

Precautions for Safe Use

The following precautions must be observed to ensure safe operation of the product. Doing so may cause damage or fire.

(1) Do not install the product in the following locations.
- Locations subject to direct sunlight
- Locations subject to condensation due to high humidity
- Locations subject to corrosive gas
- Locations subject to vibration or mechanical shocks exceeding the rated values
- Locations subject to exposure to water, oil, chemicals
- Locations subject to stream
- Locations subjected to strong magnetic field or electric field

(2) Do not use the product in environments subject to flammable or explosive gases.

(3) Do not use the product in any atmosphere or environment that exceeds the ratings.

(4) To secure the safety of operation and maintenance, do not install the product close to high-voltage devices and power devices.

(5) High-Voltage lines and power lines must be wired separately from this product. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.

(6) Do not apply load exceeding the ratings. Otherwise, damage or fire may result.

(7) Do not short the load. Otherwise, damage or fire may result.

(8) Connect the load correctly.

(9) Do not miswire such as the polarity of the power supply.

(10) Do not use the product if the case is damaged.

(11) Burn injury may occur. The product surface temperature rises depending on application conditions, such as the ambient temperature and the power supply voltage. Attention must be paid during operation or cleaning.

(12) When setting the Sensor, be sure to check safety, such as by stopping the equipment.

(13) Be sure to turn off the power supply before connecting or disconnecting wires.

(14) Do not attempt to disassemble, repair, or modify the product Unit in any way.

(15) When disposing of the product, treat it as industrial waste.

(16) Do not use the Sensor in water, rain, or outdoors.

Precautions for Correct Use

(1) Be sure to mount the unit to the DIN track until it clicks.

(2) When using Amplifier Units with Wire-saving Connectors, attach the protective stickers (provided with E3X-CN-series Connectors) on the unused power pins to prevent electrical shock and short circuiting. When using Amplifier Units with Connectors for Communications Units, attach the protective caps (provided with Sensor Communications Unit).

Amplifier Unit with Wire-saving Connector

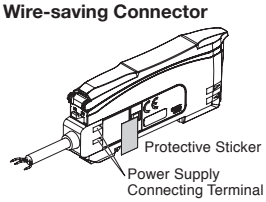

Amplifier Unit with Connector for Communications Unit

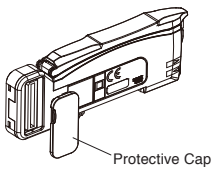

(3) <E3NX-FA series>
The length for the cable extension must be 30 m or less (or less than 10 m for S-mark certified models).
Be sure to use a cable of at least 0.3 mm^2 for extension.
The power voltage must be 24 to 30 V when connecting amplifier units with extension cable and wire-saving connector.
<E3X-HD series>
The length for the cable extension must be 100 m or less.
Be sure to use a cable of at least 0.3 mm^2 for extension.

(4) Do not apply the forces on the cord exceeding the following limits: Pull: 40N; torque: 0.1N·m; pressure: 20N; bending: 29.4N

(5) Do not apply excessive force such as tension, compression or torsion to the Amplifier Unit with the Fiber Unit fixed to the Amplifier Unit.

(6) Always keep the protective cover in place when using the Amplifier Unit. Not doing so may cause malfunction.

(7) It may take time until the received light intensity and measured value become stable immediately after the power is turned on depending on use environment.

(8) The product is ready to operate 200 ms after the power supply is turned ON.

(9) The Mobile Console E3X-MC11, E3X-MC11-SV2 and E3X-MC11-S cannot be connected.

(10) Mutual interference prevention on the E3NX-FA Series does not function among the E3X-HD, E3X-DA-S, E3X-DA-N, E3X-SD, or E3X-NA Fiber Amplifier Units.
Mutual interference prevention on the E3X-HD Series does not function among the E3NX-FA, E3X-DA-N, E3X-SD, or E3X-NA Fiber Amplifier Units.
Mutual interference prevention on the E3X-HD Series does function among the E3X-DA-S and E3X-MDA Fiber Amplifier Units.

(11) If the unit receives excessive sensor light, the mutual interference prevention function may not work properly, resulting in malfunction of the unit. In such case, increase the threshold.

(12) The E3NW-ECT Sensor Communications Unit can be used with the E3NX-FA0, but the E3X-DRT21-S, E3X-CRT, and E3X-ECT Sensor Communications Units cannot be used. The E3X-CRT and E3X-ECT Sensor Communications Unit can be used with the E3X-HD0, but the E3X-DRT21-S and E3NW-ECT Sensor Communications Units cannot be used.

(13) If you notice an abnormal condition such as a strange odor, extreme heating of the unit, or smoke immediately stop using the product, turn off the power, and consult your dealer.

(14) Do not use thinner, benzine, acetone, and lamp oil for cleaning.

Mounting the Fiber Amplifier Units

■ Mounting on DIN Track

1. Let the hook on the Amplifier Unit's Fiber Unit connection side catch the track and push the unit until it clicks.

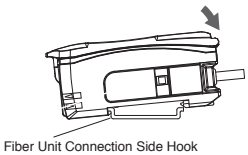

■ Removing from DIN Track

1. Push the unit in the direction 1.
2. Lift it up in the direction 2.

Refer to "I/O Circuit Diagrams" or check the side of the unit for wire color and role indications.



■ Mounting Amplifier Units in Group (Wire-saving Connector Type Models)

1. Mount the Fiber Amplifier units one at a time onto the DIN track and push them until they click.
2. Slide the Fiber Amplifier units in the direction 2.
3. Use End Plates (PFP-M: separately sold) at the both ends of the grouped Fiber Amplifier units to prevent them from separating due to vibration or other cause.
4. Tighten the screw on the End Plates using a driver.

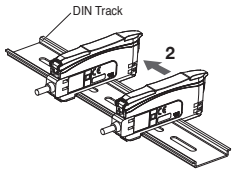

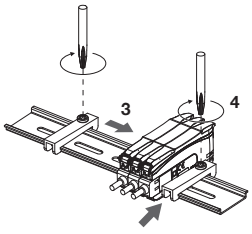

Tighten the screw while pressing the End Plate.

CHECK!

- Under environments such as vibration, use an end plates even with a single Fiber Amplifier Unit.
- The maximum numbers of connectable Amplifier Units are given in the following table.

		Maximum number of interconnected	Maximum number of mutual interference prevention
E3NX-FA series*		30	10
E3X-HD series standard models* (E3X-HD11/HD41/HD6/HD8)		16	10
E3X-HD0	With E3X-ECT	30	10
	With E3X-CRT	16	10

- If Units are to be connected, the ambient temperature will change with the number of Units that are connected. Check the Ratings and Characteristics specifications.
- Always turn OFF the power before connecting or disconnecting Units.

* The mutual interference prevention function cannot be used if the detection mode is set to super-high-speed mode (SHS).

Mounting Fiber Units

■ Use Fiber Cutter

Cut a thin fiber as follows.

For standard fibers, insert to the desired cutting position and cut.

(1)	**The fiber is shipped loosely tightened as shown in the figure at the right**	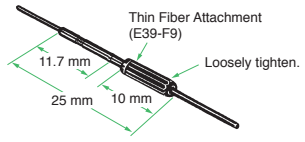
(2)	**Adjust the fiber to the desired length and fully tighten.**	
(3)	**Insert the Fiber Unit into E39-F4 and cut it.**	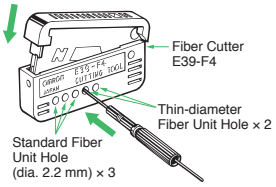
(4)	**Finished state. (Correctly cut end)**	 **Note:** The insertion direction into the Fiber Amplifier Unit is shown in the above figure.

■ Mount Fiber Unit

1. Open the protective cover.
2. Raise the lock lever.
3. Insert the Fiber Unit in the fiber unit hole to the bottom.
4. Return the lock lever to the original position and fix the Fiber Unit.

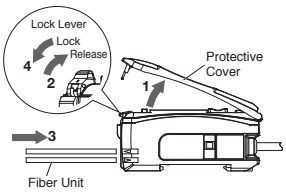

CHECK!

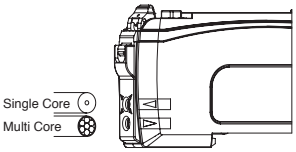

- When mounting a coaxial reflective Fiber Unit, insert the single-core Fiber Unit to the upper hole (Emitter side) and the multi-core Fiber Unit to the lower hole (Receiver side).
  The cables for the Single-core Fiber Units (Emitters) have identification marks. Refer to the dimensions diagrams for details.

- When removing the Fiber Unit, follow the above steps in reverse order.
  To maintain the characteristics of the Fiber Unit, make sure the lock is released before removing the Fiber Unit.

Fiber Units

⚠ Warning

This product is not designed or rated for ensuring safety of persons either directly or indirectly.
Do not use it for such purposes.

Precautions for Correct Use

Do not use the Fiber Unit in atmospheres or environments that exceed product ratings.

• Mounting

Tightening Force

Refer to pages 58 to 61 for the tightening torque to apply when mounting a Fiber Unit.

<Threaded Models>

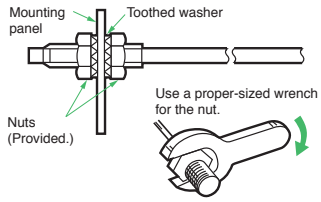

<Cylindrical Models>

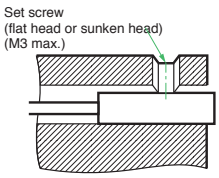

<Chemical and Oil-resistant Models>

The following method is recommended for mounting Fiber Units with fluororesin-covered sensing heads (E32-T□F and E32-D□F) to prevent from cracking the fluororesin case.
If you use a set screw to secure the Fiber Unit, tighten it with care to prevent from cracking the case.

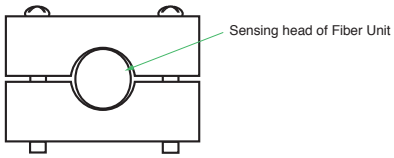

Connections

- Do not subject the Fiber Unit to excessive force, such as tension or compression.
  Refer to pages 58 to 61 for tensile strengths.
- Make sure any bend in the Fiber Unit is larger than the allowable bending radius.
  Refer to pages 58 to 61 for bending radius ratings and length of unbendable sections at the base of the Fiber Unit.
- Do not compress or place heavy loads on the fibers.

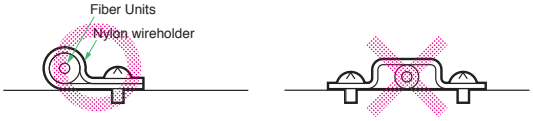

- The method shown below is an effective way to prevent the Fiber Unit from breaking due to vibration.

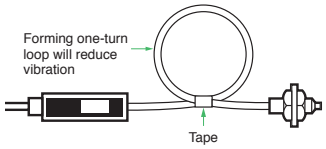

Sleeve Bender (E39-F11)

- The bending radius of the stainless steel tube should be as large as possible. The smaller the bending radius is, the shorter the sensing distance will be.
- Insert the tip of the stainless steel tube in the Sleeve Bender and slowly bend the tube along the curve of the Sleeve Bender.

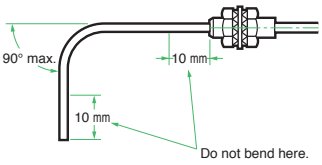

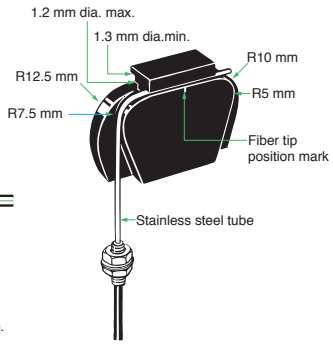

Heat-resistant Fiber Units (E32-D51(R) and E32-T51(R))

The fibers of these Units cannot be extended using the E39-F10 Fiber Connector.

E32-T14

These Units may enter the light-ON state if there are reflective objects at the end of the lenses.
If reflection is a problem, attach the black stickers provided to the ends of the lenses.

E32-T16PR

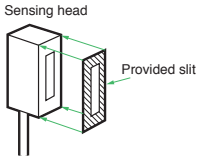

To use the provided slit, peel off the backing sheet, align the slit with the edges of the sensing surface, and attach it to the sensing head.
Use the slit in applications where saturation occurs (i.e., changes in incident level cannot be detected) due to short sensing distances.

Vacuum-resistant Fiber Units (E32-□V)

Although the Flanges, the Fiber Units on the vacuum side, and the Lens Units have been cleaned, as an extra precaution, clean these with alcohol before using them in high-vacuum environments to ensure that they are properly degreased.

Liquid-level Detection Fiber Unit (E32-D82F1)

- Secure the Fiber Unit using the unbendable section.
  Otherwise, the liquid-level detection position may be displaced.
- For applications in hazardous environments, install the Fiber Unit in the hazardous environment but install the Amplifier Unit in a safe environment.

Liquid-level Detection Fiber Units (Tube-mounting Models)

- Make sure that the tube is not deformed when using a band to secure the Fiber Unit.

Adjustment

Detection Position for Liquid-level Detection Fiber Unit (E32-D82F1)

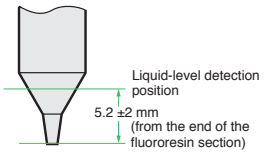

The liquid-level detection position is 5.2 ±2 mm from the end of the fluororesin section. (Refer to the diagram on the right.)
The liquid-level detection position varies with the surface tension of the liquid and the degree of wetness at the Fiber Unit's detection position.

Other Precautions

Liquid-level Detection Fiber Unit (E32-D82F1)

- Operation may become unstable in the following cases:
  1. Bubbles stick to the cone of the sensing head.
  2. Solute deposits on the cone of the sensing head.
  3. The liquid has a high viscosity.
- There are some liquids, such as milky white liquids, for which detection is not possible.
- Do not let the end of the fluororesin section bump into other objects.
  Damage to or deformation of the sensing head may cause unstable operation.
- The product shall be used in the following conditions.
  Ambient pressure: -50 to +500 kPa
- To use one-point teach mode (without object)
  Please carry out teaching where the detecting head is sunk into liquid. The sensitivity is set to 10% upper to the incident level in the liquid. This setting method is effective in high degree of viscosity, because it becomes stable to the fluctuation of incident level when the liquid drops from the tip.
- To use two-point teach mode (with/without object)
  Please teach where the detecting head is pulled up from liquid and next teach where it is sunk into liquid. This setting method is effective to a liquid which is easy to bubble at high temperature.
- Don't use maximum sensitivity mode because a liquid may be undetectable.

Chemical and Oil-resistant, Liquid-level Detection Fiber Unit (E32-D82F1)

Fluororesin shows strong chemical-resistant properties but is permeable if exposed to atmospheres with gaseous chemicals or water vapors, resulting in failure or damage.
Confirm applicability sufficiently before using the Fiber Unit in these environments.

Accessories

Use of E39-R3 Reflector Provided with E32-R21

1. Use detergent to remove any dust or oil from the surfaces where tape is applied. Adhesive tape will not be attached properly if oil or dust remains on the surface.
2. The E39-R3 cannot be used in areas that are exposed to oil or chemicals.

Mounting method of Disconnection-resistant Protective Spiral Tubes (E39-F32□)

1. Insert the Fiber Unit into the Protective Spiral Tube from the head connector (threaded).



2. Push the fiber into the Protective Spiral Tube. The tube must be straight so that the fiber enters without twisting. Turn the Protective Spiral Tube, not the fiber.



3. Secure the Protective Spiral Tube to the mounting panel with the provided nuts.

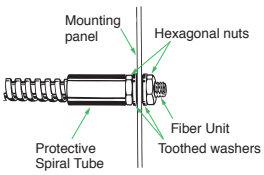

4. Use the provided saddle to secure the end cap of the Protective Spiral Tube.
   (To secure the Protective Spiral Tube at a position other than the end cap, apply tape to the tube so that the portion becomes thicker in diameter.)

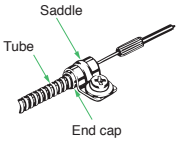

Attaching the E39-F10 Fiber Connector

Attach the Fiber Connecter as shown in the following figures.
1. Insert the Fiber Unit in the retention clip.
2. Insert the retention clip into the splice.

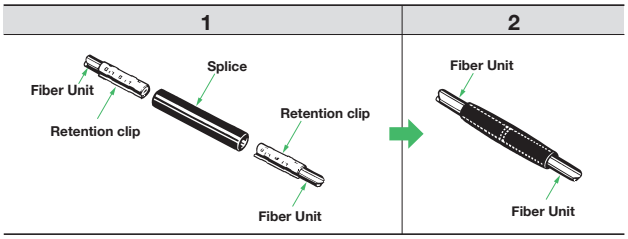

- The Fiber Units should be as close as possible when they are connected.
  The sensing distance is reduced by approximately 25% when Fiber Units are extended by the connector.
- Only 2.2-mm-diameter fibers can be connected.

New Product Information (New Products: Indicated by ☐ in the following table.)

Hex-shaped Models

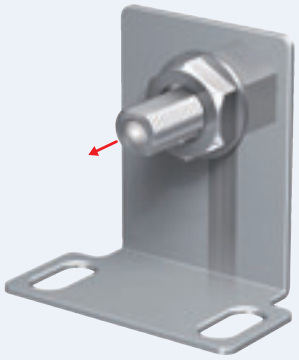

- You can easily mount these Fiber Units by making a hole in the bracket and tightening just one nut.
- The cable follows the wall, so extra space is not required, and the cable will not get caught on other objects.

- Build-in Lens

A Fiber Unit with Build-in Lens is the new standard in fiber units.
We recommend this new standard Fiber Unit that achieves stable detection with a high-power beam.
You don't have to worry about the lens falling off and getting lost.
Through-beam Flat Fiber Units are also available. (→ 14 page)

Specifications

Through-beam Fiber Units

Aperture angle	Size	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	E3X-HD HS	E3X-HD Other modes	E3NX-FA NEW GIGA	E3NX-FA NEW HS	E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	97 Page Dimensions No.
Approx. 15°	M4		Flexible, R2	4,000*	2,300	ST : 3,500 SHS: 920	4,000*	3,450	ST : 4,000* SHS: 920	2.3 dia. (0.1 dia./ 0.03 dia.)	E32-LT11N 2M NEW	97-A
Approx. 60°			Flexible, R1	2,000	700	ST : 1,000 SHS: 280	3,000	1,050	ST : 1,500 SHS: 280	1 dia. (5 µm dia./ 2 µm dia.)	E32-T11N 2M	97-B

Reflective Fiber Units

Aperture angle	Size	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	E3X-HD HS	E3X-HD Other modes	E3NX-FA NEW GIGA	E3NX-FA NEW HS	E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	97 Page Dimensions No.
Approx. 15°	M6		Flexible, R2	840	240	ST : 350 SHS: 100	1,260	360	ST : 520 SHS: 100	(0.1 dia./ 0.03 dia.)	E32-LD11N 2M NEW	97-C
Approx. 60°	M3			290	90	ST : 130 SHS: 39	440	130	ST : 190 SHS: 39	(5 µm dia./ 2 µm dia.)	E32-C21N 2M NEW	97-D
	M4			840	240	ST : 350 SHS: 100	1,260	360	ST : 520 SHS: 100		E32-D21N 2M NEW	97-E
	M6		Flexible, R4	780	220	ST : 350 SHS: 100	1,170	340	ST : 520 SHS: 100	(5 µm dia./ 2 µm dia.)	E32-C91N 2M NEW	97-F

Retro-reflective Fiber Units (With M.S.R. Function)

Aperture angle	Size	Appearance (mm)	Bending radius of cable	Sensing distance (mm) E3X-HD GIGA	E3X-HD HS	E3X-HD Other modes	E3NX-FA NEW GIGA	E3NX-FA NEW HS	E3NX-FA NEW Other modes	Optical axis diameter (minimum sensing object)	Models	97 Page Dimensions No.
Approx. 15°	M6	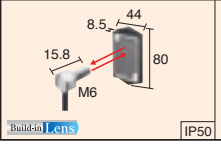	Flexible, R2	1,350	1,000	ST : 1,200 SHS: 550	2,020	1,500	ST : 1,800 SHS: 550	—	E32-LR11NP 2M + E39-RP1 NEW	97-G

* The optical fiber is 2 m long on each side, so the sensing distance is 4,000 mm.

Note 1. The following mode names and response times apply to the modes given in the Sensing distance column.
[E3X-HD] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (NPN output: 50 µs, PNP output: 55 µs)
[E3NX-FA] GIGA: Giga-power mode (16 ms), HS: High-speed mode (250 µs), ST: Standard mode (1 ms), and SHS: Super-high-speed mode (30 µs)

2. The values for the minimum sensing object are reference values that indicate values obtained in standard mode with the sensing distance and sensitivity set to the optimum values. The first value is for the E3X-HD and the second value is for the E3NX-FA.

3. The sensing distances for Reflective Sensors are for white paper. (The sensing distances for the E32-LD11N 2M are for glossy white paper).

4. With Retro-reflective Models, objects with a high reflection factor may cause the Fiber Sensor to detect reflected light as incident light. Also, stable detection may not be possible for transparent objects. Check suitability beforehand.

Dimensions

Installation Information → 58, 59, 60, 61 Page

Through-beam Fiber Units

97-A E32-LT11N 2M (Free Cutting)

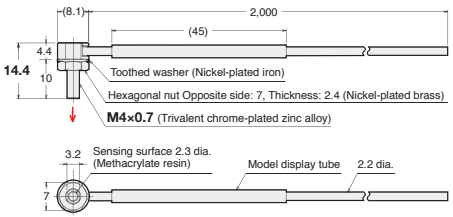

97-B E32-T11N 2M (Free Cutting)

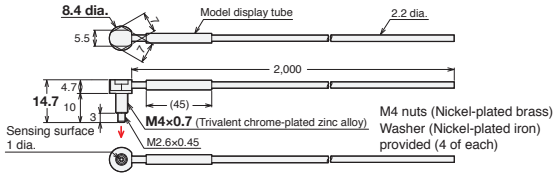

Reflective Fiber Units

97-C E32-LD11N 2M (Free Cutting)

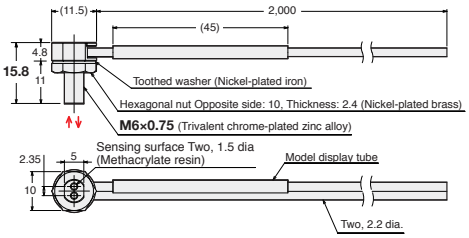

97-D E32-C21N 2M (Free Cutting)

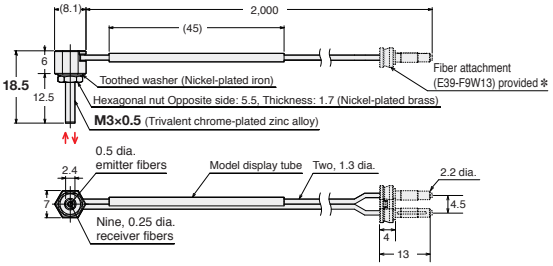

Note: There is a white line on the emitter fiber.

✻ Applicable Fiber Amplifier Units: E3NX-FA, E3NX-CA, E3X-HD, and E3X-DA-S. Use the enclosed E39-F9-7 Fiber Attachment for other models, such as the E3X-MDA with two channels, and for the E3X-SD, E3X-NA, and other models that have an 8-mm space between the emitter and receiver fiber insertion holes.

97-E E32-D21N 2M (Free Cutting)

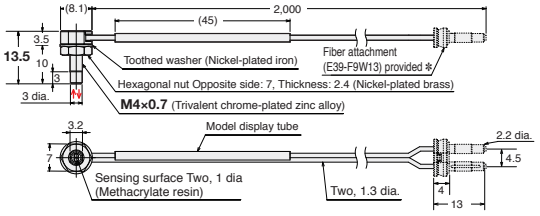

✻ Applicable Fiber Amplifier Units: E3NX-FA, E3NX-CA, E3X-HD, and E3X-DA-S. Use the enclosed E39-F9-7 Fiber Attachment for other models, such as the E3X-MDA with two channels, and for the E3X-SD, E3X-NA, and other models that have an 8-mm space between the emitter and receiver fiber insertion holes.

97-F E32-C91N 2M (Free Cutting)

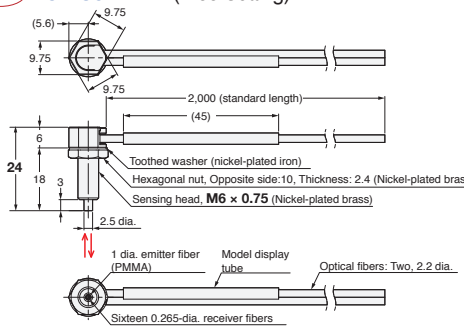

Note: There is a white line on the emitter fiber.

Retro-reflective Fiber Units (With M.S.R. Function)

97-G E32-LR11NP 2M (Free Cutting)

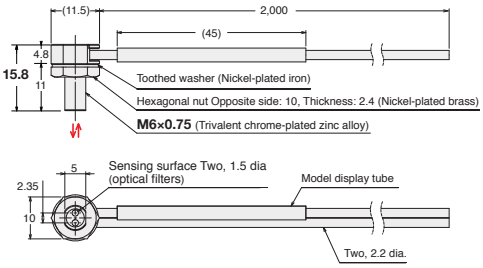

E39-RP1

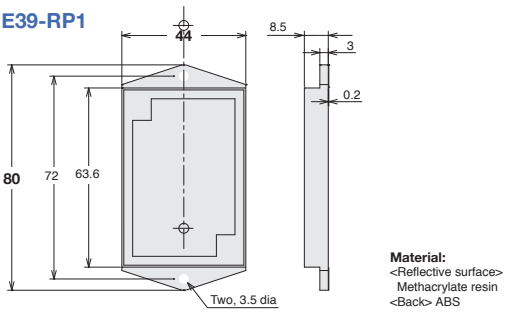

Material:
<Reflective surface>
Methacrylate resin
<Back> ABS

- Reference Information for Model Selection -

Features of Coaxial Reflective Type

These Fiber Units offer better detection of small objects at close distances (of 2 mm or less) than Standard Reflective Fiber Units.
They also detect glossy surfaces more reliably than Standard Reflective Fiber Units, even if the surface is tilted.
The receiver fibers are arranged around the emitter fiber as shown below.



Transparent Object Detection

Retro-reflective Models are ideal for detection of transparent objects.

→ 35 Page: Performance Comparison of Transparent Object Detection

What Is "Flexible" Fiber?

The flexible fiber has a small bending radius for easy routing without easily breaking.
It is easy to use because the cable can be bent without significantly reducing light intensity.

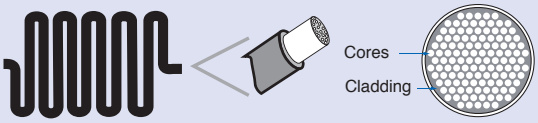

Structure which has a cladding around a large number of ultrafine cores.

And

Long-distance Sensing Applications with the E32-T11N

A separate Lens Unit can be attached to extend the sensing distance.

→ 26 Page

Model Index

Selection by Model

Models	Specifications	Dimensions
E32-A		
E32-A01 5M	P.50	P.51 51-A
E32-A03 2M	P.30	P.31 31-A
	P.56	P.57 57-A
E32-A03-1 2M	P.30	P.31 31-B
	P.56	P.57 57-B
E32-A04 2M	P.30	P.31 31-C
	P.56	P.57 57-C
E32-A08 2M	P.36	P.37 37-C
	P.54	P.55 55-B
E32-A08H2 2M	P.46	P.47 47-D
	P.54	P.55 55-C
E32-A09 2M	P.36	P.37 37-F
	P.54	P.55 55-E
E32-A09H2 2M	P.46	P.47 47-E
	P.54	P.55 55-F
E32-A12 2M	P.36	P.37 37-D
	P.54	P.55 55-D
E32-C		
E32-C21N 2M	P.96 (P.20, 22)	P.97 97-D (P.21, 23)
E32-C31 2M	P.08 (P.20, 22)	P.09 09-D (P.21, 23)
E32-C31M 1M	P.08	P.09 09-E
E32-C31N 2M	P.08	P.09 09-A
E32-C41 1M	P.22	P.23 23-A 23-D
E32-C42 1M	P.20	P.21 21-A 21-B
E32-C42S 1M	P.20	P.21 21-E
E32-CC200 2M	P.08 (P.22)	P.09 09-H (P.23)
E32-C91N 2M	P.08	P.09 09-B
	P.96	P.97 97-F
E32-D		
E32-D11 2M	P.42	P.43 43-E
E32-D11R 2M	P.08	P.09 09-G
E32-D11U 2M	P.38	P.39 39-I
E32-D12F 2M	P.38	P.39 39-H
E32-D15XR 2M	P.14	P.15 15-E
E32-D15YR 2M	P.14	P.15 15-F
E32-D15ZR 2M	P.14	P.15 15-G
E32-D16 2M	P.24	P.25 25-E
E32-D21 2M	P.42	P.43 43-B
E32-D211R 2M	P.08	P.09 09-F
E32-D21B 2M	P.42	P.43 43-D
E32-D21N 2M	P.96	P.97 97-E
E32-D21R 2M	P.08	P.09 09-C
E32-D21-S3 2M	P.18	P.19 19-B
E32-D221B 2M	P.12	P.13 13-D
	P.42	P.43 43-C
E32-D22B 2M	P.12	P.13 13-A
	P.42	P.43 43-A
E32-D22R 2M	P.12	P.13 13-C
E32-D22-S1 2M	P.18	P.19 19-I
E32-D24R 2M	P.18	P.19 19-A
E32-D24-S2 2M	P.18	P.19 19-B
E32-D25XB 2M	P.42	P.43 43-F
E32-D25-S3 2M	P.18	P.19 19-L
E32-D31-S1 0.5M	P.18	P.19 19-G
E32-D32L 2M	P.12	P.13 13-E
E32-D32-S1 0.5M	P.18	P.19 19-F
E32-D33 2M	P.12	P.13 13-F
	P.18	P.19 19-E
E32-D331 2M	P.18	P.19 19-D
E32-D36P1 2M	P.48	P.49 49-E
E32-D36T 2M	P.50	P.51 51-C
E32-D43M 1M	P.12	P.13 13-B
	P.18	P.19 19-C
E32-D51 2M	P.46	P.47 47-B
E32-D51R 2M	P.46	P.47 47-A
E32-D61-S 2M	P.46	P.47 47-G
E32-D611-S 2M	P.46	P.47 47-F
E32-D73-S 2M	P.46	P.47 47-H
E32-D81R-S 2M	P.46	P.47 47-C
E32-D82F1 4M	P.50	P.51 51-D
E32-DC200BR 2M	P.18	P.19 19-K
E32-DC200F4R 2M	P.18	P.19 19-H
E32-G		
E32-G16 2M	P.48	P.49 49-D
E32-L		
E32-L11FP 2M	P.38	P.39 39-F
	P.54	P.55 55-G
E32-L11FS 2M	P.38	P.39 39-G
	P.54	P.55 55-H
E32-L15 2M	P.20	P.21 21-F
E32-L16-N 2M	P.32	P.33 33-A
	P.36	P.37 37-B
	P.54	P.55 55-A
E32-L24S 2M	P.32	P.33 33-B
	P.36	P.37 37-A
E32-L25L 2M	P.32	P.33 33-C
	P.36	P.37 37-E
E32-L25T 2M	P.50	P.51 51-B
E32-LD11 2M	P.08	P.09 09-I
E32-LD11N 2M	P.96	P.97 97-C
E32-LD11R 2M	P.08	P.09 09-I
E32-LR11NP 2M	P.34	P.35 35-A
	P.96	P.97 97-G
E32-LT11 2M	P.06	P.07 07-C
	P.24	P.25 25-C
E32-LT11N 2M	P.24	P.25 25-A
	P.96	P.97 97-A
E32-LT11R 2M	P.06	P.07 07-C
	P.24	P.25 25-C
E32-LT35Z 2M	P.14	P.15 15-D
E32-R		
E32-R16 2M	P.34	P.35 35-B
E32-R21 2M	P.34	P.35 35-C
E32-T		
E32-T10V 2M	P.52	P.53 53-D
E32-T11 2M	P.40 (P.26)	P.41 41-C (P.27)
E32-T11F 2M	P.38	P.39 39-C
E32-T11N 2M	P.06 (P.26)	P.07 07-A (P.27)
E32-T11NF 2M	P.38	P.39 39-A
E32-T11R 2M	P.06 (P.24)	P.07 07-B (P.25, 26)
E32-T12F 2M	P.38	P.39 39-B
E32-T12R 2M	P.10	P.11 11-C
E32-T14 2M	P.24	P.25 25-D
E32-T14F 2M	P.38	P.39 39-D
E32-T14LR 2M	P.10	P.11 11-D
E32-T15XR 2M	P.14	P.15 15-A
E32-T15YR 2M	P.14	P.15 15-B
E32-T15ZR 2M	P.14	P.15 15-C
E32-T16JR 2M	P.48	P.49 49-B
E32-T16PR 2M	P.48	P.49 49-A
E32-T16WR 2M	P.48	P.49 49-C
E32-T17L 10M	P.24	P.25 25-B
E32-T21 2M	P.40	P.41 41-B
E32-T21-S1 2M	P.16	P.17 17-D
E32-T223R 2M	P.10	P.11 11-A
E32-T22B 2M	P.10	P.11 11-B
	P.40	P.41 41-A
E32-T22S 2M	P.30	P.31 31-F
E32-T24E 2M	P.16	P.17 17-B
E32-T24R 2M	P.16	P.17 17-A
E32-T24S 2M	P.30	P.31 31-E
	P.56	P.57 57-E
E32-T24SR 2M	P.30	P.31 31-D
	P.56	P.57 57-D
E32-T25XB 2M	P.40	P.41 41-D
E32-T33 1M	P.16	P.17 17-C
E32-T51 2M	P.44 (P.28)	P.45 45-B (P.29)
E32-T51F 2M	P.38	P.39 39-E
E32-T51R 2M	P.44 (P.28)	P.45 45-A (P.29)
E32-T51V 1M	P.52	P.53 53-A
E32-T61-S 2M	P.44 (P.28)	P.45 45-D (P.29)
E32-T81R-S 2M	P.44 (P.28)	P.45 45-C (P.29)
E32-T84SV 1M	P.52	P.53 53-C
E32-TC200BR 2M	P.16	P.17 17-E
E32-V		
E32-VF1	P.52	P.53 53-F
E32-VF4	P.52	P.53 53-E
E39-F		
E39-F1	P.26, 28	P.26 26-A
E39-F1-33	P.28	P.28 28-D
E39-F11	P.17	—
E39-F16	P.26, 28	P.26 26-B
E39-F17	P.20	P.21 21-B
E39-F18	P.22	P.23 23-G 23-H
E39-F1V	P.52	P.53 53-B
E39-F2	P.26, 28	P.26 26-C
E39-F32A 1M	P.42	P.43 43-G
E39-F32C 1M	P.40	P.41 41-E
	P.42	P.43 43-G
E39-F32D 1M	P.42	P.43 43-G
E39-F3A	P.20	P.21 21-A
E39-F3A-5	P.22	P.23 23-A 23-B 23-C
E39-F3B	P.22	P.23 23-D 23-E 23-F
E39-F3C	P.20	P.21 21-C 21-D
E39-R		
E39-R1	—	P.35 35-B
E39-R3	—	P.35 35-C
E39-RP1	P.34	P.35 35-A
	P.96	P.97 97-G
E39-RP37	P.35	—
E39-RSP1	P.35	—
E39-L		
E39-L143	—	P.89 89-A
E3NW		
E3NW-DS	P.76	P.77 77-B
E3NW-ECT	P.76	P.77 77-A
E3NX-FA		
E3NX-FA0	P.66	P.69 69-B
E3NX-FA11 2M	P.66	P.68 68-A
E3NX-FA21 2M	P.66	P.68 68-A
E3NX-FA24	P.66	P.69 69-A
E3NX-FA41 2M	P.66	P.68 68-A
E3NX-FA51 2M	P.66	P.68 68-A
E3NX-FA54	P.66	P.69 69-A
E3NX-FA54TW	P.66	P.69 69-A
E3NX-FA6	P.66	P.68 68-B
E3NX-FA7	P.66	P.68 68-B
E3NX-FA7TW	P.66	P.68 68-B
E3NX-FA8	P.66	P.68 68-B
E3NX-FA9	P.66	P.68 68-B
E3NX-FA9TW	P.66	P.68 68-B
E3X-CN		
E3X-CN11	P.88	P.88 88-A
E3X-CN12	P.88	P.88 88-B
E3X-CN21	P.88	P.88 88-A
E3X-CN22	P.88	P.88 88-B
E3X-CRT		
E3X-CRT	P.86	P.87 87-A
E3X-ECT		
E3X-ECT	P.86	P.87 87-B
E3X-HD		
E3X-HD0	P.80	P.81 81-C
E3X-HD11 2M	P.80	P.80 80-A
E3X-HD14	P.80	P.81 81-B
E3X-HD41 2M	P.80	P.80 80-A
E3X-HD44	P.80	P.81 81-B
E3X-HD6	P.80	P.81 81-A
E3X-HD8	P.80	P.81 81-A
PFP		
PFP-100N	—	P.89 89-B
PFP-100N2	—	P.89 89-C
PFP-50N	—	P.89 89-B
PFP-M	—	P.89 89-D
XS3F		
XS3F-M421-402-A	P.88	P.88 88-C
XS3F-M421-405-A	P.88	P.88 88-C
XS3F-M422-402-A	P.88	P.88 88-D
XS3F-M422-405-A	P.88	P.88 88-D

OMRON

Terms and Conditions Agreement

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

NEW Introducing New Fiber Sensor Products

Oil resistant types
E32-T11NF
→ 38 Page
Build-in Lens

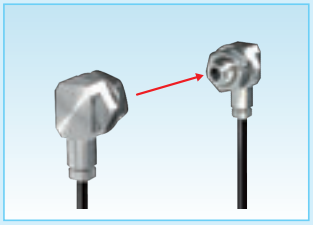

Oil-resistant Fiber Unit
E32-T11NF
(http://www.ia.omron.com/)

Hex shaped models
E32-C91N
→ 96 Page

Grooved types
E32-G16
→ 48 Page

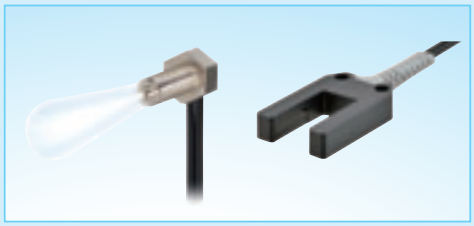

Color Mark Sensors
E3S-DC/
E3NX-CA Series
Cat. No. Y216

EtherCAT® is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.
CompoNet is a registered trademark of the ODVA.
CC-Link is a registered trademark of Mitsubishi Electric Corporation. The trademark is managed by the CC-Link Partner Association.

OMRON Corporation Industrial Automation Company
Kyoto, JAPAN
Contact: www.ia.omron.com

Regional Headquarters
OMRON EUROPE B.V.
Sensor Business Unit
Carl-Benz-Str. 4, D-71154 Nufringen, Germany
Tel: (49) 7032-811-0/Fax: (49) 7032-811-199

OMRON ELECTRONICS LLC
2895 Greenspoint Parkway, Suite 200
Hoffman Estates, IL 60169 U.S.A.
Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON ASIA PACIFIC PTE. LTD.
No. 438A Alexandra Road # 05-05/08 (Lobby 2),
Alexandra Technopark,
Singapore 119967
Tel: (65) 6835-3011/Fax: (65) 6835-2711

OMRON (CHINA) CO., LTD.
Room 2211, Bank of China Tower,
200 Yin Cheng Zhong Road,
PuDong New Area, Shanghai, 200120, China
Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2200

Authorized Distributor:

© OMRON Corporation 2012-2016 All Rights Reserved.
In the interest of product improvement,
specifications are subject to change without notice.
CSM_16_1_0217
Cat. No. E418-E1-06 0816 (0212)